



HP G71t-300 Wi-Fi Card Replacement

The Wi-Fi card is an adapter that gives the device the capability to connect to the internet via wireless router. This guide helps users to replace their broken or weak-connecting Wi-Fi cards.

Written By: Cecil Lam



INTRODUCTION

If you choose to replace the module with different specifications, download the driver for the new module before replacing the wifi module.

TOOLS:


- Anti-Static Wrist Strap (1)
- Phillips #0 Screwdriver (1)
- Magnetic Project Mat (1)

Step 1 — Wi-Fi Card



- Ground yourself by either touching an unpainted metal surface or by using the Anti-Static wrist strap.
- Turn off the computer and remove the charger from the charging port.
- Turn the laptop over and slide the battery release catch to the right. The battery will pop up from its slot. Remove the battery using your fingers.

Step 2

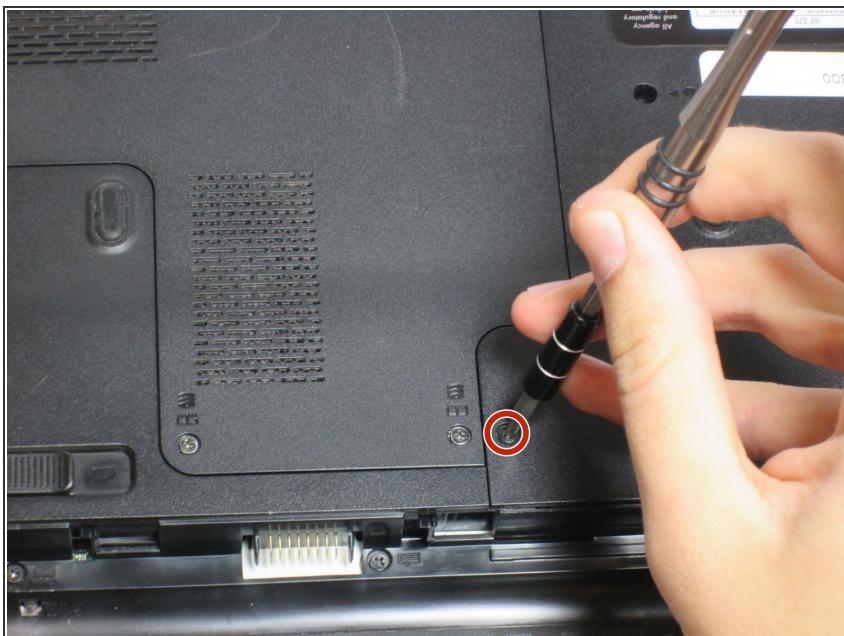

- Remove the 6mm screw from the cover above the battery using a Phillips #0 screwdriver.

Step 3




- Pull off the bottom cover to reveal the Wi-Fi card.

Step 4



- Gently remove the 2 cables clips to avoid damage.
- Remove the 3mm screw holding the Wi-Fi module using a Phillips #0 screwdriver.

Step 5

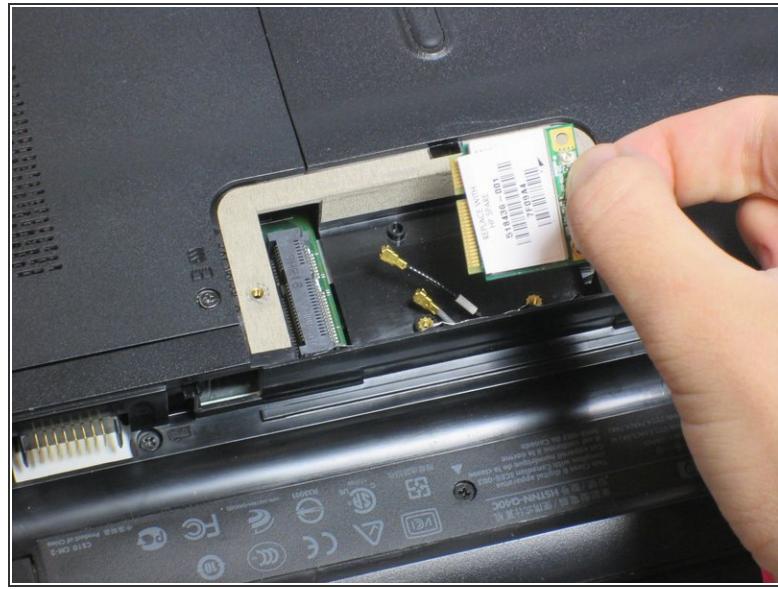

- Gently pull the module out of the slot.

To reassemble your device, follow these instructions in reverse order.