




HP ProBook 4320t Wi-Fi Card Replacement Guide

Slow internet speed or not detecting wireless networks.

Written By: Joshua

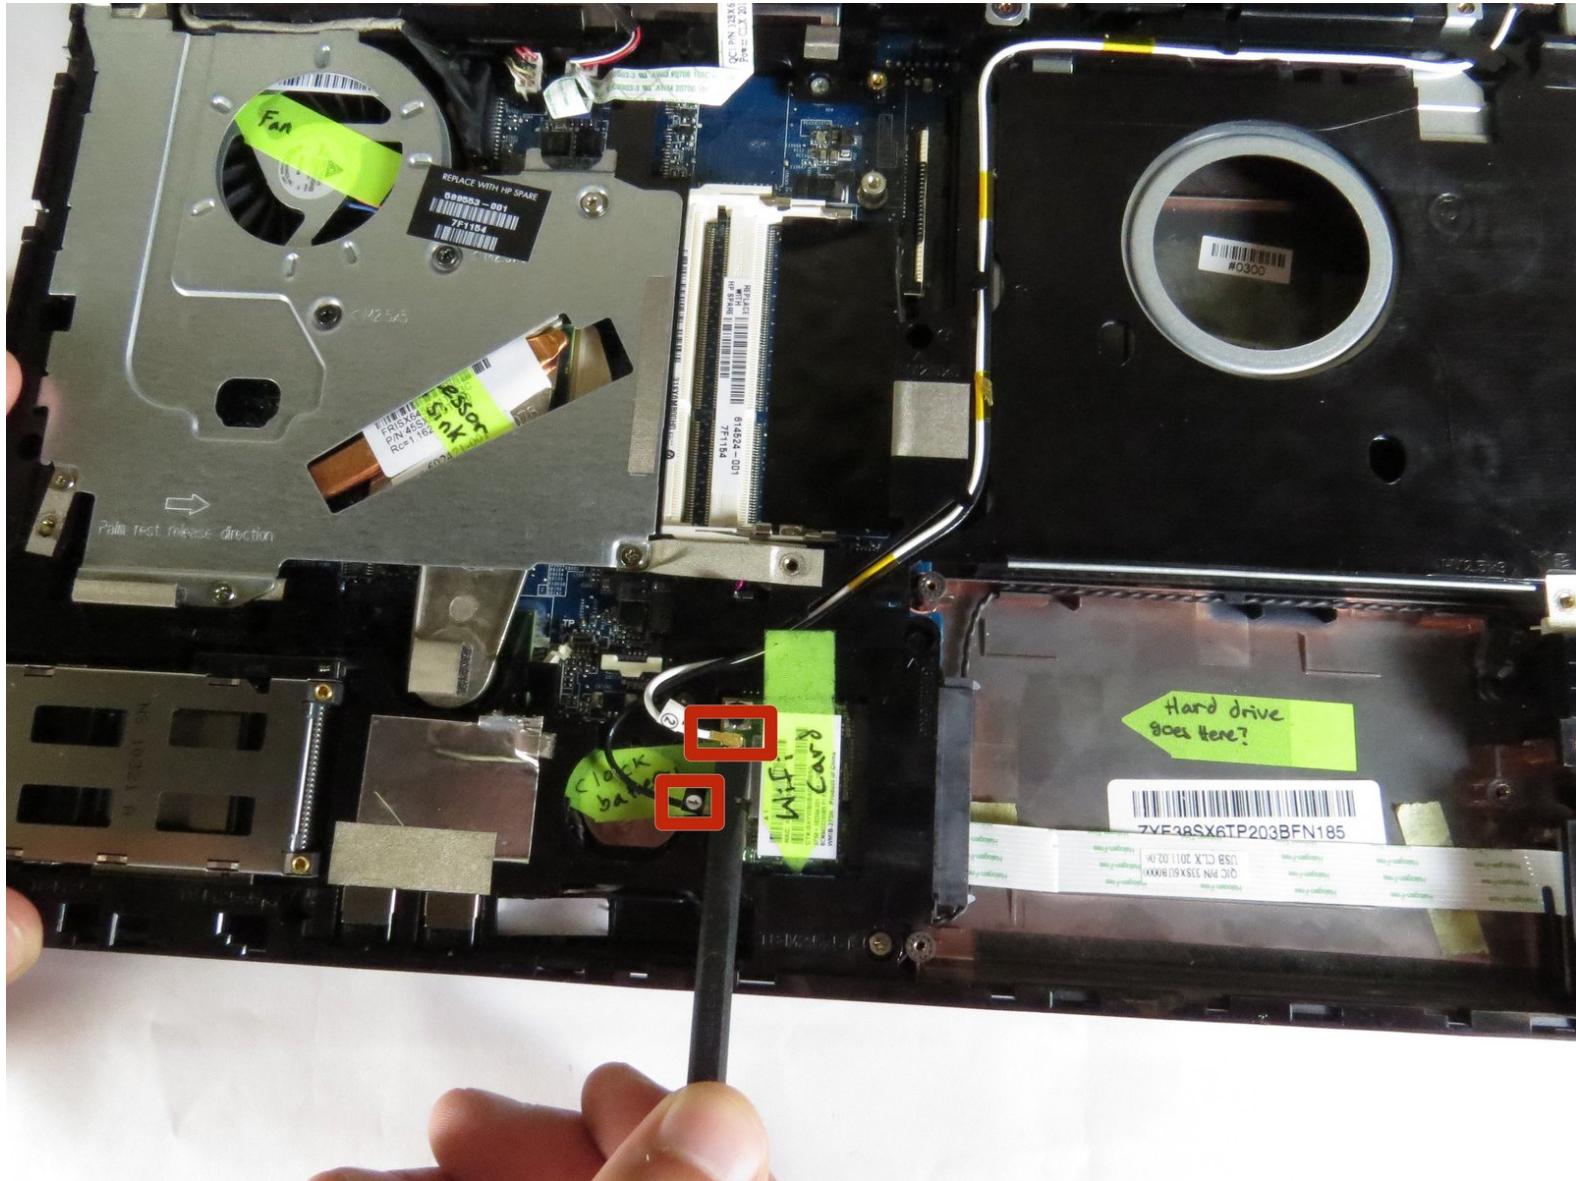

INTRODUCTION

Updating your Wi-Fi Card can give you a faster connection and greater range. Allowing your computer to take full advantage of high speed internet.

TOOLS:


- **Spudger** (1)
- **Phillips #0 Screwdriver** (1)

Step 1 — Battery Removal



- Flip the laptop upside down and remove battery by pressing inward on the two latches holding the battery in.

Step 2 — Screws

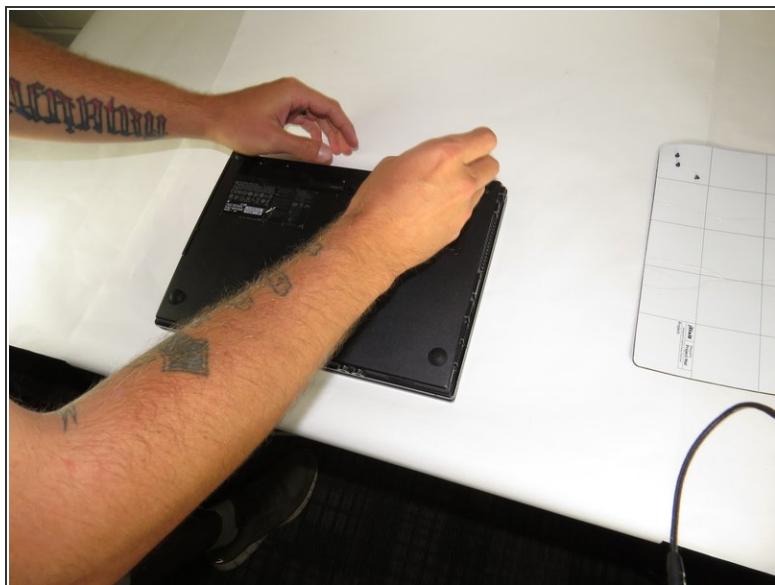

- Unscrew the four (2.5 mm Phillips) screws (Use Phillips #0 Screwdriver).

Step 3 — Flip




- Flip laptop over and open it.

Step 4 — Push N Lift



- Slightly push up while lifting up on the power button panel to release the panel.

Step 5 — Unscrewing

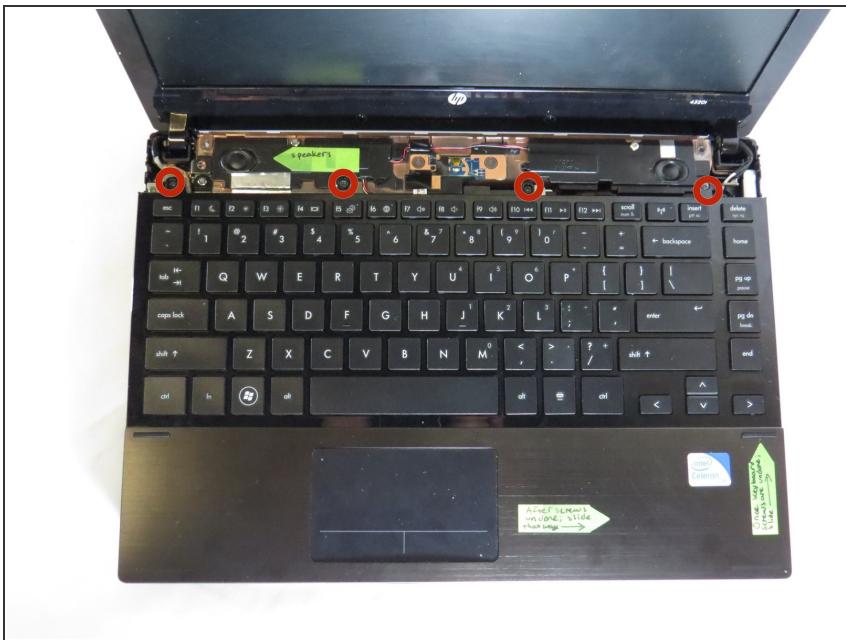

- Unscrew the four (2.5 mm Phillips) screws holding the keyboard in (Use Phillips #0 Screwdriver).

Step 6 — Careful Now




- Carefully (holding both sides of the keyboard), push up and lift slightly.
- ⚠** Keyboard is still connected via a ribbon cable.
- Move the keyboard slightly to the left to have access to the keyboard ribbon cable.

Step 7 — Disconnect Wire



- Use the black spudger to lift the black latch holding the keyboard ribbon cable.

Step 8 — Unscrew

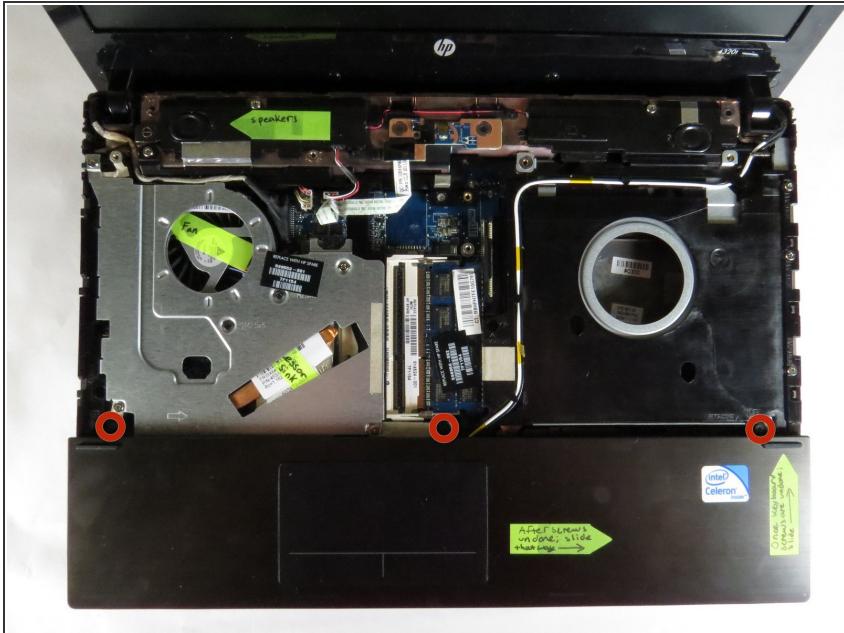

- Unscrew the three (2.5 mm Phillips) screws holding the bottom touchpad panel.

Step 9 — Slide the Panel Off



- Carefully slide the bottom panel to the right.

 Keyboard is connected via a wire to the back of the panel.

Step 10 — Lift up Carefully



- Flip the bottom touchpad panel directly towards the screen, being sure to not lift it too high.


 Keep an eye on the ZIF connector underneath, make sure it is not pulled accidentally.

Step 11 — Disconnect Wire



- Using the black spudger, slightly pry up on the ZIF connector and lift out the wire carefully.

Step 12 — Wi-Fi Card

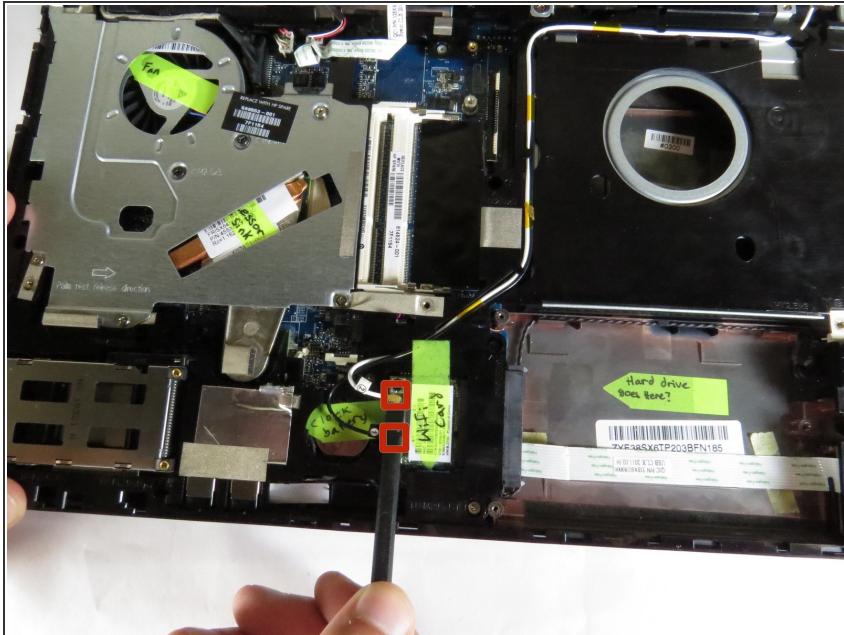

- Use black spudger to detach the two antenna cable connectors to the Wi-Fi card.

⚠️ Be careful not to break the cords.

Step 13



- Unscrew the two (2.5 mm Phillips) screws holding the wifi card in.

⚠ Be careful because upon the last turn of the screw, the Wi-Fi card lifts up slightly.

Step 14



- Pull the Wi-Fi card towards the left to remove.

To reassemble your device, follow these instructions in reverse order.