




HP Split x2 13-g210dx Docking Port Replacement

How to replace the docking port in an HP Split x2 13-g210dx.

Written By: Darian Devries

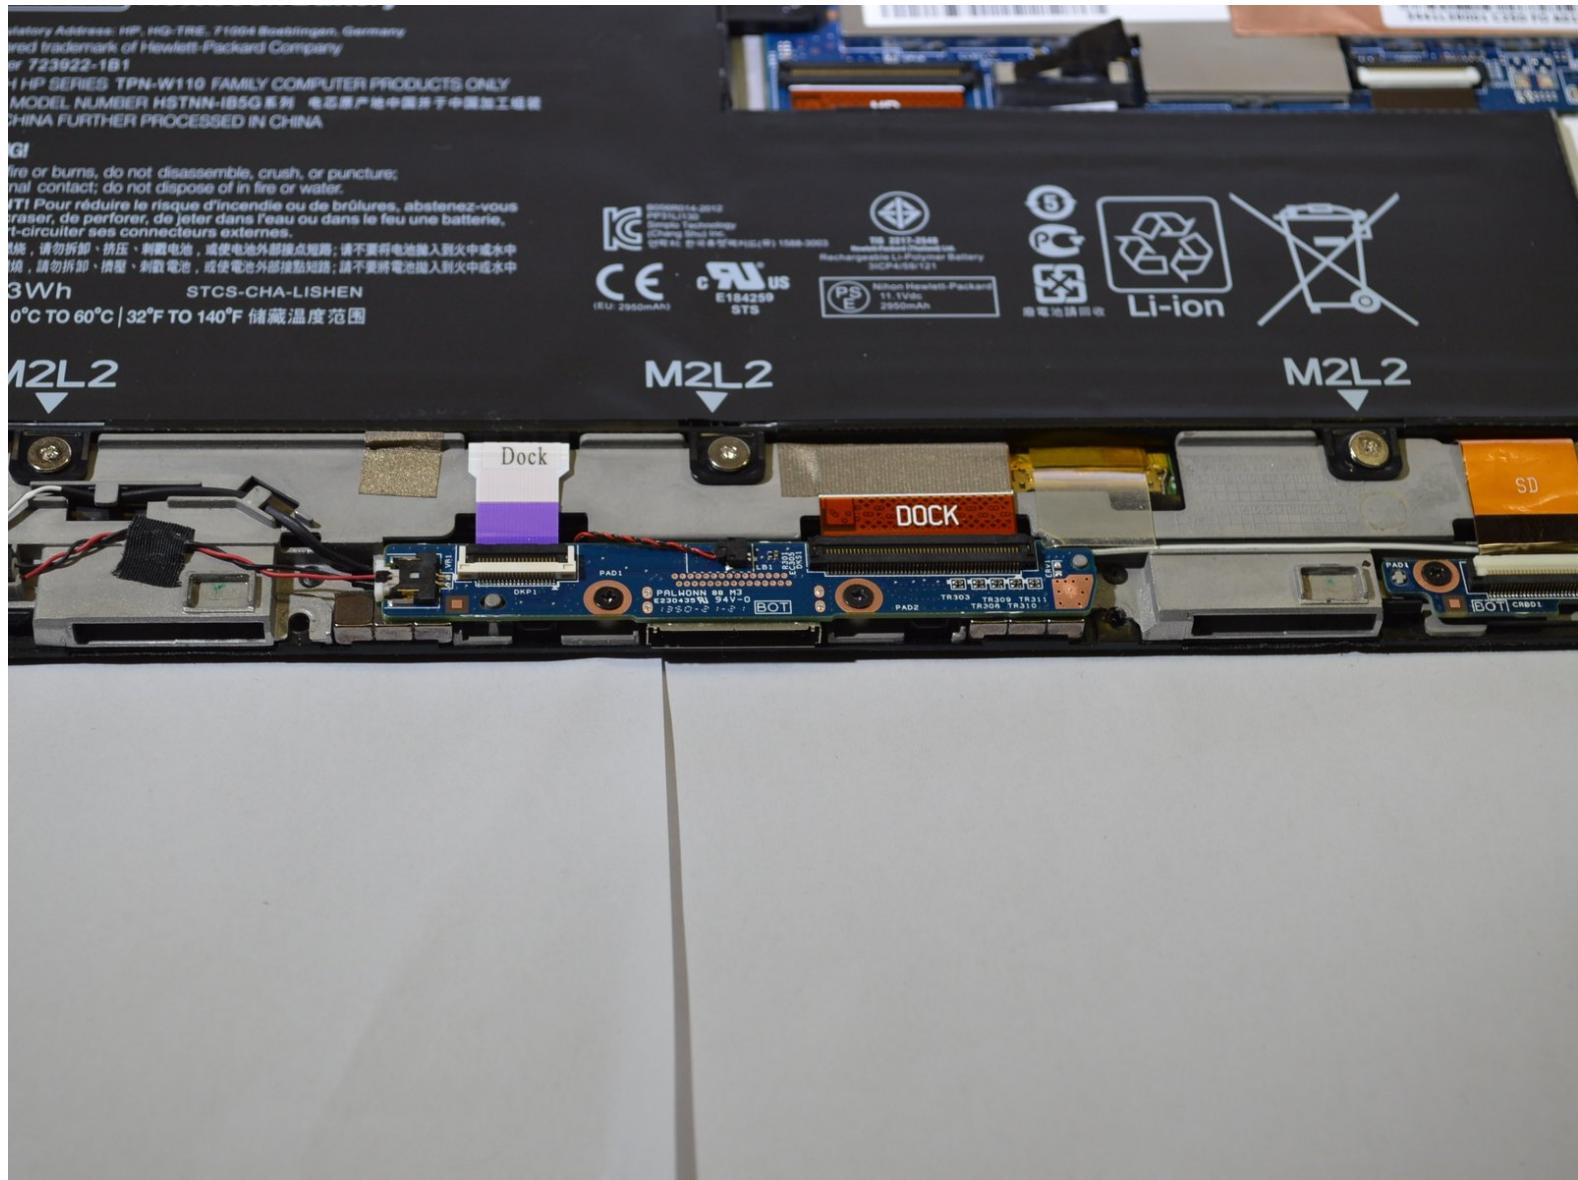

INTRODUCTION

If the keyboard does not function when connected to the laptop display, or is operating in a faulty manner, then the docking port is defective. Use this guide to access, remove, and replace your docking port.

TOOLS:

- [Phillips #0 Screwdriver](#) (1)
- [Spudger](#) (1)
- [iFixit Opening Tools](#) (1)
- [Tweezers](#) (1)

Step 1 — Back Panel



- Carefully peel off the felt cover that is found beneath the display along the bottom of the device.
- Use a spudger to gently scrape away the padding that hides the screws in each of the four locations.
- Remove the four 4-mm Phillips #0 screws.
- Run a spudger along the crease of the entire laptop and slowly pry off the back panel of the device, beginning with the bottom edge.


(i) You will hear popping noises as the clips separate from each other.

Step 2 — Battery




- Remove the three 6-mm Phillips #0 screws.
- Remove the four 4-mm Phillips #0 screws.

Step 3

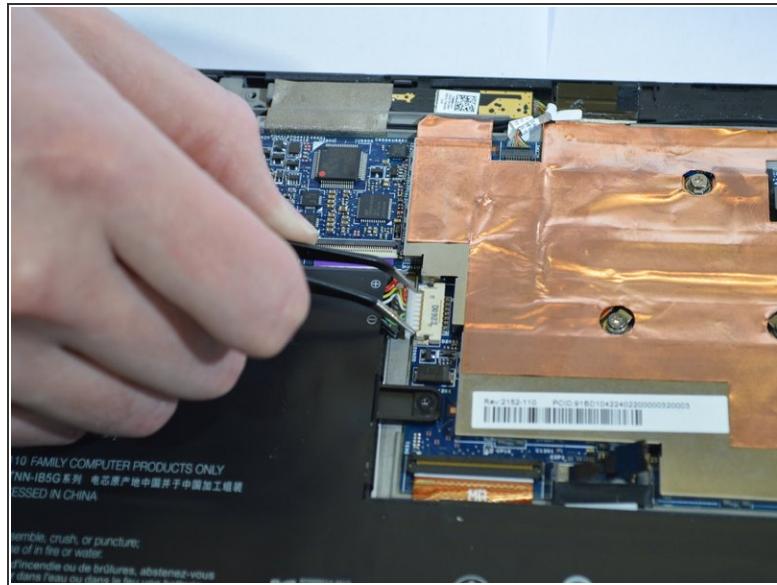


- Remove the white connector clip from the connector port using a sturdy tweezers.

Step 4

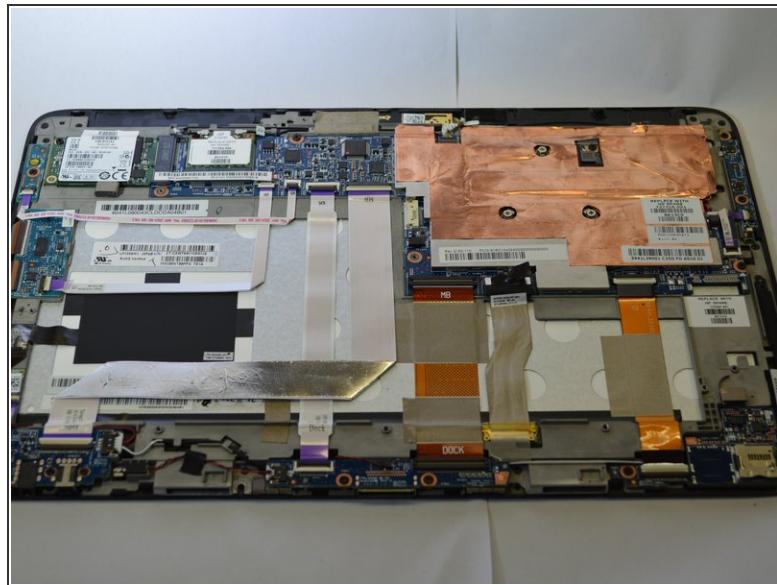


- Lift the battery away from the device.

Step 5 — Docking Port

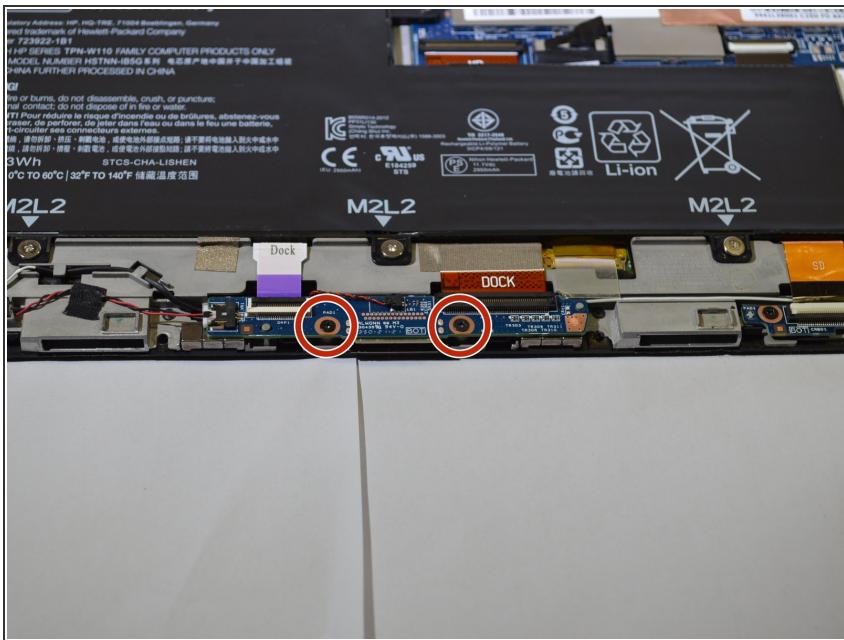


- Remove the two 4-mm Phillips #0 screws.

Step 6

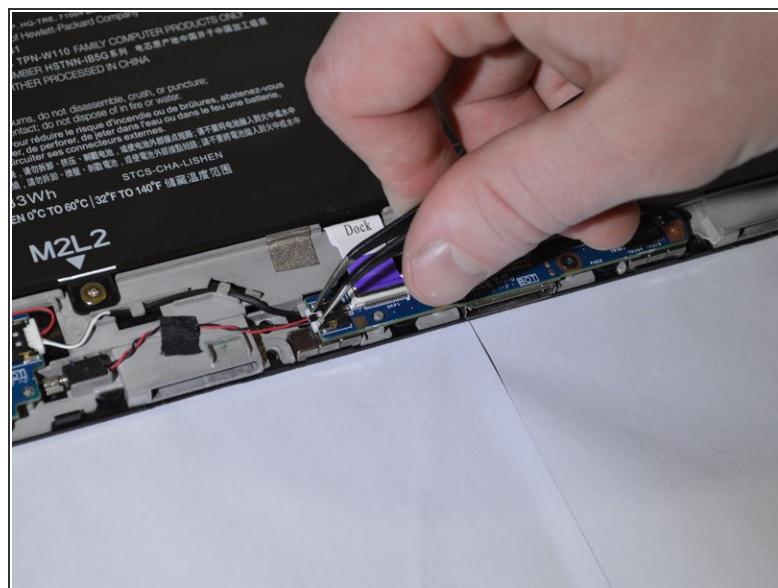

- Remove the clips from the docking port board with a sturdy pair of tweezers.

Step 7

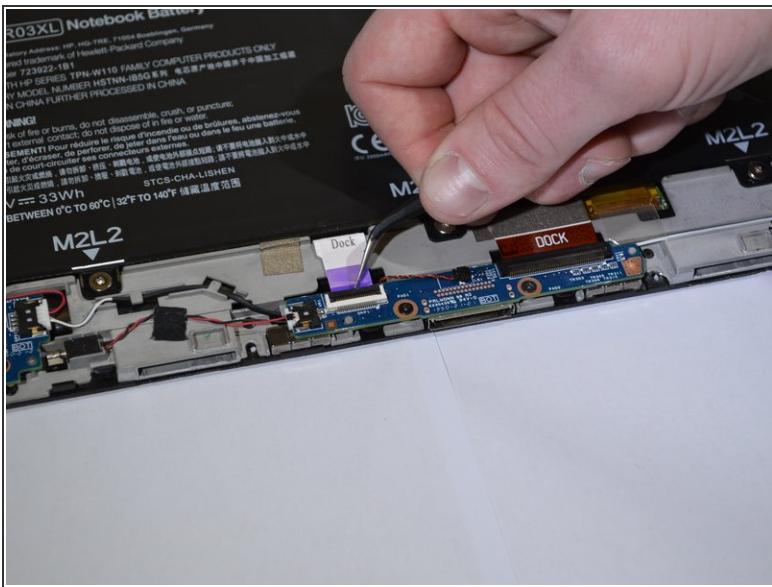

- Remove the two ribbons labeled "Dock" at the top of the docking port board using tweezers or a sturdy plastic opening tool.

Step 8



- Lift the docking port away from the device.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2020-01-14 04:35:22 PM (MST).

