


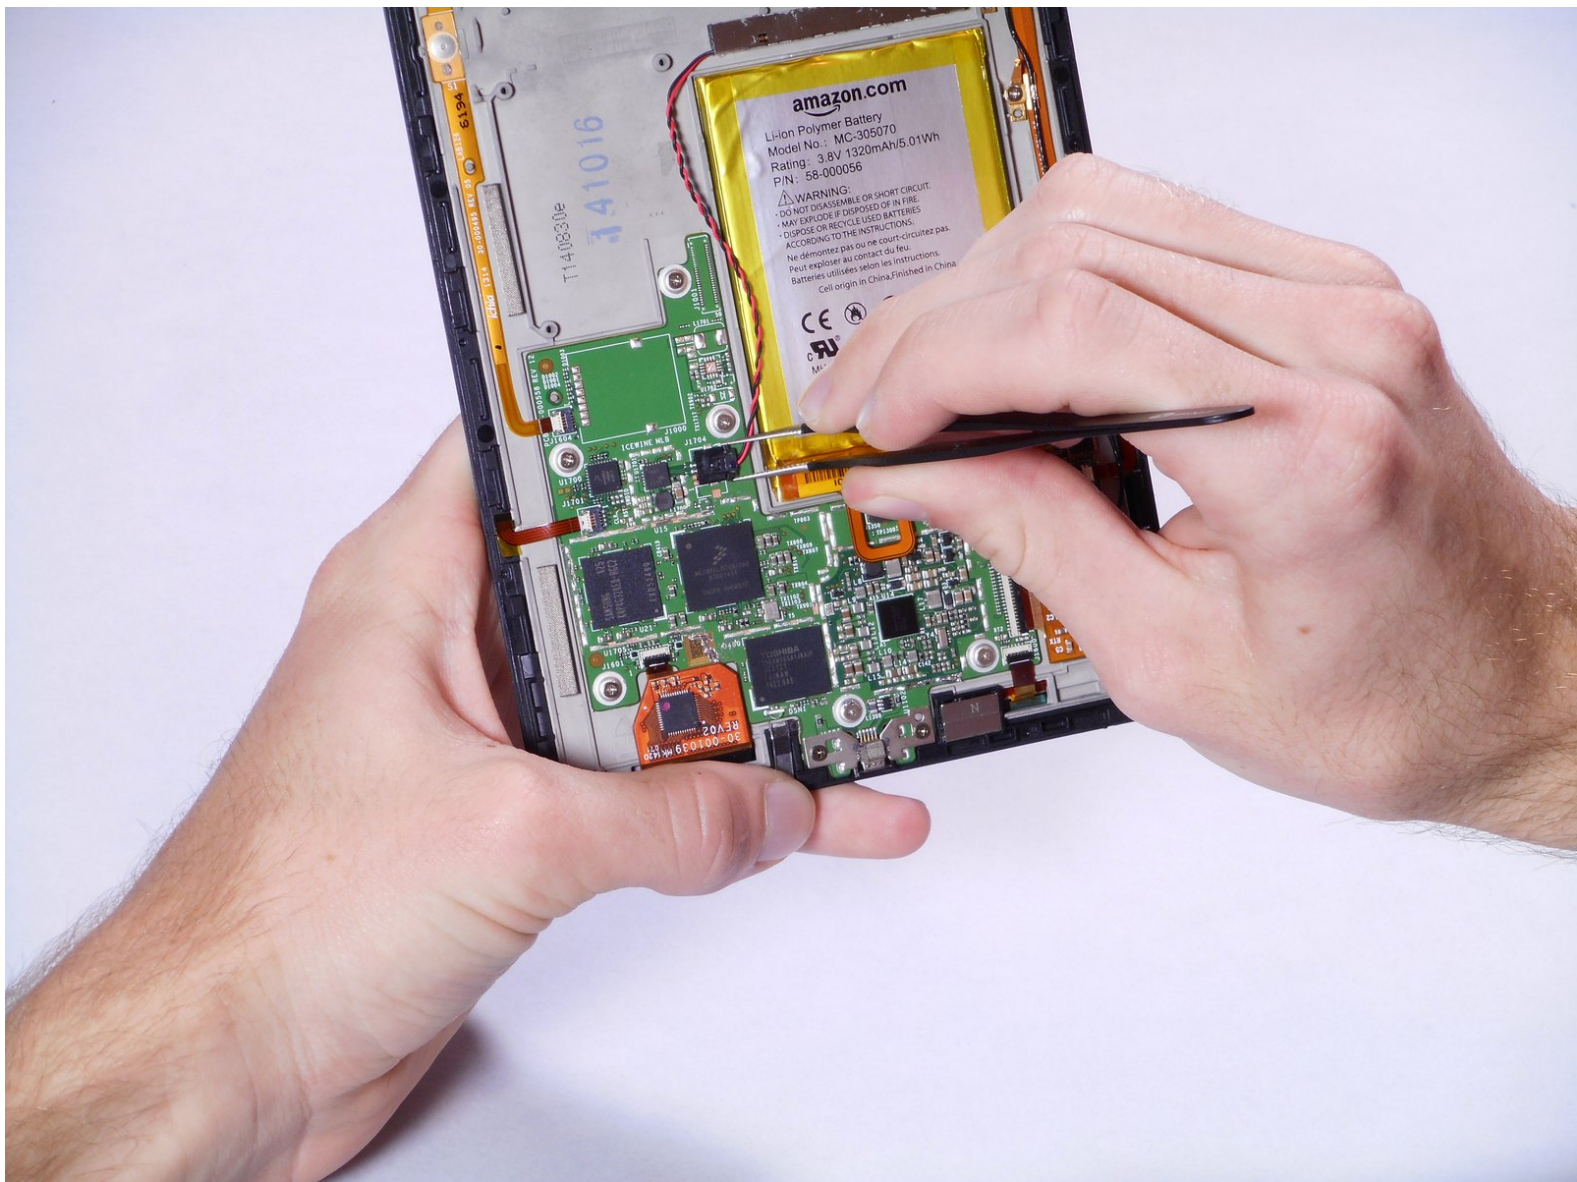

Written By: Sean Yap



Page 1 of 5

---

## INTRODUCTION

Vibration is a useful tool to ensure the user that a device is responding to the press of a button. This guide shows how to replace the vibrator in a Kindle Voyage should the device fail to vibrate properly.

---



### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
  - [Tweezers](#) (1)
  - [64 Bit Driver Kit](#) (1)
-

## Step 1 — Back Panel



- Insert a plastic opening tool between the plastic panel shown on the device.
- Use the tool to pry the plastic away from the device.
- ⓘ There will be adhesive holding this piece of plastic to the device. You may have to pull pretty hard to get it separated.

## Step 2



- Use an aluminum driver attached with a Phillips head size #00 to remove the four 3mm screws shown in the picture. For reassembly, note that the top two and bottom two screws are different sizes.



## Step 3




- Once the screws are removed, the back panel can slide off the device.

## Step 4



- Remove the magnetic component with the magnetic head of the aluminum driver.

## Step 5 — Vibrator

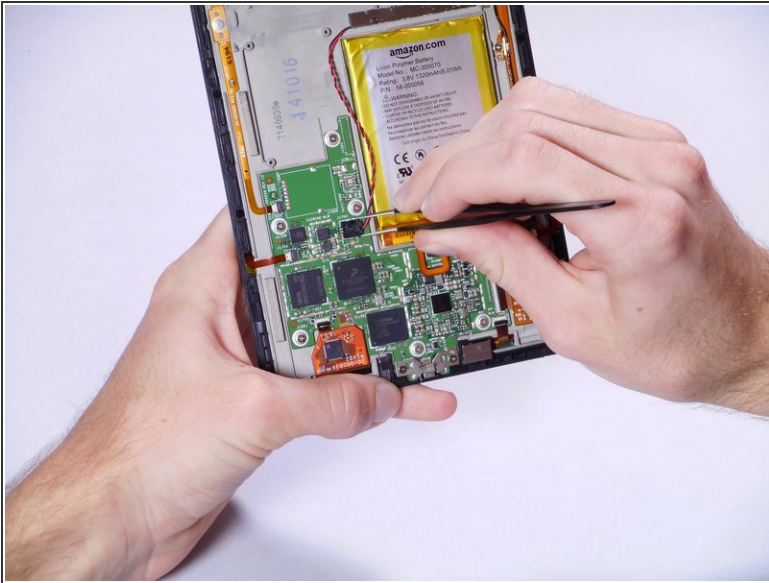

- Use tweezers to pinch in the sides of the vibrator cable and slide it out of its housing.

## Step 6



- Gently peel the vibrator off of the device.

To reassemble your device, follow these instructions in reverse order.