




LG G Watch R Power Button

The power button requires patience and tedious effort to remove.

Written By: Westley Courchene

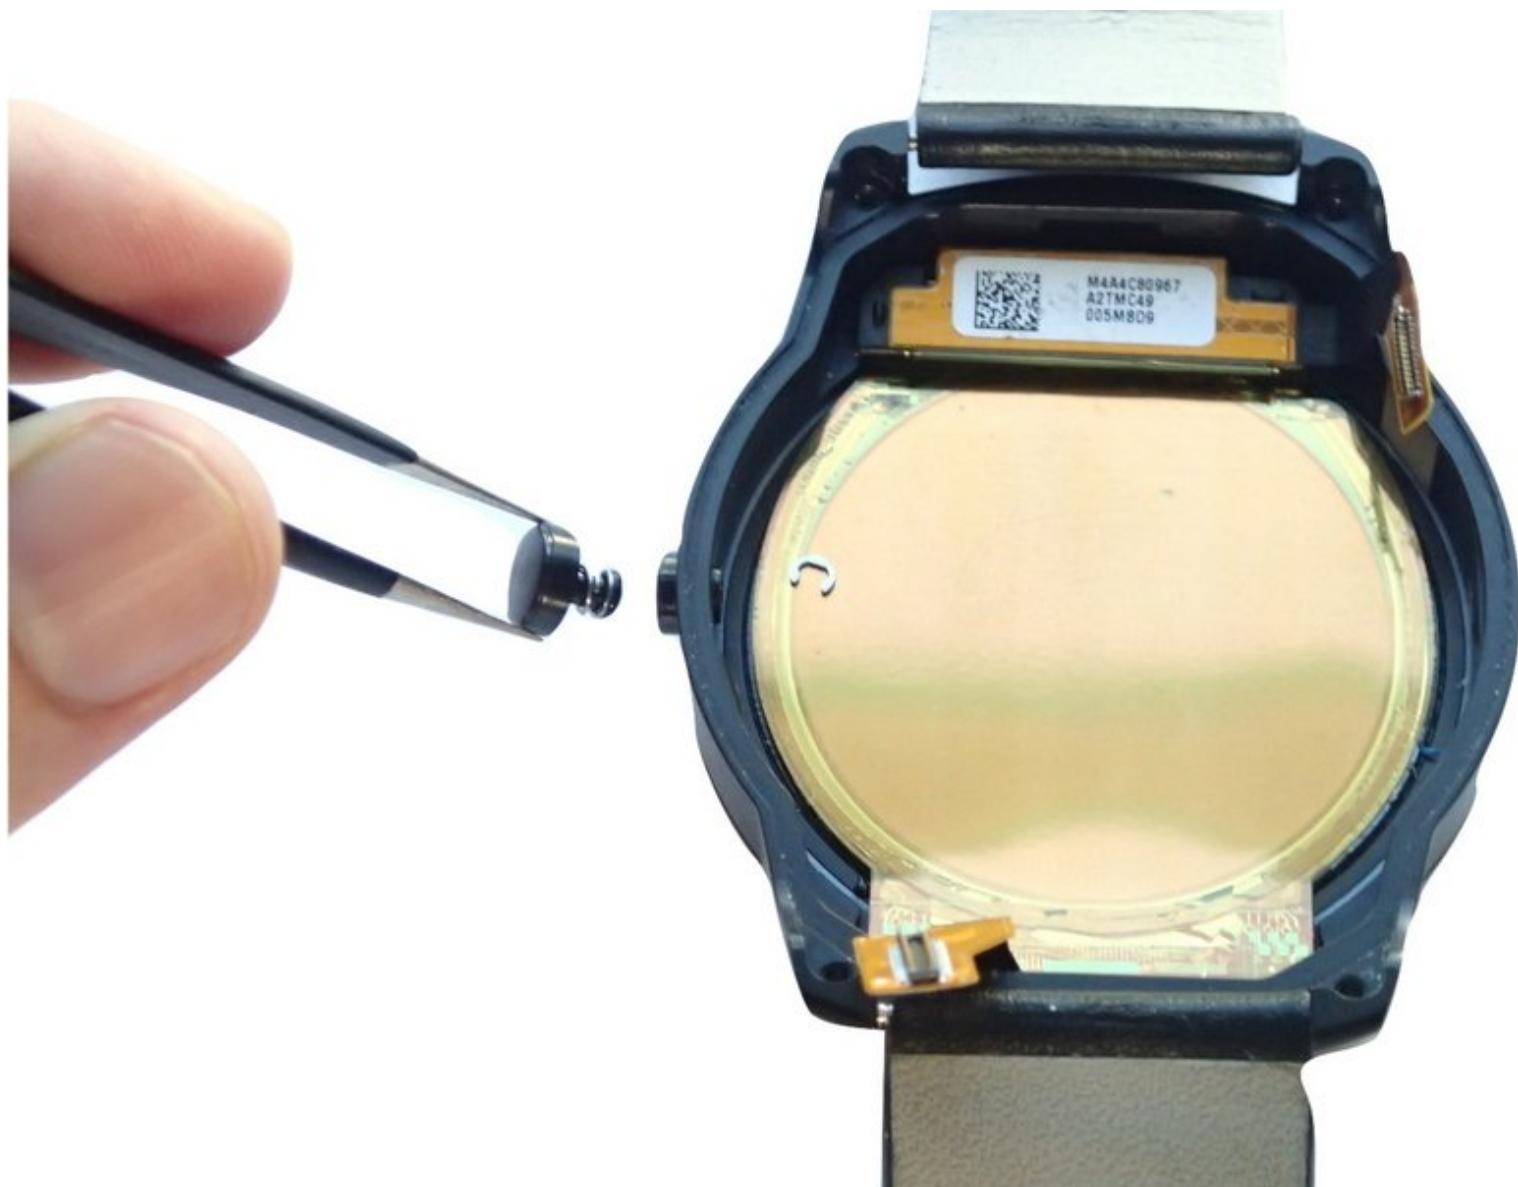

INTRODUCTION

Removing the power button might be useful when attempting to clean the device.

TOOLS:

- [Tweezers \(1\)](#)
- [PH000 Phillips Screwdriver \(1\)](#)
- [Phillips #000 Screwdriver \(1\)](#)
- [iFixit Opening Tools \(1\)](#)
- [Spudger \(1\)](#)
- [T5 Torx Screwdriver \(1\)](#)

Step 1 — Back Case



 Power off your watch before disassembling it.

- Place the watch upside down on a hard surface so that its back case is facing upright.
- Use a T4 Torx Star screwdriver to remove the four 4.0 mm Torx screws from the corners of the back case.

Step 2




- Use a plastic opening tool to pry open the back case from both sides of the watch.

Step 3



- Remove the back case.

Step 4 — Motherboard

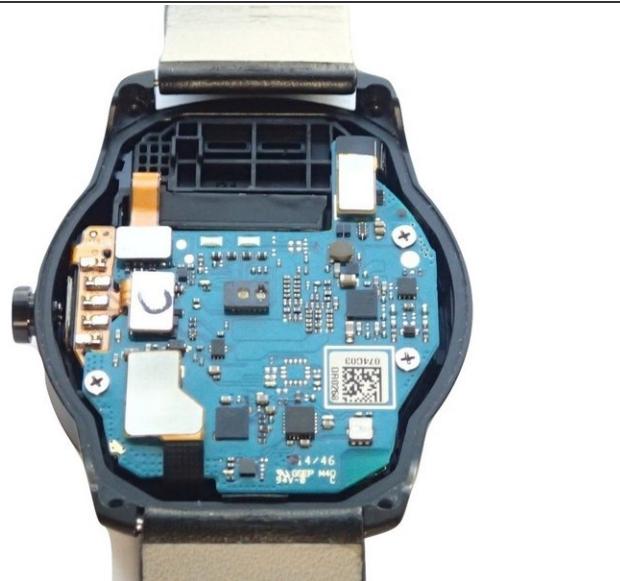


- With a plastic opening tool, disconnect the four connectors on the top of the motherboard.

Step 5




- Remove three 3.0 mm Phillips screws on the edges of the motherboard with a Phillips #000 screwdriver.

Step 6

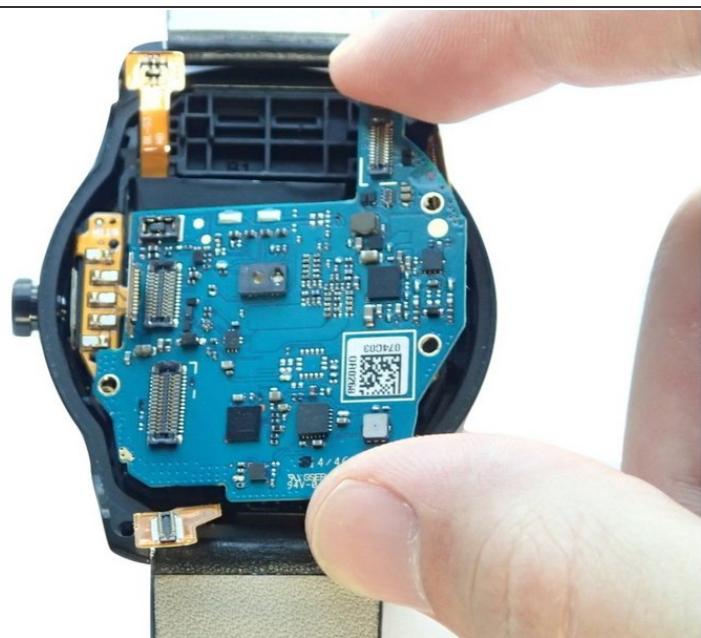

- Grasp the edges of the motherboard and slide it slightly towards the right to remove it from its case.



Step 7 — Battery Replacement

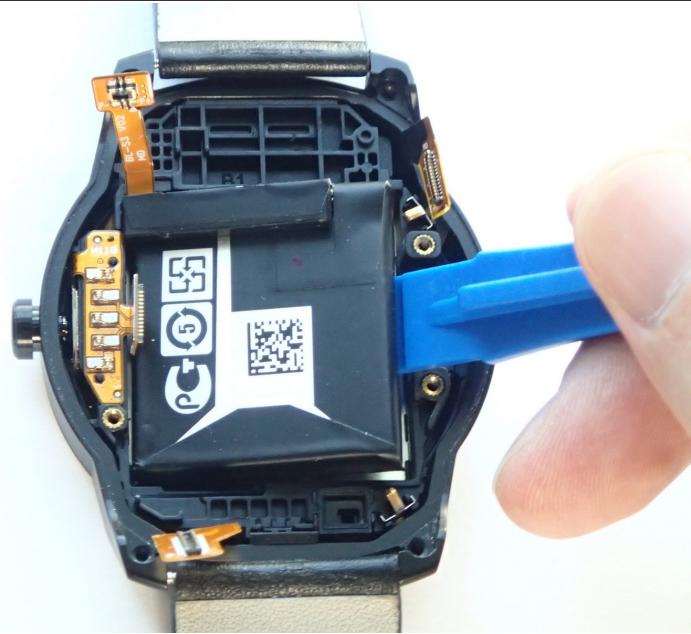

- Use a plastic opening tool to pry the battery out of the device.


(i) You may need to use a stronger prying force due to the adhesive that secures the battery to the case.

Step 8 — Battery Housing Replacement

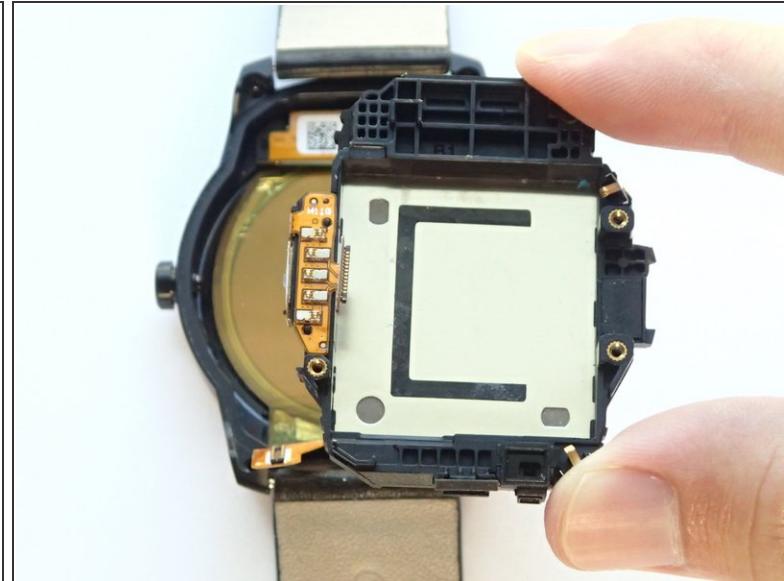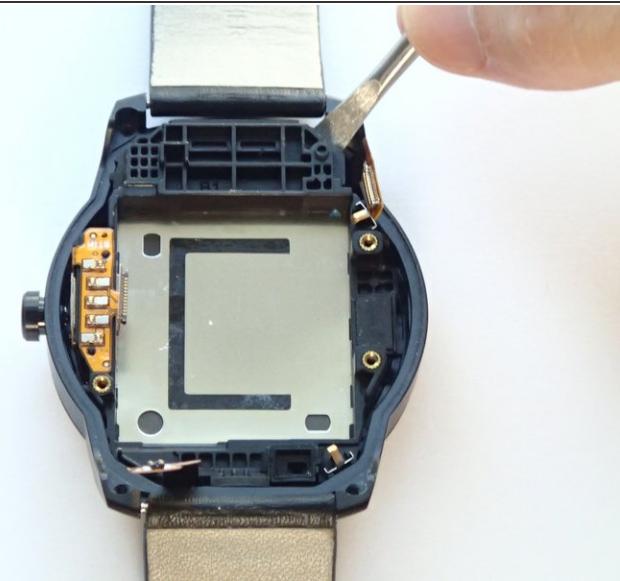

- Pry the battery housing from the top right corner using a spudger.
- Once loosened, remove the battery housing.

Step 9 — Power Button

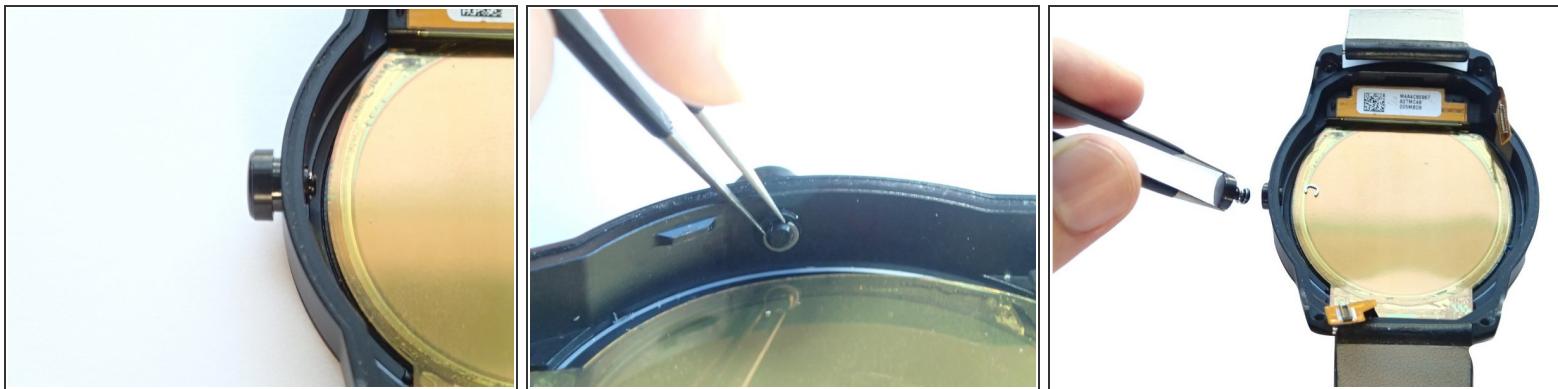

- On the power button, locate a small grey washer on the interior side of the watch.
- Use a pair of tweezers or another pointed object to push the washer out of its socket, and remove the power button.

To reassemble your device, follow these instructions in reverse order.