


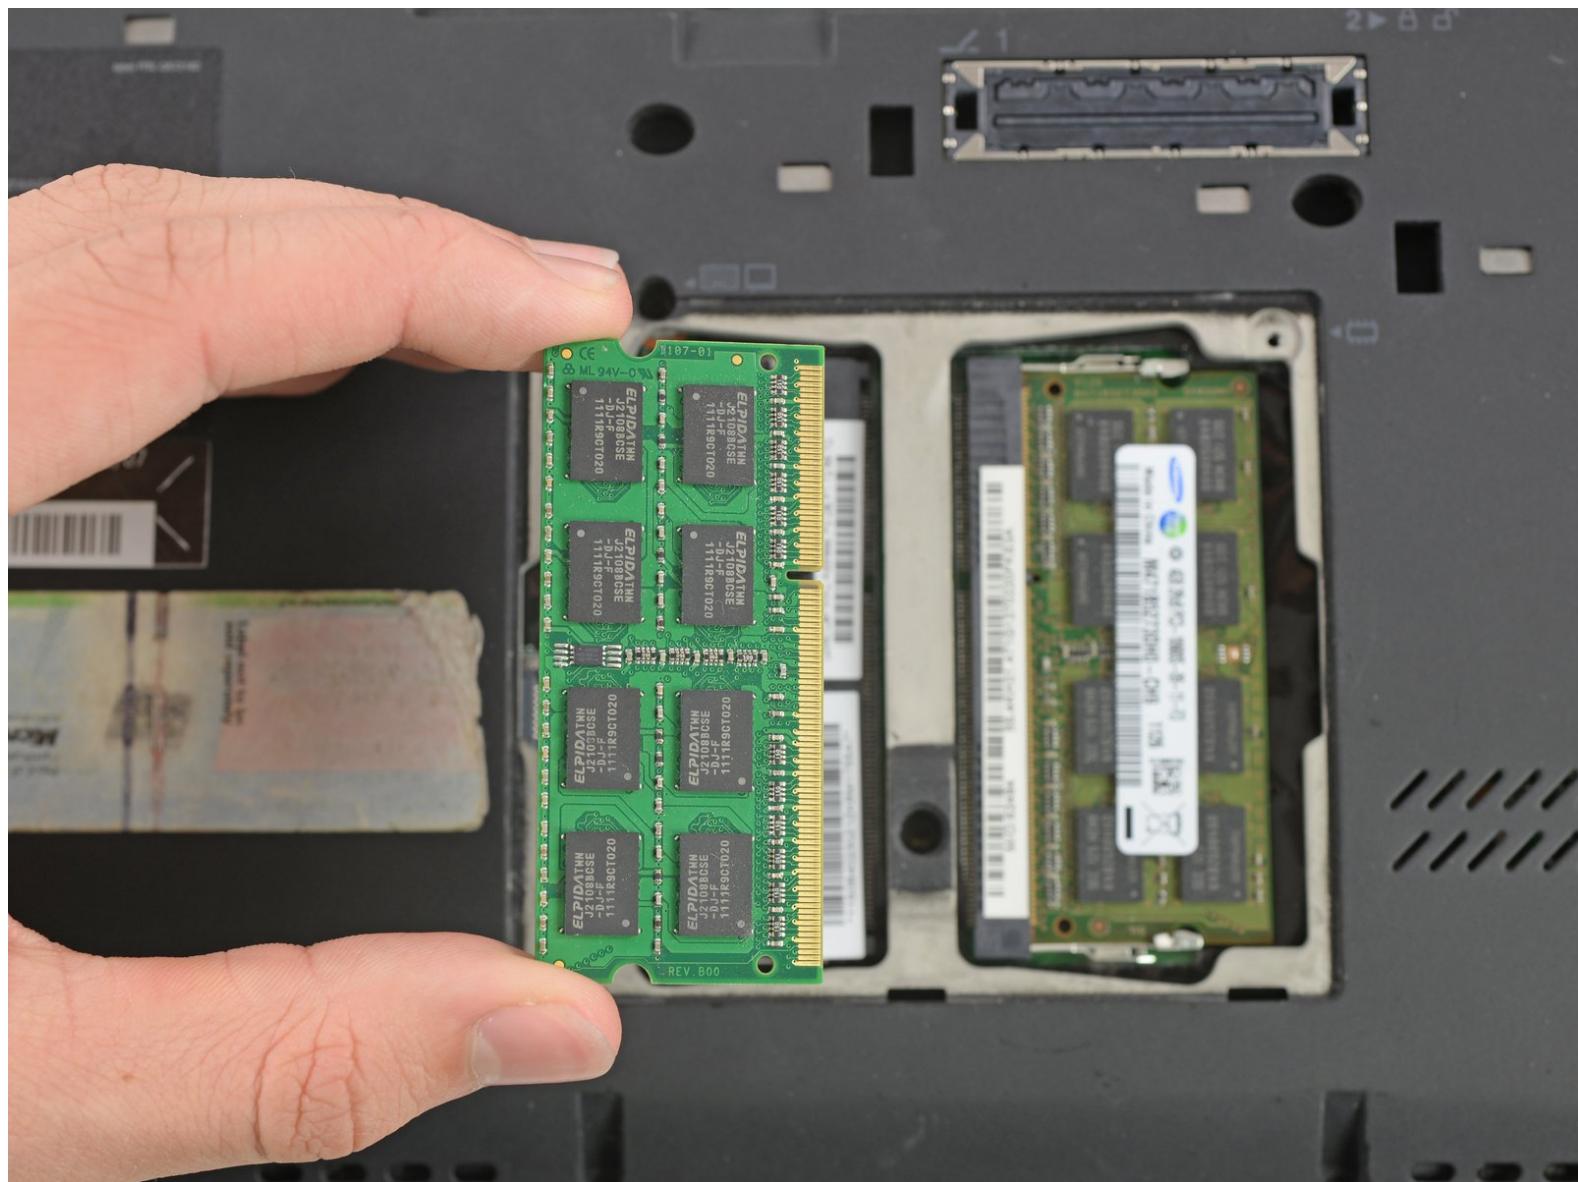

Lenovo ThinkPad X220 RAM Replacement

This guide shows you how to replace the RAM in your Lenovo ThinkPad X220.

Written By: Nils Eymer



Step 1 — Battery



- Locate the two switches that lock the battery.
- Then push the left switch outward into the "unlocked" position.
- *(i)* This switch will remain in the unlocked position.

Step 2





- Now push and hold the right switch to the right while using the other hand to gently slide the battery upwards out of the laptop.

Step 3



- This is a rechargeable Li-Ion battery that has a capacity of 4400 mAh, if you have the 6 cell model.
- ☒ The 4 or 9 cell model has different ratings.


Step 4 — RAM

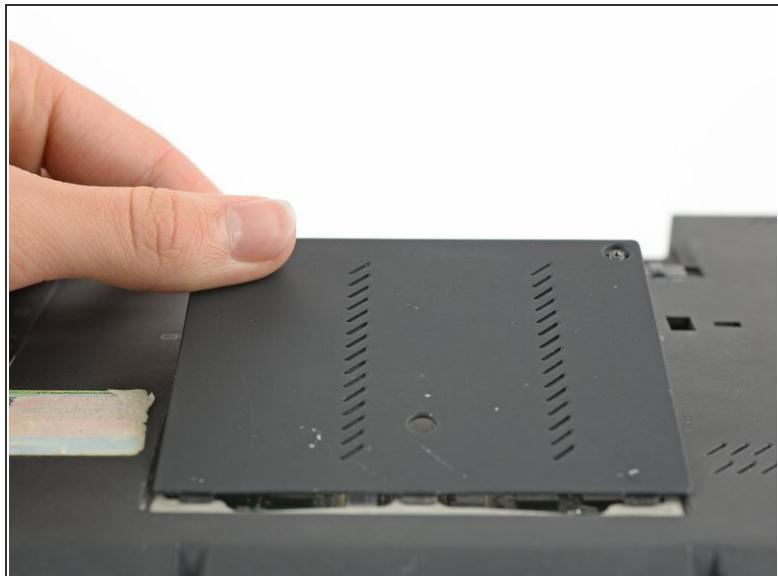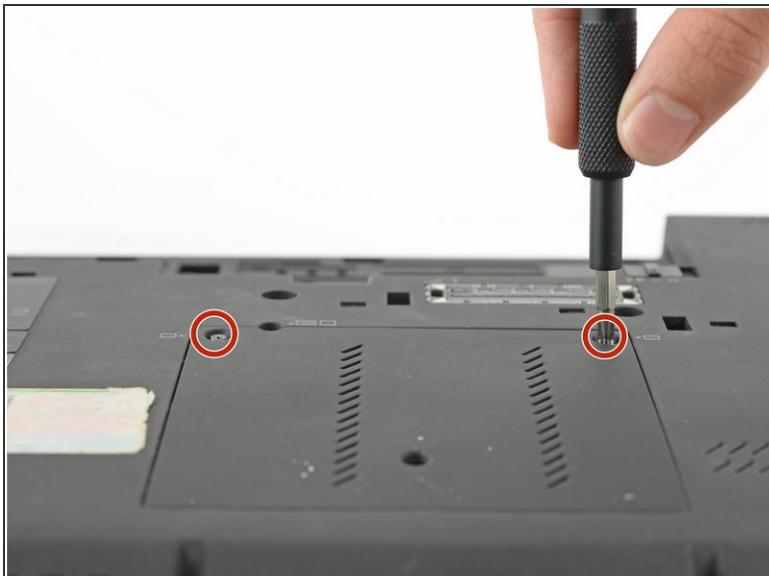

- Remove both Phillips screws.
- Then take away the cover.


This document was generated on 2019-10-06 09:40:26 AM (MST).

Step 5

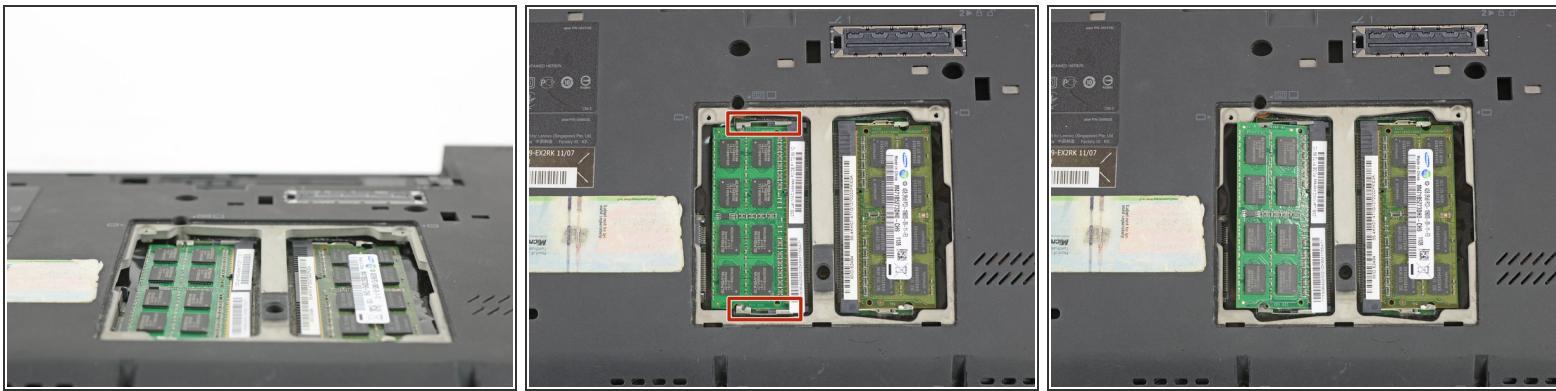

- Push the marked claws to the side, to make the RAM accessible.

Step 6

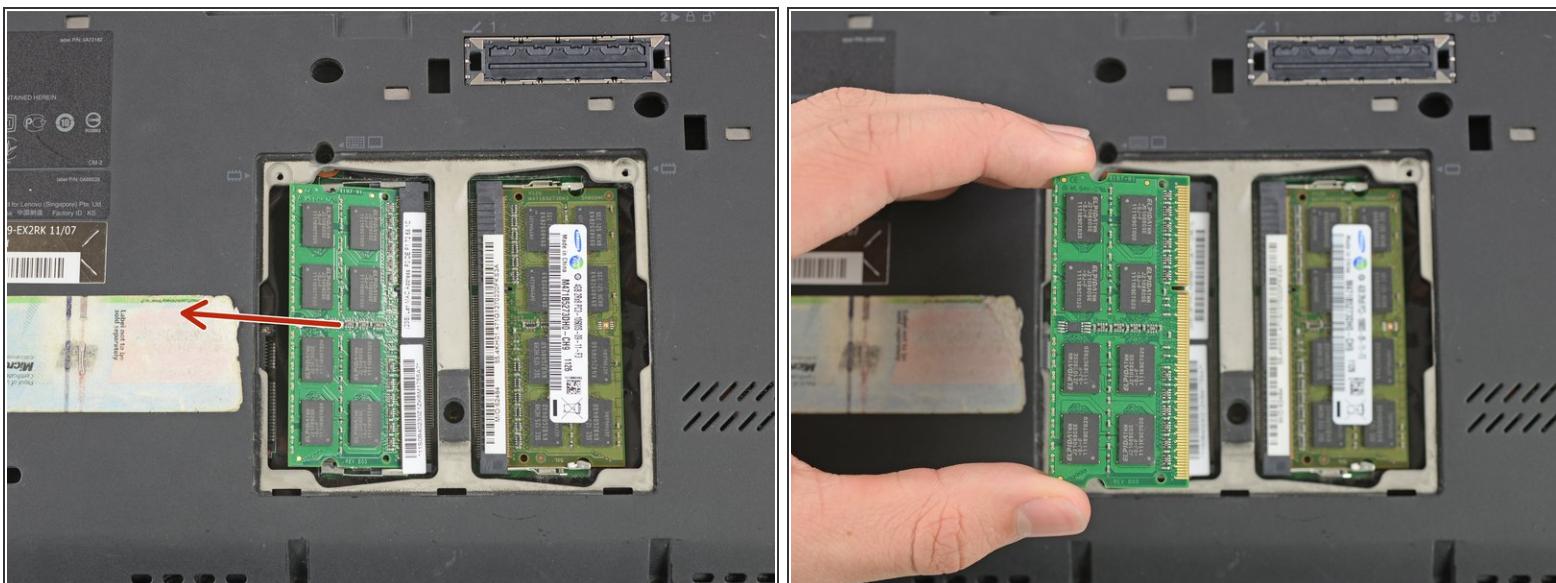

- To remove the RAM, you need to pull the RAM into the shown direction out of its connector.

To reassemble your device, follow these instructions in reverse order.