


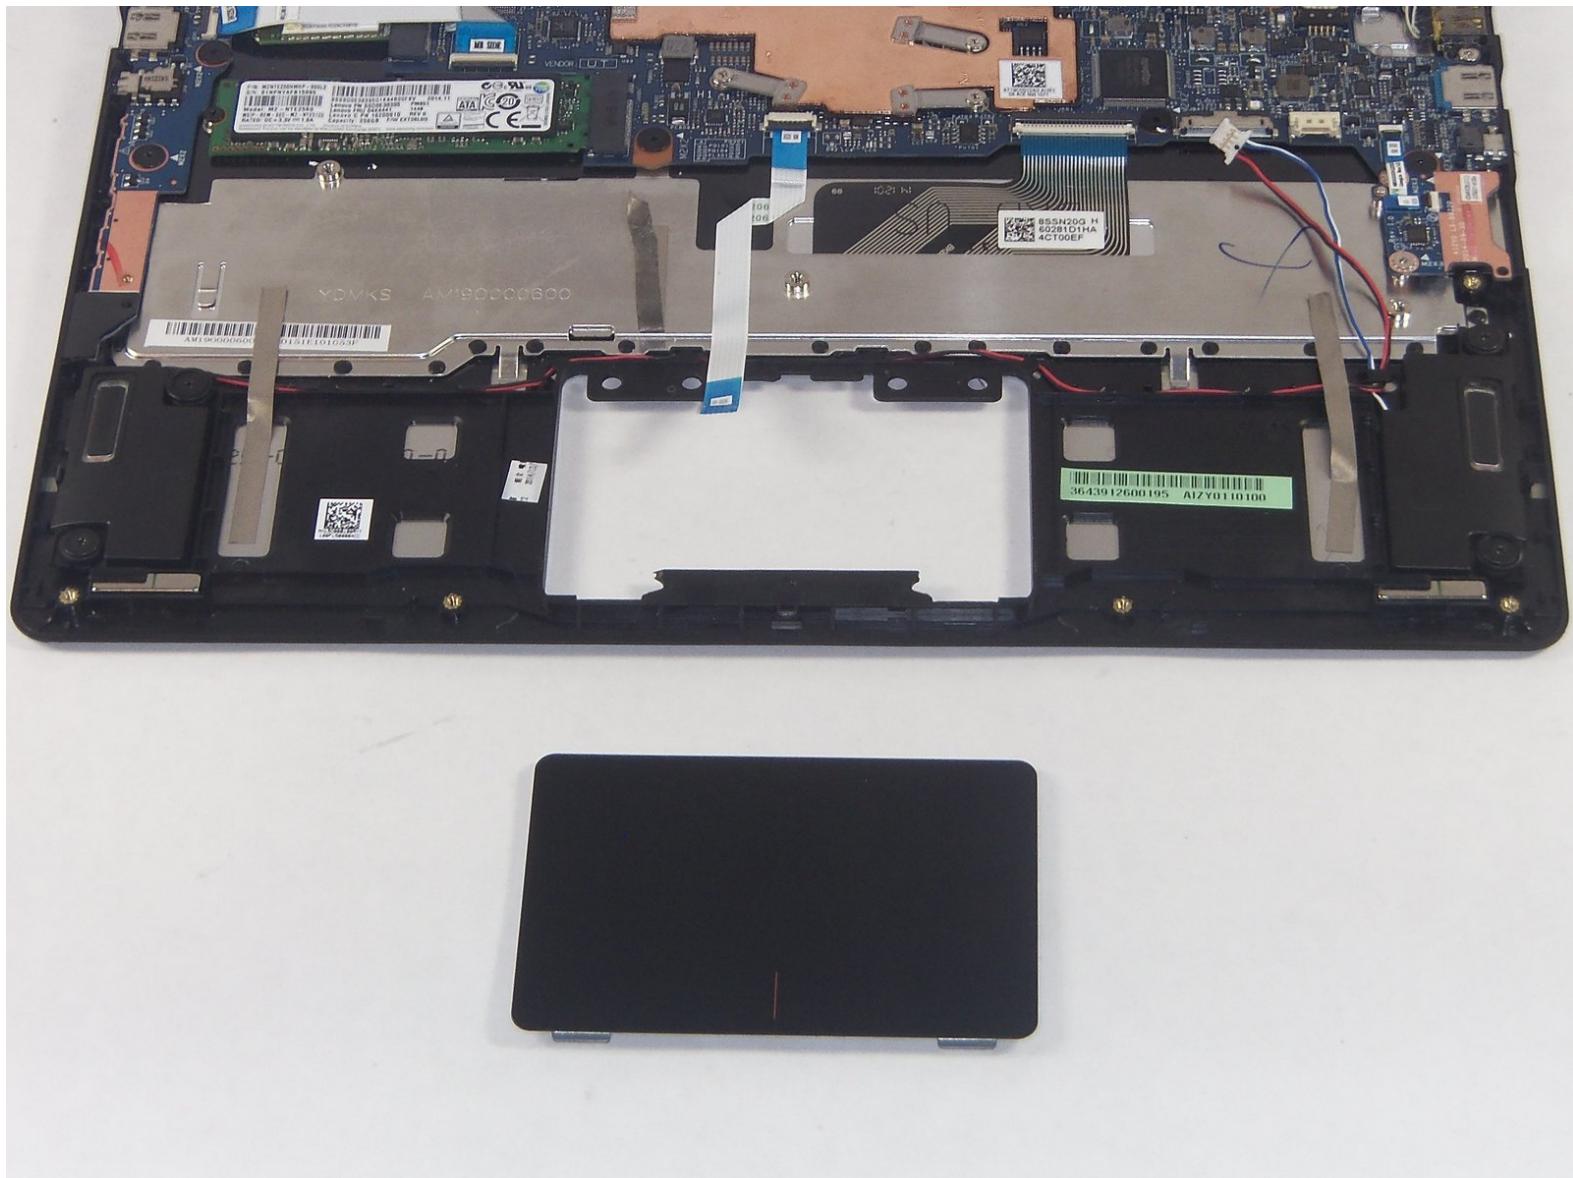

# Lenovo Yoga 3 11 Trackpad Replacement

In this guide, you will learn how to remove and replace the trackpad for the Lenovo Yoga 3 11.

Written By: Slade Fernandes



## INTRODUCTION

Is your laptop's trackpad not reacting when you use it? Then you will probably need to replace it and this guide will help you accomplish the task!

### TOOLS:

- [Tweezers](#) (1)
- [Phillips #00 Screwdriver](#) (1)
- [T5 Torx Screwdriver](#) (1)
- [Phillips #0 Screwdriver](#) (1)

## Step 1 — Lower Case




- Remove the eleven 6 mm T5 Torx screws securing the lower case.
- Gently lift the lower case up and away from the device.

## Step 2 — Battery





- Remove the two 3 mm Phillips #00 screws securing the battery.
- There are arrows on the battery indicating the location of the screws.

## Step 3

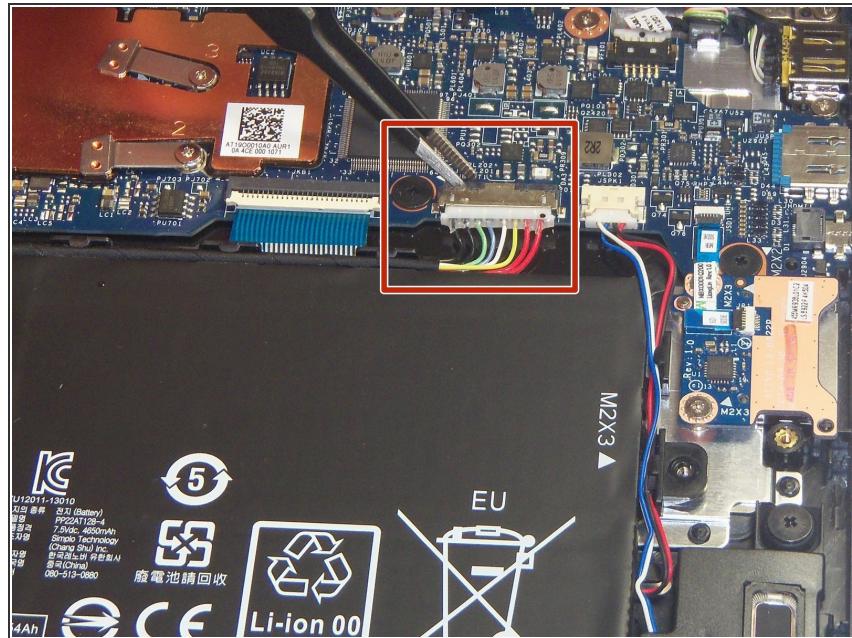


- Use a pair of tweezers to gently disconnect the battery connector.

## Step 4

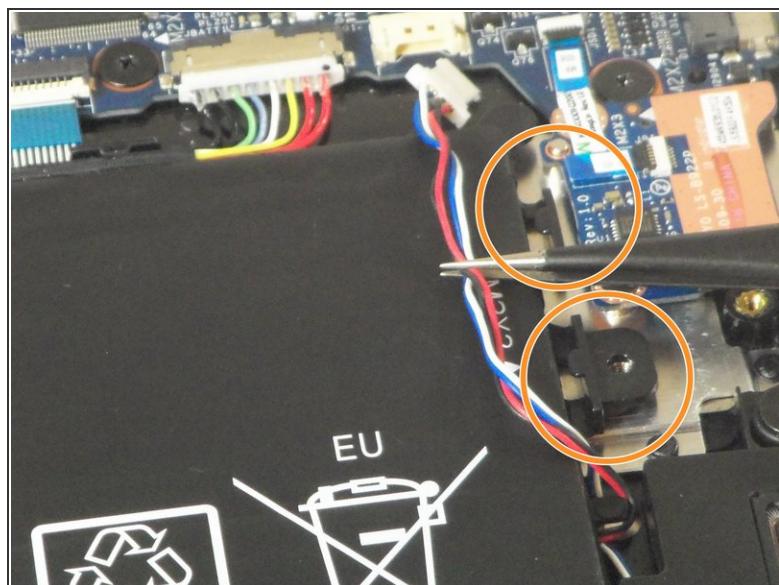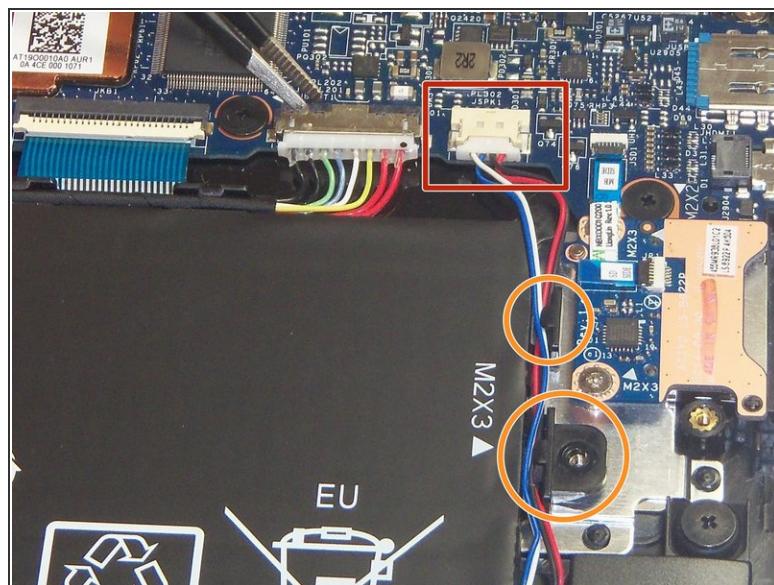


- Use a pair of tweezers to gently disconnect the speaker cable.
- Remove the wires from underneath the battery tabs using the tweezers.

## Step 5

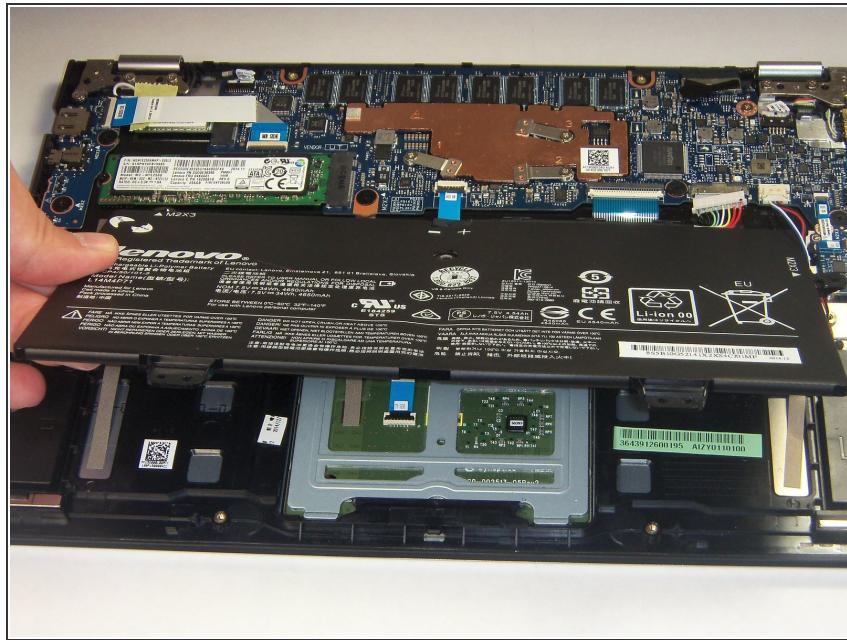


- Carefully remove the battery from the device.

## Step 6 — Trackpad

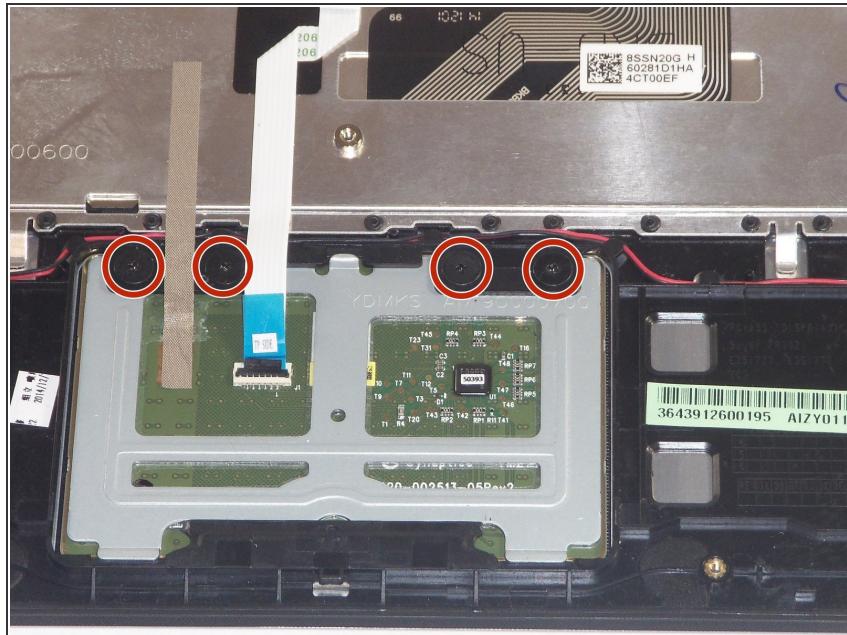



- Remove the four 2 mm Phillips #0 securing the trackpad.

## Step 7

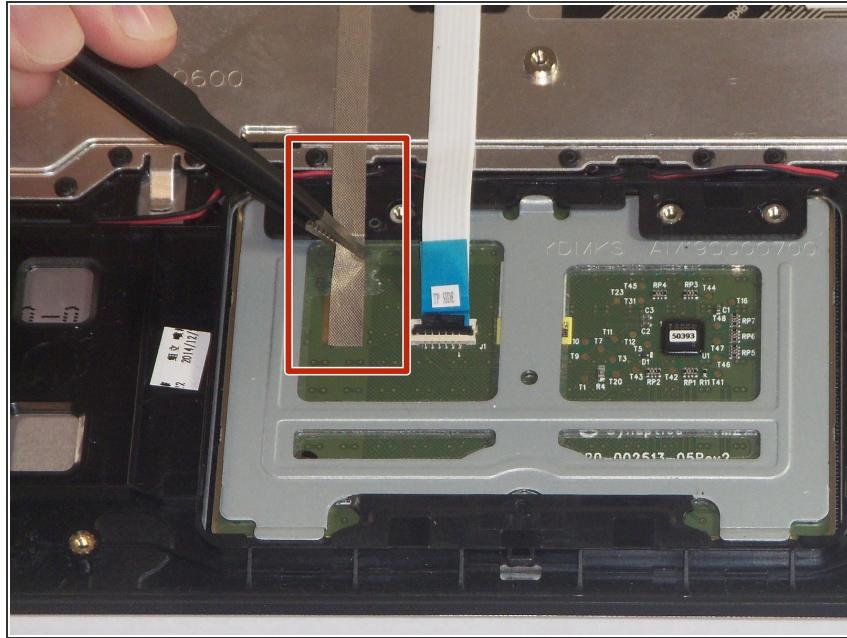



- Use the tweezers to partially remove the tape.

## Step 8

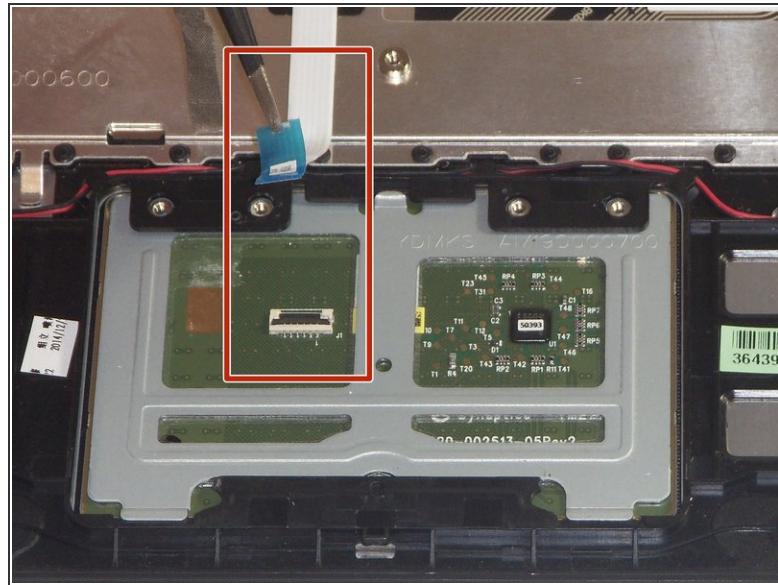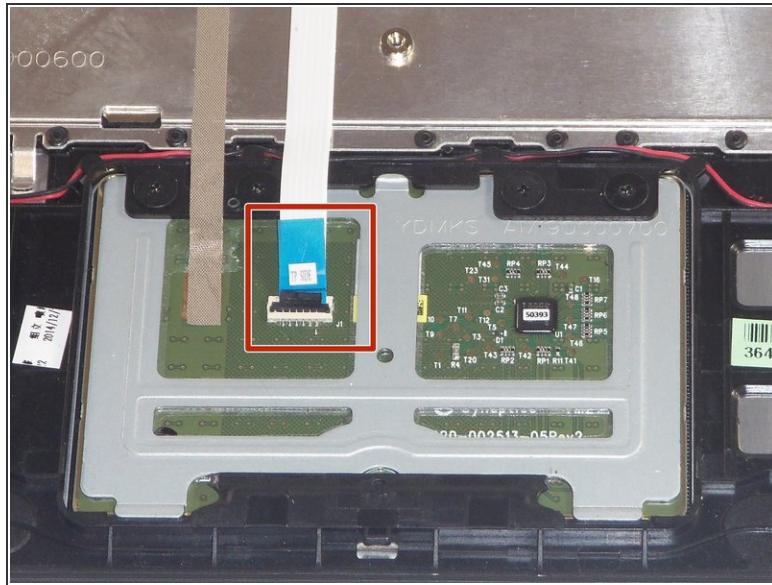

- Use a pair of tweezers to disconnect the [ZIF connector](#) securing the trackpad ribbon cable. Gently lift up the black tab and the ribbon cable should come free.

## Step 9

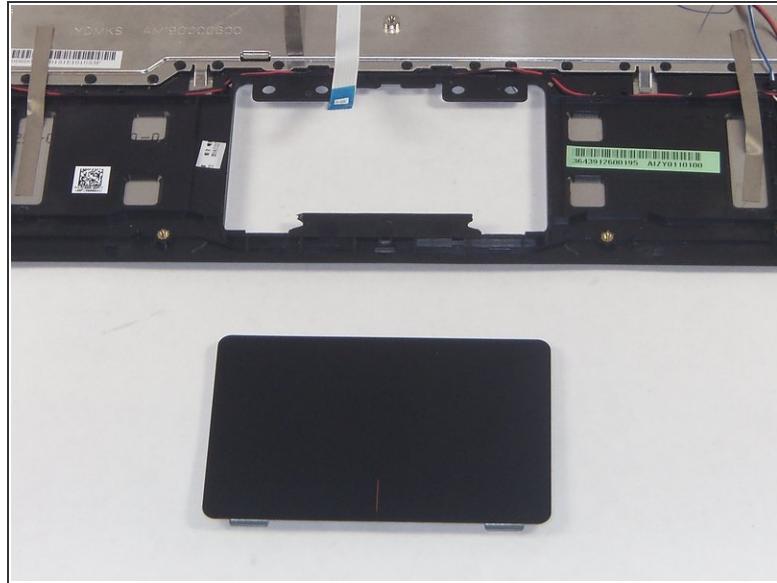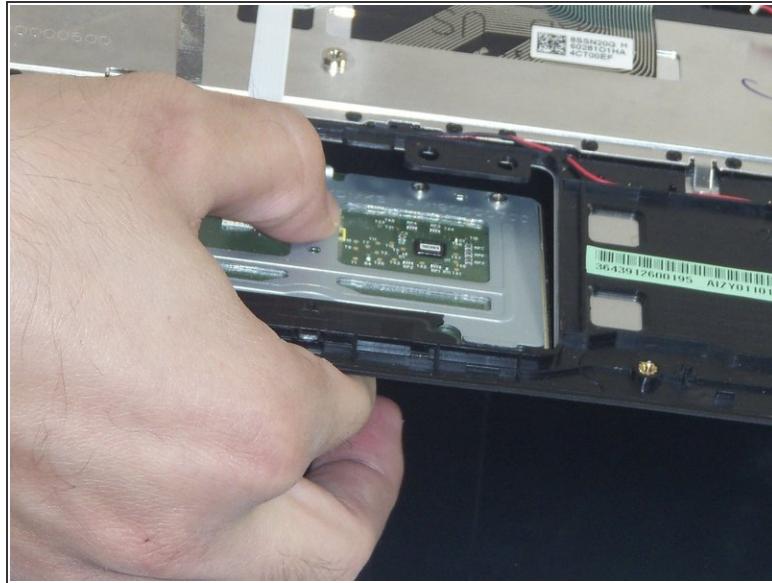

- Slightly push down with your thumb to pop out the trackpad.
- ⓘ The laptop must be slightly open in order for the trackpad to pop out.

To reassemble your device, follow these instructions in reverse order.