




Lenovo Yoga 730-13IKB Back Case Replacement

How to remove the back case on the Lenovo Yoga 730-13IKB.

Written By: Colin Reay

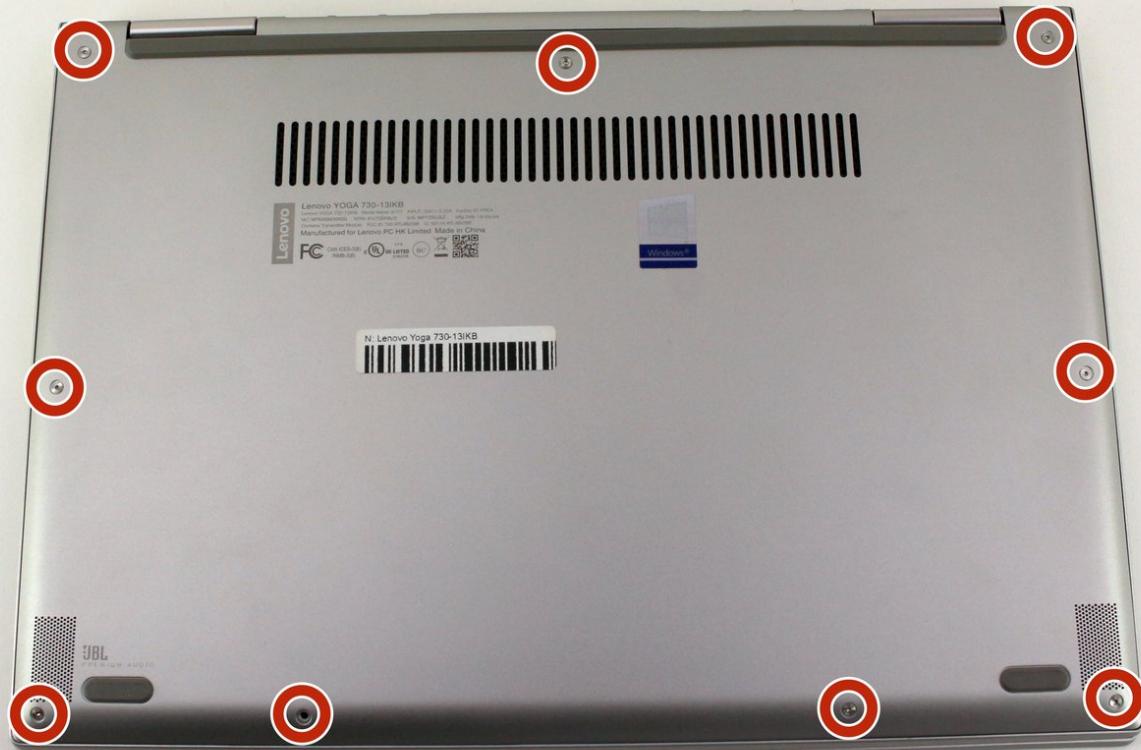

INTRODUCTION


Use this guide as a reference when removing the back case on the Lenovo Yoga 730-13IKB laptop (*models beginning with “81CT”*).

Removing the back case exposes the laptop's internals and is a prerequisite step for replacing or repairing most components. Always power off the laptop before working on any internal components.

TOOLS:

- [iFixit Opening Tools](#) (1)
- [T5 Torx Screwdriver](#) (1)


Step 1 — Back Case

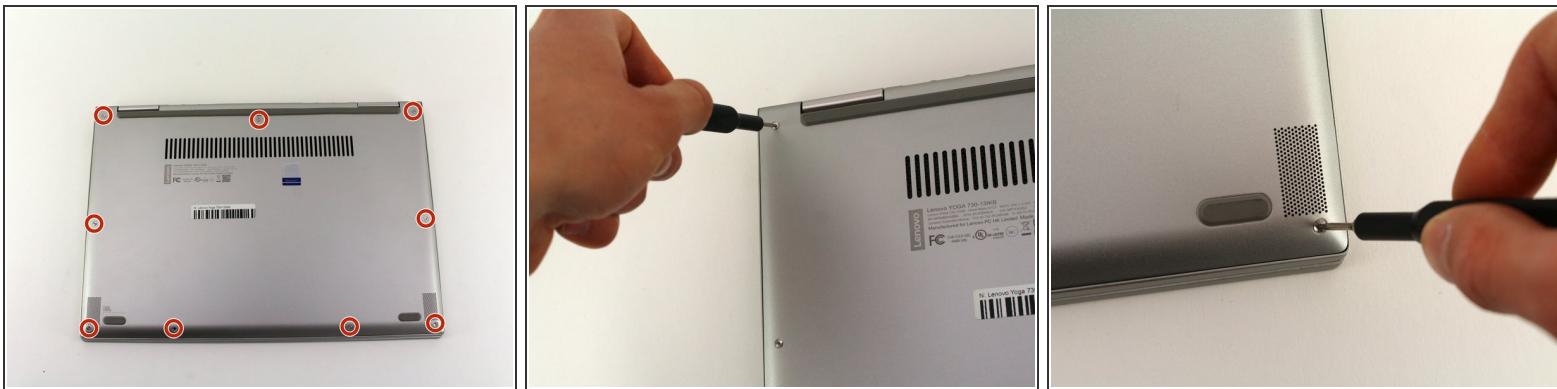

(i) Power off the laptop and place it facedown on a non-scratching surface.

- Remove the nine T5 screws fastening the back case.

Step 2

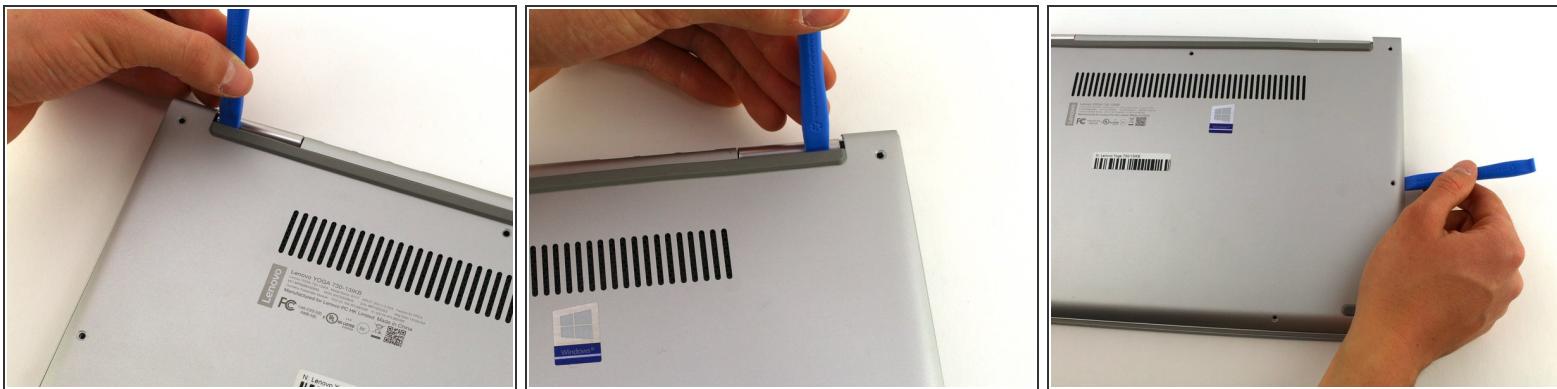

- Slide a plastic opening tool underneath the back case near the screen hinges. Gently pry up on either side.
- Slide the opening tool underneath the back case next to the middle screw hole at either side of the case. Gently pry up.

(i) You may hear popping sounds as the tabs securing the case release. This is normal. If the case does not move, try prying at a different angle/position.

Step 3



- Remove the back case by pulling up near the screen hinges and lifting diagonally away from the laptop.

i Go slowly to avoid breaking any connecting tabs.

To reassemble your device, follow these instructions in reverse order.