



# Nintendo WaveBird Wireless Controller C-Stick Replacement

Remove the C-Stick from the Nintendo WaveBird Wireless Controller.

Written By: Garrett Leung



## INTRODUCTION

This guide will show you the steps on installing the C-Stick. This will be helpful if the [C-Stick isn't working](#) properly.

### TOOLS:

- [Y1 Tri-point Screwdriver](#) (1)
- [Tweezers](#) (1)
- [Spudger](#) (1)

## Step 1 — Batteries



- Pull down on the battery cover release lever and pull back to remove the cover.

## Step 2



- Take out each battery then put the covering back on.

## Step 3 — Front Panel



- Remove the eight 9-mm Tri-Wing screws on the back panel with the Tri-wing Y1 screwdriver.
- During reassembly, firmly hold the panels of the controller together while replacing screws so the panels don't separate.

## Step 4




- After each screws has been removed carefully turn over the controller, and place on a flat surface.
- Slowly separate the top panel from the bottom panel.

 The buttons are loose and may fall off of the motherboard.

- Once seperated set aside the top panel.

 During reassembly, make sure the front panel lines up with the buttons so they slide back into place.

## Step 5 — Buttons

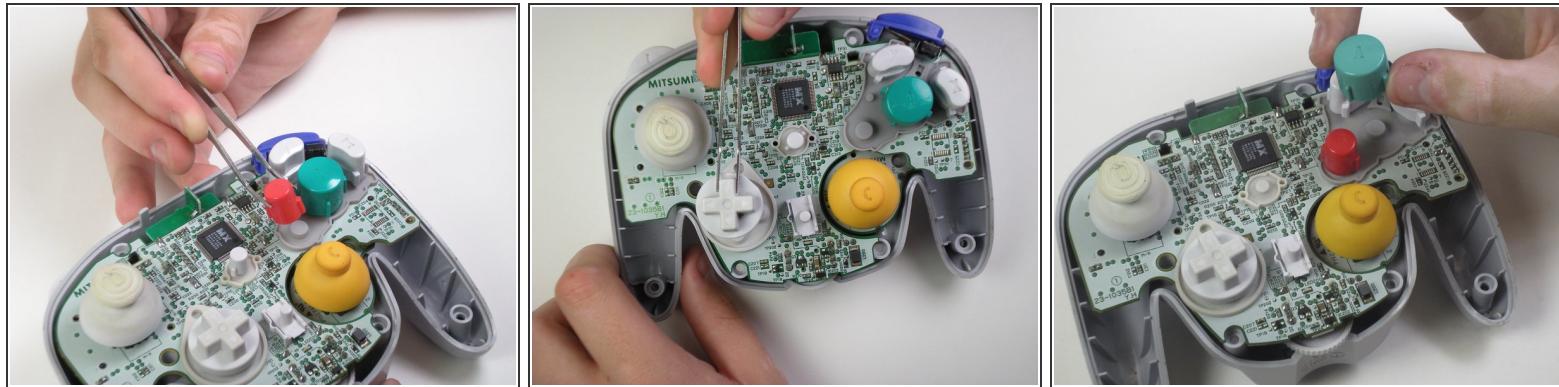

- Use tweezers to remove the buttons.
- ⓘ It may be easier to remove the A button off of the pad by lifting it with your fingers.
- ⚡ During reassembly, make sure all buttons are in their respective sockets so they match up with the front panel.

## Step 6 — C-Stick



⚠ Rough handling of the C-stick could cause the daughter board to break off of the motherboard.

- Grab the base of the yellow C-Stick cover with one hand and gently hold down the bottom piece of the motherboard with the spudger.
- Pull off the yellow C-Stick cover.

★ During reassembly, make sure the slots inside the C-Stick cover line up with the motherboard so it can fit back together.

To reassemble your device, follow these instructions in reverse order.