



# Sony Cyber-shot DSC-W580 Disassembly

Complete disassembly of Sony Cyber-shot DSC-W580 camera.

Written By: Adam Suchý



 **TOOLS:**

- [Phillips #00 Screwdriver](#) (1)
- [Tweezers](#) (1)

## Step 1 — Sony Cyber-shot DSC-W580 Disassembly



- Remove battery and SD card

## Step 2




- Unscrew six screws holding the cover.

## Step 3



- Remove the cover

## Step 4

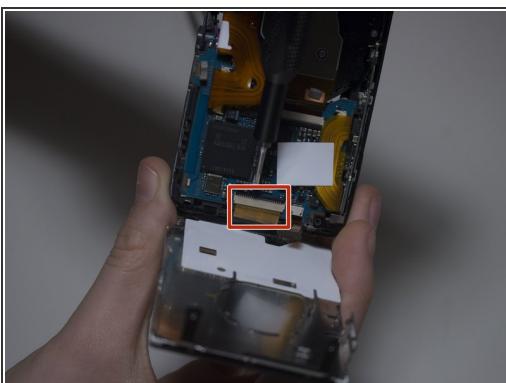

- Disconnect the two ribbon cables connecting the monitor


## Step 5



- Remove top buttons.


 **Be careful, this part can be easily broken.**

## Step 6

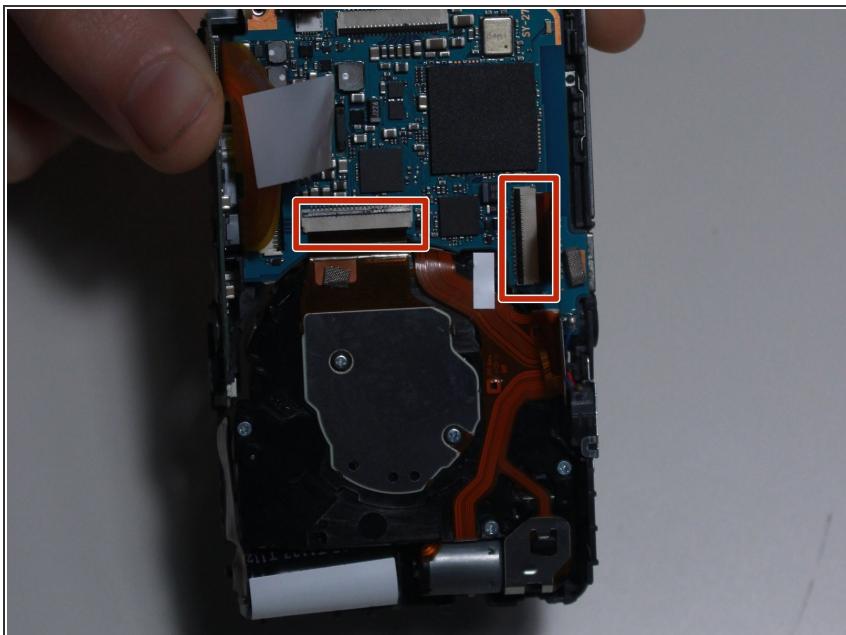


- Disconnect two ribbon cables connecting the lens and sensor.

## Step 7

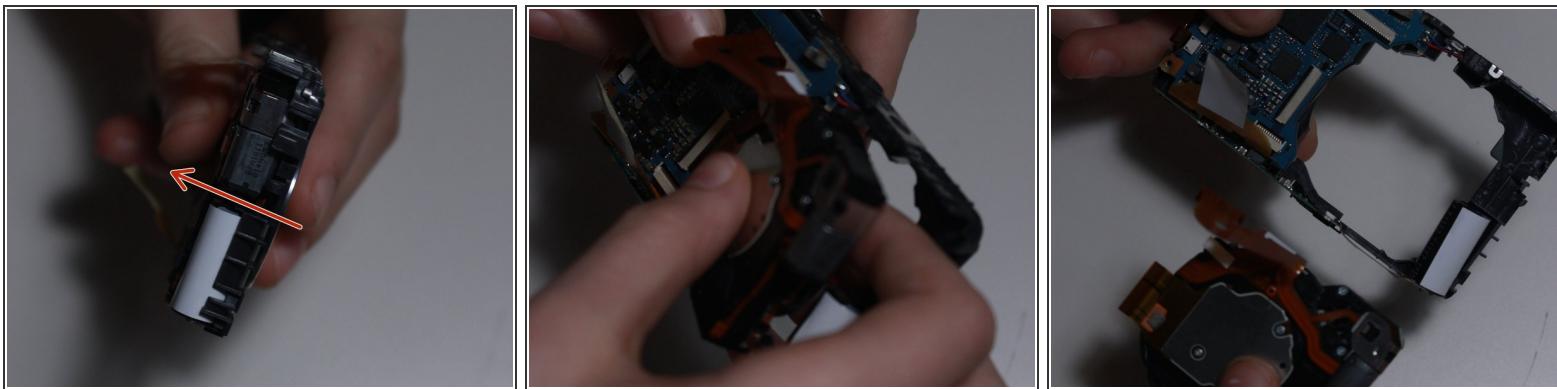


- Apply a bit of force on the front of the lenses until they pop up.
- Now you can safely remove them.

## Step 8

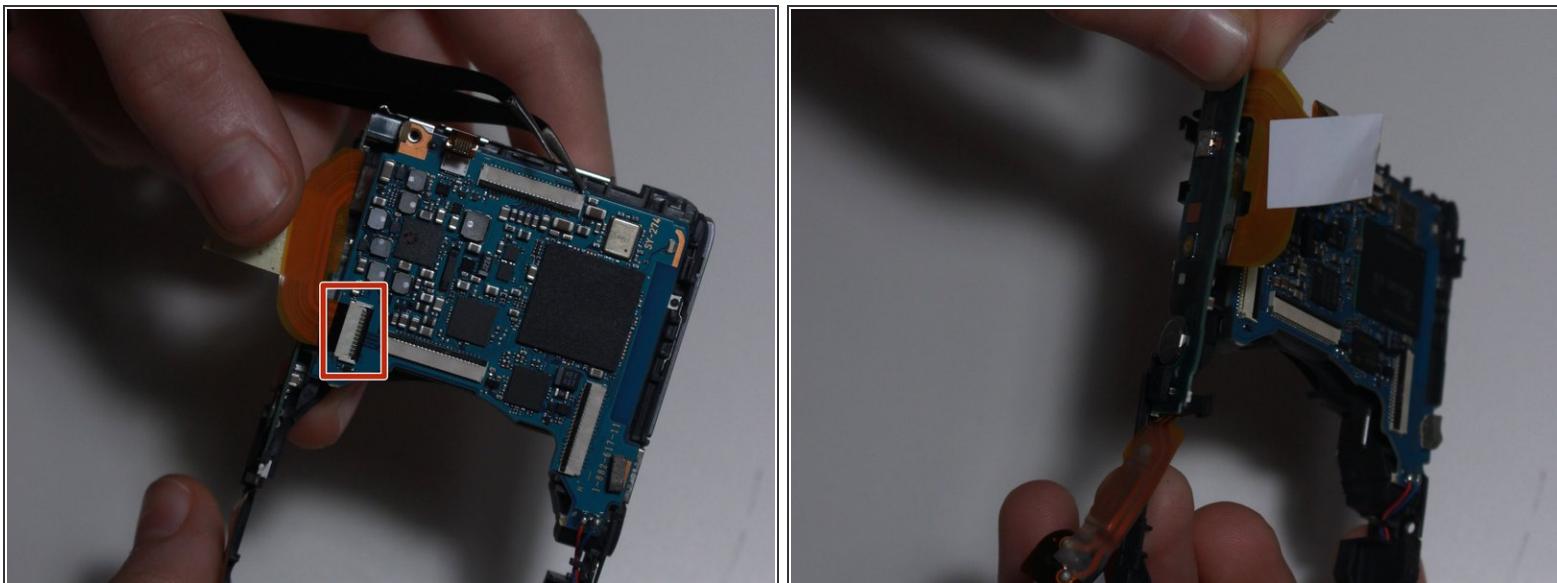


- Disconnect ribbon cable connecting the flash with the motherboard.
- and remove the flash.

## Step 9

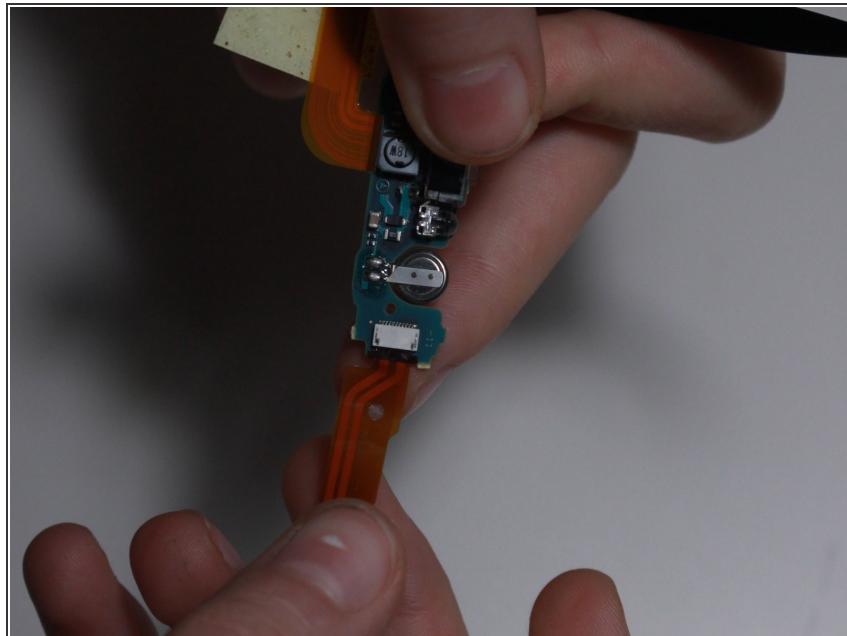

- Now remove the capacitor.

## Step 10

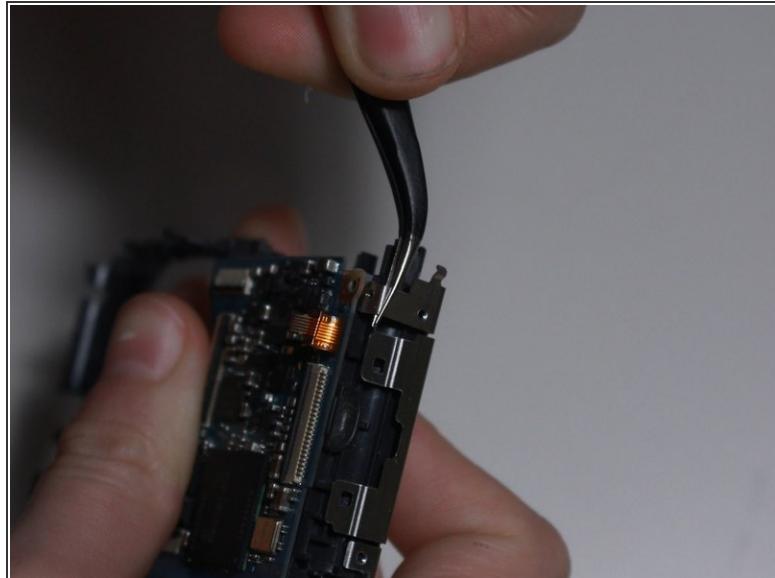

- Lift these two pieces and slide the metal cover off.

If you want to disassemble the lens check out this guide!

[Sony Cyber-shot DSC-W580 lens disassembly.](#)