



# Sony M-430 Microcassette-Corder Cassette Lid Replacement

Installing the cassette compartment lid of the Sony M-430 Microcassette-Corder.

Written By: Scott



## INTRODUCTION

Following this guides shows you how to remove the cassette lid from the device. Removing the cassette lid allows you to install a new one and enables you to remove the mechanism deck

### TOOLS:

- [iFixit Opening Tools](#) (1)
- [Spudger](#) (1)


## Step 1 — Cassette Lid



- Using a spudger, apply pressure towards the back corner of the cassette compartment to the plastic tab directly behind the gold cone.
- Pushing the tab allows the hinge to be separated from the body of the device.

*(i)* The third picture shows the what the tab looks like when the device is disassembled, and illustrates the direction to apply pressure.

## Step 2

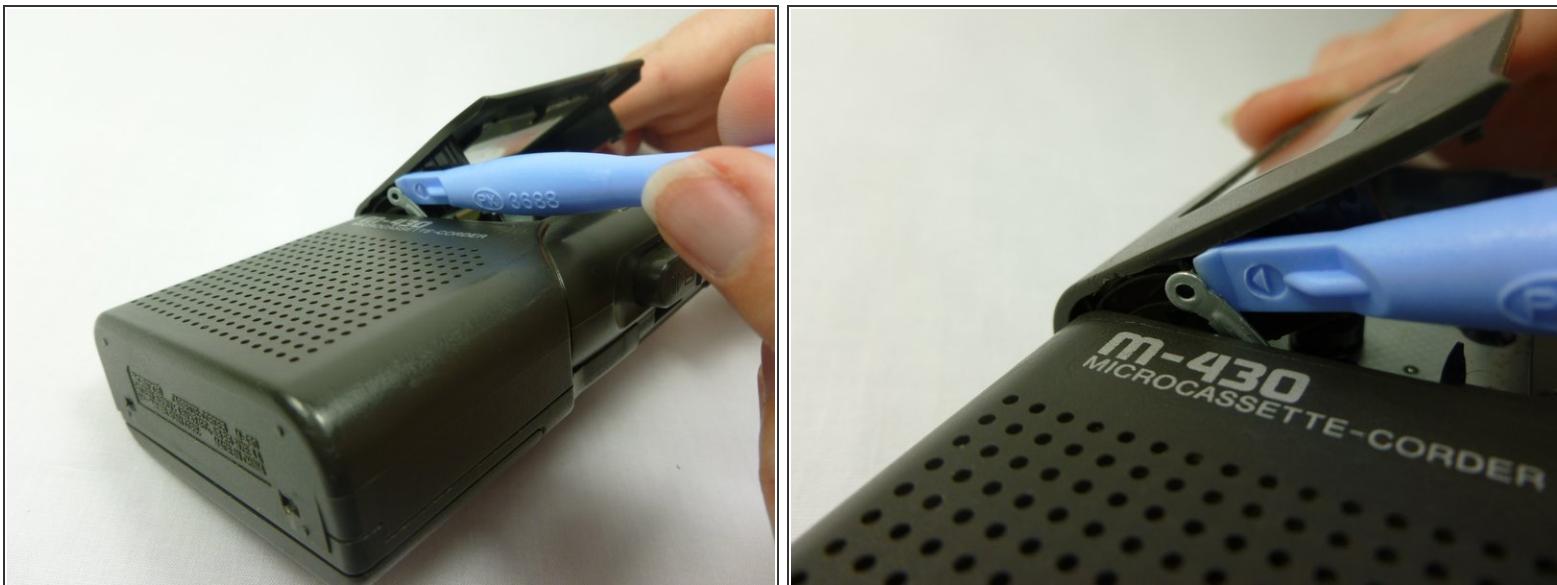

- Next, use a plastic opening tool to pull the metal latch towards the speaker.
- The latch should be clear of the slot in the cassette lid.

⚠ Be careful not to bend the latch too far, as it may warp.

## Step 3



- Carefully lift the cassette lid, making sure the tab and latch are free from connection.

To reassemble your device, follow these instructions in reverse order.