




Toshiba Satellite C55D-B5310 Touchpad Replacement

How to replace the touchpad in a Toshiba Satellite C55D-B5310.

Written By: Crystal Loomis

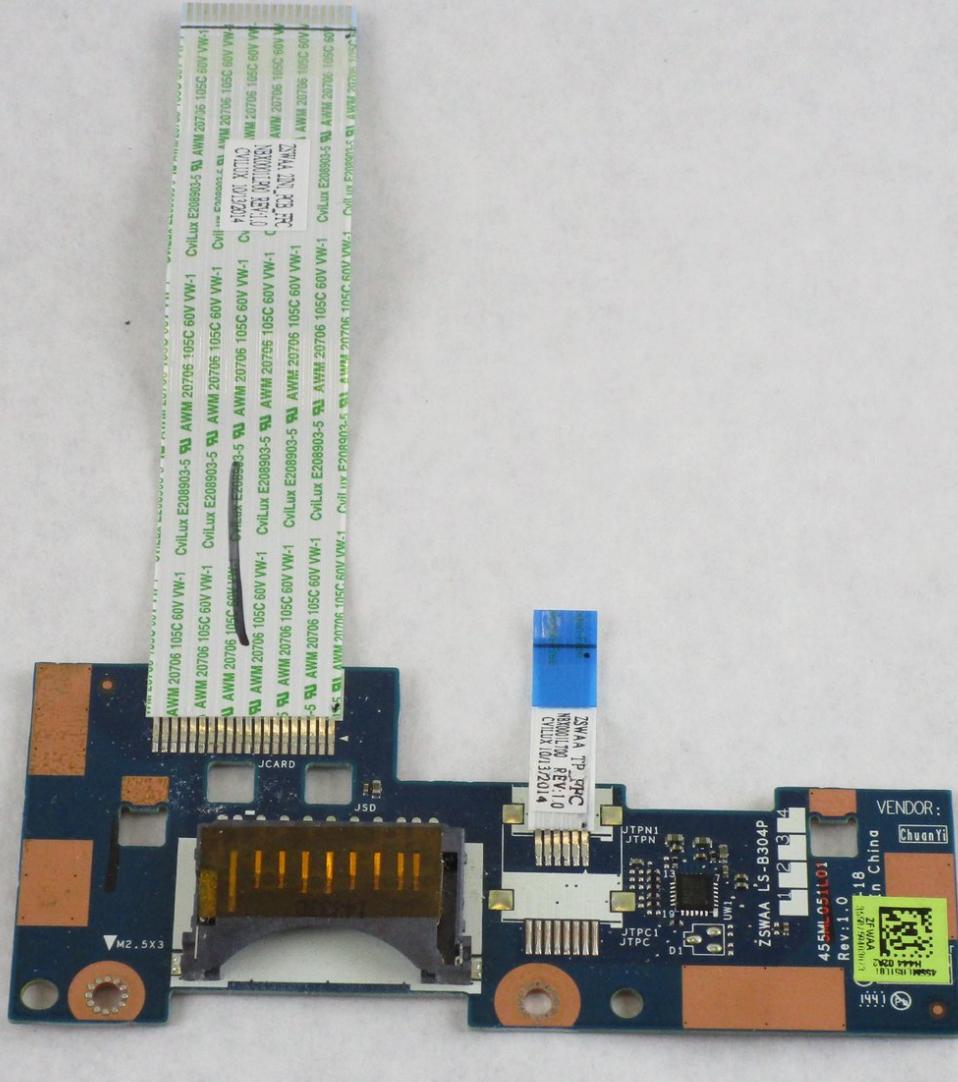

INTRODUCTION

If you are unable to use the touchpad of your laptop, use this guide to remove and replace the touchpad.

TOOLS:

- Phillips #1 Screwdriver (1)
- Magnetic Project Mat (1)
- iFixit Opening Tools (1)

Step 1 — Battery



 Turn off your laptop before starting.

- Flip the laptop over so the model stickers face the ceiling.

Step 2



- Use a Phillips #1 screwdriver (PH1 bit) to remove the two 7 mm screws that secure the battery.

Step 3




- Carefully slide the battery out of the laptop.

Step 4 — CD/DVD Drive



- Use a Phillips #1 screwdriver (PH1 bit) to remove the single 7 mm screw that secures the CD/DVD drive.

Step 5

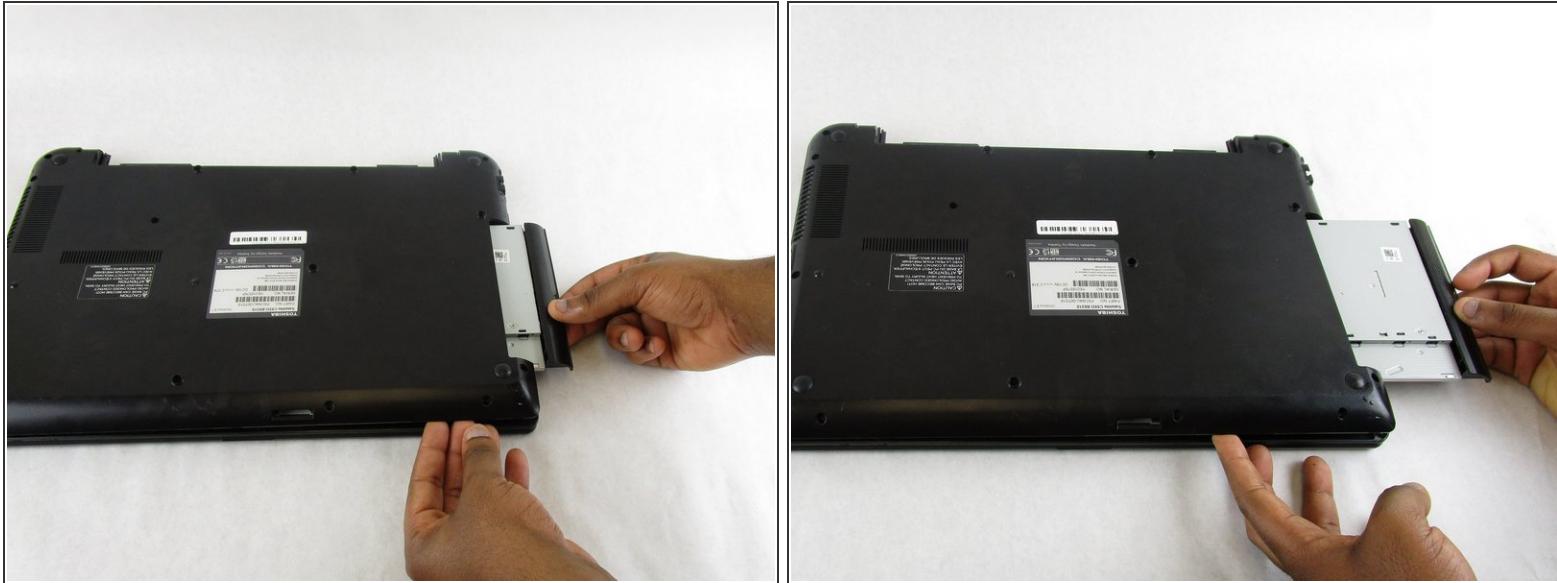

- Slide the CD/DVD Drive out of the laptop.

Step 6 — Touchpad




- Remove the thirteen 7 mm Phillips screws holding the back cover using the PH1 bit and Magnetic Driver.

Step 7




- Using the plastic opening tools, separate the back cover from the laptop.
- *i* It is recommended that you start from a corner and run the tool along the edge of the cover.
- ⚠ Be careful not to bend or crack the plastic back cover.

Step 8

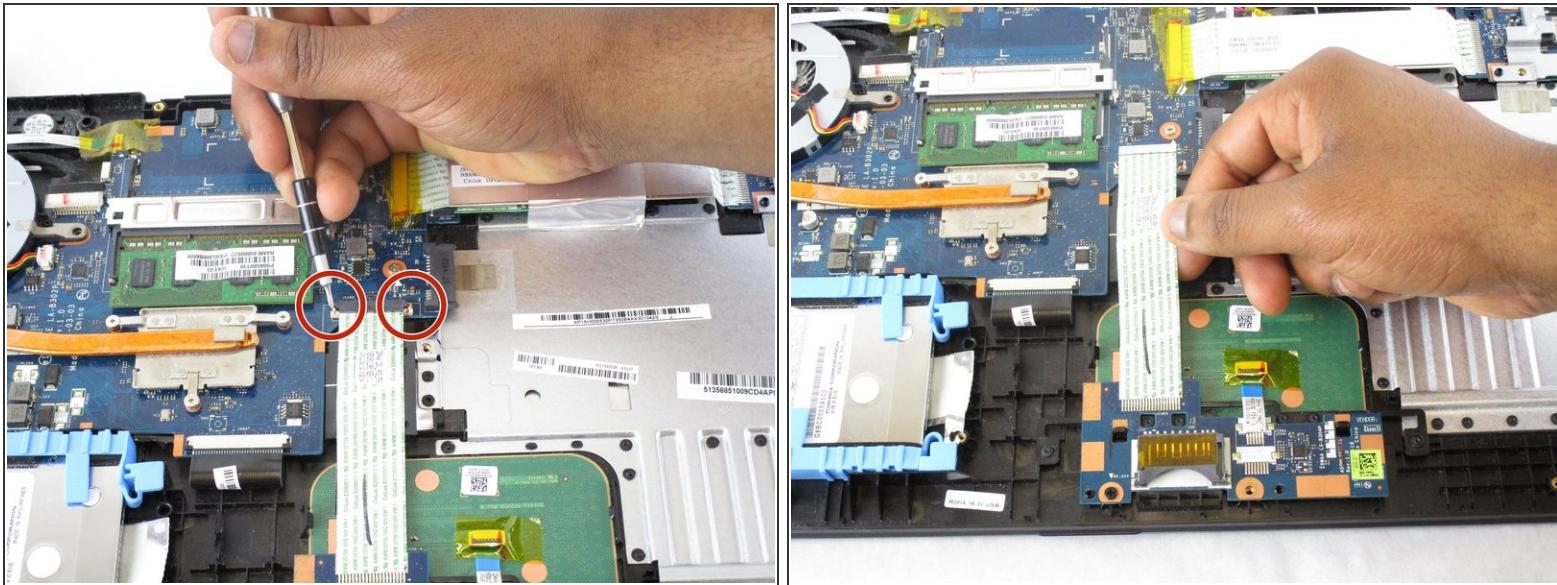


- Release the clamps holding the white ribbon between the touchpad component and the motherboard.
- Slide the ribbon from the motherboard connection socket.

Step 9

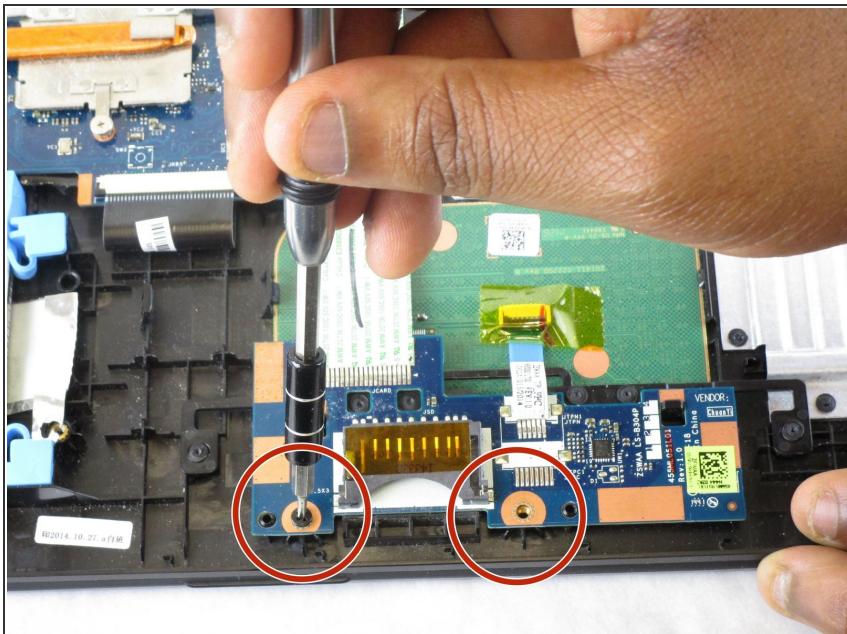


- Remove the two 7 mm Phillips screws holding the touchpad component to the back panel using the PH1 bit and Magnetic Driver.

Step 10

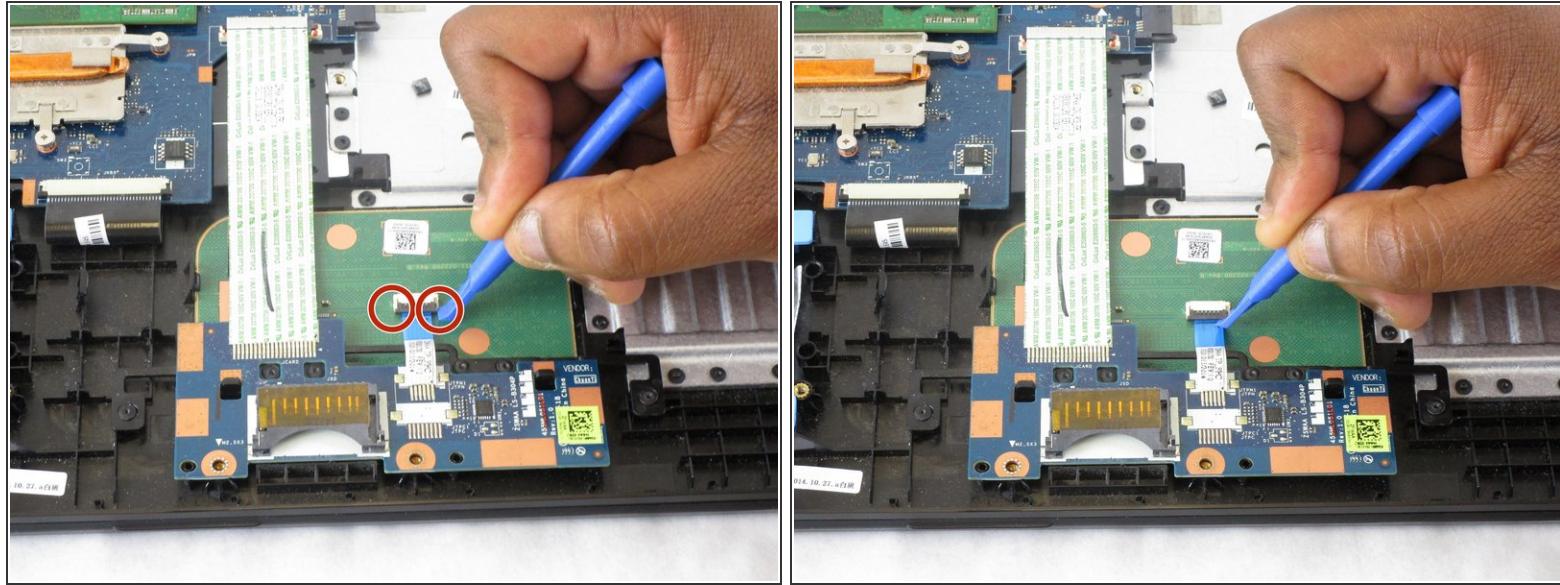

- Release the two clamps connecting the blue ribbon to the external touchpad.
- Lift the black clasp holding the blue ribbon in place.

Step 11

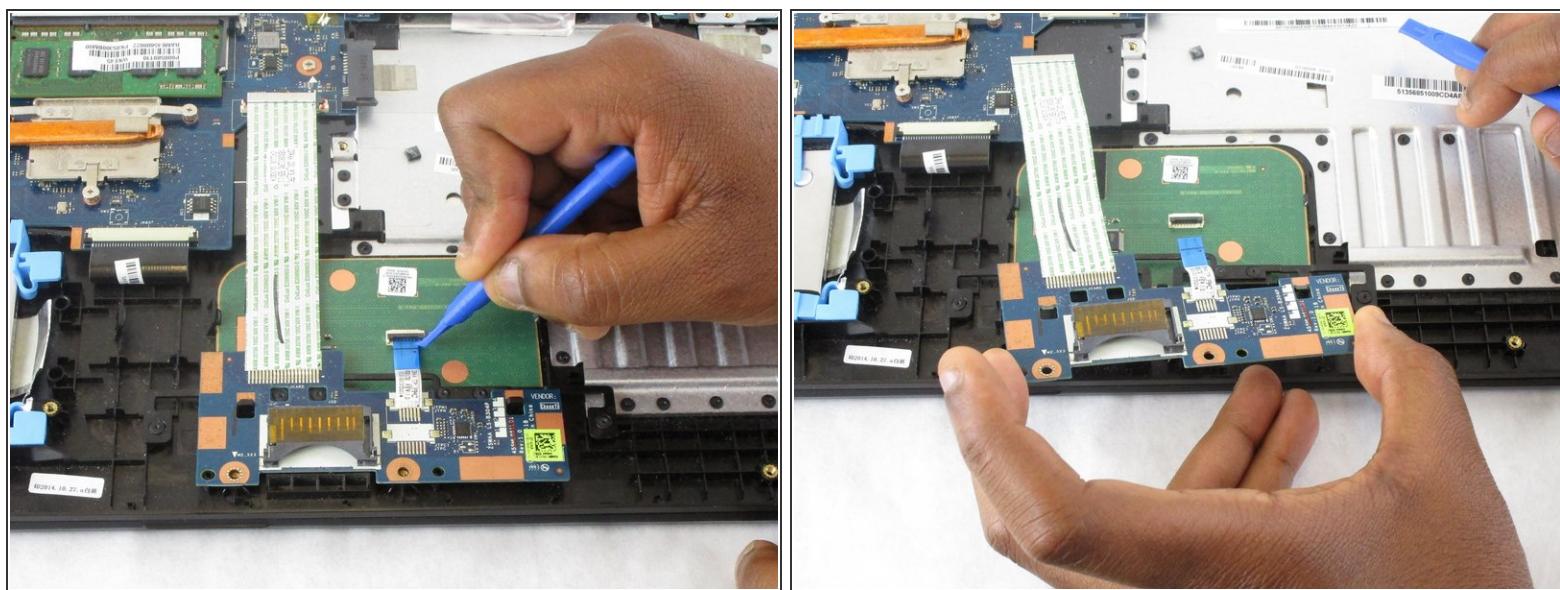

- Slide the blue ribbon from the external touchpad holding socket.
- Lift the touchpad module from the laptop.

To reassemble your device, follow these instructions in reverse order.