




# Xbox One S All Digital Edition Hard Drive Replacement

If you are unable to download or access games or content on your Xbox One S All Digital Edition, use this guide to fix this issue.

Written By: Jules Hajjar

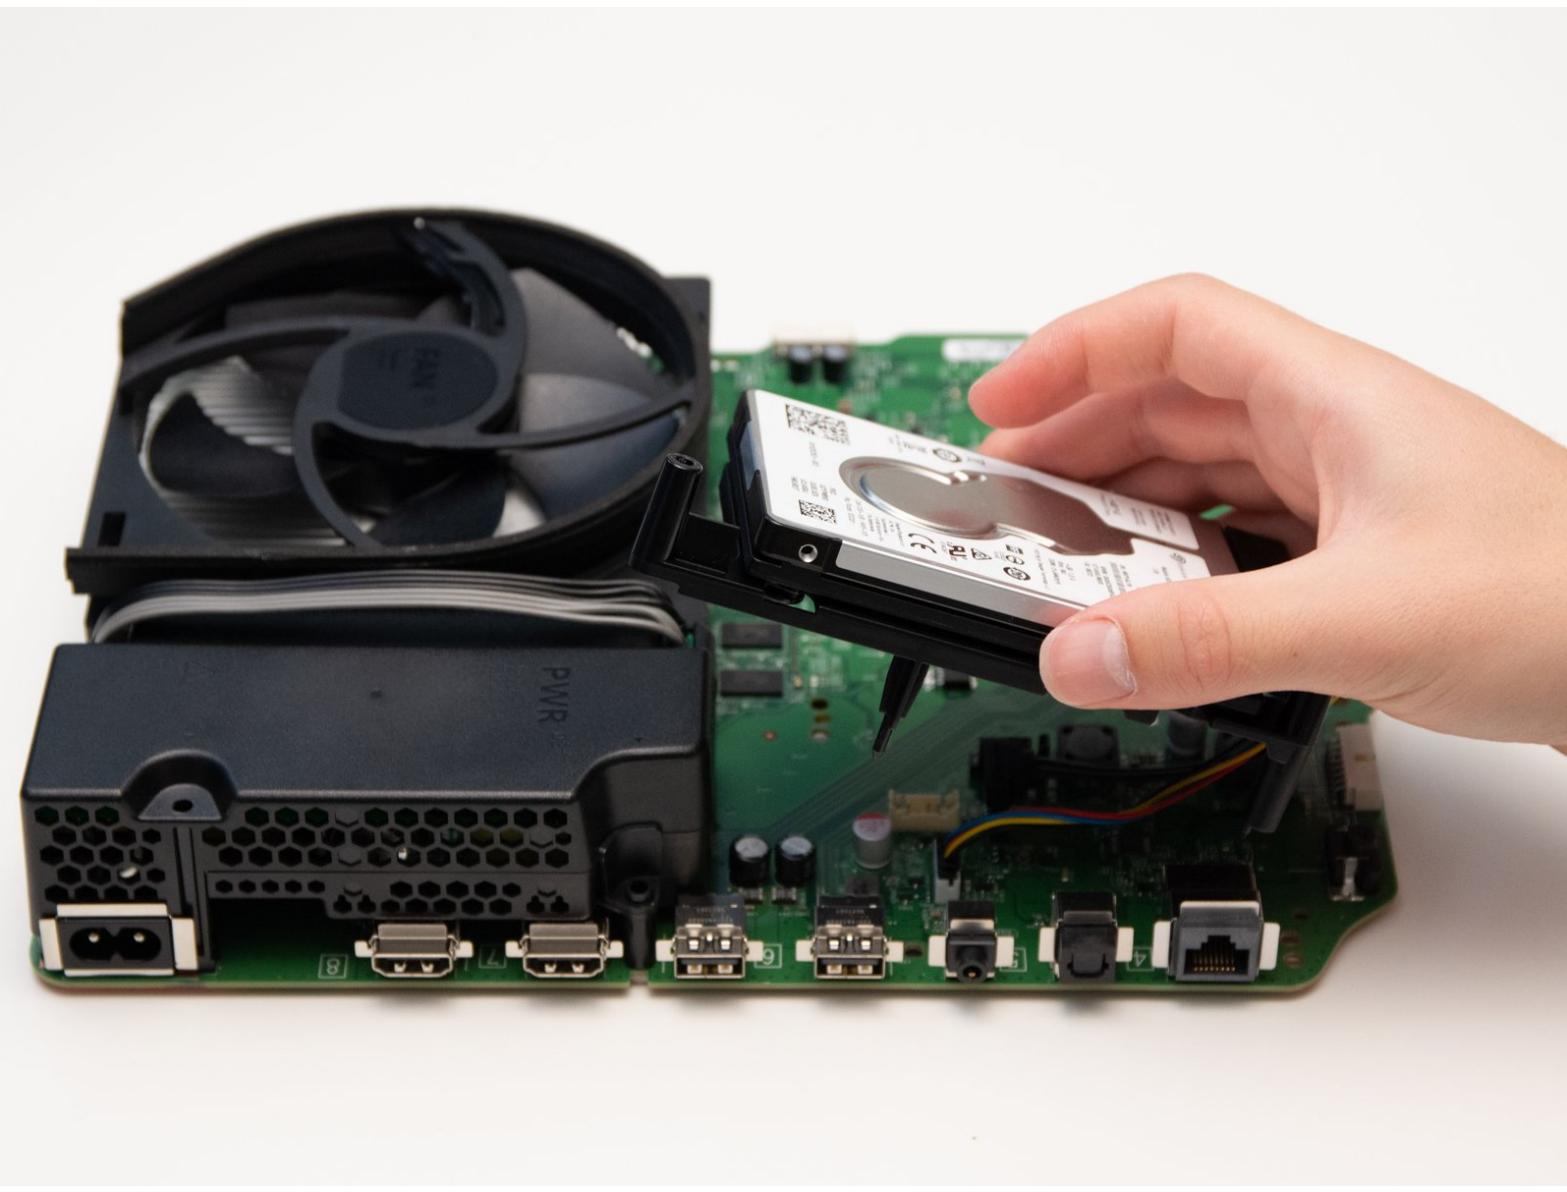

## INTRODUCTION

This replacement guide provides a step by step process on replacing the Hard Drive of the Xbox One S All Digital Edition (Model 1681). The Hard Drive is responsible for storing games or any downloadable content. [Symptoms](#) of a broken Hard Drive are if a user is unable to download or access downloaded games or content. Disconnect all cables prior to disassembly.

### TOOLS:

- [iFixit Opening Tools](#) (1)
- [TR10 Torx Security Screwdriver](#) (1)
- [T8 Torx Security Bit Screwdriver](#) (1)

### PARTS:


- [Xbox One S HDD](#) (1)

## Step 1 — Plastic Enclosure



- Position the iFixit Opening Tool's riveted edge in between the top and bottom cover of the plastic enclosure.
- Apply downward pressure on the iFixit Opening Tool until the security clip unlocks.
- Repeat on different points of the plastic enclosure until the bottom cover is removed.


## Step 2

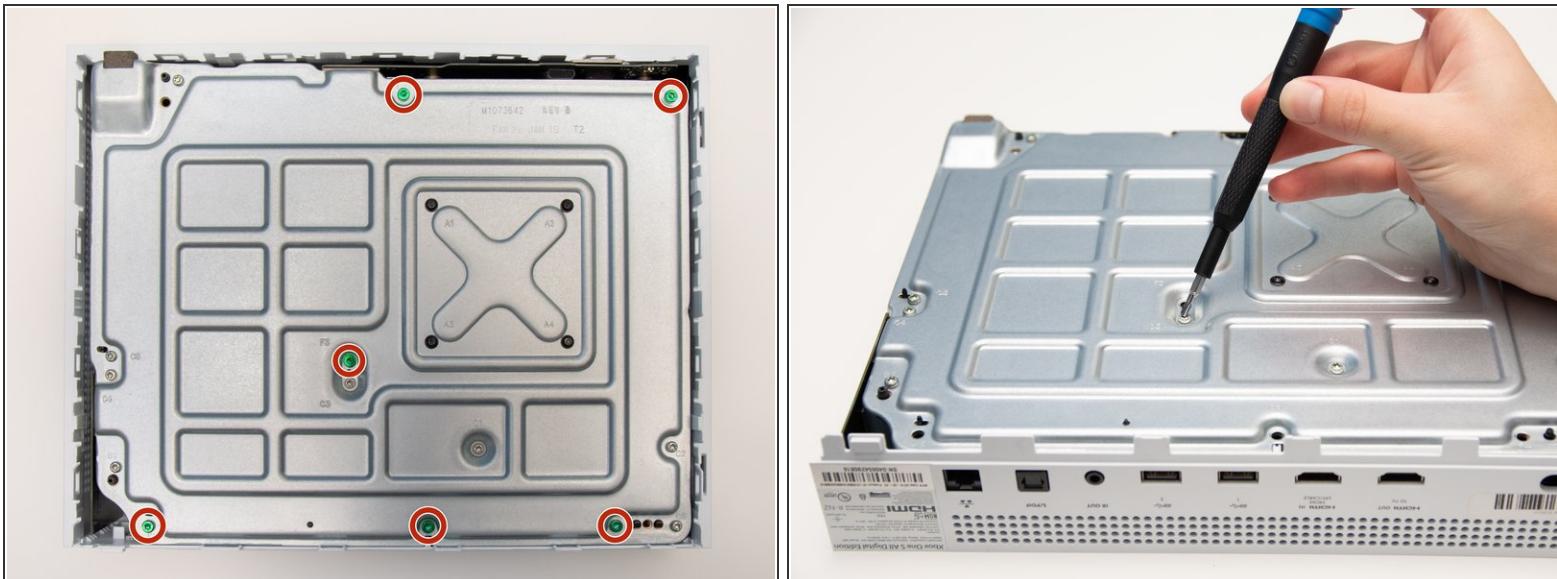

- Remove the six 50 mm green screws (labeled F1-F6) from the metal chassis using a Torx 10 screwdriver.

**(i)** These screws hold the top cover of the plastic enclosure to the chassis.

## Step 3

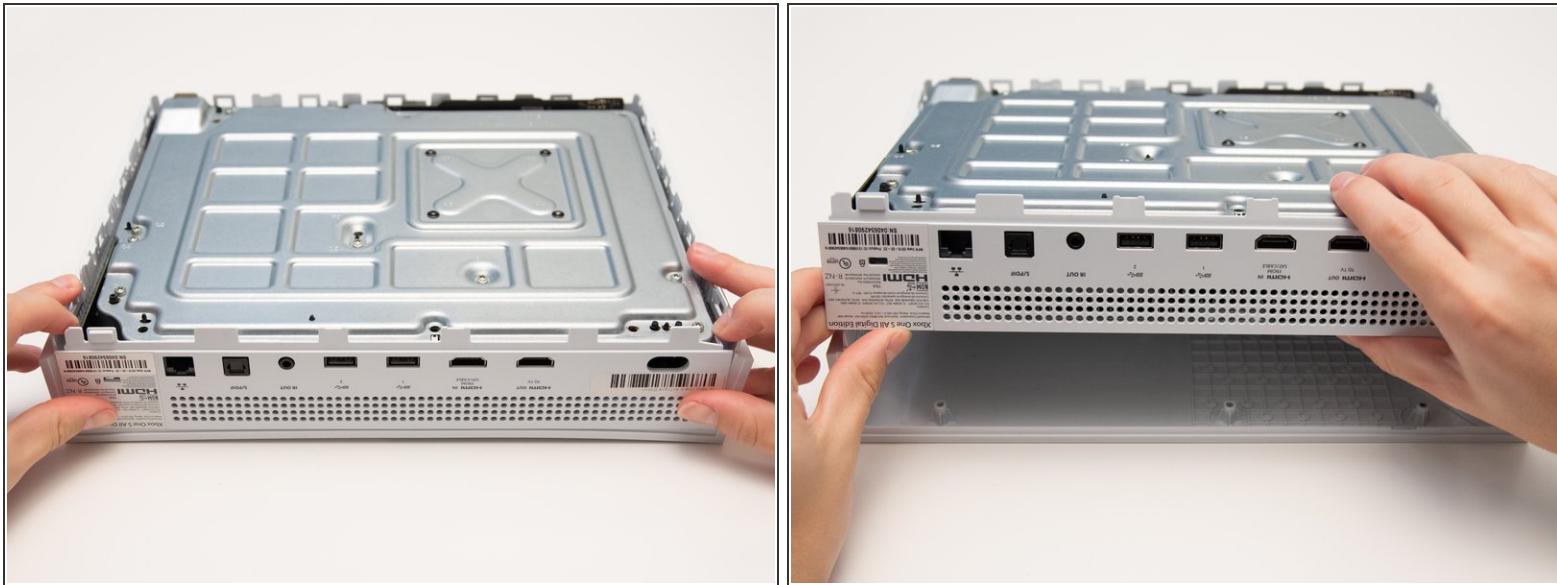

- Apply pressure to peel off the sides of the casing.
- Separate the metal chassis from the top cover, lifting the back of the chassis up and away from the top cover.


*(i)* The plastic back panel is meant to stay attached to the metal chassis.

## Step 4



- Flip the metal enclosure so that the fan cover is on top.

## Step 5 — Top Metal Shield

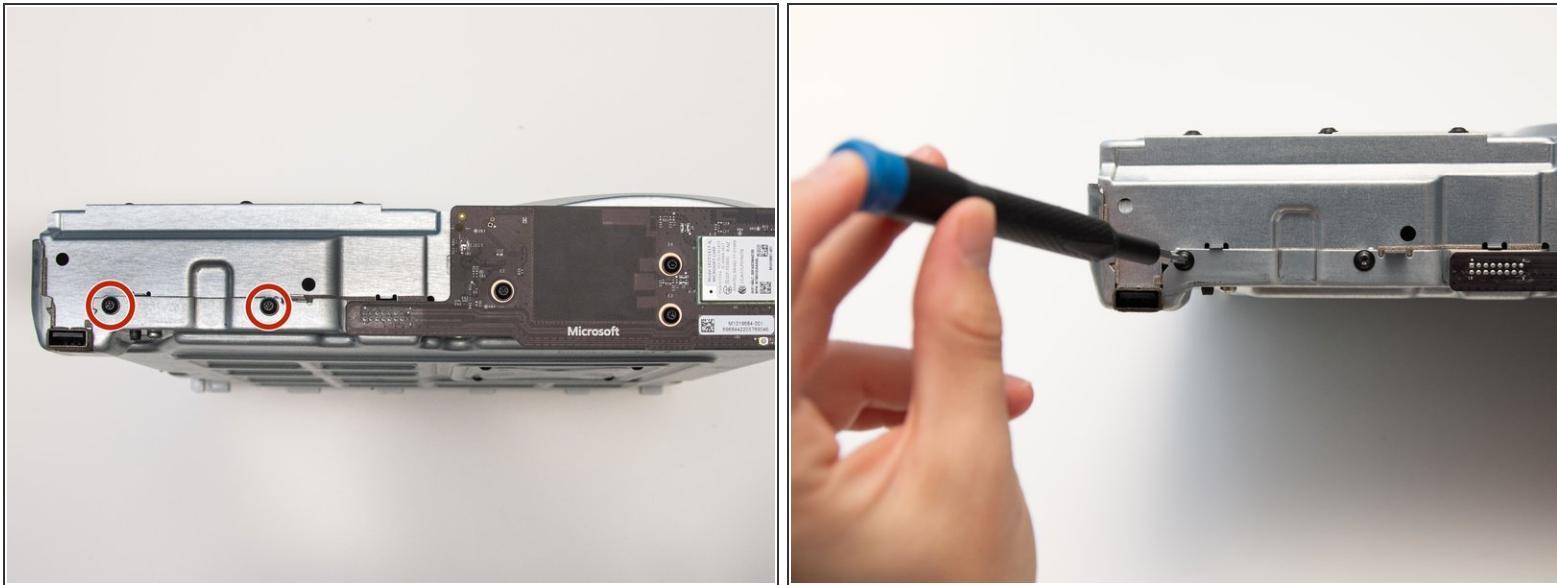

- Remove the two 15mm screws from the front panel using the Torx T8 screwdriver.


## Step 6



- Carefully slide the top metal case off the frame.



*(i)* This may require shifting the case side to side as you slide up.

## Step 7 — Hard Drive

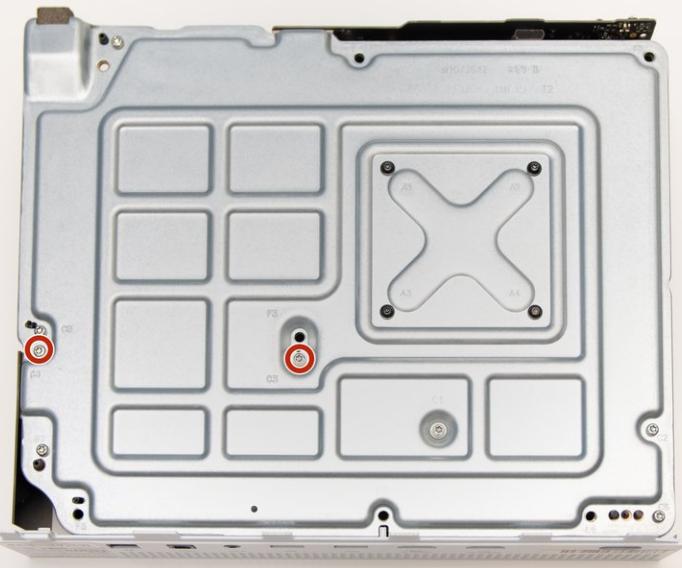


- Remove the two 10mm screws, labeled C3 and C4, attaching the plastic hard drive case to the metal chassis with the Torx T8 Security screwdriver.

## Step 8

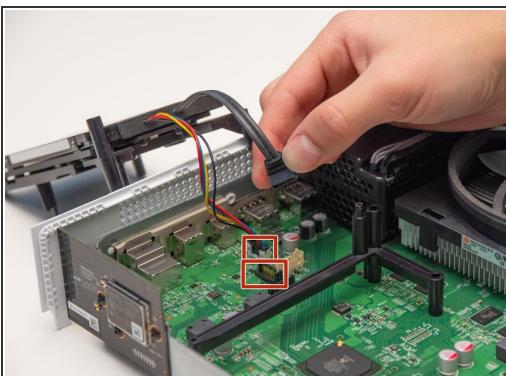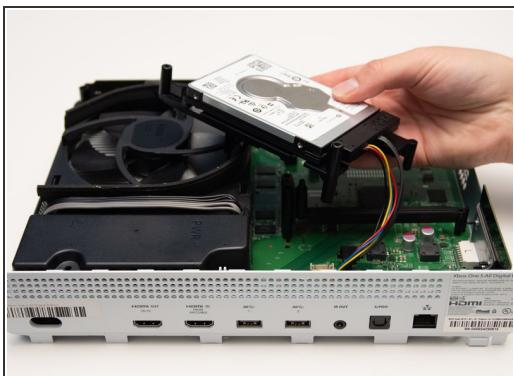


- Lift the hard drive and the black plastic casing from the chassis.
- Remove the two sets of wires from the motherboard by gently pulling them directly upward.

## Step 9

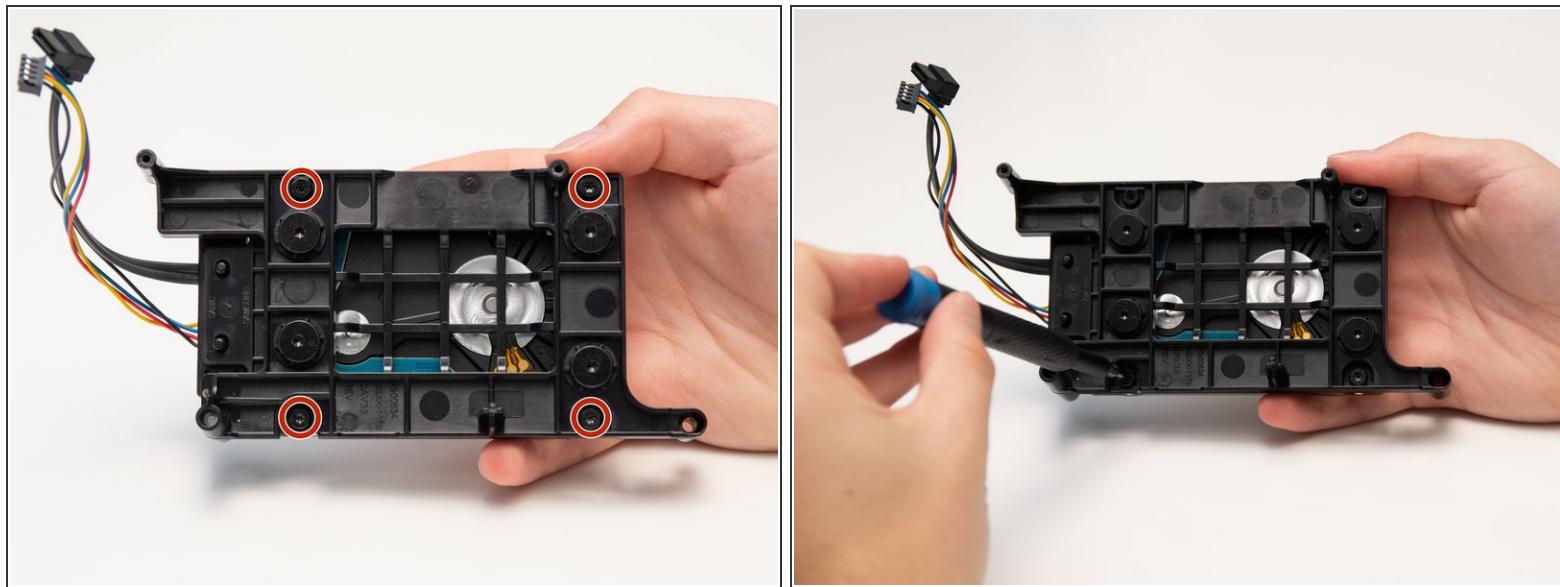


- Remove the four 10mm screws attaching the hard drive to the plastic casing with the Torx T8 Security screwdriver.

## Step 10

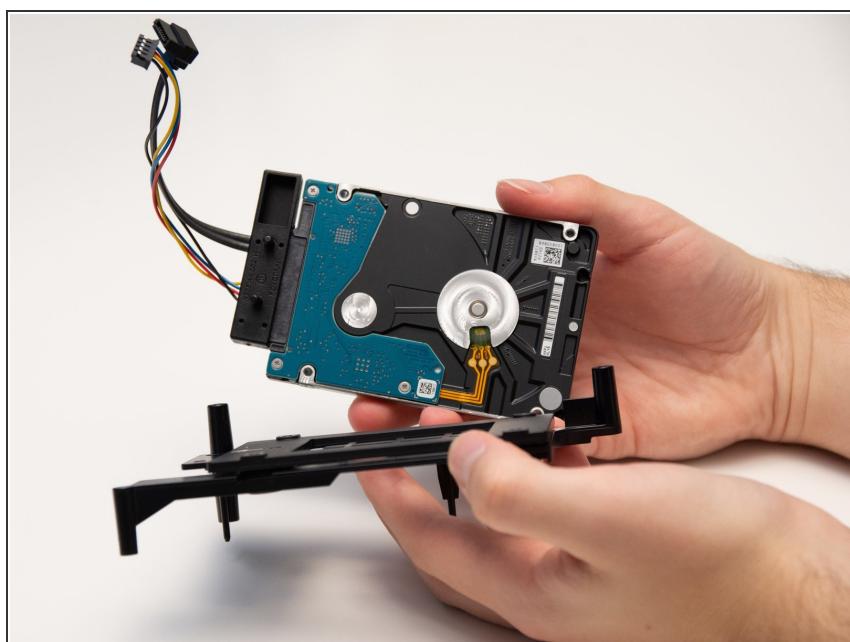

- Carefully remove the hard drive from its plastic case.

## Step 11

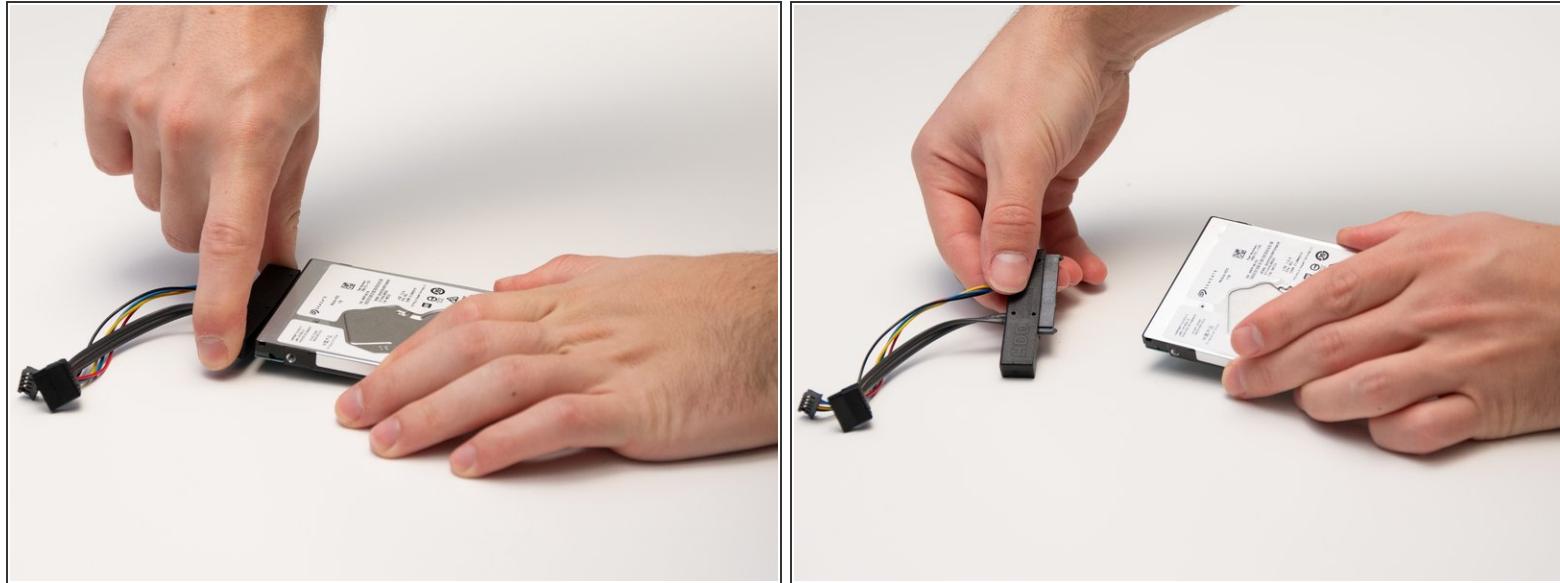

- Carefully remove the black wire connection from the hard drive by gently pulling away from the hard drive.

To reassemble your device, follow these instructions in reverse order.