




# hp spectre 13-3010dx Track Pad Replacement

This guide will instruct you on how to remove and replace your track pad.

Written By: Laurisa Titterud

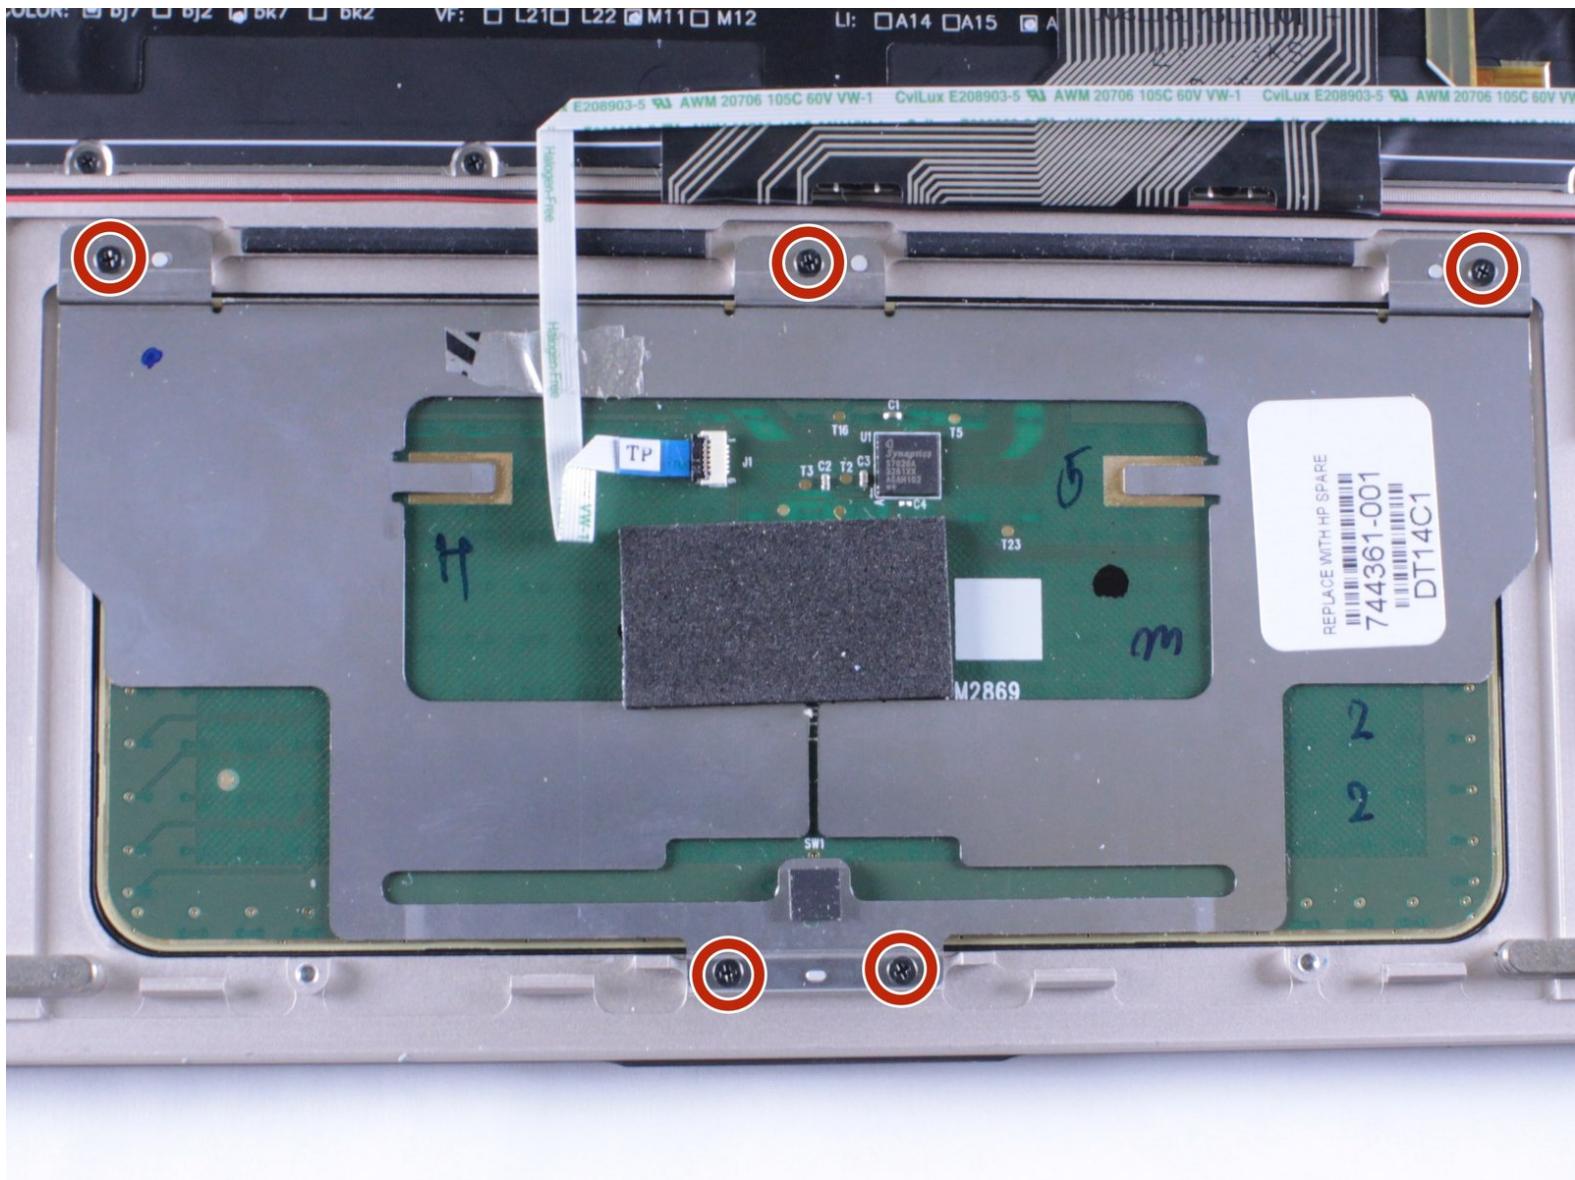


## INTRODUCTION

Use this guide if your track pad is damaged or unresponsive. Make sure you are wearing the Anti-Static Wrist Strap and remove the battery to avoid damaging the electronics.

## TOOLS:


- [iFixit Opening Tools](#) (1)
- [Anti-Static Wrist Strap](#) (1)
- [Phillips #000 Screwdriver](#) (1)
- [T4 Torx Screwdriver](#) (1)
- [Phillips #00 Screwdriver](#) (1)
- [Spudger](#) (1)

## Step 1 — Removal of the Back Case

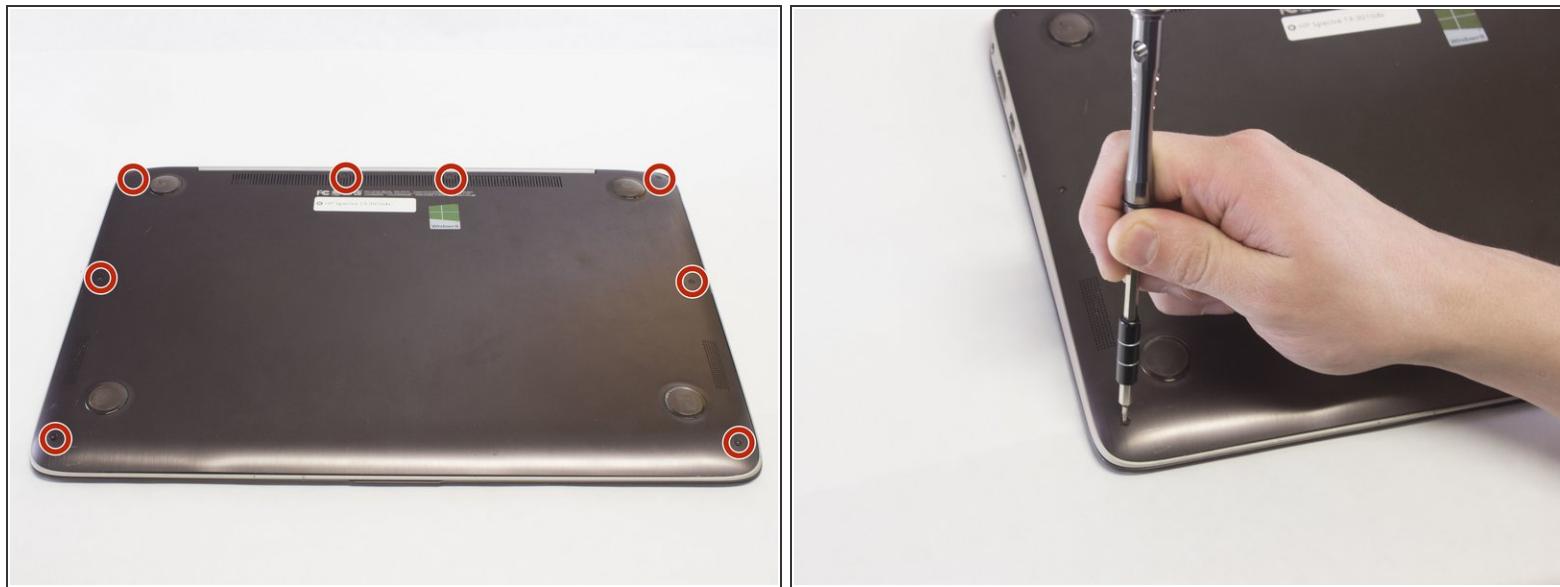

- Put on Anti Static Wrist Strap.
- ⚠ It is always a good idea to ground yourself when working with electronics to prevent static buildup. You wear this strap to protect you and your device from accidental electrostatic discharge (ESD) damage during repairs.]
- Flip Computer Upside down.
- Unscrew the eight 3.3mm black screws on the back casing with the T4 Torx Screwdriver.

## Step 2

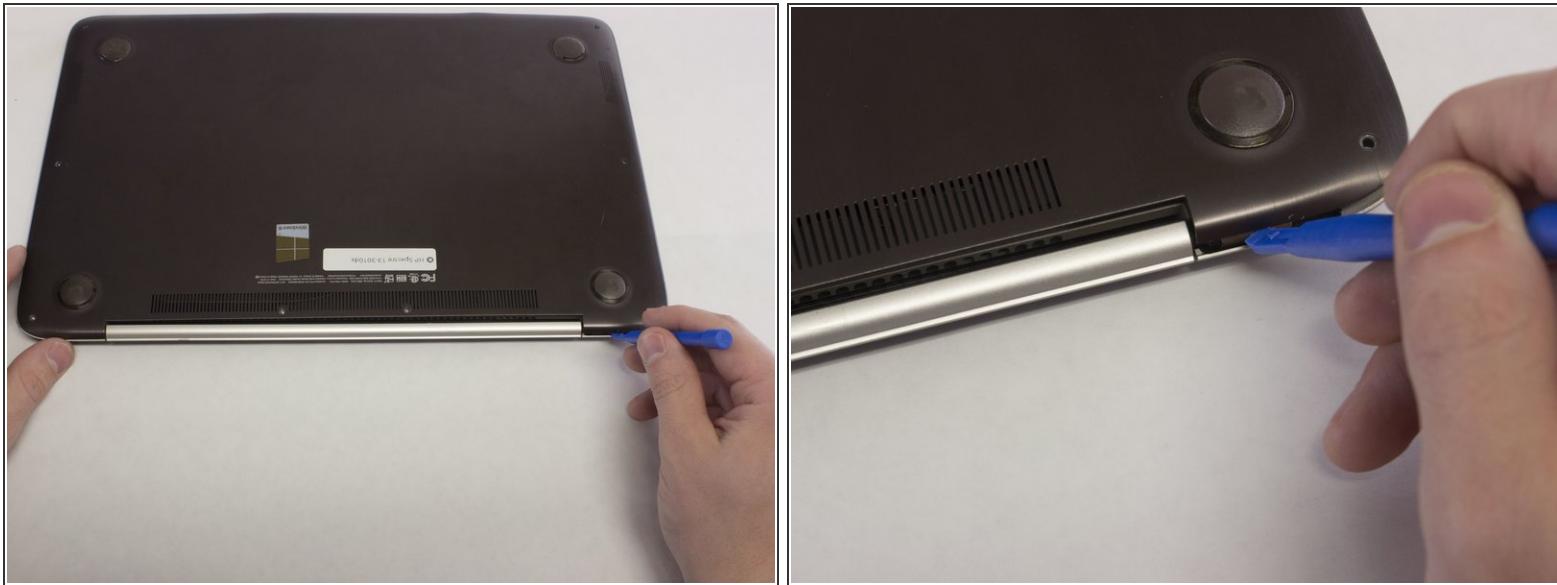


- Use the plastic opening tool to lift the back case off.
- *(i)* Use the plastic opening tools first; metal spudgers can damage your device.

## Step 3 — Battery




- Remove the six 2.0mm silver screws and the two 3.2 mm black screws using the PH00 Phillips Screw Head.

## Step 4

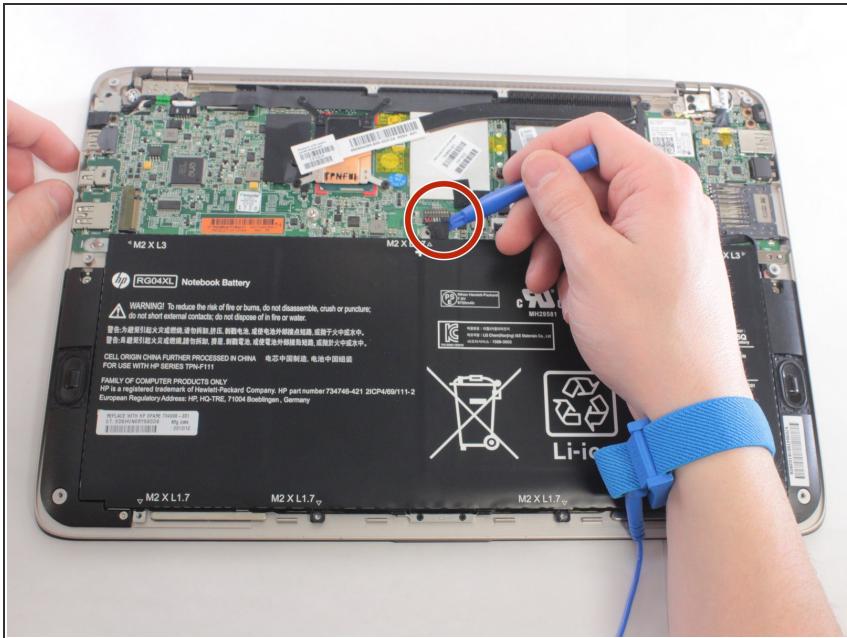


- Gently unplug from CONO851 plug, using the plastic opening tool.

## Step 5

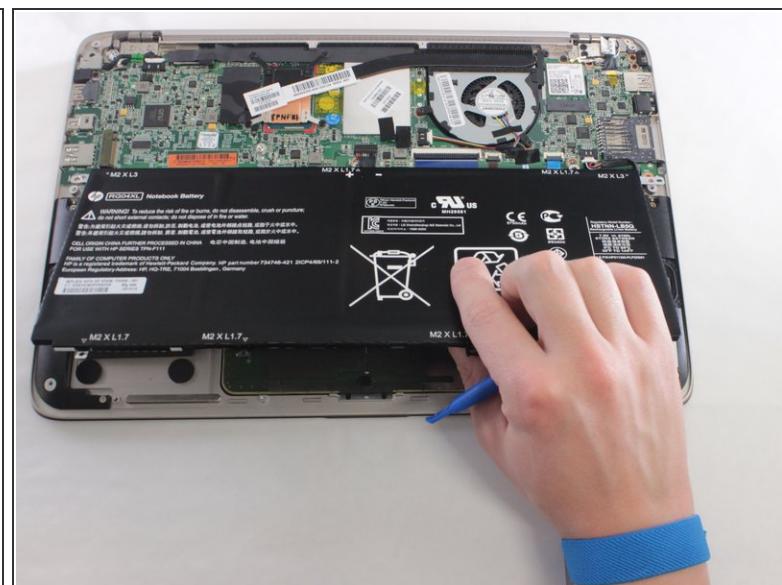


- Gently lift up the battery and remove using the plastic opening tools.

## Step 6 — Track Pad

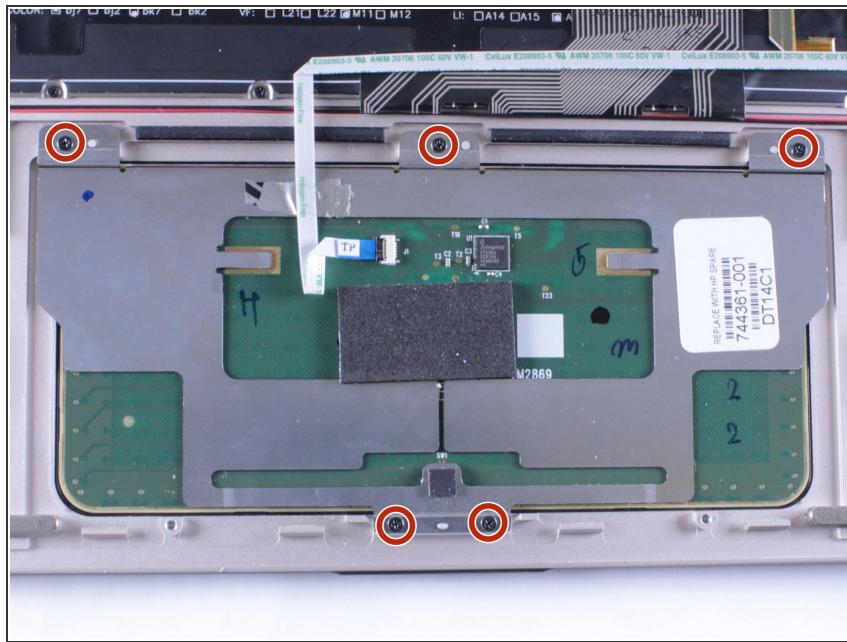


- Unscrew the five 2.3 mm screws using the PH000 screw head.

## Step 7

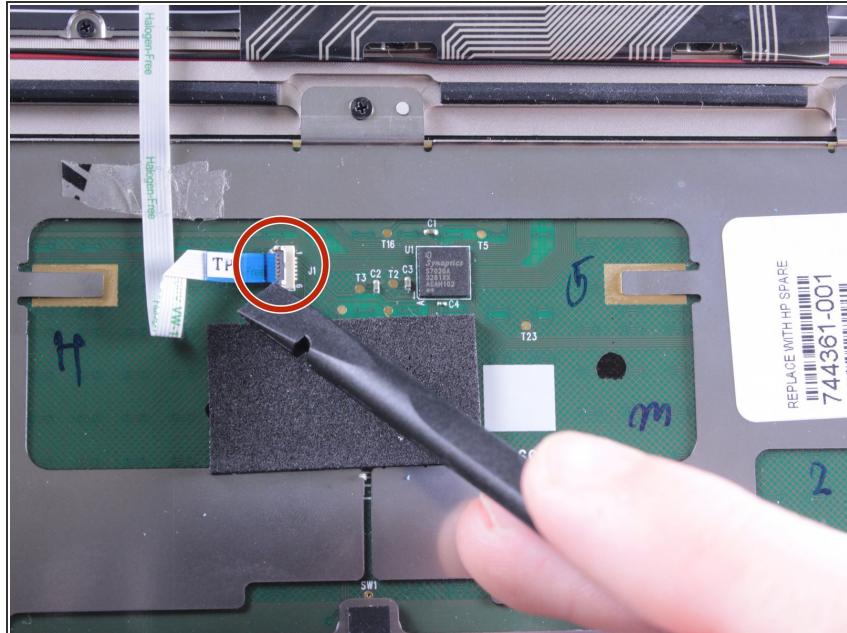


- Lift up the latch using the nylon spudger.

## Step 8

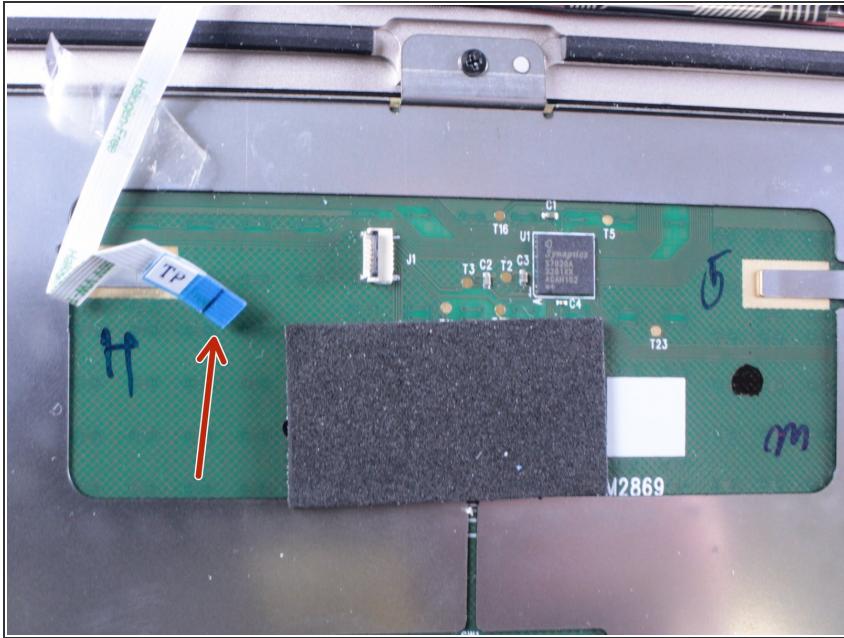

- Disconnect the ribbon.

## Step 9

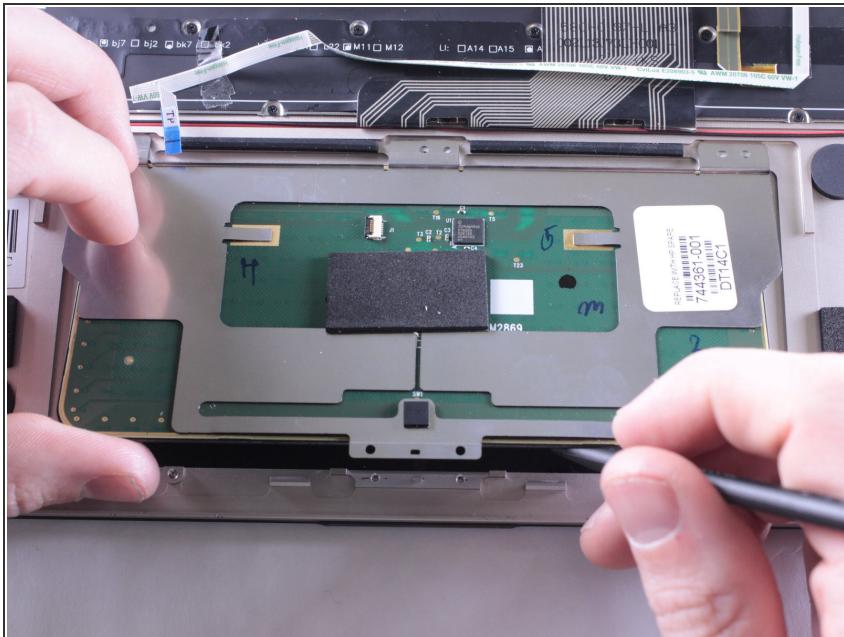

- Lift out the track pad.

To reassemble your device, follow these instructions in reverse order.