




# iRobot Roomba 560 Mainboard replacement

## Replacement

Roomba 560 mainboard replacement. How to disassemble the Roomba 560 to reach the mainboard.

Written By: Max Lembke

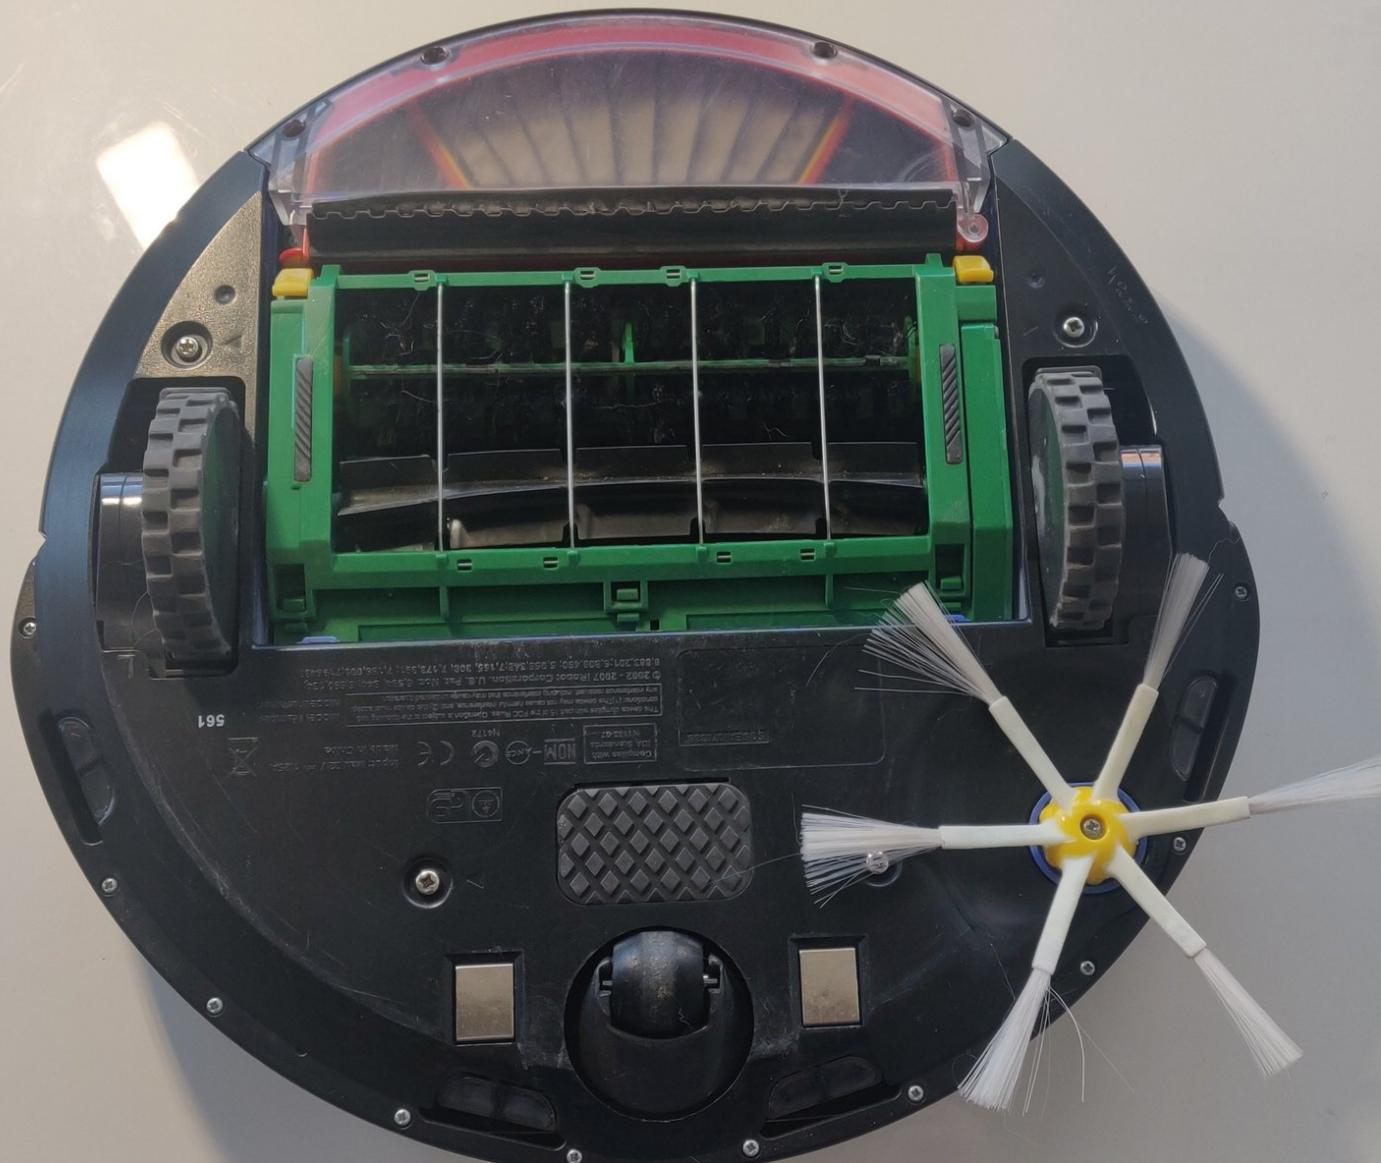

This document was generated on 2020-04-06 09:38:39 AM (MST).

## INTRODUCTION

Replacing the motherboard is a long process and needs to be carried out carefully to avoid damaging the device irreparably. Proceed with caution when handling the connectors.


### TOOLS:

- Pro Tech Toolkit (1)

### PARTS:

- Roomba 560 Mainboard (1)

## Step 1 — Start

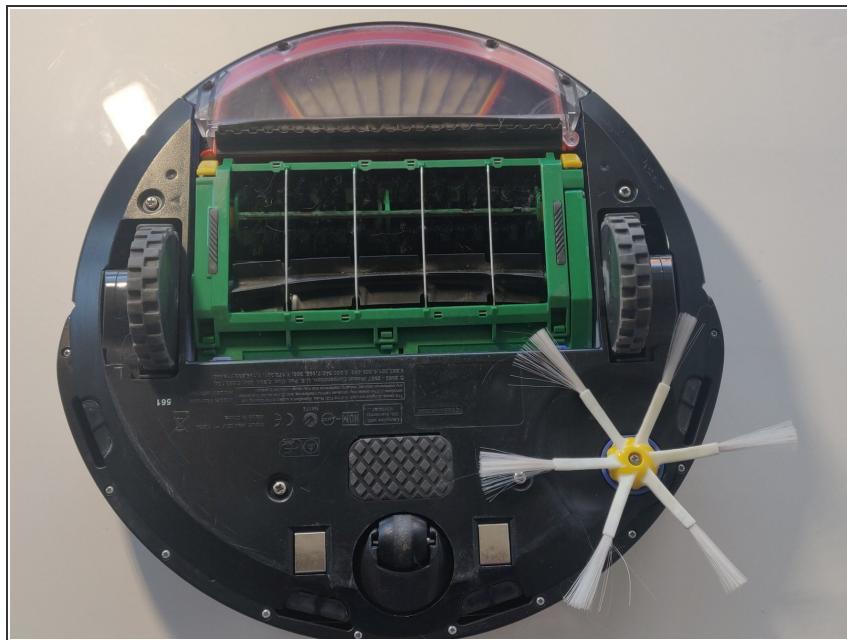

- Rotate the Roomba so the bumper is in front of you.

## Step 2 — Wheel Removal




- Remove the wheel using a spudger. You can probably also do this with your hand depending on how dirty the wheel is.

## Step 3 — Wheel Removal



- Remove the wheel guiding inlay using the spudger or your hand.

## Step 4 — Remove Main Brush

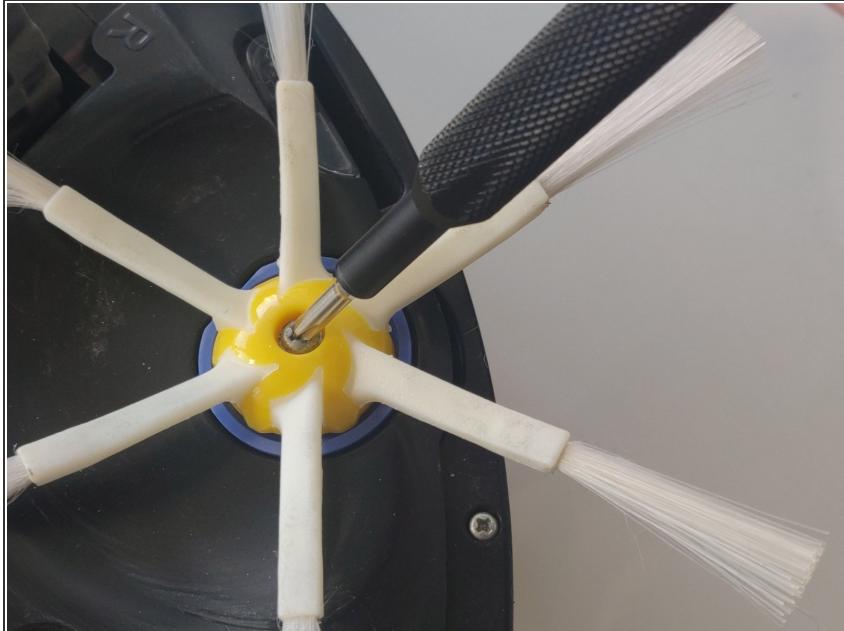

- Remove the main brush by unscrewing the single 5 mm screw on the yellow side sweeper using the Phillips #1 driver.
- Once the screw is removed, lift out the brush and store the screw and brush.

## Step 5 — Accessing the Battery




- Using the Phillips #1 driver, remove the four 10 mm screws that hold the back panel in place.
- Once the four screws are removed, store them safely and lift up the back panel.

## Step 6 — Remove the Vacuum-tray




- Remove the vacuum tray to have an easier repair.

## Step 7 — Removing the Battery

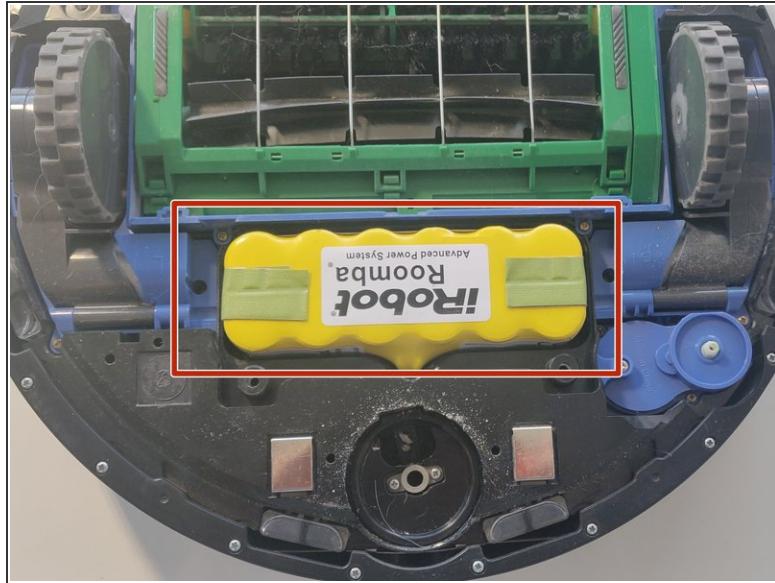


- Locate the battery.
- Lift up the yellow battery by pulling up the green tabs on its side.
- **Handle the battery with care.**

## Step 8 — Removing the wheels.

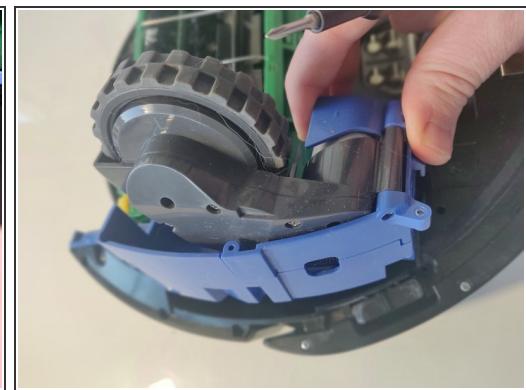


- Using the Phillips #1 driver, remove the three screws that hold back the wheel unit on each side. This is not required but will make the repair easier.
- Lift out the wheel units and store safely.
- Repeat on the other side.

## Step 9 — Prepare for the mainboard extraction

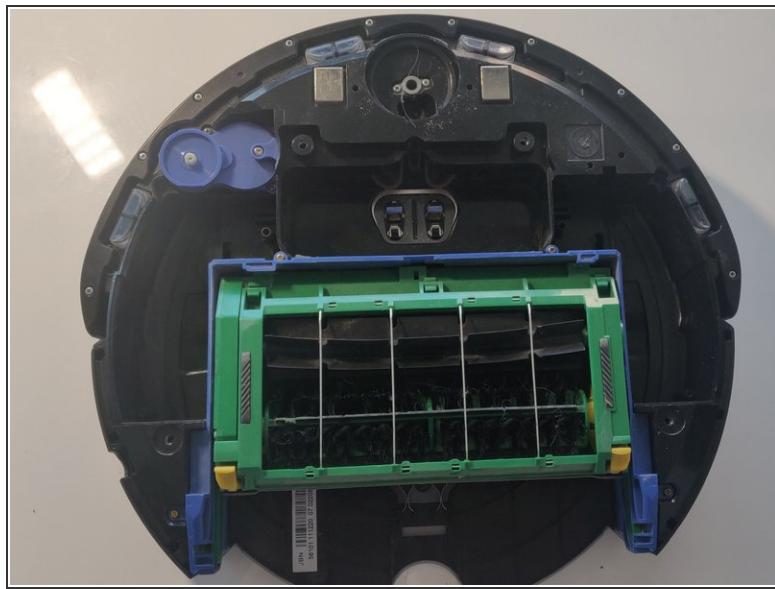

- Check that the unit now looks like this and all the parts are removed.
- Flip the unit around.

## Step 10 — Unhook front panel

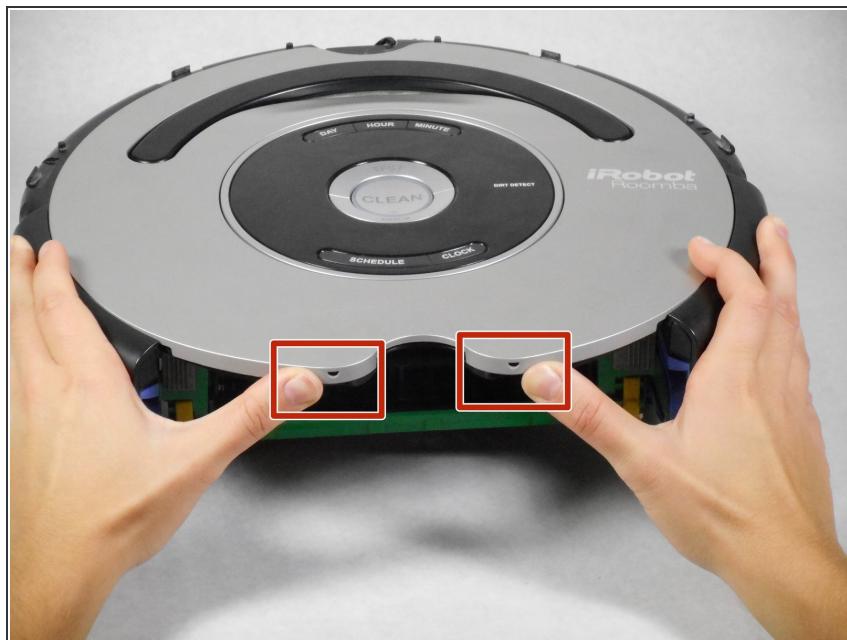

- Use your hands to unhook the snaps between the silver panel from the black panel located where the vacuum bin was.

## Step 11 — Remove top panel




- Using the iFixit spudgers pry under the main silver panel.

## Step 12 — Panel removal



- Lift off the panel.

## Step 13 — Remove front bumper

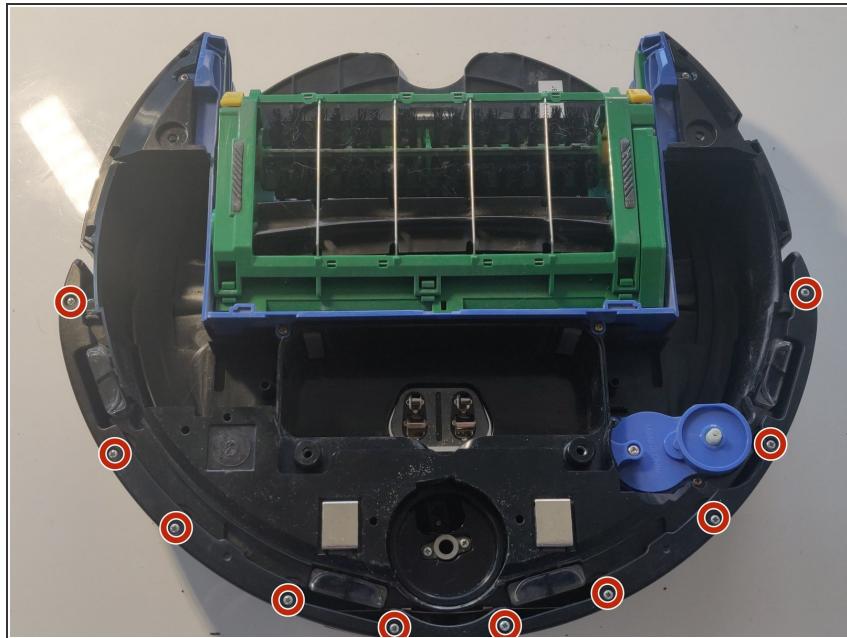


- Turn the unit around again and locate the 10 screws on the front bumper.
- Using the Phillips #1 driver, remove the ten 10 mm screws on the bumper that run along the outer edge of the Roomba.

## Step 14 — Lift off bumper



- Lift the thin top cover that holds the bumper in place.
- Be very vigilant with the attached sensor. Otherwise you risk ripping off the cable and damaging the entire sensor.

## Step 15 — Unscrew sensor

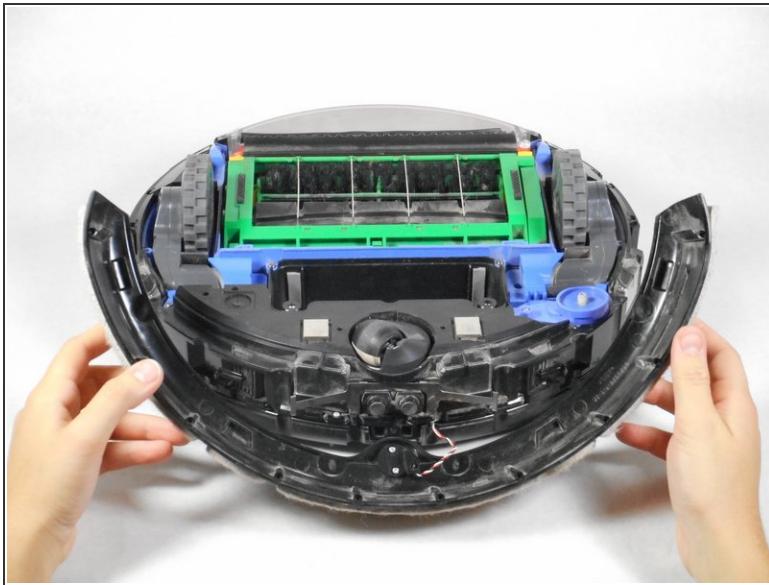

- Lift the bumper upwards for easier access.
- Unscrew the two 5 mm screws that connect the red and white wires to the device using the Phillips #1 driver.
- Lift the circular black panel off the sensor housing.

## Step 16 — Turn



- Turn the unit back around.

## Step 17 — Remove top screws



- Using the Phillips #1 driver, unscrew the following 13 screws that hold the black panel in place:
  - Two 5 mm on the bottom ends of the semicircle handle.
  - Ten 7.5 mm scattered on the Roomba.
  - One 5 mm at the bottom of control board.

## Step 18 — Lift panel off



- Lift the black panel off the device.

## Step 19 — Mainboard access



- Remove the outer silver circle, black plastic cover, and black film from the central control board in that order.

## Step 20 — Control board removal





- Using the Phillips #1 driver, unscrew the four 10 mm screws that surround the clean button.

## Step 21 — Remove panel




- Lift off the panel.

## Step 22 — Remove the protective sheet

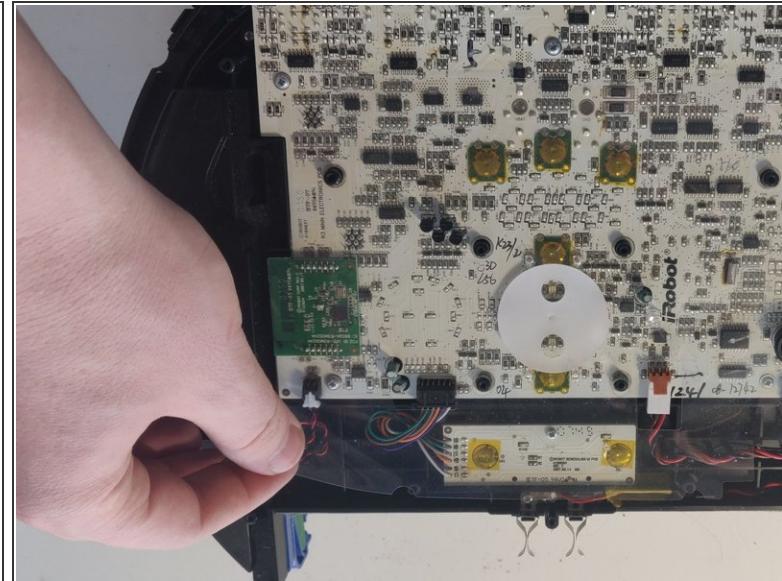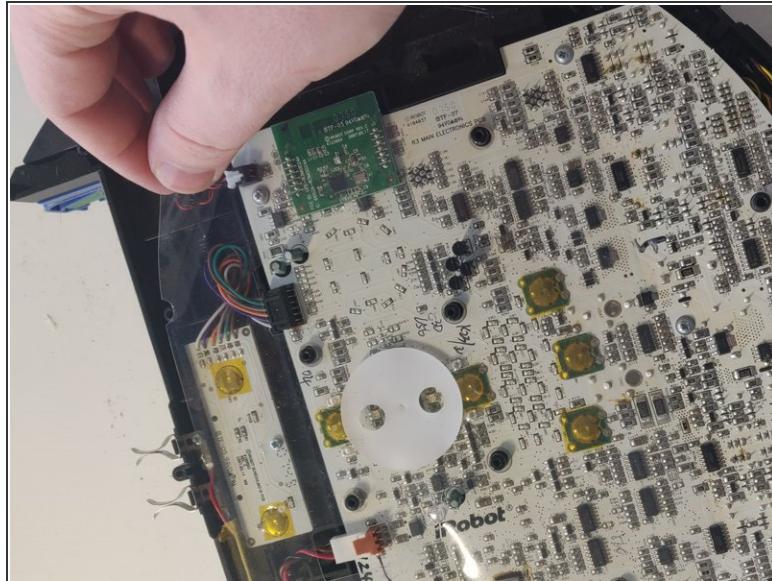


- Lift off the plastic sheet.

## Step 23 — Remove the connectors

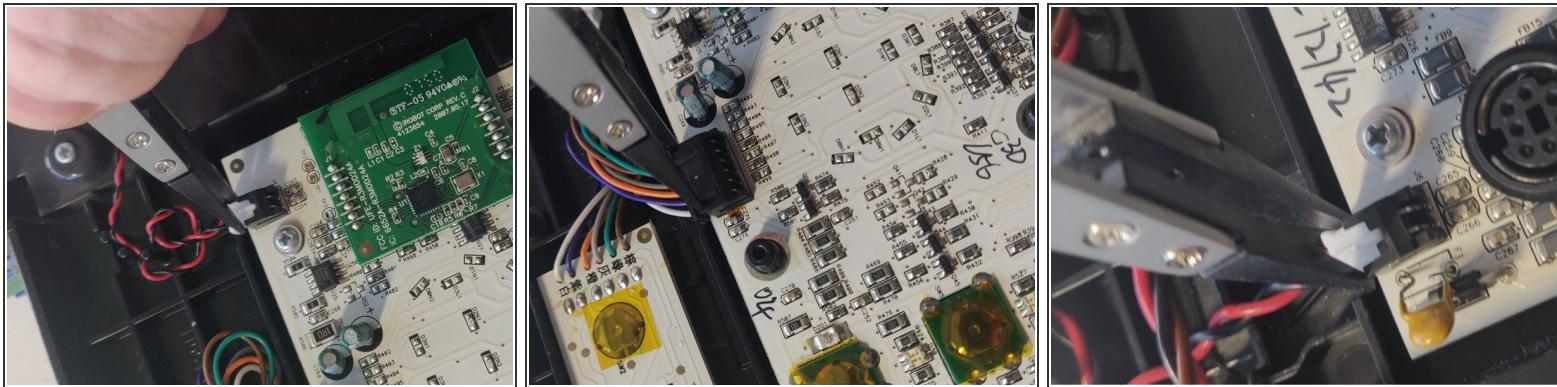


- Remove all the top connectors to the mainboard.
- You can use iFixit's reverse pliers but you can also use your hands.

## Step 24 — Remove mainboard screws

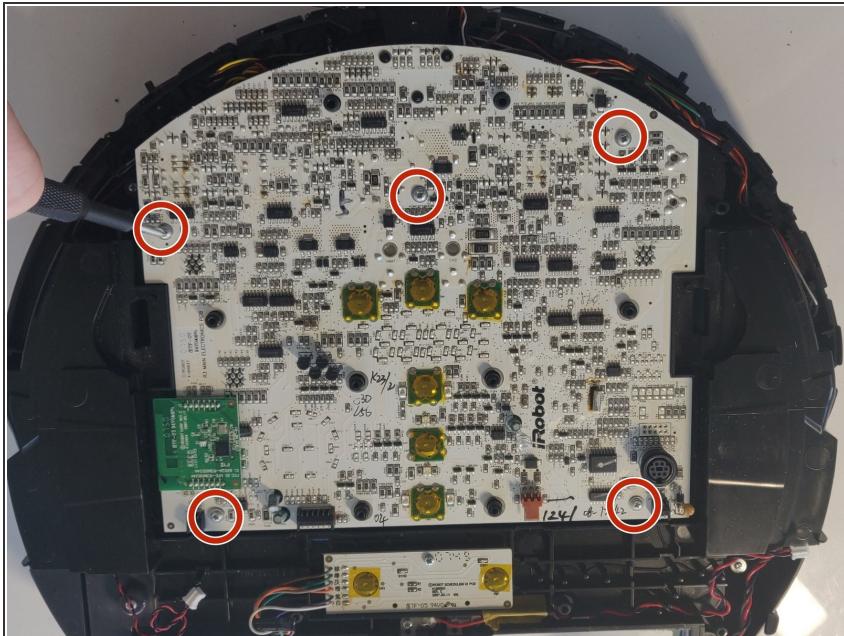


- Using the Phillips #1 driver, unscrew the five screws on the mainboard.
- **Do not rip out mainboard now!**

## Step 25 — Lift off mainboard carefully

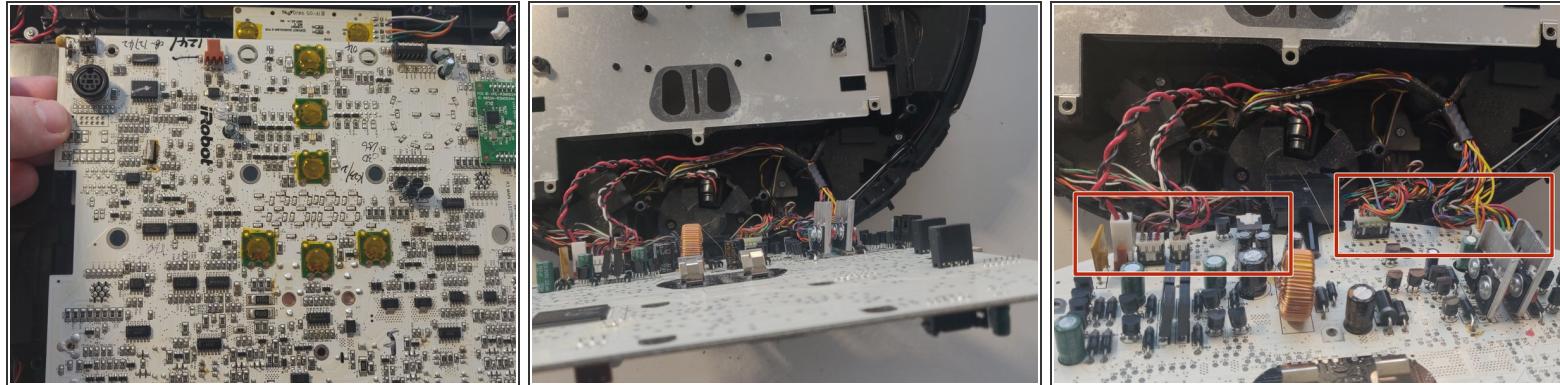


- Carefully lift off the mainboard, moving it towards you.
- Be very careful with the connected connectors.

## Step 26 — Remove connectors

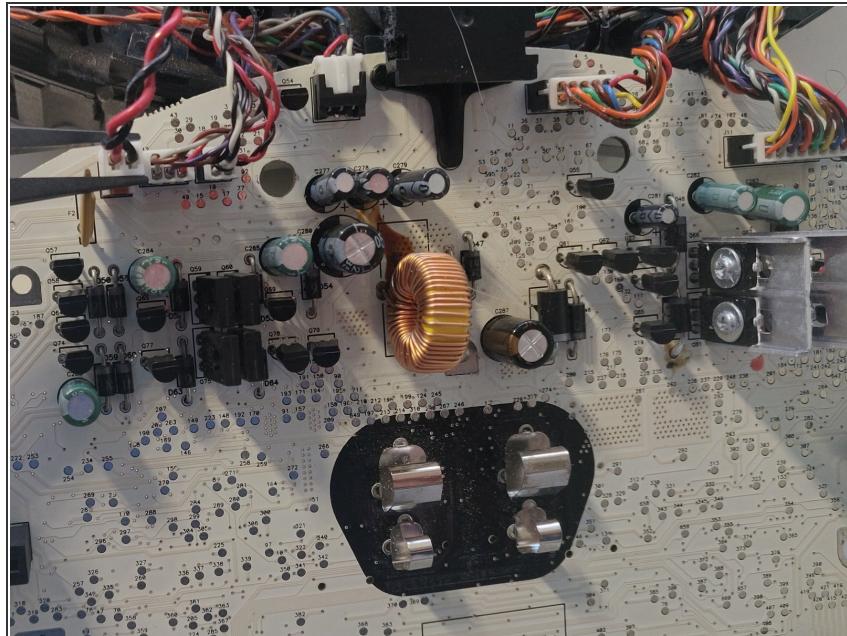

- Very carefully disconnect the connections off the mainboard.
- You can use iFixit's reverse pliers.

## Step 27 — Remove sensor and replace board

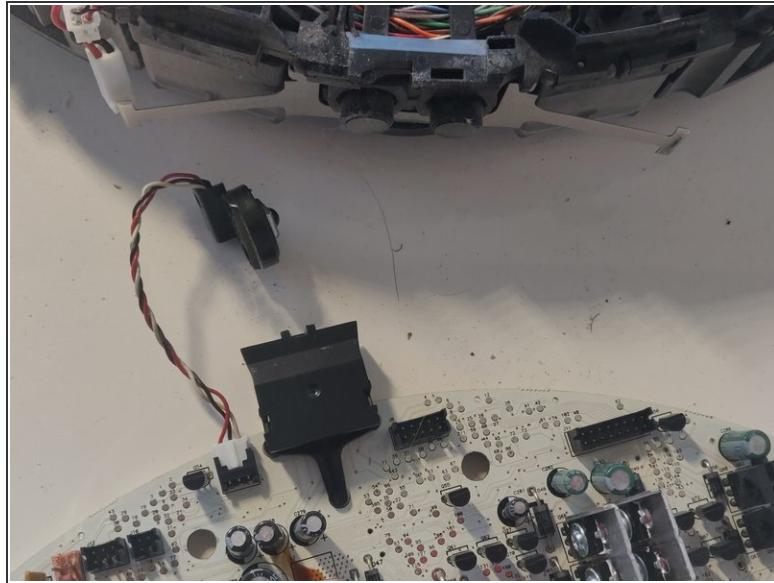

- The sensor might still be attached/is not attached to the main unit but mainboard. Just unplug it.
- You can now replace the mainboard and complete the steps from the bottom up to finish the replacement.

To reassemble your device, follow these instructions in reverse order.