7450 ETHERNET SERVICE SWITCH
7750 SERVICE ROUTER
7950 EXTENSIBLE ROUTING SYSTEM

INTERFACE CONFIGURATION GUIDE
RELEASE 14.0.R4

3HE 10786 AAAB TQZZA 01

Issue: 01

July 2016

Nokia — Proprietary and confidential.
Use pursuant to applicable agreements.

Nokia is a registered trademark of Nokia Corporation. Other products and company names mentioned herein may be trademarks or tradenames of their respective owners.

The information presented is subject to change without notice. No responsibility is assumed for inaccuracies contained herein.

© 2016 Nokia. All rights reserved.

Contains proprietary/trade secret information which is the property of Nokia and must not be made available to, or copied or used by anyone outside Nokia without its written authorization. Not to be used or disclosed except in accordance with applicable agreements.

Table of Contents

1 Getting Started 9
1.1 About This Guide 9
1.2 Interface Configuration Process 10

2 Interfaces 11
2.1 In This Chapter 11
2.2 Configuration Overview 12
2.2.1 Chassis Slots and Cards 13
2.2.2 MCMs 14
2.2.3 MDA-a, MDA-aXP, MDA, MDA-XP and MDA-e Modules 15
2.2.4 XMAs/C-XMAs 17
2.2.5 CMAs 19
2.2.6 Versatile Service Module (VSM) 19
2.2.7 Oversubscribed Ethernet MDAs 20
2.2.7.1 Rate Limiting 20
2.2.7.2 Packet Classification and Scheduling 20
2.2.8 Channelized MDA/CMA Support 22
2.2.8.1 Channelized DS-1/E-1 CMA 22
2.2.8.2 Channelized DS-3/E-3 CMA 22
2.2.8.3 Channelized Any Service Any Port (ASAP) CHOC-3/STM-1 23
2.2.8.4 Channelized OC-12/STM-4 ASAP MDAs 23
2.2.8.5 Channelized DS-3/E-3 ASAP MDA (4-Port) 23
2.2.8.6 Channelized DS-3/E-3 ASAP MDA (12-Port) 24
2.2.8.7 Channelized OC-3/STM-1 Circuit Emulation Services (CES) CMA and MDA 24
2.2.8.8 Network Interconnections 25
2.3 Digital Diagnostics Monitoring 25
2.3.1 SFPs and XFPs 29
2.3.2 Statistics Collection 30
2.4 Ports 31
2.4.1 Port Types 31
2.4.2 Port Features 35
2.4.2.1 Port State and Operational State 35
2.4.2.2 802.1x Network Access Control 36
2.4.2.3 SONET/SDH Port Attributes 41
2.4.2.4 SONET/SDH Path Attributes 42
2.4.2.5 Multilink Frame Relay 43
2.4.2.6 FRF.12 End-to-End Fragmentation 46
2.4.2.7 FRF.12 UNI/NNI Link Fragmentation 47
2.4.2.8 MLFR/FRF.12 Support of APS, BFD, and Mirroring Features 47
2.4.2.9 Multilink Point-to-Point Protocol (MLPPP) 48
2.4.2.10 Multi-Class MLPPP 52
2.4.2.11 Cisco HDLC 59
2.4.2.12 Automatic Protection Switching (APS) 61
2.4.2.13 Inverse Multiplexing Over ATM (IMA) 91

2.4.2.14 Ethernet Local Management Interface (E-LMI) 94
2.4.2.15 Link Layer Discovery Protocol (LLDP) 95
2.4.3 Per Port Aggregate Egress Queue Statistics Monitoring 99
2.5 Port Cross-Connect (PXC) 101
2.5.1 PXC Terminology 102
2.5.2 Caveats 103
2.5.3 PXC - Physical Port in Cross-Connect (Loopback) Mode 103
2.5.3.1 Operational State 104
2.5.4 PXC Sub-Ports 105
2.5.4.1 PXC Sub-Port Operational State 107
2.5.5 Port Statistics 107
2.5.5.1 Statistics on Physical PXC Ports 108
2.5.6 LAG with PXC Ports – PXC LAG 109
2.5.7 Basic PXC Provisioning 110
2.5.8 QoS 111
2.5.8.1 Queue Allocation on PXC Sub-Ports 111
2.5.8.2 Pool Allocations on PXC Ports 112
2.5.8.3 QoS Summary 112
2.5.9 Mirroring and LI on PXC Ports 113
2.5.10 Multi-Chassis Redundancy 113
2.5.11 Health Monitoring on the PXC Sub-Ports 113
2.5.12 Configuration Example 115
2.6 Forwarding Path Extensions (FPE) 118
2.7 LAG 120
2.7.1 LACP 120
2.7.1.1 LACP Multiplexing 121
2.7.2 Active-Standby LAG Operation 121
2.7.3 LAG on Access QoS Consideration 123
2.7.3.1 Adapt QoS Modes 124
2.7.3.2 Per-fp-ing-queuing 126
2.7.3.3 Per-fp-egr-queuing 126
2.7.3.4 Per-fp-sap-instance 127
2.7.4 LAG and ECMP Hashing 128
2.7.4.1 Per Flow Hashing 129
2.7.4.2 Per Link Hashing 135
2.7.4.3 Explicit Per Link Hash Using LAG Link Mapping Profiles 138
2.7.4.4 Consistent Per Service Hashing 139
2.7.4.5 ESM – LAG Hashing per Vport 141
2.7.5 LAG Hold Down Timers 144
2.7.6 BFD over LAG Links 145
2.7.7 Mixed Port-Speed LAG Support 145
2.7.7.1 LAG Upgrade 147
2.7.8 Multi-Chassis LAG 148
2.7.8.1 Overview 148
2.7.8.2 MC-LAG and Subscriber Routed Redundancy Protocol (SRRP) 153
2.7.8.3 Point-to-Point (p2p) Redundant Connection Across Layer 2/3 VPN Network 153
2.7.8.4 DSLAM Dual Homing in Layer 2/3 TPSDA Model 155
2.8 G.8031 Protected Ethernet Tunnels 155

2.9 G.8032 Protected Ethernet Rings....156
2.10 Ethernet Port Monitoring....156
2.11 802.3ah OAM....159
2.11.1 OAM Events....162
2.11.1.1 Link Monitoring....162
2.11.2 Remote Loopback....169
2.11.3 802.3ah OAM PDU Tunneling for Epipe Service....169
2.11.3.1 802.3ah Grace Announcement....170
2.12 MTU Configuration Guidelines....175
2.12.1 Default MTU Values....175
2.12.2 Modifying MTU Defaults....176
2.12.3 Configuration Example....177
2.13 Deploying Preprovisioned Components....178
2.14 Configuring SFM5-12e Fabric Speed....178
2.14.1 fabric-speed-a....178
2.14.2 fabric-speed-b....178
2.15 Configuration Process Overview....178
2.16 Configuration Notes....179
2.17 Configuring Physical Ports with CLI....181
2.18 Preprovisioning Guidelines....182
2.18.1 Predefining Entities....182
2.18.2 Preprovisioning a Port....182
2.18.3 Maximizing Bandwidth Use....183
2.19 Basic Configuration....184
2.20 Common Configuration Tasks....186
2.21 Configuring Cards and MDAs....186
2.22 Configuring Cards, MCMs and MDAs....187
2.22.1 Configuring Cards and CMAs....188
2.22.2 Configuring Forwarding Plane Parameters....188
2.22.3 Configuring MDA Access and Network Pool Parameters....189
2.22.4 Configuring MDA Policies for Named Pools Mode....190
2.23 Configuring Ports....191
2.23.1 Configuring Port Pool Parameters....191
2.23.2 Changing Hybrid-Buffer-Allocation....194
2.23.3 Configuring APS Parameters....194
2.23.4 Configuring Ethernet Port Parameters....196
2.23.4.1 Ethernet Network Port....196
2.23.4.2 Ethernet Access Port....196
2.23.4.3 Configuring 802.1x Authentication Port Parameters....197
2.23.5 Configuring SONET/SDH Port Parameters....197
2.23.5.1 SONET/SDH Network Port....198
2.23.5.2 SONET/SDH Access Port....199
2.23.6 Configuring Channelized Ports....199
2.23.6.1 Verify the MDA Type....204
2.23.6.2 Configuring a Channelized DS3 Port....204
2.23.6.3 Configuring a Channelized OC-12-SFP Port....207
2.23.6.4 Configuring a Channelized Any Service Any Port (ASAP) OC3-SFP Port....211
2.23.6.5 Configuring Cisco HDLC on a Channelized Port....213

2.23.7 Configuring Channelized STM1/OC3 Parameters....215
2.23.7.1 Configuring Cpipe Port Parameters....216
2.23.8 Configuring ATM SAPs....217
2.23.8.1 ATM SAP in an IES Service....217
2.23.8.2 ATM SAP in an Epipe Service....218
2.23.9 Configuring DWDM Port Parameters....218
2.23.10 Configuring WaveTracker Parameters....219
2.23.11 Configuring OTU Port Parameters....222
2.23.12 Configuring ATM Interface Parameters....225
2.23.12.1 PLCP/Direct Mapping....225
2.23.12.2 ATM Interface Configurations....227
2.23.13 Configuring Frame Relay Parameters....228
2.23.13.1 SONET/SDH Interfaces....229
2.23.14 Configuring Multilink PPP Bundles....231
2.23.15 Configuring Multilink ATM Inverse Multiplexing (IMA) Bundles....231
2.23.15.1 IMA Bundles....232
2.23.16 Multi-Class MLPPP....234
2.23.16.1 IMA Test Procedure....235
2.23.17 Configuring Bundle Protection Group Ports....236
2.23.17.1 Configuring a Channelized DS1 Card....238
2.23.18 Configuring LAG Parameters....241
2.23.18.1 Configuring BFD on LAG Links....241
2.23.19 Configuring G.8031 Protected Ethernet Tunnels....242
2.24 Service Management Tasks....244
2.24.1 Modifying or Deleting an MDA, MCM, CMA or XMA....244
2.24.2 Modifying a Card Type....245
2.24.3 Deleting a Card....246
2.24.4 Deleting Port Parameters....246
2.24.5 Soft IOM Reset....246
2.24.5.1 Soft Reset....247
2.24.5.2 Deferred MDA Reset....248
2.25 Configuration Command Reference....249
2.25.1 Command Hierarchies....249
2.25.1.1 Card Commands....250
2.25.1.2 MCM Commands....250
2.25.1.3 MDA Commands....250
2.25.1.4 Power Commands....252
2.25.1.5 Virtual Scheduler Commands....252
2.25.1.6 Forwarding Plane (FP) Commands....252
2.25.1.7 Port Configuration Commands....255
2.25.1.8 Port XC Commands....257
2.25.1.9 Forwarding Path Extension (FPE) Commands....258
2.25.1.10 Port APS Commands....258
2.25.1.11 Ethernet Commands....258
2.25.1.12 Interface Group Handler Commands....265
2.25.1.13 Multilink Bundle Commands....265
2.25.1.14 SONET-SDH Commands....268
2.25.1.15 TDM Commands....270
2.25.1.16 DS3 Commands....272

2.25.1.17 E1 Commands 274
2.25.1.18 E3 Commands 276
2.25.1.19 LAG Commands 278
2.25.1.20 Ethernet Tunnel Commands 280
2.25.1.21 Multi-Chassis Redundancy Commands 281
2.25.1.22 Forward Path Extension Commands 283
2.25.2 Configuration Command Descriptions 284
2.25.2.1 Generic Commands 285
2.25.2.2 Card Commands 286
2.25.2.3 MCM Commands 289
2.25.2.4 MDA (XMA) Commands 290
2.25.2.5 MDA/Port QoS Commands 298
2.25.2.6 Power Commands 304
2.25.2.7 Virtual Scheduler Commands 306
2.25.2.8 Forwarding Plane Configuration Commands 310
2.25.2.9 General Port Commands 335
2.25.2.10 Port XC Commands 379
2.25.2.11 Forwarding Path Extention (FPE) Commands 381
2.25.2.12 APS Commands 384
2.25.2.13 Ethernet Port Commands 391
2.25.2.14 802.1x Port Commands 445
2.25.2.15 LLDP Port Commands 450
2.25.2.16 Network Port Commands 453
2.25.2.17 Interface Group Handler Commands 455
2.25.2.18 Multilink-Bundle Port Commands 456
2.25.2.19 SONET/SDH Port Commands 474
2.25.2.20 SONET/SDH Path Commands 481
2.25.2.21 ATM Interface Commands 488
2.25.2.22 Frame Relay Commands 492
2.25.2.23 TDM Commands 499
2.25.2.24 LAG Commands 519
2.25.2.25 Eth Tunnel Commands 538
2.25.2.26 ETH-CFM Configuration Commands 548
2.25.2.27 Multi-Chassis Redundancy Commands 556
2.25.2.28 Forwarding Plane Tools Commands 574
2.25.2.29 Forward Path Extension Commands 576
2.26 Show, Monitor, Clear, Debug, and Tools Command Reference 577
2.26.1 Command Hierarchies 577
2.26.1.1 Show Commands 578
2.26.1.2 Monitor Commands 580
2.26.1.3 Clear Commands 580
2.26.1.4 Debug Commands 581
2.26.1.5 Tools Commands 581
2.26.2 Command Descriptions 583
2.26.2.1 Hardware Show Commands 583
2.26.2.2 PEQ Show Commands 656
2.26.2.3 APS Show Commands 663
2.26.2.4 Port Show Commands 667
2.26.2.5 Multilink Bundle Show Commands 754

2.26.2.6 LAG Show Commands 775
2.26.2.7 Monitor Commands 786
2.26.2.8 Clear Commands 792
2.26.2.9 Tools Commands 797

3 Standards and Protocol Support 817

1 Getting Started

1.1 About This Guide

This guide describes system concepts and provides configuration examples to provision Input/Output modules (IOMs), XMA Control Modules (XCMs), also referred to as cards, Media Dependent Adapters (MDAs), XRS Media Adapters (XMAs), and ports.

This guide is organized into functional chapters and provides concepts and descriptions of the implementation flow, as well as Command Line Interface (CLI) syntax and command usage.

The topics and commands described in this document apply to the:

- 7450 ESS
- 7750 SR
- 7950 XRS

Table 1 lists the available chassis types for each SR OS router.

Table 1 **Supported SR OS Router Chassis Types**

7450 ESS	7750 SR	7950 XRS
• 7450 ESS-6/6v • 7450 ESS-7/12 running in standard mode (not mixed-mode)	• 7450 ESS-7/12 running in mixed-mode (not standard mode) • 7750 SR-a4/a8 • 7750 SR-c4/c12 • 7750 SR-1e/2e/3e • 7750 SR-7/12 • 7750 SR-12e	• 7950 XRS-16c • 7950 XRS-20/40

For a list of unsupported features by platform and chassis, refer to the *SR OS R14.0.Rx Software Release Notes*, part number 3HE10818 000*x* TQZZA.

Command outputs shown in this guide are examples only; actual displays may differ depending on supported functionality and user configuration.

Note: This guide generically covers Release 14.0 content and may contain some content that will be released in later maintenance loads. Please refer to the *SR OS R14.0.Rx Software Release Notes*, part number 3HE10818 000*x* TQZZA, for information on features supported in each load of the Release 14.0 software.

1.2 Interface Configuration Process

Table 2 lists the tasks necessary to configure IOMs and XCMs (also referred to as cards), MDAs and XMAs, and ports.

Note: For consistency across platforms, XMAs are modeled in the SR OS (CLI and SNMP) as MDAs.

Unless specified otherwise:

- the term "card" is used generically to refer to both IOMs and XCMs
- the term "MDA" is used generically to refer to both MDAs and XMAs

Table 2 **Configuration Process**

Area	Task	Chapter
Provisioning	Chassis slots and cards	Chassis Slots and Cards
	MCMs	MCMs
	MDAs	MDA-a, MDA-aXP, MDA, MDA-XP and MDA-e Modules
	Versatile Service Module	Versatile Service Module (VSM)
	Ports	Ports
Reference	List of IEEE, IETF, and other proprietary entities	Standards and Protocol Support

2 Interfaces

2.1 In This Chapter

This chapter provides information about configuring chassis slots, cards, and ports. Topics in this chapter include:

- Configuration Overview
  - Chassis Slots and Cards
  - MCMs
  - MDA-a, MDA-aXP, MDA, MDA-XP and MDA-e Modules
    - Oversubscribed Ethernet MDAs
    - Channelized MDA/CMA Support
  - XMAs/C-XMAs
  - CMAs
  - Versatile Service Module (VSM)
  - Digital Diagnostics Monitoring
  - Ports
    - Port Types
    - Port Features
    - Per Port Aggregate Egress Queue Statistics Monitoring
  - Port Cross-Connect (PXC)
  - Forwarding Path Extensions (FPE)
  - LAG
    - LAG on Access QoS Consideration
    - LAG and ECMP Hashing
    - LAG Hold Down Timers
    - BFD over LAG Links
    - LACP
    - Active-Standby LAG Operation
    - LAG on Access QoS Consideration
    - Multi-Chassis LAG
- G.8031 Protected Ethernet Tunnels
- G.8032 Protected Ethernet Rings

- Ethernet Port Monitoring
- 802.3ah OAM
- MTU Configuration Guidelines
  - Deploying Preprovisioned Components
- Configuration Process Overview
- Configuration Notes

2.2 Configuration Overview

Note: This document uses the term preprovisioning in the context of preparing or preconfiguring entities such as chassis slots, cards, Media Dependant Adapters (MDAs), compact media adapters (CMAs), ports, and interfaces, prior to initialization. These entities can be installed while remaining administratively disabled (shutdown). When the entity is in a no shutdown state (administratively enabled), then the entity is considered to be provisioned.

Note: For consistency across platforms, XRS Media Adapters (XMAs) and Compact XMAs (C-XMAs) are modeled as MDAs.

Unless specified otherwise:

- the term "card" is used generically to refer to both Input Output Modules (IOMs) and XCMs
- the term "MDA" is used generically to refer to both MDAs and XMAs

Nokia routers provide the capability to configure chassis slots to accept specific card and MDA types and set the relevant configurations before the equipment is actually installed. The preprovisioning capability allows you to plan your configurations as well as monitor and manage your router hardware inventory. Ports and interfaces can also be preprovisioned. When the functionality is needed, the cards can be inserted into the appropriate chassis slots when required.

The following sections are discussed:

- Chassis Slots and Cards
- MDA-a, MDA-aXP, MDA, MDA-XP and MDA-e Modules
- Ports

2.2.1 Chassis Slots and Cards

To preprovision a chassis slot, the card type must be specified. Operators can enter card type information for each slot. When a card is installed in a slot and enabled, the system verifies that the installed card type matches the provisioned card type. If the parameters do not match, the card remains off line. A preprovisioned slot can remain empty without conflicting with populated slots.

The general syntax for the configuration of card slots is similar for all platforms, though the number of available slots varies by platform and chassis model. The supported card-types vary by chassis. Refer to the appropriate platform Installation Guide for more information.

The 7950 XRS platforms accept XCMs in slots. An XCM has two slots, each of which accept an XMA or C-XMA module. The C-XMA modules require a mechanical adapter to fit in an XMA slot.

In the config context, use the following CLI commands and syntax examples to provision the chassis slot and XCM:

```
A:XRS20>config# card 1
A:XRS20>config>card# card-type xcm-x20
```

The 7450 ESS-7/12, and 7750 SR-7/12, and 7750 SR-12e platforms support a variety of IOM types (including the IOM3-XP, IOM3-XP-B, IOM3-XP-C, IOM4-e and IOM4-e-B) in designated chassis slots. IOMs have two slots for pluggable MDAs. The IOM3-XP, IOM3-XP-B and IOM3-XP-C support MDA and MDA-XPs. The IOM4-e and IOM4-e-B support MDA-e modules.

In the config context, use the following CLI commands and syntax examples to provision a chassis slot and an IOM:

```
A:SR12-1>config# card 1
A:SR12-1>config>card# card-type iom3-xp
```

The 7450 ESS-7/12, and 7750 SR-7/12, and 7750 SR-12e platforms also support a variety of IMMs in designated chassis slots. IMMs have integrated MDAs. The provisioning requirements depends on the generation of IMM that you use. Refer to the IMM Installation Guide for more information.

The 7750 SR-a platforms support IOM-a cards in dedicated chassis slots. The 7750 SR-a4 supports one physical IOM-a in slot 3. This IOM-a is represented in the CLI as card 1. The 7750 SR-a8 supports two physical IOM-a cards, one in slot 3, the other in slot 6. These IOM-a cards are represented in the CLI as card 1 and card 2 respectively. The IOM-a does not have pluggable MDA slots. Each IOM-a can be configured to support up to four MDA-a or MDA-aXP modules. IOM-a cards are configured in the same manner as IOMs.

The 7750 SR-e platforms support the IOM-e modules in dedicated slots in the rear of each chassis. The 7750 SR-1e supports one physical IOM-e module. This IOM-e is represented in the CLI as card 1. The 7750 SR-2e supports two physical IOM-e cards. These IOM-e cards are represented in the CLI as card 1 and card 2 respectively. The 7750 SR-3e supports three physical IOM-e cards. These IOM-e cards are represented in the CLI as card 1, card 2, and card 3 respectively. The IOM-e does not have pluggable MDA slots. An IOM-e can be configured to support up to four MDA-e modules. IOM-e cards are configured in the same manner as IOMs.

The 7750 SR-c4/c12 platforms do not have slots for IOM or IMM cards. The system is modeled as having a fixed system-provisioned IOM in slot 1. The chassis has positions that accept MCMs or CMAs. MCMs accept MDAs. CMAs can be directly inserted into the 7750 SR-c4/c12 without the need for MCMs. CMAs are modeled as MDAs in SR OS.

2.2.2 MCMs

MCMs are only supported on the 7750 SR-c12 and SR-c4 systems.

An MCM must be configured before an MDA can be provisioned. If you provision an MDA type before an MCM is configured, it is assumed you are provisioning a CMA. CMAs do not require MCM preconfiguration. Up to six MCMs may be provisioned on a 7750 SR-c12. Even-numbered CMA positions are invalid for MCM installation (MCMs physically span two CMA positions; “mcm 1” spans CMA position 1 and 2). Up to two MCMs can be provisioned on the 7750 SR-c4.

Refer to the CMA Installation Guide and MDA Installation Guide for more information on the physical characteristics of each card.

2.2.3 MDA-a, MDA-aXP, MDA, MDA-XP and MDA-e Modules

MDAs are pluggable adapter cards that provide physical interface connectivity. MDAs are available in a variety of interface and density configurations. MDA modules differ by chassis. Refer to the individual chassis guide and the individual MDA installation guides for more information about specific MDAs.

On the 7750 SR-c4/c12 platforms, the MDAs plug into MCMs. MCMs must be provisioned before an MDA can be provisioned with a type. Up to six MDAs (each seated in an MCM) may be provisioned on a 7750 SR-c12. Even-numbered CMA positions are invalid for MDA installation (MDAs physically span two CMA positions; “mda 1” spans CMA positions 1 and 2). Up to two MDAs (each seated in an MCM) can be provisioned on the 7750 SRc4. CMAs are also supported on 7750 SR-c4/c12 platforms, as described in section 2.2.5.

The following displays a **show card state** command. In this example, an **m60-10/100eth-tx** MDA is installed in position 1 on a 7750 SR-c12.

```
A:ALU-3>config>card# show card state
===============================================================================
Card State
===============================================================================
Slot/  Provisioned      Equipped         Admin Operational   Num   Num Comments
Id     Type             Type             State State         Ports MDA
-------------------------------------------------------------------------------
1      iom-xp           iom-xp           up    up                  12
1/1    mcm-xp           mcm-xp           up    up
1/3                     mcm-xp           up    unprovisioned
1/1    m60-10/100eth-tx m60-10/100eth-tx up    up
1/5    c8-10/100eth-tx  c8-10/100eth-tx  up    up
1/6                     c1-1gb-sfp       up    unprovisioned
1/7                     c8-chds1         up    unprovisioned
1/8                     c4-ds3           up    unprovisioned
1/9                     c8-10/100eth-tx  up    unprovisioned
1/10                    c1-1gb-sfp       up    unprovisioned
1/11                    c8-chds1         up    unprovisioned
1/12                    c4-ds3           up    unprovisioned
A      cfm-xp           cfm-xp           up    up                     Active
B      cfm-xp                            up    down                   Standby
===============================================================================
A:ALU-3>config>card#
```

On the 7450 ESS-7/12, 7750 SR-7/12, and 7750 SR-12e, MDAs plug into IOMs. (MDA and MDA-XP modules plug into the IOM2 and IOM3-XP/-B/-C. MDA-e modules plug into the IOM4-e and IOM4-e-B). Up to two MDAs can be provisioned on an IOM.

IMMs are designed with fixed integrated media cards, which may require provisioning, depending on the generation of the IMM.

MDA-a and MDA-aXP modules are used in the 7750 SR-a and the MDA-e and ISA2 modules are used in the 7750 SR-e chassis. Up to four MDAs can be provisioned for each IOM.

In all cases, the card slot and IOM or IMM card-type must be provisioned before an MDA can be provisioned. A preprovisioned MDA slot can remain empty without interfering with services on populated equipment. When an MDA is installed and enabled, the system verifies that the MDA type matches the provisioned type. If the parameters do not match, the MDA remains offline.

On the 7750 SR-c12/SR-c4, 7450 ESS-7/12, 7750 SR-7/12, and 7750 SR-12e platforms, MDA names in the CLI start with the letter 'm' (for example, m10-1gb-xp-sfp).

The following example displays the **card**, **card-type**, **mda**, and **mda-type** command usage in the 7750 SR-7:

```
A:SR7>config# card 1
A:SR7>config>card# card-type iom3-xp
A:SR7>config>card# mda 1
A:SR7>config>card>mda# mda-type m60-10/100eth-tx
A:SR7>config>card>mda# exit
A:SR7>config>card# mda 2
A:SR7>config>card>mda# mda-type m10-1gb-sfp
A:SR7>config>card>mda# exit
```

The following example displays the configuration:

```
A:SR7# admin display-config
. . .
-------------------------------------------
echo "Card Configuration "
#-----------------------------------------
card 1
        card-type iom3-xp
        mda 1
            mda-type m60-10/100eth-tx
        exit
        mda 2
            mda-type m10-1gb-sfp
        exit
exit
-------------------------------------------
```

The 7750 SR-a4 and 7750 SR-a8 support only MDA-a and MDA-aXP modules, which are identified in the CLI with an “ma” prefix (for example, ma4-10gb-sfp+), or “max” prefix (for example, maxp10-10gb-sfp+). Likewise, the 7750 SR-1e, 7750 SR-2e, and 7750 SR-3e support only MDA-e modules, which are identified in the CLI with an “me” prefix, such as me1-100gb-cfp2.

The following example shows the **card**, **card-type**, **mda,** and **mda-type** command usage in the 7750 SR-1e:

```
A:SR1e>config# card 1
A:SR1e>config>card# card-type iom-e
A:SR1e>config>card# mda 1
A:SR1e>config>card>mda# mda-type me10-10gb-sfp+
A:SR1e>config>card>mda# exit
A:SR1e>config>card# mda 4
A:SR1e>config>card>mda# mda-type me1-100gb-cfp2
A:SR1e>config>card>mda# exit
```

The following example displays the configuration:

```
A:SR1e# admin display-config
. . .
-------------------------------------------
echo "Card Configuration"
#-------------------------------------------
     card 1
        card-type iom-e
        mda 1
            mda-type me10-10gb-sfp+
        exit
        mda 4
            mda-type me1-100gb-cfp2
        exit
     exit
-------------------------------------------
A:SR1e#
```

2.2.4 XMAs/C-XMAs

Note: For consistency across platforms, XMAs are modeled in the system as MDAs, and unless specified otherwise, the term MDA is used generically in this document to refer to both MDAs and C-XMA/XMAs. When the term XMA is used, it refers to both XMAs and C-XMAs unless specified otherwise.

XMAs are supported on the 7950 XRS platforms. XMAs plug into XCMs. XCMs must be provisioned before an XMA can be provisioned with a type.

The XMA information must be configured before ports can be configured. After you configure the XCM, use the following CLI commands to provision XMAs.

A maximum of two XMAs can be configured on an XCM. The following example displays the card slot, card type, MDA slot, and MDA type command usage:

```
A:XRS20>config# card 1
A:XRS20>config>card# card-type xcm-x20
A:XRS20>config>card# mda 1
A:XRS20>config>card>mda# mda-type cx2-100g-cfp
A:XRS20>config>card>mda# power-priority-level 130
A:XRS20>config>card>mda# exit
A:XRS20>config>card# mda 2
A:XRS20>config>card>mda# mda-type cx20-10g-sfp
A:XRS20>config>card>mda# power-priority-level 135
A:XRS20>config>card>mda# exit
```

The following example displays the configuration:

```
A:XRS20# admin display-config
. . .
-------------------------------------------
echo "Card Configuration "
#-----------------------------------------
    card 1
        card-type xcm-x20
        mda 1
            mda-type cx2-100g-cfp
            power-priority-level 130
        exit
        mda 2
            mda-type cx20-10g-sfp
            power-priority-level 135
       exit
    exit
-------------------------------------------
A:XRS20#
```

On the 7950 XRS, the **show card state** output displays an “x” in the name of the XMA and "cx" in the name of a C-XMA:

```
A:Dut-A# show card state
===============================================================================
Card State
===============================================================================
Slot/  Provisioned Type                  Admin Operational   Num   Num Comments
Id         Equipped Type (if different)  State State         Ports MDA
-------------------------------------------------------------------------------
1      xcm-x20                           up    up                  2
1/1    cx20-10g-sfp                      up    up            20
1/2    cx20-10g-sfp                      up    up            20
2      xcm-x20                           up    up                  2
2/1    cx20-10g-sfp                      up    up            20
A      cpm-x20                           up    up                      Active
B      cpm-x20                           up    up                      Standby
===============================================================================
```

2.2.5 CMAs

CMAs (Compact Media Adapter) are supported on the 7750 SR-c12 and SR-c4 and are configured and provisioned in the same manner as MDAs. Up to twelve CMAs may be provisioned on a 7750 SR-c12, and up to 4 CMAs may be provisioned on an SR-c4. CMA names in the CLI start with the letter “c” (for example, c4-ds3). The following shows **show card state** command output. In this example, a **c8-10/100eth-tx** CMA is installed in CMA position 5.

```
A:7750-3# show card state
===============================================================================
Card State
===============================================================================
Slot/  Provisioned      Equipped         Admin Operational   Num   Num Comments
Id     Type             Type             State State         Ports MDA
-------------------------------------------------------------------------------
1      iom-xp           iom-xp           up    up                  12
1/5    c8-10/100eth-tx  c8-10/100eth-tx  up    up            8
1/6    c8-10/100eth-tx  c8-10/100eth-tx  up    up            8
1/7    c8-chds1                          up    unprovisioned
1/8    c4-ds3                            up    unprovisioned
1/9    c8-10/100eth-tx                   up    unprovisioned
1/10   c1-1gb-sfp                        up    unprovisioned
1/11   c8-chds1                          up    unprovisioned
1/12   c4-ds3                            up    unprovisioned
A      cfm-xp           cfm-xp           up    up                       Active
B      cfm-xp                            up    provisioned              Standby
===============================================================================
A:7750-3#
```

On the 7750 SR-c4 platform there are two fixed 10GbE ports that are modeled in CLI as an icm2-10gb-xp-xfp (integrated CMA) in position 1/5. A preprovisioned CMA slot can remain empty without conflicting with populated slots.

Once installed and enabled, the system verifies that the installed CMA type matches the provisioned type. If the parameters do not match, the CMA remains offline.

2.2.6 Versatile Service Module (VSM)

The Versatile Service Module (VSM) is a module that allows operators to internally connect a VPLS or VLL service into an IES or IPVPN service. Each module is capable of 10 Gbps throughput.

A VSM, like an MDA, is installed and provisioned as a pluggable module in an IOM.

The VSM is supported on the 7450 ESS-7/12, 7750 SR-7/12, and 7750 SR-12e platforms. The VSM is not supported on the 7950 XRS or on the 7750 SR-c12/c4 platforms.

See the *Versatile Service Module Guide* for more details.

2.2.7 Oversubscribed Ethernet MDAs

The 7750 SR and 7450 ESS support oversubscribed Ethernet MDAs and CMAs. These have more bandwidth towards the user than the capacity between the MDA and IOM.

A traffic management function is implemented on the MDA to control the data entering the IOM. This function consists of two parts:

- Rate limiting
- Packet classification and scheduling

2.2.7.1 Rate Limiting

The oversubscribed MDA or CMA limits the rate at which traffic can enter the MDA or CMA on a per port basis. If a port exceeds its configured limits then the excess traffic will be discarded, and 802.3x flow control frames (pause frames) are generated.

2.2.7.2 Packet Classification and Scheduling

The classification and scheduling function implemented on the oversubscribed MDA or CMA ensures that traffic is correctly prioritized when the bus from the MDA/CMA to the IOM is over-committed. This could occur if the policing parameters configured are such that the sum of the traffic being admitted into the MDA or CMA is greater than the capacity between the MDA and the IOM.

The classification function uses the bits set in the DSCP or Dot1p fields of the customer packets to perform classification. It can also identify locally addressed traffic arriving on network ports as Network Control packets. This classification on the oversubscribed MDA/CMA uses following rules:

- If the service QoS policy for the SAP (port or VLAN) uses the default classification policy, all traffic will be classified as Best Effort (`be`).

- If the service QoS policy for the SAP contains a Dot1p classification, the Dot1p field in the customer packets is used for classification on the MDA/CMA.
- If the service QoS policy for the SAP contains a DSCP classification, the DSCP field in the customer packets is used for classification on the MDA/CMA.
- If a mix of Dot1p and DSCP classification definitions are present in the service QoS policy then the field used to perform classification will be the type used for the highest priority definition. For example, if High Priority 1 is the highest priority definition and it specifies that the DSCP field should be used, then the DSCP field will be used for classification on the MDA/CMA and the Dot1p field ignored.
- If the service QoS policy for the SAP specifies IP or MAC filters for forwarding class identification, then traffic will be treated as Best Effort. Full MAC or IP classification is not possible on the MDA/CMA (but is possible on the IOM).
- The packet is classified into 16 classes. Typically, these are the eight forwarding classes and each packet is assigned one priority per forwarding class. After classification, the packet is offered to the queuing model. This queuing model is limited to three queues each having four thresholds. These thresholds define whether an incoming packet, after classification, is accepted in the queue or not. Table 3 shows typical mapping of classes onto queues/threshold.

Table 3 **Typical Mapping Of Classes Onto Queues/Threshold**

Counter	{Queue	Threshold	Traffic Class}
0	{2	3	"fc-nc / in-profile"}
1	{2	2	"fc-nc / out-profile"}
2	{2	1	"fc-h1 / in-profile"}
3	{2	0	"fc-h1 / out-profile"}
4	{1	3	"fc-ef / in-profile"}
5	{1	2	"fc-ef / out-profile"}
6	{1	1	"fc-h2 / in-profile"}
7	{1	0	"fc-h2 / out-profile"}
8	{0	3	"fc-l1 / in-profile"}
9	{0	3	"fc-l1 / out-profile"}
10	{0	2	"fc-af / in-profile"}
11	{0	2	"fc-af / out-profile"}
12	{0	1	"fc-l2 / in-profile"}
13	{0	1	"fc-l2 / out-profile"}

Table 3 **Typical Mapping Of Classes Onto Queues/Threshold**

Counter	{Queue	Threshold	Traffic Class}
14	{0	0	"fc-be / in-profile"}
15	{0	0	"fc-be / out-profile"}

A counter is associated with each mapping. Note that the above is an example and is dependent on the type of classification (such as dscp-exp, dot1p, etc.). When the threshold of a particular class is reached, packets belonging to that class will not be accepted in the queue. The packets will be dropped and the associated counter will be incremented.

The scheduling of the three queues is done in a strict priority, highest priority basis is associated with queue 2. This means that scheduling is done at queue level, not on the class that resulted from the classification. As soon as a packet has been accepted by the queue there is no way to differentiate it from other packets in the same queue (for example, another classification result not exceeding its threshold). All packets queued in the same queue will have the same priority from a scheduling point of view.

2.2.8 Channelized MDA/CMA Support

2.2.8.1 Channelized DS-1/E-1 CMA

Each 8-port channelized DS-1/E-1 CMA supports channelization down to DS-0. Each 8-port channelized DS-1/E-1 CMA supports 64 channel groups. This MDA is supported on the 7750 SR-7/12 and 7750 SR-c4/c12 platforms. This CMA is supported on the 7750 SR-c4/c12 platforms.

2.2.8.2 Channelized DS-3/E-3 CMA

On the E-3 CMA, bit stuffing is not supported in G.751 framing mode. All of the 12 justification service bits and the 4 justification bits contain valid data on the transmitted signal. Incoming bitstreams should contain valid data in the 12 justification service bits and 4 justification bits, otherwise the link will not function.

This CMA is supported on the 7750 SR-c4/c12 platforms.

2.2.8.3 Channelized Any Service Any Port (ASAP) CHOC-3/STM-1

Each port for the channelized ASAP OC-3/STM-1 MDA supports channelization down to DS-0 and accepts one OC-3/STM-1 SFP small form factor pluggable (SFP) module. The same SFP optics used on Nokia's SONET/SDH MDAs can be used on the channelized ASAP OC-3/STM-1 MDA.

Each channelized OC-3/STM-1 supports up to 512 channels with DS-0 timeslots with per channel encapsulation configuration (for example, Frame Relay, PPP, cHDLC, ATM). DS-3 TDM channels can be further channelized to DS-1/E-1 channel groups. An E3 TDM channel cannot be channelized and can only be configured in clear channel operation. The MDA is based on a programmable data path architecture that enables enhanced L1 and L2 data path functionality, for example ATM TM features, MDA-based channel/port queuing, or multilink applications like Inverse ATM Multiplexing (IMA). This MDA is supported on the 7750 SR-7/12 and the 7750 SR-c4/c12 platforms.

2.2.8.4 Channelized OC-12/STM-4 ASAP MDAs

The channelized OC-12/STM-4 variant of the ASAP MDAs has features and channelization options similar to the 4-port channelized OC-3/STM-1 ASAP MDA.

DS-3 TDM channels can be further channelized to DS-1/E-1 channel groups. An E-3 TDM channel cannot be channelized and can only be configured in clear channel operation. This MDA is supported on the 7750 SR-7/12 and the 7750 SR-c4/c12 platforms.

2.2.8.5 Channelized DS-3/E-3 ASAP MDA (4-Port)

The 4-port MDA provides 4 ports configurable as DS-3 or E-3. The MDA has eight (8) 1.0/2.3 connectors and accepts up to eight (8) DS-3/E-3 coax patch cables.

Each physical DS-3 connection can support a full clear-channel DS-3, or it can be channelized into independent DS-1/E-1 data channels. Each DS-1/E-1 channel can then be further channelized down to DS-0s. E-3 ports do not support channelization, only clear channel operation. This MDA is supported on the 7750 SR-7/12 and the 7750 SR-c4/c12 platforms. This MDA is supported on the 7750 SR-7/12 and the 7750 SR-c4/c12 platforms.

2.2.8.6 Channelized DS-3/E-3 ASAP MDA (12-Port)

The 12-port MDA provides 12 ports configurable as DS-3 or E-3. The MDA has twenty-four (24) 1.0/2.3 connectors and accepts up to twenty-four (24) DS-3/E-3 coax patch cables.

Each physical DS-3 connection can support a full clear-channel DS-3, or it can be channelized into independent DS-1/E-1 data channels. Each DS-1/E-1 channel can then be further channelized down to DS-0s. E-3 ports do not support channelization, only clear channel operation. This MDA is supported on the 7750 SR-7/12 and the 7750 SR-c4/c12 platforms.

2.2.8.7 Channelized OC-3/STM-1 Circuit Emulation Services (CES) CMA and MDA

The channelized OC-3/STM-1/OC-12/STM-4 CES MDAs (c1-choc3-ces-sfp / m1-choc3-ces-sfp, m4-choc3-ces-sfp, m1-choc12-ces-sfp) provide an industry leading consolidation for DS-1, E-1 and n*64kbps for CES.

The channelized OC-3/STM-1/OC-12/STM-4 CES CMA/MDAs support CES. Circuit emulation services are interoperable with the existing 7705 SAR and 7250 SAS circuit emulation services. They are also interoperable with the 1850 TSS-5 circuit emulation services.

Two modes of circuit emulation are supported, unstructured and structured. Unstructured mode is supported for DS-1 and E-1 channels as per RFC4553 (SAToP). Structured mode is supported for n*64 kbps circuits as per RFC 5086, *Structure-Aware Time Division Multiplexed (TDM) Circuit Emulation Service over Packet Switched Network (CESoPSN)*. In addition, DS-1, E-1 and n*64 kbps circuits are also supported as per MEF8, *Circuit Emulation Services over Ethernet (CESoETH)* (Oct 2004). TDM circuits are optionally encapsulated in MPLS or Ethernet as per the applicable standards.

All channels on the CES CMA/MDA are supported as circuits to be emulated across the packet network. This includes DS-1, E-1 and n*64 kbps channels. Structure agnostic mode is supported for DS-1 and E-1 channels. Structure aware mode is supported for n*64 kbps channel groups in DS-1 and E-1 carriers. N*64 kbps circuit emulation supports basic and Channel Associated Signaling (CAS) options. CAS configuration must be identical for all channel groups on a given DS-1 or E-1.

Circuits encapsulated in MPLS will use circuit pipes (Cpipes) to connect to the far end circuit. Cpipes support either SAP-spoke SDP or SAP-SAP connections.

Circuits encapsulated in Ethernet can be selected as a SAP in Epipes. Circuits encapsulated in Ethernet can be either SAP-spoke SDP or SAP-SAP connections for all valid Epipe SAPs. An EC-ID and far-end destination MAC address must be configured for each circuit.

Each OC-3/STM-1 port can be independently configured to be loop-timed or node-timed. Each OC-3/STM-1 port can be configured to be a timing source for the node. Each DS-1 or E-1 channel can be independently configured to be loop-timed, node-timed, adaptive-timed, or differential-timed. One adaptive timed circuit is supported per CMA/MDA. The CES circuit configured for adaptive timing can be configured to be a timing source for the node. This is required to distribute network timing to network elements which only have packet connectivity to network.

On the 7750 SR-c12 CES CMA, a BITS port is also provided. The BITS port can be configured as one reference sources (ref1, ref2) in the system timing subsystem. These MDAs are supported on the 7750 SR-7/12 and the 7750 SR-c4/c12 platforms.

2.2.8.8 Network Interconnections

Nokia routers can fill the needs of smaller service providers as well as the more remote point of presence (PoPs) locations for larger service providers. To support the use of lower speed links as network links in the likelihood that lower speed circuits are used as network or backbone links, the routers support a DS-1/E-1/DS-3/E-3 port (ASAP MDAs) or channel and an MLPPP bundle (ASAP MDAs) as network ports to transport and forwarding of all service types. This feature allows service providers to use lower speed circuits to interconnect small PoPs and CoS that do not require large amounts of network/backbone bandwidth.

2.3 Digital Diagnostics Monitoring

Some Nokia SFPs, XFPs, QSFPs, CFPs and the MSA DWDM transponder have the Digital Diagnostics Monitoring (DDM) capability where the transceiver module maintains information about its working status in device registers including:

- Temperature
- Supply voltage
- Transmit (TX) bias current
- TX output power
- Received (RX) optical power

For QSFPs and CFPs, DDM Temperature and Supply voltage is available only at the Module level as shown in Table 5.

Refer to the Statistics Collection section for details about the QSFP and CFP sample DDM and DDM Lane information.

For the QSFPs and CFPs, the number of lanes is indicated by DDM attribute “Number of Lanes: 4”.

Subsequently, each lane threshold and measured values are shown per lane.

If a given lane entry is not supported by the given QSFP or CFP specific model, then it will be shown as “-“ in the entry.

A sample QSFP and CFP lane information is provided below:

```
Transceiver Data
Transceiver Type    : QSFP+
Model Number        : 3HE06485AAAA01  ALU  IPUIBMY3AA
TX Laser Wavelength: 1310 nm                    Diag Capable      : yes
Number of Lanes     : 4
Connector Code      : LC                        Vendor OUI        : e4:25:e9
Manufacture date    : 2012/02/02                Media             : Ethernet
Serial Number       : 12050188
Part Number         : DF40GELR411102A
Optical Compliance  : 40GBASE-LR4
Link Length support: 10km for SMF
================================================================================
Transceiver Digital Diagnostic Monitoring (DDM)
================================================================================
                              Value High Alarm  High Warn   Low Warn  Low Alarm
--------------------------------------------------------------------------------
Temperature (C)               +35.6     +75.0      +70.0       +0.0       -5.0
Supply Voltage (V)             3.23      3.60       3.50       3.10       3.00
================================================================================
================================================================================
Transceiver Lane Digital Diagnostic Monitoring (DDM)
================================================================================
                                 High Alarm   High Warn    Low Warn   Low Alarm
Lane Tx Bias Current (mA)              78.0        75.0        25.0        20.0
Lane Rx Optical Pwr (avg dBm)          2.30        2.00      -11.02      -13.01
--------------------------------------------------------------------------------
Lane ID Temp(C)/Alm       Tx Bias(mA)/Alm   Tx Pwr(dBm)/Alm   Rx Pwr(dBm)/Alm
--------------------------------------------------------------------------------
    1               -              43.5                 -              0.42
    2               -              46.7                 -             -0.38
    3               -              37.3                 -              0.55
    4               -              42.0                 -             -0.52
================================================================================
Transceiver Type    : CFP
Model Number        : 3HE04821ABAA01  ALU  IPUIBHJDAA
TX Laser Wavelength: 1294 nm                    Diag Capable      : yes
Number of Lanes     : 4
Connector Code      : LC                        Vendor OUI        : 00:90:65
Manufacture date    : 2011/02/11                Media             : Ethernet
Serial Number       : C22CQYR
```

```
Part Number        : FTLC1181RDNL-A5
Optical Compliance : 100GBASE-LR4
Link Length support: 10km for SMF
===============================================================================
Transceiver Digital Diagnostic Monitoring (DDM)
===============================================================================
                             Value High Alarm  High Warn   Low Warn  Low Alarm
-------------------------------------------------------------------------------
Temperature (C)              +48.2     +70.0      +68.0       +2.0       +0.0
Supply Voltage (V)            3.24      3.46       3.43       3.17       3.13
===============================================================================
===============================================================================
Transceiver Lane Digital Diagnostic Monitoring (DDM)
===============================================================================
                                 High Alarm   High Warn    Low Warn   Low Alarm
-------------------------------------------------------------------------------
Lane Temperature (C)                 +55.0       +53.0       +27.0       +25.0
Lane Tx Bias Current (mA)            120.0       115.0        35.0        30.0
Lane Tx Output Power (dBm)            4.50        4.00       -3.80       -4.30
Lane Rx Optical Pwr (avg dBm)         4.50        4.00      -13.00      -16.00
-------------------------------------------------------------------------------
Lane ID Temp(C)/Alm       Tx Bias(mA)/Alm   Tx Pwr(dBm)/Alm   Rx Pwr(dBm)/Alm
-------------------------------------------------------------------------------
    1          +47.6              59.2              0.30            -10.67
    2          +43.1              64.2              0.27            -10.31
    3          +47.7              56.2              0.38            -10.58
    4          +51.1              60.1              0.46            -10.37
===============================================================================
```

The transceiver is programmed with warning and alarm thresholds for low and high conditions that can generate system events. These thresholds are programmed by the transceiver manufacturer.

There are no CLI commands required for DDM operations, however, the **show>port** *port-id* **detail** command displays DDM information in the Transceiver Digital Diagnostics Monitoring output section.

DDM information is populated into the router's MIBs, so the DDM data can be retrieved by Network Management using SNMP. Also, RMON threshold monitoring can be configured for the DDM MIB variables to set custom event thresholds if the factory-programmed thresholds are not at the desired levels.

The following are potential uses of the DDM data:

- Optics degradation monitoring — With the information returned by the DDM-capable optics module, degradation in optical performance can be monitored and trigger events based on custom or the factory-programmed warning and alarm thresholds.
- Link/router fault isolation — With the information returned by the DDM-capable optics module, any optical problem affecting a port can be quickly identified or eliminated as the potential problem source.

Supported real-time DDM features are summarized in Table 4.

Table 4 **Real-Time DDM Information**

Parameter	User Units	SFP/XFP Units	SFP	XFP	MSA DWDM
Temperature	Celsius	C	Supported	Supported	Supported
Supply Voltage	Volts	µV	Supported	Supported	Not supported
TX Bias Current	mA	µA	Supported	Supported	Supported
TX Output Power	dBm (converted from mW)	mW	Supported	Supported	Supported
RX Received Optical Power4	dBm (converted from dBm) (Avg Rx Power or OMA)	mW	Supported	Supported	Supported
AUX1	parameter dependent (embedded in transceiver)	-	Not supported	Supported	Not supported
AUX2	parameter dependent (embedded in transceiver)	-	Not supported	Supported	Not supported

The factory-programmed DDM alarms and warnings that are supported are summarized in Table 5.

Table 5 **DDM Alarms and Warnings**

Parameter	SFP/XFP Units	SFP	XFP	Required?	MSA DWDM
Temperature - High Alarm - Low Alarm - High Warning - Low Warning	C	Yes	Yes	Yes	Yes
Supply Voltage - High Alarm - Low Alarm - High Warning - Low Warning	µV	Yes	Yes	Yes	No

Table 5 **DDM Alarms and Warnings (Continued)**

Parameter	SFP/XFP Units	SFP	XFP	Required?	MSA DWDM
TX Bias Current - High Alarm - Low Alarm - High Warning - Low Warning	µA	Yes	Yes	Yes	Yes
TX Output Power - High Alarm - Low Alarm - High Warning - Low Warning	mW	Yes	Yes	Yes	Yes
RX Optical Power - High Alarm - Low Alarm - High Warning - Low Warning	mW	Yes	Yes	Yes	Yes
AUX1 - High Alarm - Low Alarm - High Warning - Low Warning	parameter dependent (embedded in transceiver)	No	Yes	Yes	No
AUX2 - High Alarm - Low Alarm - High Warning - Low Warning	parameter dependent (embedded in transceiver)	No	Yes	Yes	No

2.3.1 SFPs and XFPs

The availability of the DDM real-time information and warning/alarm status is based on the transceiver. It may or may not indicate that DDM is supported. Although some Nokia SFPs support DDM, Nokia has not required DDM support in releases prior to Release 6.0. Non-DDM and DDM-supported SFPs are distinguished by a specific ICS value.

For SFPs that do not indicate DDM support in the ICS value, DDM data is available although the accuracy of the information has not been validated or verified.

For non-Nokia transceivers, DDM information may be displayed, but Nokia is not responsible for formatting, accuracy, etc.

2.3.2 Statistics Collection

The DDM information and warnings and alarms are collected at one minute intervals, so the minimum resolution for any DDM events when correlating with other system events is one minute.

Note that in the Transceiver Digital Diagnostic Monitoring section of the **show port** *port-id* **detail** command output:

- If the present measured value is higher than the either or both High Alarm, High Warn thresholds; an exclamation mark “!” displays along with the threshold value.
- If the present measured value is lower than the either or both Low Alarm, Low Warn thresholds; an exclamation mark “!” displays along with the threshold value.

```
B:SR7-101# show port 2/1/6 detail
......
===============================================================================
Transceiver Digital Diagnostic Monitoring (DDM), Internally Calibrated
===============================================================================
     Value High Alarm  High Warn   Low Warn  Low Alarm
-------------------------------------------------------------------------------
Temperature (C)       +33.0+98.0   +88.0      -43.0-45.0
Supply Voltage (V)       3.31 4.12    3.60       3.00 2.80
Tx Bias Current (mA)5.7 60.0    50.00.1  0.0
Tx Output Power (dBm)      -5.45 0.00   -2.00     -10.50    -12.50
Rx Optical Power (avg dBm)    -0.65-3.00!   -4.00!    -19.51    -20.51
===============================================================================
```

2.4 Ports

2.4.1 Port Types

Before a port can be configured, the slot must be provisioned with a card type and MDA type.

Nokia routers support the following port types:

- Ethernet — Supported Ethernet port types include:
  - Fast Ethernet (10/100BASE-T)
  - Gigabit Ethernet (1GbE, 1000BASE-T)
  - 10 Gigabit Ethernet (10GbE, 10GBASE-X)
  - 40 Gigabit Ethernet (40GbE)
  - 100 Gigabit Ethernet (100GbE)

  Router ports must be configured as either access, hybrid or network. The default is network.
  - Access ports — Configured for customer facing traffic on which services are configured. If a Service Access Port (SAP) is to be configured on the port or channel, it must be configured as an access port or channel. When a port is configured for access mode, the appropriate encapsulation type must be configured to distinguish the services on the port or channel. Once a port has been configured for access mode, one or more services can be configured on the port or channel depending on the encapsulation value.
  - Network ports — Configured for network facing traffic. These ports participate in the service provider transport or infrastructure network. Dot1q is supported on network ports.
  - Hybrid ports — Configured for access and network facing traffic. While the default mode of an Ethernet port remains network, the mode of a port cannot be changed between the access/network/hybrid values unless the port is shut down and the configured SAPs and/or interfaces are deleted. Hybrid ports allow a single port to operate in both access and network modes. MTU of port in hybrid mode is the same as in network mode except for the 10/100 MDA. The default encap for hybrid port mode is dot1q; it also supports QinQ encapsulation on the port level. Null hybrid port mode is not supported.

Once the port is changed to hybrid, the default MTU of the port is changed to match the value of 9212 bytes currently used in network mode (higher than an access port); this is to ensure that both SAP and network VLANs can be accommodated. The only exception is when the port is a 10/100 fast Ethernet. In those cases, the MTU in hybrid mode is set to 1522 bytes, which corresponds to the default access MTU with QinQ, which is larger than the network dot1q MTU or access dot1q MTU for this type of Ethernet port. The configuration of all parameters in access and network contexts will continue to be done within the port using the same CLI hierarchy as in existing implementation. The difference is that a port configured in mode hybrid allows both ingress and egress contexts to be configured concurrently.

An Ethernet port configured in hybrid mode can have two values of encapsulation type: dot1q and QinQ. The NULL value is not supported since a single SAP is allowed, and can be achieved by configuring the port in the access mode, or a single network IP interface is allowed, which can be achieved by configuring the port in network mode. Hybrid mode can be enabled on a LAG port when the port is part of a single chassis LAG configuration. When the port is part of a multi-chassis LAG configuration, it can only be configured to access mode since MC-LAG is not supported on a network port and consequently is not supported on a hybrid port. The same restriction applies to a port that is part of an MC-Ring configuration.

For a hybrid port, the amount of the allocated port buffers in each of ingress and egress is split equally between network and access contexts using the following **config>port>hybrid-buffer-allocation>ing-weight access** *access-weight [0..100]* **network** *network-weight* [0..100] and **config>port>hybrid-buffer-allocation>egr-weight access** *access-weight* [0..100] **network** *network-weight* [0..100] commands.

Adapting the terminology in buffer-pools, the port's access active bandwidth and network active bandwidth in each ingress and egress are derived as follows (egress formulas shown only):

- total-hybrid-port-egress-weights = access-weight + network-weight
- hybrid-port-access-egress-factor = access-weight / total-hybrid-port-egress-weights
- hybrid-port-network-egress-factor = network-weight / total-hybrid-port-egress-weights
- port-access-active-egress-bandwidth = port-active-egress-bandwidth x
- hybrid-port-access-egress-factor
- port-network-active-egress-bandwidth = port-active-egress-bandwidth x
- hybrid-port-network-egress-factor

When a named pool policy is applied to the hybrid port's MDA or to the hybrid port, the port's fair share of total buffers available to the MDA is split into three parts: default pools, named pools local to the port, and named pools on the ports MDA. This allocation can be altered by entering the corresponding values in the **port-allocation-weights** parameter.

- WAN PHY — 10 G Ethernet ports can be configured in WAN PHY mode (using the **ethernet xgig** config). When configuring the port to be in WAN mode, you can change certain SONET/SDH parameters to reflect the SONET/SDH requirements for this port.
- SONET-SDH and TDM — Supported SONET-SDH and TDM port types include:
  - n*DS-0 inside DS-1/E-1
  - DS-1/E-1DS-3/E-3
  - OC3/STM-1
  - OC12/STM-4
  - OC48/STM-16
  - OC192/STM-64 SONET/SDH
  - OC768/STM-256

  A SONET/SDH port/path or a TDM port/channel can be configured with the following encapsulations depending on the MDA type:
  - Frame Relay
  - PPP
  - cHDLC
- ATM — Some MDAs support ATM encapsulation on SONET/SDH and TDM ports. The ATM cell format and can be configured for either UNI or NNI cell format. The format is configurable on a SONET/SDH or TDM port/channel path basis. All VCs on a path, channel or port must use the same cell format. The ATM cell mapping can also be configured on per-interface basis for either Direct or PLCP on some MDAs (for example ASAP MDA).
- Several Media Dependent Adapters (MDAs) support channelization down to the DS-0 level. ATM, Frame Relay, PPP, and cHDLC are supported encapsulations on channelized ports.
- Link Aggregation (LAG) — LAG can be used to group multiple ports into one logical link. The aggregation of multiple physical links allows for load sharing and offers seamless redundancy. If one of the links fails, traffic will be redistributed over the remaining links.
- Multilink Bundles — A multilink bundle is a collection of channels on channelized ports that physically reside on the same MDA. Multilink bundles are used by providers who offer either bandwidth-on-demand services or fractional bandwidth services (fraction of a DS-3/E-3 for example). Multilink bundles are supported over PPP channels (MLPPP) and ATM channels (IMA).

- APS — Automatic Protection Switching (APS) is a means to provide redundancy on SONET equipment to guard against linear unidirectional or bidirectional failures. The network elements (NEs) in a SONET/SDH network constantly monitor the health of the network. When a failure is detected, the network proceeds through a coordinated pre-defined sequence of steps to transfer (or switchover) live traffic to the backup facility (called protection facility.) This is done very quickly to minimize lost traffic. Traffic remains on the protection facility until the primary facility (called working facility) fault is cleared, at which time the traffic may optionally be reverted to the working facility.
- Bundle Protection Group (BPGrp) — A BPGrp is a collection of two bundles created on the APS Group port. Working bundle resides on the working circuit of the APS group, while protection bundle resides on the protection circuit of the APS group. APS protocol running on the circuits of the APS Group port monitors the health of the SONET/SDH line and based on it or administrative action moves user traffic from one bundle to another in the group as part of an APS switch.
- Cross connect adapter (CCA) — A CCA on a VSM module interconnects the egress forwarding path on the IOM directly to the ingress forwarding path. This eliminates the need for the physical port MAC, PHY, cable and other MDA-specific components producing a less costly and more reliable adapter.
- Optical Transport Network (OTN) — Including OTU2, OTU2e, and OTU3. OTU2 encapsulates 10-Gigabit Ethernet WAN and adds FEC (Forward Error Correction). OTU2e encapsulates 10-Gigabit Ethernet LAN and adds FEC (Forward Error Correction). OTU3 encapsulated OC768 and adds FEC.

2.4.2 Port Features

- Port State and Operational State
- 802.1x Network Access Control
- SONET/SDH Port Attributes
  - SONET/SDH Path Attributes
- Multilink Frame Relay
- FRF.12 End-to-End Fragmentation
- FRF.12 UNI/NNI Link Fragmentation
- MLFR/FRF.12 Support of APS, BFD, and Mirroring Features
- Multilink Point-to-Point Protocol (MLPPP)
- Link Fragmentation and Interleaving Support
- Multi-Class MLPPP
- Cisco HDLC
- Automatic Protection Switching (APS)
- Inverse Multiplexing Over ATM (IMA)

2.4.2.1 Port State and Operational State

There are two port attributes that are related and similar but have slightly different meanings: Port State and Operational State (or Operational Status).

The following descriptions are based on normal individual ports. Many of the same concepts apply to other objects that are modeled as ports in the router such as PPP/IMA/MLFR multilink bundles or APS groups but the show output descriptions for these objects should be consulted for the details.

- Port State
  - Displayed in port summaries such as **show port** or **show port 1/1**
  - tmnxPortState in the TIMETRA-PORT-MIB
  - Values: None, Ghost, Down (linkDown), Link Up, Up
- Operational State
  - Displayed in the show output of a specific port such as **show port 2/1/3**
  - tmnxPortOperStatus in the TIMETRA-PORT-MIB
  - Values: Up (inService), Down (outOfService)

The behavior of Port State and Operational State are different for a port with link protocols configured (Eth OAM, Eth CFM or LACP for Ethernet ports, LCP for PPP/POS ports). A port with link protocols configured will only transition to the **Up** Port State when the physical link is up and all the configured protocols are up. A port with no link protocols configured will transition from Down to Link Up and then to Up immediately once the physical link layer is up.

The linkDown and linkUp log events (events 2004 and 2005 in the SNMP application group) are associated with transitions of the port Operational State. Note that these events map to the RFC 2863, *The Interfaces Group MIB*, (which obsoletes RFC 2233, *The Interfaces Group MIB using SMIv2*) linkDown and linkUp traps as mentioned in the SNMPv2-MIB.

An Operational State of **Up** indicates that the port is ready to transmit service traffic (the port is physically up and any configured link protocols are up). The relationship between port Operational State and Port State is shown in Table 6:

Table 6 **Relationship of Port State and Oper State**

	Operational State (Oper State or Oper Status) (as displayed in "show port x/y/z")	
Port State (as displayed in the **show port** summary)	For ports that have no link layer protocols configured	For ports that have link layer protocols configured (PPP, LACP, 802.3ah EFM, 802.1ag Eth-CFM)
Up	Up	Up
Link Up (indicates the physical link is ready)	Up	Down
Down	Down	Down

2.4.2.2 802.1x Network Access Control

Nokia routers support network access control of client devices (PCs, STBs, etc.) on an Ethernet network using the IEEE. 802.1x standard. 802.1x is known as Extensible Authentication Protocol (EAP) over a LAN network or EAPOL.

2.4.2.2.1 802.1x Modes

Nokia routers support port-based network access control for Ethernet ports only. Every Ethernet port can be configured to operate in one of three different operation modes, controlled by the port-control parameter:

- **force-auth** – Disables 802.1x authentication and causes the port to transition to the authorized state without requiring any authentication exchange. The port transmits and receives normal traffic without requiring 802.1x-based host authentication. This is the default setting.
- **force-unauth** – Causes the port to remain in the unauthorized state, ignoring all attempts by the hosts to authenticate. The switch cannot provide authentication services to the host through the interface.
- **auto** – Enables 802.1x authentication. The port starts in the unauthorized state, allowing only EAPOL frames to be sent and received through the port. Both the router and the host can initiate an authentication procedure as described below. The port will remain in unauthorized state (no traffic except EAPOL frames is allowed) until the first client is authenticated successfully. After this, traffic is allowed on the port for all connected hosts.

2.4.2.2.2 802.1x Basics

The IEEE 802.1x standard defines three participants in an authentication conversation (see Figure 1 which shows an example with the 7450 ESS).

- The supplicant — This is the end-user device that requests access to the network.
- The authenticator — Controls access to the network. Both the supplicant and the authenticator are referred to as Port Authentication Entities (PAEs).
- The authentication server — Performs the actual processing of the user information.

Figure 1 **802.1x Architecture**

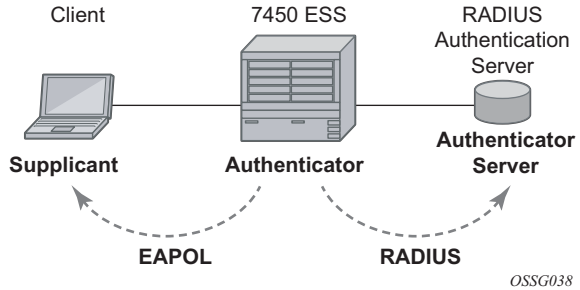

The authentication exchange is carried out between the supplicant and the authentication server, the authenticator acts only as a bridge. The communication between the supplicant and the authenticator is done through the Extended Authentication Protocol (EAP) over LANs (EAPOL). On the back end, the communication between the authenticator and the authentication server is done with the RADIUS protocol. The authenticator is thus a RADIUS client, and the authentication server a RADIUS server.

The messages involved in the authentication procedure are shown in Figure 2. The router will initiate the procedure when the Ethernet port becomes operationally up, by sending a special PDU called EAP-Request/ID to the client. The client can also initiate the exchange by sending an EAPOL-start PDU, if it doesn't receive the EAP-Request/ID frame during bootup. The client responds on the EAP-Request/ID with a EAP-Response/ID frame, containing its identity (typically username + password).

Figure 2 **802.1x Authentication Scenario**

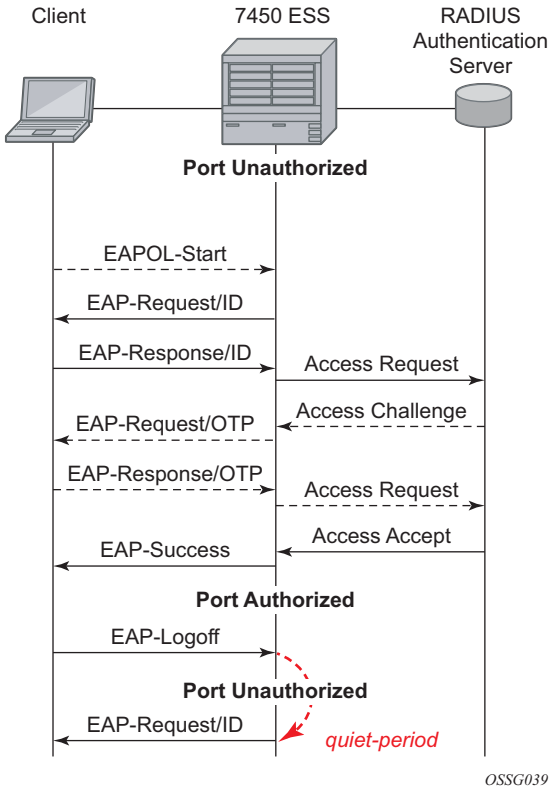

After receiving the EAP-Response/ID frame, the router will encapsulate the identity information into a RADIUS AccessRequest packet, and send it off to the configured RADIUS server.

The RADIUS server checks the supplied credentials, and if approved will return an Access Accept message to the router. The router notifies the client with an EAP-Success PDU and puts the port in authorized state.

2.4.2.2.3 802.1x Timers

The 802.1x authentication procedure is controlled by a number of configurable timers and scalars. There are two separate sets, one for the EAPOL message exchange and one for the RADIUS message exchange. See Figure 3 for an example of the timers on the 7750 SR.

Figure 3 **802.1x EAPOL Timers (left) and RADIUS Timers (right)**

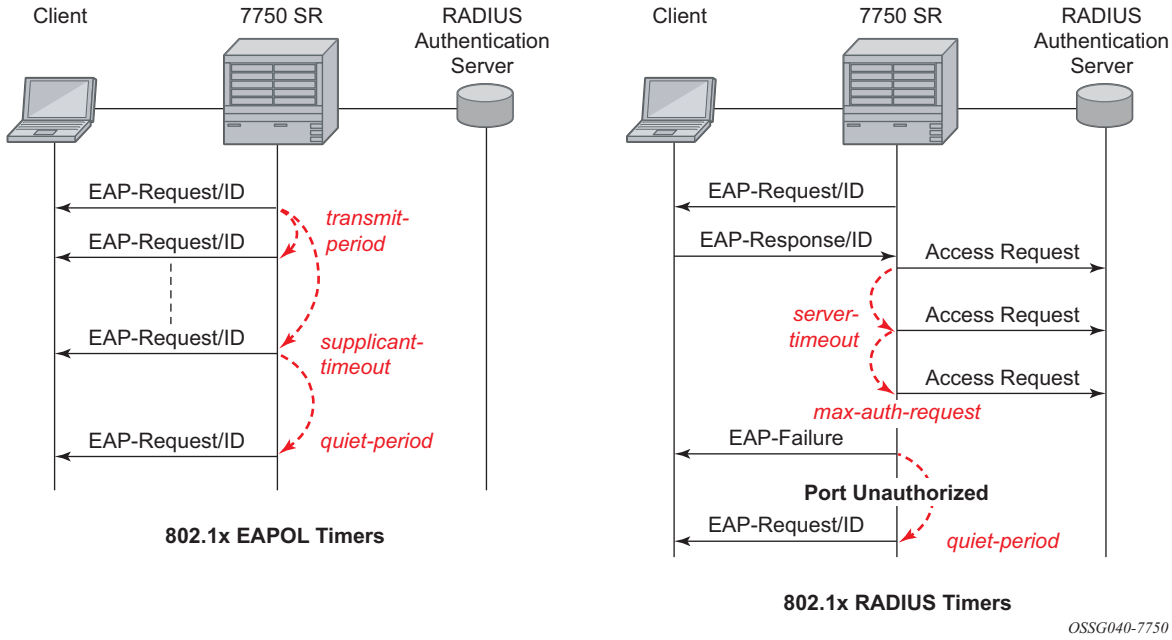

EAPOL timers:

- **transit-period** — Indicates how many seconds the Authenticator will listen for an EAP-Response/ID frame. If the timer expires, a new EAP-Request/ID frame will be sent and the timer restarted. The default value is 60. The range is 1 to 3600 seconds.
- **supplicant-timeout** — This timer is started at the beginning of a new authentication procedure (transmission of first EAP-Request/ID frame). If the timer expires before an EAP-Response/ID frame is received, the 802.1x authentication session is considered as having failed. The default value is 30. The range is 1 to 300.

- **quiet-period** — Indicates number of seconds between authentication sessions It is started after logoff, after sending an EAP-Failure message or after expiry of the supplicant-timeout timer. The default value is 60. The range is 1 to 3600.

RADIUS timer and scaler:

- **max-auth-req** — Indicates the maximum number of times that the router will send an authentication request to the RADIUS server before the procedure is considered as having failed. The default value is value 2. The range is 1 to 10.
- **server-timeout** — Indicates how many seconds the authenticator will wait for a RADIUS response message. If the timer expires, the access request message is sent again, up to *max-auth-req* times. The default value is 60. The range is 1 to 3600 seconds.

The router can also be configured to periodically trigger the authentication procedure automatically. This is controlled by the enable re-authentication and reauth-period parameters. Reauth-period indicates the period in seconds (since the last time that the authorization state was confirmed) before a new authentication procedure is started. The range of reauth-period is 1 to 9000 seconds (the default is 3600 seconds, one hour). Note that the port stays in an authorized state during the re-authentication procedure.

2.4.2.2.4 802.1x Tunneling

Tunneling of untagged 802.1x frames received on a port is supported for both Epipe and VPLS service using either null or default SAPs (for example 1/1/1:*) when the port dot1x port-control is set to force-auth.

When tunneling is enabled on a port (using the command configure **port** *port-id* **ethernet dot1x tunneling**), untagged 802.1x frames are treated like user frames and are switched into Epipe or VPLS services which have a corresponding null SAP or default SAP on that port. In the case of a default SAP, it is possible that other non-default SAPs are also present on the port. Untagged 802.1x frames received on other service types, or on network ports, are dropped. This is supported on FP2 or higher hardware.

When tunneling is required, it is expected that it is enabled on all ports into which 802.1x frames are to be received. The configuration of dot1x must be configured consistently across all ports in LAG as this is not enforced by the system.

Note that 802.1x frames are treated like user frames, that is, tunneled, by default when received on a spoke or mesh SDP.

2.4.2.2.5 802.1x Configuration and Limitations

Configuration of 802.1x network access control on the router consists of two parts:

- Generic parameters, which are configured under **config>security>dot1x**
- Port-specific parameters, which are configured under **config>port>ethernet>dot1x**

801.x authentication:

- Provides access to the port for any device, even if only a single client has been authenticated.
- Can only be used to gain access to a pre-defined Service Access Point (SAP). It is not possible to dynamically select a service (such as a VPLS service) depending on the 802.1x authentication information.
- If 802.1x access control is enabled and a high rate of 802.1x frames are received on a port, that port will be blocked for a period of 5 minutes as a DOS protection mechanism.

2.4.2.3 SONET/SDH Port Attributes

One OC-3/STM-1 port is supported on the CMA. One OC-3/STM-1 port is supported on the MDA. The ports can be configured for either SONET or SDH operation. SONET ports are configured for channelized OC-3 operation. SDH ports can be configured for channelized STM-1 operation.

The port’s transmit clock rate can be node or loop timed. The port’s receive clock rate can be used as a synchronization source for the system. The Section Trace (C1) byte can be configured by the user to ensure proper physical cabling. The port can activate and deactivate local line and internal loopbacks.

All SONET/SDH line alarms are configurable to be either enabled (default) or disabled. Link hold timers can be configured in 100ms increments to control link up and link down indications. The line signal degradation bit error rate (ber-sd) threshold and the line signal failure bit error rate (ber-sf) threshold can be configured.

The CMAs and MDAs support all standard SR OC-3/STM-1 SFP optics including multi-mode, intermediate reach, and long reach. Single fiber mode is not supported.

The CMA contains 3 LEDs for power, status and link state of port #1. The MDA contains LEDs for power, status and one for each link state. The power LED is blue if power is connected and off if no power is present. The status LED is green when operationally up, amber when operationally down, off when administratively shutdown and blinking green during initialization. The link state LED is green when the link is established; amber when the link is down; and unlit when the port is shutdown.

When an Ethernet port is configured in WAN mode (xgig wan), you can change certain SONET/SDH parameters to reflect the SONET/SDH requirements for this port. See the SONET/SDH Port Commands section for more information.

2.4.2.4 SONET/SDH Path Attributes

Any CES path can only be configured to operate in access mode. Each path has a configurable text description. The SONET/SDH signal label byte (C2) is configurable. The SONET/SDH path trace string (J1) is configurable. Payload scrambling can not be enabled on CES paths. The valid SONET and SDH path configurations are shown in Table 7.

Table 7 **Valid SONET and SDH Path Configurations**

Framing	Path Configuration Options Per Physical Port	Max Number of Paths Per Physical Port
SDH	STM1>AUG1>VC4>TUG3>TUG2>VC12>E1 STM1>AUG1>VC3>TUG2>VC12>E1	63 E1 or 512 n*64kbps
SONET	OC3>STS1 SPE>DS3>E1	
SONET	OC3>STS1 SPE>VT GROUP>VT1.5 SPE>DS1	84 DS1 or 512 n*64kbps
SONET	OC3>STS1 SPE>DS3	3 DS3
SONET	OC3>STS1 SPE>DS3>DS1	84 DS1, 63 E1 or 512 n*64kbps
SDH	STM1>AUG1>VC4>TUG3>TUG2>TU11>VC11>DS1 STM1>AUG1>VC3>TUG2>VC11>DS1	84 DS1 or 512 n*64kbps
SDH	STM1>AUG1>VC3>DS3>DS1	84 DS1, 63 E1 or 512 n*64kbps
SDH	STM1>AUG1>VC4>TUG3>VC3>E3 STM1>AUG1>VC3>E3	3 E3
SDH	STM1>AUG1>VC3>DS3	3 DS3
SDH	STM1>AUG1>VC3>DS3>E1	3 DS3

All SONET/SDH path alarms are configurable to be either enabled (the default) or disabled. The MTU size is configurable per path in the range of 512 to 2092. The path uses a default MTU size set to equal the largest possible CES packet size.

Load balancing options are not applicable to channelized CES paths.

When an Ethernet port is configured in WAN mode (xgig wan), you can change certain SONET/SDH parameters to reflect the SONET/SDH requirements for this port. See the SONET/SDH Path Commands section for details.

2.4.2.5 Multilink Frame Relay

MLFR is a bundling capability allowing users to spray FR frame fragments over multiple T1/E1 links. This allows a dynamic provisioning of additional bandwidth by adding incremental bandwidth between T1/E1 and DS3/E3. A MLFR bundle increases fault tolerance and improves QoS characteristics since one single large frame of low priority cannot block a higher priority frame.

A MLFR supports up to eight (8) member links and a maximum of 128 bundles with up to 336 T1/252 E1 members links can be configured per MDA. NxDS0 circuits or higher speed circuits are not supported.

The MLFR implementation supports FRF.16.1 bundle link integrity protocol to verify serviceability of a member link.

2.4.2.5.1 MLFR Bundle Data Plane

FRF.16.1 reuses the UNI/NNI fragmentation procedures defined in FRF.12. Frames on all FR SAP on the MLFR bundle have the UNI/NNI fragmentation header added regardless if they are fragmented or not. A separate sequence number state machine is used for each FR SAP configured on the bundle. The fragmentation threshold is configurable in the range 128 to 512 bytes.

In order to provide priority based scheduling of the FR SAP fragments over the bundle links, the user configures a FR scheduling class for each FR SAP configured on the bundle. As in MC-MLPPP, four scheduling classes are supported.

A separate fragmentation context is used by each FR SAP. FR SAPs of the same scheduling class share the same egress FR scheduling class queue with fragments of each SAP packets stored contiguously. The fragments from each scheduling class queue are then sprayed over the member links. Furthermore, the user may select the option to not fragment but spray the FR frames with the fragmentation header included over the member links.

Received fragments over the member links are re-assembled on a per SAP basis to re-create the original FR frame.

A user is not allowed to add an FR SAP with FRF.12 e2e fragmentation enabled to an MLFR bundle. Conversely, the user cannot enable FRF.12 e2e fragmentation on an FR SAP configured on an MLFR bundle. If an FR frame with the e2e fragmentation header is received on a bundle, it is forwarded if the FR SAP is part of an Fpipe service. It will be discarded if the FR SAP is part of any other service.

Note that the operator must disable LMI before adding a link to an MLFR bundle. Also, the operator must shut down the bundle in order to change the value of the fragmentation threshold.

An FR SAP configured on an MLFR bundle can be part of a VLL, VPLS, IES, or VPRN service.

2.4.2.5.2 MLFR Bundle Link Integrity Protocol

FRF.16.1 defines a MLFR Bundle Link Integrity Protocol which verifies the serviceability of a member link. If a problem is found on the member link the link integrity protocol will identify the problem, flag the link as unusable, and adjust the Bundle's available bandwidth. For MLFR Bundles the link integrity protocol is always enabled.

For each member link of a bundle the link integrity protocol will do the following:

- Confirm frame processing capabilities of each member link.
- Verify membership of a link to a specific remote bundle.
- Report to the remote end of the member link the bundle to which the link belongs
- Detect loopbacks on the member link. This is always enabled on the 7750 SR. The near-end monitors the magic number Information Element (IE) sent by the far-end and if its value matches the one it transmitted in ten consecutive control messages, it sends a remove_link message to the far-end and brings the link down. The near-end will attempt to add the link until it succeeds.
- Estimate propagation delay on the member link. The differential delay is calculated as follows in the 7750 SR implementation. Every time the near-end sends an add_link or Hello message to the far-end, it includes the Timestamp Information Element (IE) with the local time the packet was sent. FRF16.1 standard requires that the remote equipment includes the timestamp IE and copies the received timestamp value unchanged if the sender included this IE. When the far-end node sends back the ACK for these messages, the near-end calculates the round trip time. The 7750 SR implementation maintains a history of the last "N" round-trip-times that were received. It takes the fastest of these

samples for each member link to find out the member link with the fastest RTT. Then for each link it calculates the difference between the fastest links RTT, and the RTT for the current link. The user has the option to coordinate link removal between the local and remote equipment. Note, however, that in the SR 7750 implementation, the addition of a link will be hitless but the removing a link is not.

Specifically, the MLFR Bundle Link Integrity Protocol defines the following control messages:

- ADD_LINK
- ADD_LINK_ACK
- ADD_LINK_REJ
- HELLO
- HELLO_ACK
- REMOVE_LINK
- REMOVE_LINK_ACK

The control messages are encapsulated in a single-fragment frame where the C-bit, the B-bit, and the E-bit are all set. The details of the message format are given in FRF.16.1. Table 8 lists the user configured control parameters with values as specified in FRF.16.1.

Table 8 **FRF.16.1 Values**

Parameter	Default Value	Minimum Value	Maximum Value
Timer T_HELLO	10 seconds	1 second	180 seconds
Timer T_ACK	4 seconds	1 second	10
Count N_MAX_RETRY	2	1	5

T_HELLO Timer - this timer controls the rate at which hello messages are sent. Following a period of T_HELLO duration, a HELLO message is transmitted onto the Bundle Link.

Note that T_HELLO Timer is also used, during the Bundle Link adding process, as an additional delay before re-sending an ADD_LINK message to the peer Bundle Link when this peer Bundle Link does not answer as expected.

T_ACK Timer - this timer defines the maximum period to wait for a response to any message sent onto the Bundle Link before attempting to retransmit a message onto the Bundle Link.

N_RETRY - this counter specifies the number of times a retransmission onto a Bundle Link will be attempted before an error is declared and the appropriate action taken.

2.4.2.6 FRF.12 End-to-End Fragmentation

The user enables FRF.12 e2e fragmentation on a per FR SAP basis. A fragmentation header is added between the standard Q.922 header and the payload. This header consists of a 2-byte Network Layer Protocol ID (NLPID) of value 0xB1 to indicate e2e fragmentation payload and a 2-byte containing the Beginning bit (B-bit), the End-bit (E-bit), the Control bit (C-bit), and the Sequence Number field.

The following is the mode of operation for the fragmentation in the transmit direction of the FR SAP. Frames of all the FR SAP forwarding class queues are subject to fragmentation. The fragmentation header is, however, not included when the frame size is smaller than the user configured fragmentation size. The SAP transmits all fragments of a frame before sending the next full or fragmented frame. The fragmentation threshold is configurable in the range 128 to 512 bytes. In the receive direction, the SAP accepts a full frame interleaved with fragments of another frame to interoperate with other vendor implementations.

An FR SAP with FRF.12 e2e fragmentation enabled can be part of a VPLS service, an IES service, a VPRN service, an Ethernet VLL service, or an IP VLL service. This SAP cannot be part of a FR VLL service or an FRF.5 VLL service. However, fragmented frames received on such VLLs will be passed transparently as in current implementation.

2.4.2.6.1 SAP Fragment Interleaving Option

This option provides a different mode of operation for the fragmentation in the transmit direction of the FR SAP than in the default behavior of a FRF.12 end-to-end fragmentation. It allows for the interleaving of high-priority frames and fragments of low-priority frames.

When the interleave option is enabled, only frames of the FR SAP non expedited forwarding class queues are subject to fragmentation. The frames of the FR SAP expedited queues are interleaved, with no fragmentation header, among the fragmented frames. In effect, this provides a behavior like in MLPPP Link Fragment Interleaving (LFI). The receive direction of the FR SAP supports both modes of operation concurrently, for example, with and without fragment interleaving.

2.4.2.7 FRF.12 UNI/NNI Link Fragmentation

The user enables FRF.12 UNI/NNI link fragmentation on a per FR circuit basis. All FR SAPs configured on this circuit are subject to fragmentation. A fragmentation header is added on top of the standard Q.922 header. This header consists of 2 bytes containing the beginning bit (B-bit), the End-bit (E-bit), the Control bit (C-bit), and the sequence number field. The fragmentation header is included on frames of all SAPs regardless if the frame size is larger or not than the fragment size.

The FECN, BECN, and DE bits of all fragments of a given FR frame are set to the same value as the original frame. The FECN, BECN, and DE bits of a re-assembled frame are set to the logical OR of the corresponding bits on the constituent fragments.

The operator must delete all configured FR SAPs on a port before enabling or disabling FRF.12 UNI/NNI on that port. Also, the user must shut down the port in order to change the value of the fragmentation threshold.

A FR SAP on a FR circuit with FRF.12 UNI/NNI fragmentation enabled can be part of a VLL, VPLS, IES, or VPRN service.

QoS for a link with FRF.12 UNI/NNI fragmentation is the same as for a MLFR bundle. The FR class queue parameters and its scheduling parameters are configured by applying an egress QoS profile to an FRF.12 UNI/NNI port. The FR scheduling class ingress re-assembly timeout is not applicable to a FRF.12 UNI/NNI port.

2.4.2.8 MLFR/FRF.12 Support of APS, BFD, and Mirroring Features

The following APS support is provided:

- Single-chassis APS is supported on a SONET/SDH port with FRF.12 UNI/NNI fragmentation enabled on the port or on a constituent TDM circuit.
- Single-chassis APS is supported on a SONET/SDH port with FRF.12 e2e fragmentation enabled on one or more FR SAPs on the port or on a constituent TDM circuit.
- Single-chassis APS is not supported on a SONET/SDH port with MLFR bundles configured.
- Multi-chassis APS is not supported on a SONET/SDH port with FR encapsulation configured on the port or on a constituent TDM circuit.

The following BFD support is provided:

- BFD is supported on an IP interface configured over a FR SAP with e2e fragmentation enabled.
- BFD is supported on an IP interface configured over a FR SAP on a port or channel with UNI/NNI fragmentation enabled.
- BFD is not supported on an FR SAP configured on an MLFR bundle.

The following mirroring support is provided:

- Port mirroring and FR SAP mirroring on an MLFR bundle.
- IP mirroring for an FR SAP on an MLFR bundle.
- A mirror source can be an MLFR bundle or a FR SAP on an FR bundle.
- Mirror destinations must be FR SAPs and must not be part of an APS group or an MLFR bundle.

2.4.2.9 Multilink Point-to-Point Protocol (MLPPP)

Multilink point-to-point protocol is defined in the IETF RFC 1990, *The PPP Multilink Protocol (MP)*, and provides a way to distribute data across multiple links within an MLPPP bundle to achieve high bandwidth. MLPPP allows for a single frame to be fragmented and transmitted across multiple links. This allows for lower latency and also allows for a higher maximum receive unit (MRU).

MP is negotiated during the initial LCP option negotiations of a standard PPP session. A router indicates to its peer that it is willing to perform MLPPP by sending the MP option as part of the initial LCP option negotiation. This negotiation indicates the following:

1. The system offering the option is capable of combining multiple physical links into one logical link;
2. The system is capable of receiving upper layer protocol data units (PDU) fragmented using the MP header and reassembling the fragments back into the original PDU for processing;
3. The system is capable of receiving PDUs of size N octets where N is specified as part of the option even if N is larger than the maximum receive unit (MRU) for a single physical link.

Once MLPPP has been successfully negotiated, the sending system is free to send PDUs encapsulated and/or fragmented with the MP header.

MP introduces a new protocol type with a protocol ID (PID) of Ox003d. Figure 4 and Figure 5 show the MLPPP fragment frame structure. Framing to indicate the beginning and end of the encapsulation is the same as that used by PPP, and described in PPP in HDLC-like framing [RFC 1662]. MP frames use the same HDLC address and control pair value as PPP, namely: Address - OxFF and Control - Ox03. The two octet protocol field is also structured the same as in PPP encapsulation.

Figure 4 **MLPPP 24-bit Fragment Format**

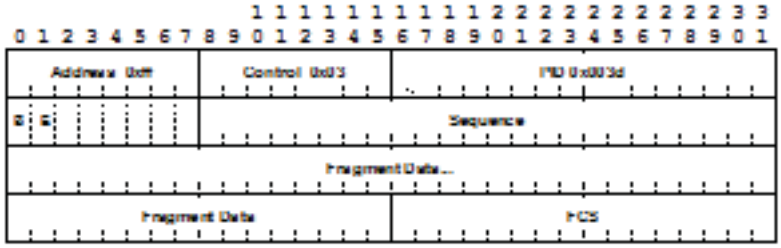

Figure 5 **MLPPP 12-bit Fragment Format**

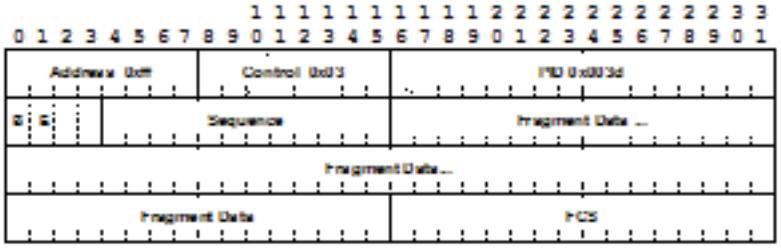

The required and default format for MP is the 24-bit format. During the LCP state the 12-bit format can be negotiated. The SR-series routers can support and negotiate the alternate 12-bit frame format.

2.4.2.9.1 Protocol Field (PID)

The protocol field is two octets its value identifies the datagram encapsulated in the Information field of the packet. In the case of MP the PID also identifies the presence of a 4-octet MP header (or 2-octet, if negotiated).

A PID of Ox003d identifies the packet as MP data with an MP header.

The LCP packets and protocol states of the MLPPP session follow those defined by PPP in RFC 1661, *The Point-to-Point Protocol (PPP)*. The options used during the LCP state for creating an MLPPP NCP session are described below.

2.4.2.9.2 B & E Bits

The B&E bits are used to indicate the epoch of a packet. Ingress packets to the MLPPP process will have an MTU, which may or may not be larger than the MRRU of the MLPPP network. The B&E bits manage the fragmentation of ingress packets when it exceeds the MRRU.

The B-bit indicates the first (or beginning) packet of a given fragment. The E-bit indicates the last (or ending) packet of a fragment. If there is no fragmentation of the ingress packet both B&E bits are set true (=1).

2.4.2.9.3 Sequence Number

Sequence numbers can be either 12 or 24 bits long. The sequence number is zero for the first fragment on a newly constructed AVC bundle and increments by one for each fragment sent on that bundle. The receiver keeps track of the incoming sequence numbers on each link in a bundle and reconstructs the desired unbundled flow through processing of the received sequence numbers and B&E bits. For a detailed description of the algorithm refer to RFC 1990.

2.4.2.9.4 Information Field

The Information field is zero or more octets. The Information field contains the datagram for the protocol specified in the protocol field.

The MRRU will have the same default value as the MTU for PPP. The MRRU is always negotiated during LCP.

2.4.2.9.5 Padding

On transmission, the Information field of the ending fragment may be padded with an arbitrary number of octets up to the MRRU. It is the responsibility of each protocol to distinguish padding octets from real information. Padding must not be added to any but the last fragment (the E-bit set true).

2.4.2.9.6 FCS

The FCS field of each MP packet is inherited from the normal framing mechanism from the member link on which the packet is transmitted. There is no separate FCS applied to the reconstituted packet as a whole if transmitted in more than one fragment.

2.4.2.9.7 LCP

The Link Control Protocol (LCP) is used to establish the connection through an exchange of configure packets. This exchange is complete, and the LCP opened state entered, once a Configure-Ack packet has been both sent and received.

LCP allows for the negotiation of multiple options in a PPP session. MLPPP is somewhat different than PPP and therefore the following options are set for MLPPPP and not negotiated:

- No async control character map
- No link quality monitoring
- No compound frames
- No self-describing-padding

Any non-LCP packets received during this phase must be silently discarded.

2.4.2.9.8 Link Fragmentation and Interleaving Support

Link Fragmentation and Interleaving (LFI) provides the ability to interleave high priority traffic within a stream of fragmented lower priority traffic. This feature helps avoid excessive delays to high priority, delay-sensitive traffic over a low-speed link. This can occur if this traffic type shares a link with lower priority traffic that utilizes much larger frames. Without this ability, higher priority traffic must wait for the entire packet to be transmitted before being transmitted, which could result in a delay that is too large for the application to function properly

For example, if VoIP traffic is being sent over a DS-1 or fractional DS-1 which is also used for Best Effort Internet traffic, LFI could be used so the small (usually 64-128B) VoIP packets can be transmitted between the transmission of fragments from the lower priority traffic.

Figure 6 shows the sequence of events as low priority and high priority frames arrive and are handled by LFI.

Figure 6 **Frame Sequence of Events**

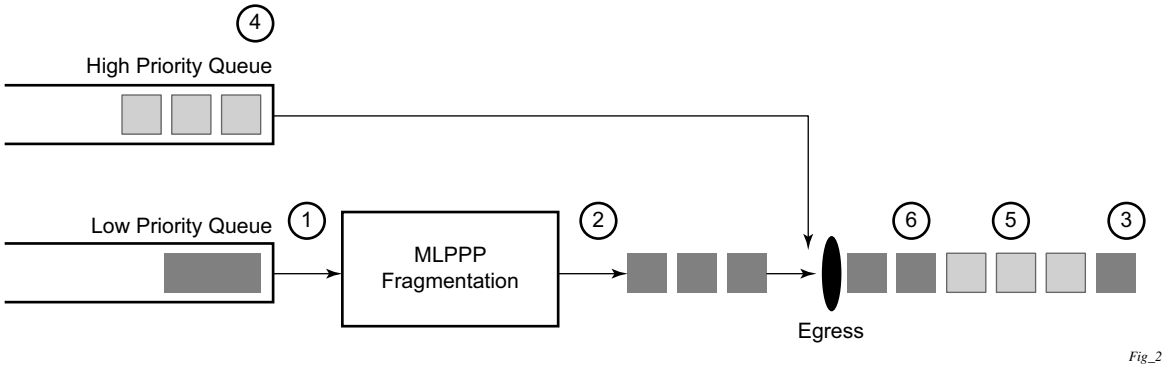

1. A low priority frame arrives in the low priority queue. At this particular instant, there are no packets in the high priority queue so low priority frame is de-queued and passed to the fragmentation mechanism for MLPPP.
2. The original packet is divided into ‘n’ fragments based on the size of the packet and the fragment threshold configuration.
3. The fragments are then transmitted out the egress port.
4. After the transmission of the fragments has begun, high priority frames arrive in the high priority queue.
5. The transmission of the remaining fragments stops and the high priority packets are transmitted out the egress interface. Note that high priority packets are not fragmented.
6. When the high priority traffic is transmitted, the remaining lower priority fragments are then transmitted.

On the ingress side, LFI requires that the ingress port can receive non-fragmented packets within the fragment stream and pass these packets directly on to the forwarding engine and then continue with the reassembly process for the fragmented frames.

2.4.2.10 Multi-Class MLPPP

Multi-class MLPPP (MC-MLPPP) allows for the prioritization of multiple types of traffic flowing between the cell site routers and the mobile operator’s aggregation routers. MC-MLPPP is an extension of the MLPPP standard which allows multiple classes of service to be transmitted over a MLPPP bundle. Originally, link fragmentation and interleaving (LFI) was added to MLPPP that allowed two classes, but in some applications, two classes of service can be insufficient.

The MLPPP header includes two class bits to allow for up to four classes of service. This enhancement to the MLPPP header format is detailed in RFC 2686, *The Multi-Class Extension to Multi-Link PPP*. This allows multiple classes of services over a single MLPPP connection and allows the highest priority traffic to be transmitted over the MLPPP bundle with minimal delay regardless of the order in which packets are received.

Table 10 shows the original MLPP header format and the enhanced header format.

Table 9 **Header Formats**

Original MLPPP Header Format	MC-MLPPP Short Sequence Header Format
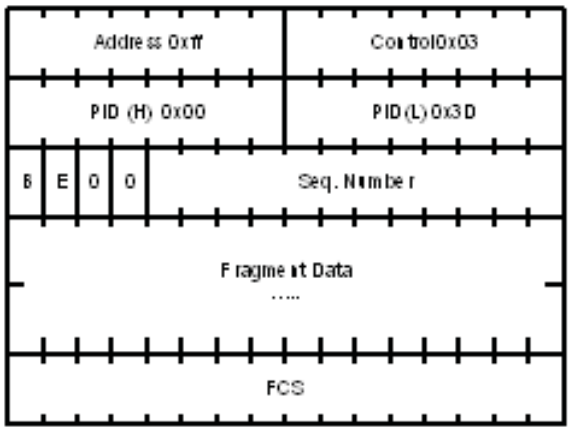	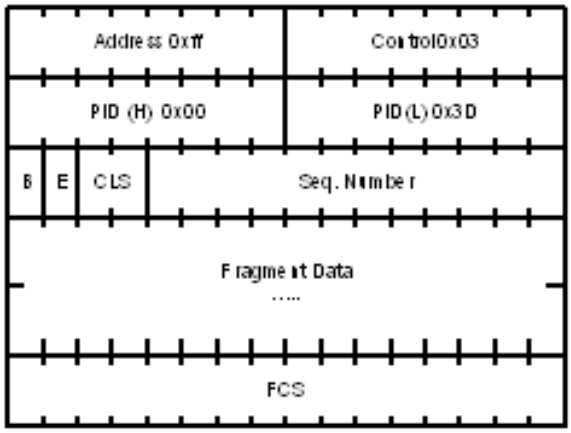

The new MC-MLPPP header format uses the two (previously unused) bits before the sequence number as the class identifier. This allows four distinct classes of service to be identified into separate re-assembly contexts.

2.4.2.10.1 QoS in MC-MLPPP

If the user enables the multiclass option under an MLPPP bundle, the MDA egress data path provides a queue for each of the 4 classes of MLPPP. The user configures the required number of MLPPP classes to use on a bundle. The forwarding class of the packet, as determined by the ingress QoS classification, is used to determine the MLPPP class for the packet and hence which of the four egress MDA queues to store the packet. The mapping of forwarding class to MLPPP class is a function of the user configurable number of MLPPP classes. The default mapping for a 4-class, 3-class, and 2-class MLPPP bundle is shown in Table 10.

Table 10 **Default Packet Forwarding Class to MLPPP Class Mapping**

FC ID	FC Name	Scheduling Priority (Default)	MLPPP Class 4-class bundle	MLPPP Class 3-class bundle	MLPPP Class 2-class bundle
7	NC	Expedited	0	0	0
6	H1	Expedited	0	0	0
5	EF	Expedited	1	1	1
4	H2	Expedited	1	1	1
3	L1	Non-Expedited	2	2	1
2	AF	Non-Expedited	2	2	1
1	L2	Non-Expedited	3	2	1
0	BE	Non-Expedited	3	2	1

Table 11 shows a different mapping enabled when the user applies one of three pre-defined egress QoS profiles in the 4-class bundle configuration only.

Table 11 **Packet Forwarding Class to MLPPP Class Mapping**

FC ID	FC Name	Scheduling Priority (Default)	MLPPP Class (MLPPP Egress QoS profile 1, 2, and 3)
7	NC	Expedited	0
6	H1	Expedited	0
5	EF	Expedited	1
4	H2	Expedited	2
3	L1	Non-Expedited	2
2	AF	Non-Expedited	2
1	L2	Non-Expedited	2
0	BE	Non-Expedited	3

The MLPPP class queue parameters and its scheduling parameters are also configured by applying one of the three pre-defined egress QoS profiles to an MLPPP bundle.

Table 12 and Figure 7 provide the details of the class queue threshold parameters. Packets marked with a high drop precedence, such as out-of-profile, by the service or network ingress QoS policy will be discarded when any class queue reaches the OOP threshold. Packet with a low drop precedence marking, such as in-profile, will be discarded when any class queue reaches the max threshold.

Table 12 **MLPPP Class Queue Threshold Parameters**

	Class 0		**Class 1**		**Class 2**		**Class 3**	
Queue Threshold (in ms @ Available bundle rate)	Max	Oop	Max	Oop	Max	Oop	Max	Oop
2-Class Bundle Default Egress QoS Profile	250	125	750	375	N/A	N/A	N/A	N/A
3-Class Bundle Default Egress QoS Profile	50	25	200	100	750	375	N/A	N/A
4-Class Bundle Default Egress QoS Profile	10	5	50	25	150	75	750	375
4-Class Bundle Egress QoS Profile 1	25	12	5	3	200	100	1000	500
4-Class Bundle Egress QoS Profile 2	25	12	5	3	200	100	1000	500
4-Class Bundle Egress QoS Profile 3	25	12	5	3	200	100	1000	500

Figure 7 **MLPPP Class Queue Thresholds for In-Profile and Out-of-Profile Packets**

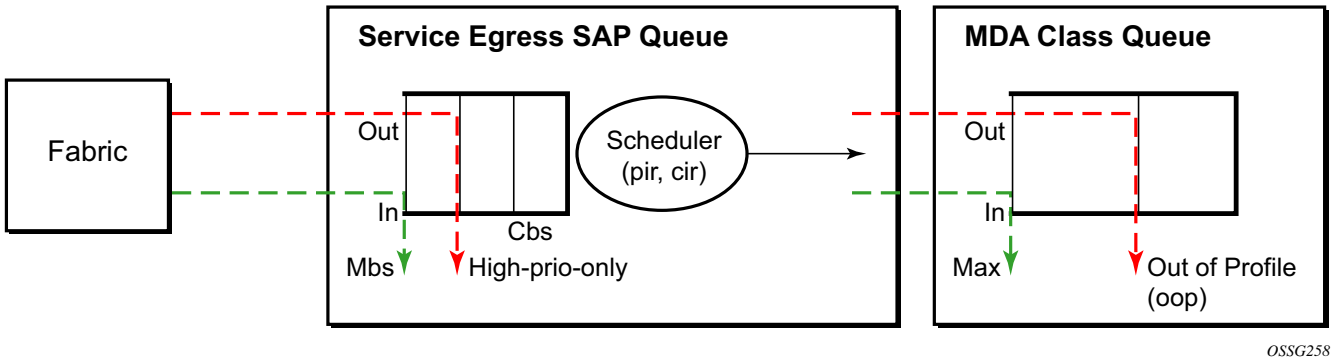

Table 13 and Figure 8 provide the details of the class queue scheduling parameters.

Table 13 **MLPPP Class Queue Scheduling Parameters**

		WRR Parameters		
4-class MLPPP Egress QoS Profile	MIR	W1	W2	W3
Profile 1	85%	<1%	66%	33%
Profile 2	90%	<1%	89%	10%
Profile 3	85%	<1%	87%	12%

Figure 8 **MLPPP Class Queue Scheduling Scheme**

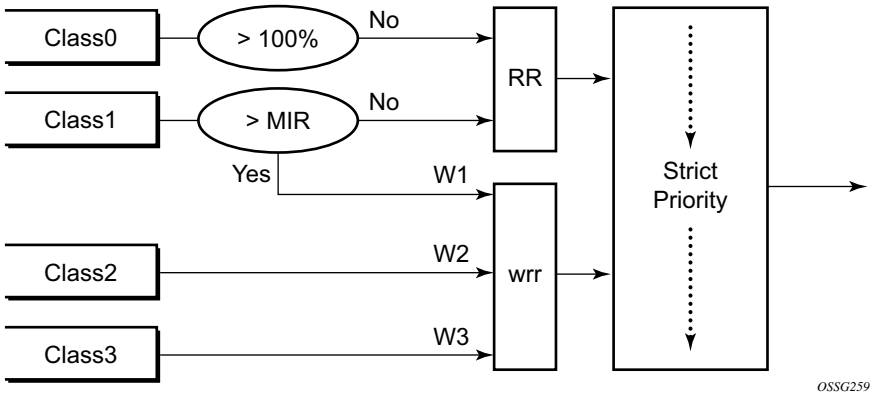

Note that all queue threshold and queue scheduling parameters are adjusted to the available bundle rate. If a member link goes down or a new member link is added to the bundle, the scheduling parameters MIR, W1, W2, W3, as well as the per class queue thresholds OOP and max are automatically adjusted to maintain the same values.

Class 0 queue is serviced at MLPPP at available bundle rate. Class 1 queue is guaranteed a minimum service rate but is allowed to share additional bandwidth with class 2 and 3 queues based on the configuration of WRR weight W1.

Class queues 2 and 3 can be given bandwidth guarantee by limiting MIR of class 1 queue to less than 100% and by setting the WRR weights W1, W2, and W3 to achieve the desired bandwidth distribution among all three class queues.

Note that there is one queue per bundle member link to carry link control packets, such as LCP: PPP, and which are serviced with strict priority over the 4 class queues (not shown).

In the default 2-class, 3-class, and 4-class egress QoS profile, the class queues are service with strict priority in ascending order of class number.

Ingress MLPPP Class Reassembly

For an MLPPP bundle with the multi-class option enabled, there is a default profile for setting the re-assembly timer value for each class. When the pre-defined MLPPP ingress QoS profile 1 is applied to a 4-class bundle, the values of the timers are modified as shown in Table 14.

Table 14 **MLPPP Ingress QoS Profile: Reassembly Timers (msec)**

	Class 0	Class 1	Class 2	Class 4
MLPPP ingress QoS default profile (2-Class bundle)	25ms	25ms	NA	NA
MLPPP ingress QoS default profile (3-Class bundle)	25ms	25ms	25ms	NA
MLPPP ingress QoS default profile (4-Class bundle)	25ms	25ms	100ms	1000ms
MLPPP ingress QoS profile 1 (4-class bundle)	10	10	100	1000

Configuring MC-MLPPP QoS Parameters

A 4-class MLPPP bundle can be configured with user-defined MLPPP QoS attributes. This feature cannot be used with MC-MLPPP bundles with fewer than 4 classes or with non-multiclass bundles.

The following describe the parameters and the configuration processes and rules

1. The user creates an ingress QoS profile in the **mlppp-profile-ingress** context, to configure a preferred value of the ingress per-class re-assembly timer. Ingress QoS profile 1 is reserved for the pre-defined profile with parameter values shown in Table 14. The user is allowed to edit this profile and change the parameter values. When a user creates a profile with a profile-id greater than 1, or performs the no option command on the parameter, the parameter's default value will always be the 1 in Table 14 for ingress QoS Profile #1 regardless of the parameter value the edited Profile 1 has at that point.
2. The user creates an egress QoS profile in the **mlppp-profile-egress** context to configure preferred values for the per-class queue and queue scheduling parameters. The user can also configure system forwarding class mapping to the MLPPP classes. Egress QoS profiles 1, 2, and 3, are reserved for the pre-defined profiles with parameter values shown in Table 11, Table 12, or Table 13. Users can edit these profiles and change the parameter values. When a user creates a profile with a profile-id higher than 3, or when the user specifies the no option command on the parameter, the default value will be the one shown in Table 11, Table 12, or Table 13 for the egress QoS Profile 1. This is regardless of the parameter value the edited profiles have at that point in time.
3. A maximum of 128 ingress and 128 egress QoS profiles can be created on the system.
4. The values of the ingress per-class re-assembly timer are configured in the ingress QoS profile.
5. The mapping of the system forwarding classes to the MLPPP Classes are configured in the egress QoS profile. There is a many-to-one relationship between the system FC and an MLPPP class. See Table 11 for the mapping when one of the three pre-defined 4-class egress QoS profiles is selected.
6. The maximum size for each MLPPP class queue in units of msec at the available bundle rate is configured in the egress QoS profile. This is referred to as max in Figure 7 and as max-queue-size in CLI. The out-of-profile threshold for an MLPPP class queue, referred to as oop in Figure 7, is not directly configurable and is set to 50% of the maximum queue size rounded up to the nearest higher integer value.
7. The MLPPP class queue scheduling parameters is configured in the egress QoS profile. The minimum information rate, referred to as **MIR** in Figure 8 and **mir** in CLI, applies to Class 1 queue only. The MIR parameter value is entered as a percentage of the available bundle rate. The WRR weight, referred to as W1, W2, and W3 in Figure 8 and weight in CLI, applies to class 1, class 2, and class 3 queues. Note that W1 in Figure 8 is not configurable and is internally set to a value of 1 such that Class 1 queue shares 1% of the available bundle rate when the sum of W1, W2, and W3 equals 100. W2 and W3 weights are integer values and are user configurable such that Class 2 queue shares (W2/(W1 + W2 + W3)) and Class 3 queue shares (W3/(W1 + W2 + W3)) of the available bundle rate.

8. The user applies the ingress and egress QoS profiles to a 4-class MLPPP bundle for the configured QoS parameter values to take effect on the bundle.
9. The following operations require the bundles associated with a QoS profile to be shutdown to take effect.
   – A change of the numbered ingress or egress QoS profile associated with a bundle.
   – A change of the bundle associated ingress or egress QoS profile from default profile to a numbered profile and vice-versa.
10. The following operations can be performed without shutting down the associated bundles:
   – Changes to any parameters in the ingress and egress QoS profiles.

The CLI commands for the creation of ingress and egress QoS profiles and configuration of the individual QoS parameters are described in the *Quality of Service Guide*.

2.4.2.11 Cisco HDLC

Cisco HDLC (cHDLC) is an encapsulation protocol for information transfer. It is a bit-oriented synchronous data-link layer protocol that specifies a data encapsulation method on synchronous serial links using frame characters and checksums.

cHDLC monitors line status on a serial interface by exchanging keepalive request messages with peer network devices. It also allows routers to discover IP addresses of neighbors by exchanging Serial Link Address Resolution Protocol (SLARP) (see SLARP) address-request and address-response messages with peer network devices.

The basic frame structure of a cHDLC frame is shown in Table 15. This frame structure is similar to PPP in an HDLC-link frame (RFC 1662, *PPP in HDLC-like Framing*). The differences to PPP in and HDLC-like frames are in the values used in the address, control, and protocol fields.

Table 15 **cHDLC I-Frame**

Flag	Address	Control	Protocol	Information Field	FCS
0x7E	0x0F/0x8F	0x00	—	—	16/32 bits

- Address field — The values of the address field include: 0x0F (unicast), 0x8F (broadcast).

- Control field — The control field is always set to value 0x00.
- Protocol field — The following values are supported for the protocol field:

Table 16 **cHDLC Protocol Fields**

Protocol	Field Value
IP	0x0800
Cisco SLARP	0x8035
ISO CLNP/ISO ES-IS DSAP/SSAP1	0xFEFE

- Information field — The length of the information field is in the range of 0 to 9Kbytes.
- FCS field — The FCS field can assume a 16-bit or 32-bit value. The default is 16-bits for ports with a speed equal to or lower than OC-3, and 32-bits for all other ports. The FCS for cHDLC is calculated in the same manner and same polynomial as PPP.

2.4.2.11.1 SLARP

A cHDLC interface on a Nokia router will transmit a SLARP address resolution reply packet in response to a received SLARP address resolution request packet from peers. The cHDLC interface will not transmit SLARP address resolution request packets.

For the SLARP keepalive protocol, each system sends the other a keepalive packet at a user-configurable interval. The default interval is 10 seconds. Both systems must use the same interval to ensure reliable operation. Each system assigns sequence numbers to the keepalive packets it sends, starting with zero, independent of the other system. These sequence numbers are included in the keepalive packets sent to the other system. Also included in each keepalive packet is the sequence number of the last keepalive packet received from the other system, as assigned by the other system. This number is called the returned sequence number. Each system keeps track of the last returned sequence number it has received. Immediately before sending a keepalive packet, it compares the sequence number of the packet it is about to send with the returned sequence number in the last keepalive packet it has received. If the two differ by 3 or more, it considers the line to have failed, and will not route higher-level data across it until an acceptable keepalive response is received.

There is interaction between the SLARP address resolution protocol and the SLARP keepalive protocol. When one end of a serial line receives a SLARP address resolution request packet, it assumes that the other end has restarted its serial interface and resets its keepalive sequence numbers. In addition to responding to the address resolution request, it will act as if the other end had sent it a keepalive packet with a sequence number of zero, and a returned sequence number the same as the returned sequence number of the last real keepalive packet it received from the other end.

2.4.2.11.2 SONET/SDH Scrambling and C2-Byte

SONET/SDH scrambling and overhead for cHDLC follow the same rules used for POS (RFC 2615, *PPP over SONET/SDH*).

The two key SONET/SDH parameters are scrambling and signal-label (C2-byte). Scrambling is off by default. The default value of the C2-byte is 0xCF. These two parameters can be modified using the CLI. The other SONET overhead values (for example, j0) follow the same rules as the current POS implementation.

2.4.2.11.3 Timers

Cisco HDLC (cHDLC) has two timers associated with the protocol, the keepalive interval and the timeout interval. The keepalive interval is used to send periodic keepalive packets. The receiver process expects to receive a keepalive packet at the rate specified by the keepalive interval. The link is declared down if the receiver process does not receive a keepalive within the timeout interval. The link is declared up when the number of continual keepalive packets received equals the up-count.

It is recommended that the nodes at the two endpoints of the cHDLC link are provisioned with the same values.

2.4.2.12 Automatic Protection Switching (APS)

APS is designed to protect SONET/SDH equipment from linear unidirectional or bidirectional failures. The Network Elements (NEs) in a SONET/SDH network constantly monitor the health of the network. When a failure is detected, the network proceeds through a coordinated pre-defined sequence of steps to transfer (or switchover) live traffic to the backup facility (protection facility). This happens very quickly to minimize lost traffic. Traffic remains on the protection facility until the primary facility (working facility) fault is cleared, at which time the traffic may optionally be reverted to the working facility. An example is shown in Figure 9.

Figure 9 **APS Protection (Single Chassis APS) and Switchover**

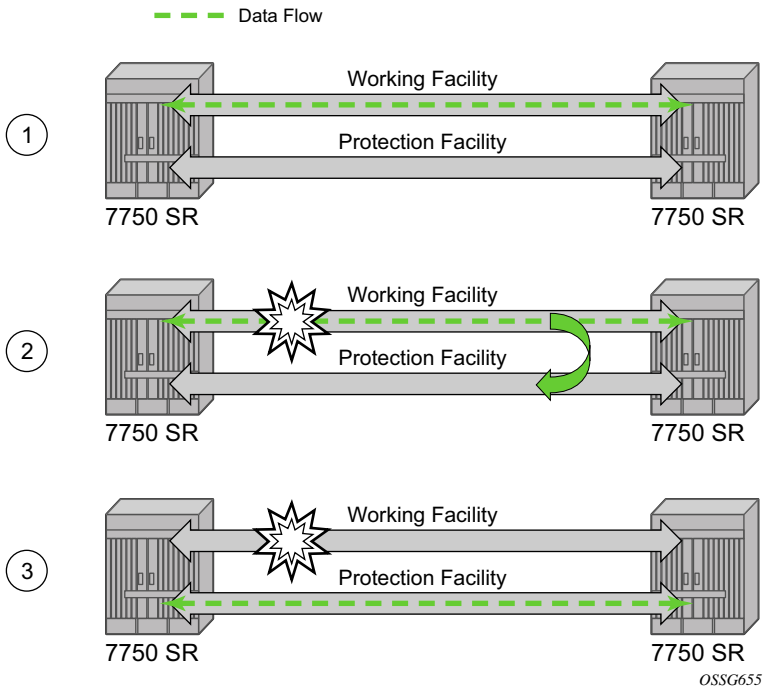

Note that “facility” in the router’s context refers to the physical line (including intermediate transport/switching equipment) and directly attached line terminating hardware (SFP module, MDA and IOM). “Circuit” is also a term used for a link/facility (working-circuit).

A 1+1 APS group contains two circuits.

APS is configured on a port by port basis. If all ports on an MDA or IOM need to be protected then each port on the MDA or IOM must be individually added into an APS group.

Working and protection circuits can be connected to a variety of types of network elements (ADMs, DACSes, ATM switches, routers) and serve as an access or network port providing one or more services or network interfaces to the router. APS-protected SONET/SDH ports may be further channelized, and may contain bundled channels MLPPP or IMA Bundle Protection Groups). The ports may be one of a variety of encapsulation types as supported by the MDA including PPP, ATM, FR and more. For a information about MDAs, port types, switching modes, bundles and encapsulations supported with APS, see the APS Applicability, Restrictions and Interactions section.

This section discusses the different APS architectures and their implementations.

- Single Chassis and Multi-Chassis APS
- APS Switching Modes
- APS Channel and SONET Header K Bytes
- Revertive Switching
- Bidirectional 1+1 Switchover Operation Example
- Protection of Upper Layer Protocols and Services
- APS User-Initiated Requests
- APS and SNMP
- APS Applicability, Restrictions and Interactions
- Sample APS Applications

2.4.2.12.1 Single Chassis and Multi-Chassis APS

APS can operate in a single chassis configuration (SC-APS) or in a multi-chassis configuration (MC-APS).

An SC-APS group can span multiple ports, MDAs or IOMs within a single node whereas as MC-APS can span two separate nodes as shown in Table 17.

Table 17 **SC-APS versus MC-APS Protection**

	Single Chassis APS	**Multi-Chassis APS**
Short form name	SC-APS	MC-APS
Link failure protection (including intermediate transmission equipment failure)	Yes	Yes
Optical/electrical module (SPF, XPF) failure protection	Yes	Yes
MDA failure protection	Yes	Yes
IOM failure protection	Yes	Yes
Node failure protection	No	Yes

The support of SC-APS and MC-APS depends on switching modes, MDAs, port types and encaps. For a definitive description of the MDAs, port types, switching modes, bundles and encapsulations supported with APS, see the APS Applicability, Restrictions and Interactions section.

APS on a Single Node (SC-APS)

In a single chassis APS both circuits of an APS group are terminated on the same node.

The working and protect lines of a single chassis APS group can be:

- Two ports on the same MDA
- Two ports on different MDAs but on the same IOM
- Two ports on different MDAs on two different IOMs (installed in different slots)

If the working and protection circuits are on the same MDA, protection is limited to the physical port and the media connecting the two devices. If the working and protection circuits are on different IOMs then protection extends to MDA or IOM failure. Figure 10 shows a configuration that provides protection against circuit, port, MDA or IOM failure on the 7750 SR connected to an Add-Drop-Multiplexer (ADM).

Figure 10 **SC-APS Group with MDA and IOM Protection**

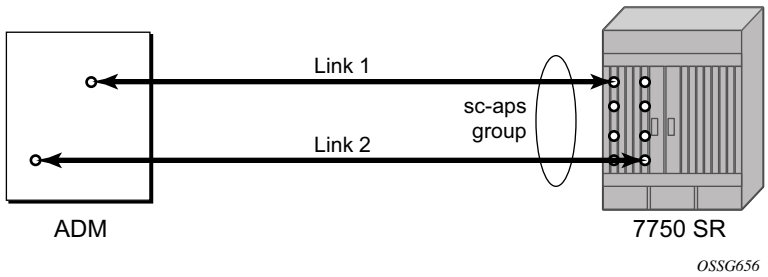

APS Across Two Nodes (MC-APS)

Multi-Chassis APS functionality extends the protection offered by SC-APS to include protection against nodal (7750 SR) failure by configuring the working circuit of an APS group on one 7750 SR node while configuring the protect circuit of the same APS group on a different 7750 SR node.

These two nodes connect to each other with an IP link that is used to establish an MC-APS signaling path between the two 7750 SRs. Note that the working circuit and the protect circuit must have compatible configurations (such as the same speed, framing, and port-type). The relevant APS groups in both the working and protection routers must have same group ID, but they can have different names (for example, group port descriptions). Although the working and protection routers can be different platforms (7750 SR-7 and a 7750 SR-c12), switchover performance may be

impacted so it is recommended to avoid a mix of platforms in the same MC-APS group where possible. The configuration consistency between the working circuit/router and the protection circuit/router is not enforced by the 7750 SR. Service or network-specific configuration data is not signaled nor synchronized between the two service routers.

Signaling is provided using the direct connection between the two service routers. A heartbeat protocol can be used to add robustness to the interaction between the two routers. Signaling functionality includes support for:

- APS group matches between service routers.
- Verification that one side is configured as a working circuit and the other side is configured as the protect circuit. In case of a mismatch, a trap (incompatible neighbor) is generated.
- Change in working circuit status is sent from the working router to keep the protect router in sync.
- Protect router, based on K1/K2 byte data, member circuit status, and external request, selects the active circuit, and informs the working router to activate or de-activate the working circuit.

Note that external requests like lockout, force, and manual switches are allowed only on the APS group having the protection circuit.

The Figure 11 shows a Multi-Chassis APS group being used to protect against link, port, MDA, IOM or node failure.

Figure 11 **MC-APS Group Protects Against Node Failure**

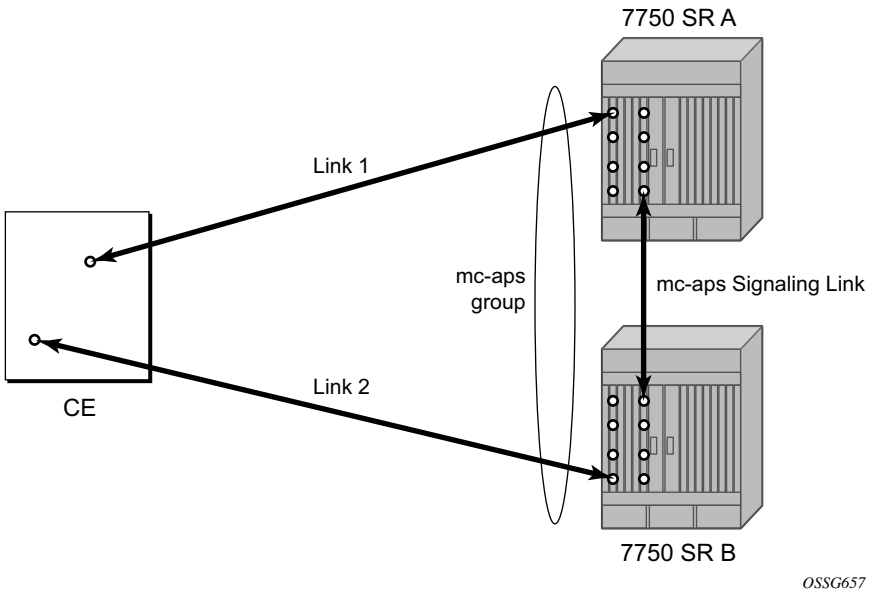

2.4.2.12.2 APS Switching Modes

APS behavior and operation differs based on the switching mode configured for the APS group as shown in Table 18. Several switching modes are supported in the router.

The switching mode affects how the two directions of a link behave during failure scenarios and how APS tx operates.

Unidirectional / Bidirectional configuration must be the same at both sides of the APS group. The APS protocol (K byte messages) exchange switching mode information to ensure that both nodes can detect a configuration mismatch.

- If one end of an APS group is configured in a Unidirectional mode (Uni 1+1 Sig APS or Uni 1+1 Sig+Data APS) then the other end must also be configured in a Unidirectional mode (Uni 1+1 Sig+Data APS).
- If one end of an APS group is configured in a Bidirectional mode then the other end must also be configured in Bidirectional mode.

Table 18 **APS Switching Modes**

	Bidirectional 1+1 Signaling APS	**Unidirectional 1+1 Signaling APS**	**Unidirectional 1+1 Signaling and Datapath APS**
Short form name	Bidir 1+1 Sig APS	Uni 1+1 Sig APS	Uni 1+1 Sig+Data APS
CLI	bi-directional	uni-directional	uni-1plus1
Interworks with a standards compliant APS implementation	Yes	Yes	Yes
Full 1+1 APS standards-based signaling	Yes	Yes	Yes
Data is transmitted simultaneously on both links/ circuits (1+1 Data)	No	No	Yes

The support of switching modes depends on SC-APS / MC-APS, MDAs, port types and encaps. For a definitive description of the MDAs, port types, switching modes, bundles and encapsulations supported with APS, see the APS Applicability, Restrictions and Interactions section.

Bidirectional 1+1 Signaling APS

In Bidir 1+1 Sig APS switching mode the Tx data is sent on the active link only (it is not bridged to both links simultaneously). 1+1 signaling, however, is used for full interoperability with signaling-compliant 1+1 architectures.

In the ingress direction (Rx), the decision to accept data from either the working or protection circuit is based on both locally detected failures/degradation and on what circuit the far-end is listening on (as indicated in the K bytes). If the far-end indicates that it has switched its active receiver, then the local node will also switch its receiver (and Tx) to match the far-end. If the local Rx changes from one circuit to another it notifies the far end using the K bytes.

In the egress direction (Tx), the data is only transmitted on the active circuit. If the active Rx changes, then Tx will also change to the same circuit.

Bidirectional 1+1 Signaling APS ensures that both directions of active data flow (including both Rx) are using the same link/circuit (using the two directions of the same fiber pair) as required by the APS standards. If one end of the APS group changes the active receiver, it will signal the far end using the K bytes. The far end will then also change its receiver to listen on the same circuit.

Because the router transmits on active circuits only and keeps active TX and RX on the same port, both local and remote switches are required to restore the service.

The APS channel (bytes K1 and K2 in the SONET header – K bytes) is used to exchange requests and acknowledgments for protection switch actions. In Bidirectional 1+1 Signaling APS switching mode, the router sends correct status on the K bytes and requires the far-end to also correctly update/send the K-bytes to ensure that data is transmitted on the circuit on which the far-end has selected as its active receiver.

Line alarms are processed and generated independently on each physical circuit.

In Bidirectional 1+1 Signaling APS mode, the highest priority local request is compared to the remote request (received from the far end node using an APS command in the K bytes), and whichever has the greater priority is selected. The relative priority of all events that affect APS 1+1 protection is listed in the Table 19 in descending order. The requests can be automatically initiated (such as signal failure or signal degrade), external (such as lockout, forced switch, request switch), and state requests (such as revert-time timers, etc.).

Unidirectional 1+1 Signaling APS

In Uni 1+1 Sig APS switching mode the Tx data is sent on the active link only (it is not bridged to both links simultaneously). 1+1 signaling, however, is used for full interoperability with signaling-compliant 1+1 architectures.

In the ingress direction (Rx), the decision to accept data from either the working or protection circuit is based on both locally detected failures/degradation and on what circuit the far-end is listening on (as indicated in the K bytes). Although it is not required in the APS standards, the system’s implementation of Unidirectional 1+1 Signaling APS uses standards based signaling to keep both the Rx and Tx on the same circuit / port. If the far-end indicates that it has switched its active receiver, then the local node will also switch its receiver (and Tx) to match the far-end. If the local Rx changes from one circuit to another it notifies the far end using the K bytes.

In the egress direction (Tx), the data is only transmitted on the active circuit. If the active Rx changes, then Tx will also change to the same circuit.

Because the router transmits on active circuits only and keeps active TX and RX on the same port, both local and remote switches are required to restore the service. For a single failure a data outage is limited to a maximum of 100 milliseconds.

The APS channel (bytes K1 and K2 in the SONET header – K bytes) is used to exchange requests and acknowledgments for protection switch actions. In Unidirectional 1+1 Signaling APS switching mode, the router sends correct status on the K bytes and requires the far-end to also correctly update/send the K-bytes to ensure that data is transmitted on the circuit on which the far-end has selected as its active receiver.

Line alarms are processed and generated independently on each physical circuit.

In Unidirectional 1+1 Signaling APS switching mode:

- K-bytes are generated/transmitted based on local request/condition only (as required by the APS signaling).
- Local request priority is compliant to 1+1 U-APS specification.
- RX and TX are always forced on to the same (active) circuit (bi-directional). This has the following caveats:
  - If an APS switch is performed due to a local condition, then the TX direction will be moved as well to the newly selected RX circuit (old inactive). The router will send LAIS on the old active TX circuit to force the remote end to APS switch to the newly active circuit. Note that some local request may not cause an APS switch when a remote condition prevents both RX and TX direction to be on the same circuit (for example an SD detected locally on a working circuit will not cause a switch if the protection circuit is locked out by the remote end).
  - If the remote end indicates an APS switch and the router can RX and TX on the circuit newly selected by the remote end, then the router will move its TX direction and will perform an APS switch of its RX direction (unless the router already TX and RX on the newly selected circuit).
  - If the remote end indicates an APS switch and the router cannot RX and TX on the circuit newly selected by the remote end (for example due to a higher priority local request, like a force request or manual request, etc.), then L-AIS are sent on the circuit newly selected by the remote end to force it back to the previously active circuit.
  - The sent L-AIS in the above cases can be either momentary or persistent. The persistent L-AIS is sent under the following conditions:
    - On the protection circuit when the protection circuit is inactive and cannot be selected due to local SF or Lockout Request.
    - On the working circuit as long as the working circuit remains inactive due to a local condition. The persistent L-AIS is sent to prevent revertive switching at the other end.

In all other cases a momentary L-AIS is sent. The system provides debugging information that informs operators about the APS-induced L-AIS.

Unidirectional 1+1 Signaling and Datapath APS

Uni 1+1 Sig+Data APS supports unidirectional switching operations, 1+1 signaling and 1+1 data path.

In the ingress direction (Rx) switching is done based on local requests only as per the APS specifications. K-bytes are used to signal the far end the APS actions taken.

In the egress direction (Tx), the data is transmitted on both active and protecting circuits.

Each end of the APS group may be actively listening on a different circuit.

The APS channel (bytes K1 and K2 in the SONET header) is used to exchange APS protocol messages.

In Uni 1+1 Sig+Data APS a received L-RDI signal on the active circuit does not cause that circuit (port) to be placed out of service. The APS group can continue to use that circuit as the active receiver. This behavior is not configurable.

Uni 1+1 Sig+Data APS also supports configurable:

- Debounce timers for signal failure and degradation conditions
- Suppression of L-RDI alarm generation

2.4.2.12.3 APS Channel and SONET Header K Bytes

The APS channel (bytes K1 and K2 in the SONET header) is used to exchange APS protocol messages for all APS modes.

K1 Byte

The switch priority of a request is assigned as indicated by bits 1 through 4 of the K1 byte (as described in the rfc3498 APS-MIB). See Table 19.

Table 19 **K1 Byte, Bits 1 to 4: Type of Request**

Bit 1234	Condition
1111	Lockout of protection
1110	Force switch
1101	SF - High priority
1100	SF - Low priority
1011	SD - High priority
1010	SD - Low priority
1001	(not used)
1000	Manual switch
0111	(not used)
0110	Wait-to-restore
0101	(not used)
0100	Exercise
0011	(not used)
0010	Reverse request
0001	Do not revert
0000	No request

The channel requesting switch action is assigned by bits 5 through 8. When channel number 0 is selected, the condition bits show the received protection channel status. When channel number 1 is selected, the condition bits show the received working channel status. Channel values of 0 and 1 are supported.

Table 20 shows bits 5 to 8 of a K1 byte and K2 Bits 1 to 4 and the channel number code assignments.

Table 20 **K1 Byte, Bits 5 to 8 (and K2 Bits 1 to 4), Channel Number Code Assignments**

Channel Number Code	Channel and Notes
0	Null channel. SD and SF requests apply to conditions detected on the protection line. For 1+1 systems, Forced and Request Switch requests apply to the protection line (for the 7750 SR only). Only code 0 is used with Lockout of Protection request.
1 to 14	Working channel. Only code 1 applies in a 1+1 architecture. Codes 1 through n apply in a 1:n architecture (for the 7750 SR only). SD and SF conditions apply to the corresponding working lines.
15	Extra traffic channel. May exist only when provisioned in a 1:n architecture. Only No Request is used with code 15.

K2 Byte

The K2 byte is used to indicate the bridging actions performed at the line-terminating equipment (LTE), the provisioned architecture and mode of operation.

The bit assignment for the K2 byte is listed in Table 21.

Table 21 **K2 Byte Functions**

Bits 1 to 8	Function
1 to 4	Channel number. The 7750 SR supports only values of 0 and 1.
5	0 Provisioned for 1+1 mode 1 Provisioned for 1:n mode
6 to 8	111 Line AIS 110 Line RDI 101 Provisioned for bi-directional switching 100 Provisioned for uni-directional switching 011 (reserved for future use) 010 (reserved for future use) 001 (reserved for future use) 000 (reserved for future use)

Differences in SONET/SDH Standards for K Bytes

SONET and SDH standards are slightly different with respect to the behavior of K1 and K2 Bytes.

Table 22 shows the differences between the two standards.

Table 22 **Differences Between SONET and SDH Standards**

	SONET	SDH	Comments
SONET/SDH standards use different codes in the transmitted K1 byte (bits 1-4) to notify the far-end of a signal fail/signal degrade detection.	1100 for signal fail 1010 for signal degrade 1101 unused 1011 unused	1101 for signal fail 1011 for signal degrade 1100 unused 1010 unused	None
SONET systems signal the switching mode in bits 5-8 of the K2 byte whereas SDH systems do not signal at all.	101 for bi-dir 100 for uni-dir	Not used. 000 is signaled in bits 5 to 8 of K2 byte for both bi-directional as well as uni-directional switching.	SONET systems raise a mode mismatch alarm as soon as a mismatch in the TX and RX K2 byte (bits 5 to 8) is detected. SDH systems do not raise the mode mismatch alarm.

Failures Indicated by K Bytes

The following sections describe failures indicated by K bytes.

APS Protection Switching Byte Failure

An APS Protection Switching Byte (APS-PSB) failure indicates that the received K1 byte is either invalid or inconsistent. An invalid code defect occurs if the same K1 value is received for 3 consecutive frames (depending on the interface type (framer) used, the 7750 SR may not be able to strictly enforce the 3 frame check per GR-253 and G.783/G.841) and it is either an unused code or irrelevant for the specific switching operation. An inconsistent APS byte defect occurs when no three consecutive received K1 bytes of the last 12 frames are the same.

If the failure detected persists for 2.5 seconds, a Protection Switching Byte alarm is raised. When the failure is absent for 10 seconds, the alarm is cleared. This alarm can only be raised by the active port operating in bi-directional mode.

APS Channel Mismatch Failure

An APS channel mismatch failure (APS-CM) identifies that there is a channel mismatch between the transmitted K1 and the received K2 bytes. A defect is declared when the received K2 channel number differs from the transmitted K1 channel number for more than 50 ms after three identical K1 bytes are sent. The monitoring for this condition is continuous, not just when the transmitted value of K1 changes.

If the failure detected persists for 2.5 seconds, a channel mismatch failure alarm is raised. When the failure is absent for 10 seconds, the alarm is cleared. This alarm can only be raised by the active port operating in a bi-directional mode.

APS Mode Mismatch Failure

An APS mode mismatch failure (APS-MM) can occur for two reasons. The first is if the received K2 byte indicates that 1:N protection switching is being used by the far-end of the OC-N line, while the near end uses 1+1 protection switching. The second is if the received K2 byte indicates that uni-directional mode is being used by the far-end while the near-end uses bi-directional mode.

This defect is detected within 100 ms of receiving a K2 byte that indicates either of these conditions. If the failure detected persists for 2.5 seconds, a mode mismatch failure alarm is raised. However, it continues to monitor the received K2 byte, and should it ever indicate that the far-end has switched to a bi-directional mode the mode mismatch failure clearing process starts. When the failure is absent for 10 seconds, the alarm is cleared, and the configured mode of 1+1 bidirectional is used.

APS Far-End Protection Line Failure

An APS far-end protection line (APS-FEPL) failure corresponds to the receipt of a K1 byte in 3 consecutive frames that indicates a signal fail (SF) at the far end of the protection line. This forces the received signal to be selected from the working line.

If the failure detected persists for 2.5 seconds, a far-end protection line failure alarm is raised. When the failure is absent for 10 seconds, the alarm is cleared. This alarm can only be raised by the active port operating in a bi-directional mode.

2.4.2.12.4 Revertive Switching

The APS implementation also provides the revertive and non-revertive modes with non-revertive switching as the default option. In revertive switching, the activity is switched back to the working port after the working line has recovered from a failure (or the manual switch is cleared). In non-revertive switching, a switch to the protection line is maintained even after the working line has recovered from a failure (or if the manual switch is cleared).

A revert-time is defined for revertive switching so frequent automatic switches as a result of intermittent failures are prevented. A change in this value takes effect upon the next initiation of the wait to restore (WTR) timer. It does not modify the length of a WTR timer that has already been started. The WTR timer of a non-revertive switch can be assumed to be infinite.

In case of failure on both working and the protection line, the line that has less severe errors on the line will be active at any point in time. If there is signal degrade on both ports, the active port that failed last will stay active. When there is signal failure on both ports, the working port will always be active. The reason is that the signal failure on the protection line is of a higher priority than on the working line.

2.4.2.12.5 Bidirectional 1+1 Switchover Operation Example

Table 23 outlines the steps that a bi-directional protection switching process will go through during a typical automatic switchover.

Table 23 **Actions for the Bi-directional Protection Switching Process**

Status	**APS Commands Sent in K1 and K2 Bytes on Protection Line**		**Action**	
	B -> A	**A -> B**	**At Site B**	**At Site A**
No failure (Protection line is not in use)	No request	No request	No action	No action
Working line Degraded in direction A->B	SD on working channel 1	No request	Failure detected, notify A and switch to protection line.	No action
Site A receives SD failure condition	Same	Reverse request	No action	Remote failure detected, acknowledge and switch to protection line.

Table 23 **Actions for the Bi-directional Protection Switching Process (Continued)**

Status	APS Commands Sent in K1 and K2 Bytes on Protection Line		Action	
	B -> A	A -> B	At Site B	At Site A
Site B receives Reverse request	Same	Same	No action	No action

2.4.2.12.6 Annex B (1+1 Optimized) Operation

Operation and behavior conferment with Annex B of ITU.T G.841 can be configured for an APS group. Characteristics of this mode include are the following:

- Annex B operates in non-revertive bi-directional switching mode only as defined in G.841.
- Annex B operates with 1+1 signaling, but 1:1 data path where by data is transmitted on the active link only.
- K bytes are transmitted on both circuits.

Due to the request/reverse-request nature of an Annex B switchover, the data outage is longer than a typical (non Annex B single chassis) APS switchover. IMA bundles that are protected with Annex B APS have to resynchronize after a switchover. It is recommended to use maintenance commands (**tools>perform>aps…**) for planned switchovers (not MDA or IOM shutdown) to minimize the outage.

Annex B APS Outage Reduction Optimization

Typical standard Annex B behavior when a local SF is detected on the primary section (circuit), and this SF is the highest priority request on both the local side and from the remote side as per the APS specifications, is to send a request to the remote end and then wait until a reverse request is received before switching over to the secondary section. To reduce the recovery time for traffic, the router will switch over to the secondary section immediately upon detecting the local SF on the primary section instead of waiting for the reverse request from the remote side. If the remote request is not received after a period of time then an “PSB Failure is declared” event is raised (Protection Switching Byte Failure – indicates an inconsistent or invalid Rx K1 Bytes), and the APS group on the local side switches back to the primary section.

When the remote side is in Lockout, and a local SF is detected then a reverse request will not be received by the local side. In this case, the traffic will no longer flow on the APS group since neither the primary nor secondary sections can carry traffic, and the outage reduction optimization will cause a temporary switchover from the primary to the secondary and then back again (which causes no additional outage or traffic issue since neither section is usable). If this temporary switchover is not desired then it is recommended to either perform Lockout from the router side, or to Lockout from both sides, which will avoid the possibility of the temporary switchover.

Failures detected on the secondary section cause immediate switch over as per the Annex B specification. There is no outage reduction optimization in the router for this case as it is not needed.

Some examples of events that can cause a local SF to be detected include: a cable being cut, laser transmitter or receiver failure, a port administratively “shutdown”, MDA failure or shutdown, IOM failure or shutdown.

Note: In Annex B operation, all switch requests are for a switch from the primary section to the secondary section. Once a switch request clears normally, traffic is maintained on the section to which it was switched by making that section the primary section. The primary section may be working circuit 1 or working circuit 2 at any particular moment.

2.4.2.12.7 Protection of Upper Layer Protocols and Services

APS prevents upper layer protocols and services from being affected by the failure of the active circuit.

The following example with figures and description illustrate how services are protected during a single-chassis APS switchover.

Figure 12 shows an example in which the APS working circuit is connected to IOM-1/MDA-1 and the protection circuit is connected to IOM-2/MDA-1. In this example, assume that the working circuit is currently used to transmit and receive data.

Figure 12 **APS Working and Protection Circuit Example**

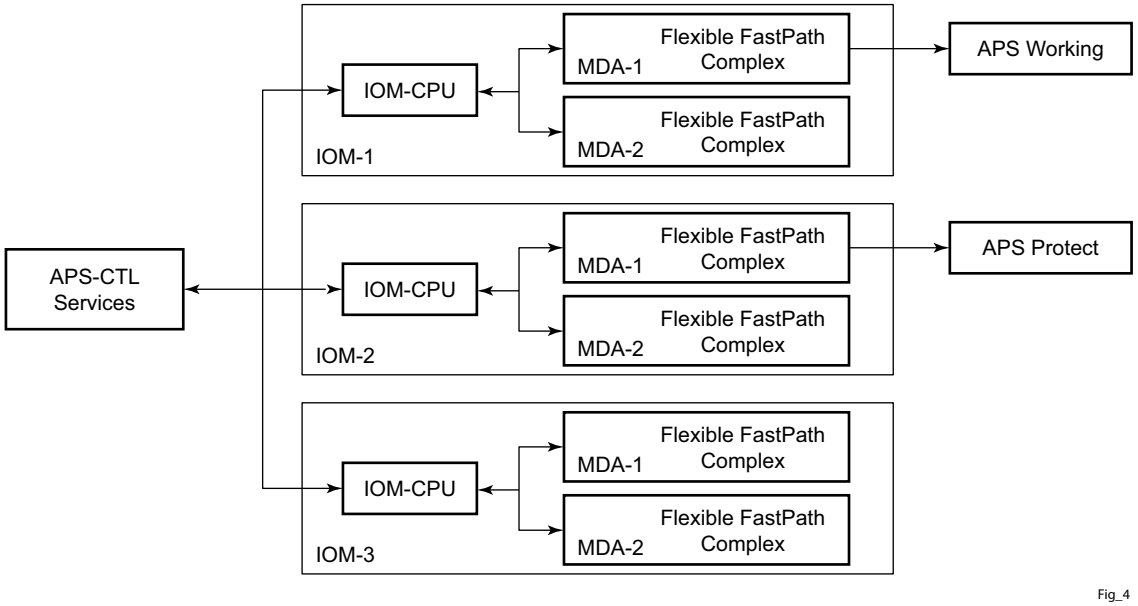

Switchover Process for Transmitted Data

For packets arriving on all interfaces that need to be transmitted over APS protected interfaces, the next hop associated with all these interfaces are programmed in all Flexible Fast-Path complexes in each MDA with a logical next-hop index. This next hop-index identifies the actual next-hop information used to direct traffic to the APS working circuit on IOM-1/MDA-1.

All Flexible Fast-Path complexes in each MDA are also programmed with next hop information used to direct traffic to the APS protect circuit on IOM-2/MDA-1. When the transmitted data needs to be switched from the working to the protect circuit, only the relevant next hop indexes need to be changed to the pre-programmed next-hop information for the protect circuit on IOM-2/MDA-1.

Although the control CFM/CPM on the SF/CPM blade initiates the changeover between the working to protect circuit, the changeover is transparent to the upper layer protocols and service layers that the switchover occurs.

Physical link monitoring of the link is performed by the CPU on the relevant IOM for both working and protect circuits.

Switchover Process for Received Data

The Flexible Fast-Path complexes for both working and protect circuits are programmed to process ingress. The inactive (protect) circuit however is programmed to ignore all packet data. To perform the switchover from working circuit to the protect circuit the Flexible Fast-Path complex for the working circuit is set to ignore all data while the Flexible Fast-Path complex of the protect circuit will be changed to accept data.

The ADM or compatible head-end transmits a valid data signal to both the working and protection circuits. The signal on the protect line will be ignored until the working circuit fails or degrades to the degree that requires a switchover to the protect circuit. When the switchover occurs all services including all their QoS and filter policies are activated on the protection circuit.

2.4.2.12.8 APS User-Initiated Requests

The following subsections describe APS user-initiated requests.

Lockout Protection

The lockout of protection disables the use of the protection line. Since the **tools>perform>aps>lockout** command has the highest priority, a failed working line using the protection line is switched back to itself even if it is in a fault condition. No switches to the protection line are allowed when locked out.

Request Switch of Active to Protection

The request or manual switch of active to protection command switches the active line to use the protection line unless a request of equal or higher priority is already in effect. If the active line is already on the protection line, no action takes place.

Request Switch of Active to Working

The request or manual switch of active to working command switches the active line back from the protection line to the working line unless a request of equal or higher priority is already in effect. If the active line is already on the working line, no action takes place.

Forced Switching of Active to Protection

The forced switch of active to protection command switches the active line to the protection line unless a request of equal or higher priority is already in effect. When the forced switch of working to protection command is in effect, it may be overridden either by a lockout of protection or by detecting a signal failure on the protection line. If the active line is already on the protection line, no action takes place.

Forced Switch of Active to Working

The forced switch of active to working command switches the active line back from the protection line to the working unless a request of equal or higher priority is already in effect.

Exercise Command

The exercise command is only supported in the bi-directional mode of the 1+1 architecture. The exercise command is specified in the **tools>perform>aps>force>exercise** context and exercises the protection line by sending an exercise request over the protection line to the tail-end and expecting a reverse request response back. The switch is not actually completed during the exercise routine.

2.4.2.12.9 APS and SNMP

SNMP Management of APS uses the APS-MIB (from rfc3498) and the TIMETRA-APS-MIB.

Table 24 shows the mapping between APS switching modes and MIB objects.

Table 24 **Switching Mode to MIB Mapping**

switching-mode	TIMETRA-APS-MIB tApsProtectionType	APS-MIB apsConfigDirection
Bidir 1+1 Sig APS (bi-directional)	onePlusOneSignalling (1)	bidirectional (2)
Uni 1+1 Sig APS (uni-directional)	onePlusOneSignalling (1)	unidirectional (1)

Table 24 **Switching Mode to MIB Mapping (Continued)**

switching-mode	TIMETRA-APS-MIB tApsProtectionType	APS-MIB apsConfigDirection
Uni 1+1 Sig+Data APS (uni-1plus1)	onePlusOne (2)	unidirectional (1)

apsConfigMode in the APS-MIB is set to onePlusOneOptimized for Annex B operation.

2.4.2.12.10 APS Applicability, Restrictions and Interactions

Note: The Release Notes for the relevant the SR OS release should be consulted for details about APS restrictions.

Table 25 shows the supported APS mode combinations.

Table 25 **Supported APS Mode Combinations**

	Bidirectional 1+1 Signaling APS	Unidirectional 1+1 Signaling APS	Unidirectional 1+1 Signaling and Datapath APS
Single Chassis APS (SC-APS)	Supported	Supported	Supported for 7750 SR-c4/12 platforms only
Multi-Chassis APS (MC-APS)	Supported	Not supported	Not supported

APS and Bundles

Bundles (such as IMA and MLPPP) can be protected with APS through the use of Bundle Protection Groups (BPGRP). For APS-protected bundles, all members of a working bundle must reside on the working port of an APS group. Similarly all members of a protecting bundle must reside on the protecting circuit of that APS group.

IMA APS protection is supported only when the router is connected to another piece of equipment (possibly through an ADM) running a single IMA instance at the far end. By design, the IMA APS implementation is expected to keep the IMA protocol up as long as the far end device can tolerate some frame loss. Similarly, the PPP protocol state machine for PPP channels and MLPPP bundles remains UP when a switchover occurs between the working and protect circuits.

When APS protects IMA groups, IMA control cells, but not user traffic, are sent on the inactive circuit (as well as the active) to keep the IMA protocol up during an APS switch.

For details on MLFR/FRF.12 support with APS see the *MLFR/FRF.12 Support of APS, BFD, and Mirroring Features* section.

APS Switchover Impact on Statistics

All SAP-level statistics are retained with an APS switch. A SAP will reflect the data received regardless of the number of APS switches that has occurred. ATM statistics, however, are cleared after an APS switch. Thus, any ATM statistics viewed on an APS port are only the statistics since the current active member port became active.

Physical layer packet statistics on the APS group reflect what is currently on the active member port.

Port and path-level statistics follow the same behavior as described above.

Any SONET physical-layer statistics (for example, B1,B2,B3,...) on the APS port are only what is current on the active APS member port.

Supported APS MDA/Port Combinations

Table 26 shows examples of the port types that can be paired to provide APS protection. Both ports must be the same type and must be configured at the same speed.

Table 26 **MDA/Port Type Pairing for APS**

MDA Type	Unchannelized SONET/SDH (POS) For example: m16-oc12/3-sfp	ATM For example: m4-atmoc12/3-sfp	Circuit Emulation (CES) For example: m4-choc3-ces-sfp	Channelized Any Service Any Port (ASAP) For example: m1-choc12-as-sfp
Unchannelized SONET/SDH (POS) For example: m16-oc12/3-sfp	Supported	—	—	—
ATM For example: m4-atmoc12/3-sfp	—	Supported	—	—
Circuit Emulation (CES) For example: m4-choc3-ces-sfp	—	—	Supported	—
Channelized Any Service Any Port (ASAP) For example: m1-choc12-as-sfp	—	—	—	Supported

For example, an APS group can be comprised of a pair of ports where each port is on one of the two following MDAs:

- m16-atmoc3-sfp
- m4-atmoc12/3-sfp (port in oc3 mode)

For example, an APS group can not be comprised of a pair of ports where one port is on an m16-oc12/3-sfp and the other port is on an m1-choc12-as-sfp.

APS Switchover During CFM/CPM Switchover

An APS switchover immediately before, during or immediately after a CFM/CPM switchover may cause a longer outage than normal.

Removing or Failure of a Protect MDA

The detection of a CMA/MDA removal or a CMA/MDA failure can take additional time. This can affect the APS switchover time upon the removal or failure of a protection CMA/MDA. If the removal is scheduled during maintenance, it is recommended that the port and/or protect circuit be shutdown first to initiate an APS switchover before the CMA/MDA maintenance is performed.

Mirroring Support

Mirroring parameters configured on a specific port or service, are maintained during an APS failover.

2.4.2.12.11 Sample APS Applications

The following subsections provide sample APS application examples.

Sample APS Application: MLPPP with SC-APS and MC-APS on Channelized Interfaces

The 7750 SR supports APS on channelized interfaces. This allows the router to be deployed as the radio access network (RAN) aggregation router which connects the base transceiver station (BTS) and the radio network controller (RNC).

Figure 13 shows an example of MLPPP termination on APS protected channelized OC-n/STM-n links. This example illustrates the following:

- SC-APS (the APS circuits terminate on the same node aggregation router A).
- APS protecting MLPPP bundles (bundles are between the BTS and aggregation router A, but APS operates on the SONET links between the DACS and the aggregation router).
- APS on channelized access interfaces (OC-3/OC-12 links).

Figure 13 **SC-APS MLPPP on Channelized Access Interfaces Example**

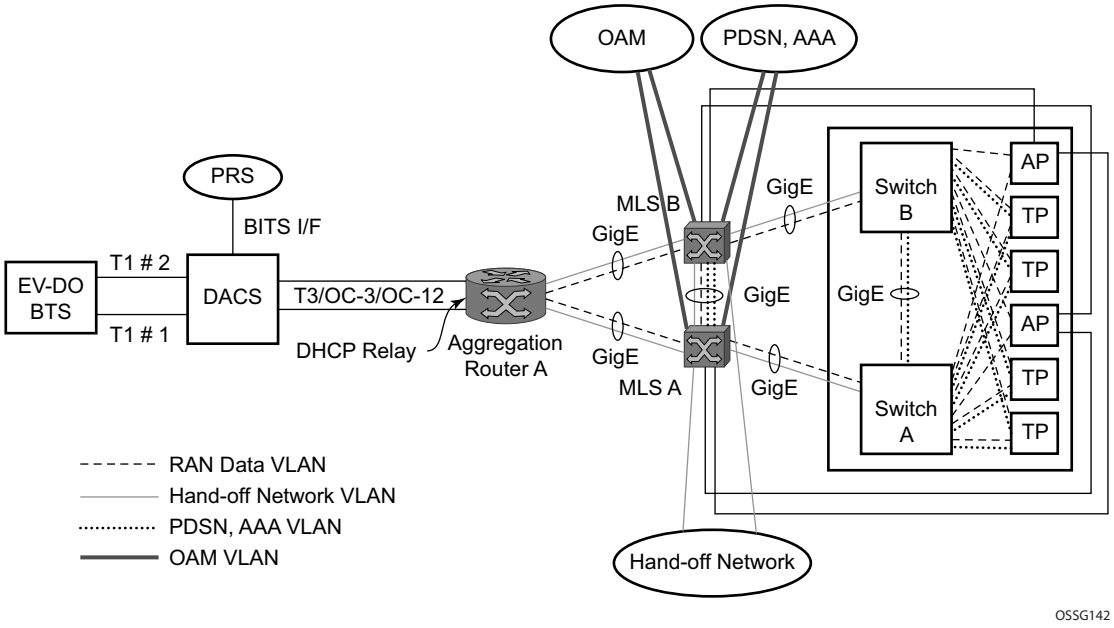

Figure 14 shows an APS group between a digital access cross-connect system (DACS) and a pair of aggregation routers. At one end of the APS group both circuits (OC-3/STM-1 and/or OC-12/STM-4 links) are terminated on the DACS and at the other end each circuit is terminated on a different aggregation routers to provide protection against router failure. The MLPPP bundle operates between the BTS and the aggregation routers. At any one time only one of the two aggregation routers is actually terminating the MLPPP bundle (whichever aggregation router is processing the active APS circuit).

This example shows the following:

- MC-APS (the APS circuits terminate on different aggregation routers)
- APS protecting MLPPP bundles (bundles are between the BTS and the aggregation routers but APS operates on the SONET links between the DACS and the aggregation routers)
- APS on channelized access interfaces (OC-3/OC-12 links)

Figure 14 **MC-APS MLPPP on Channelized Access Interfaces Example**

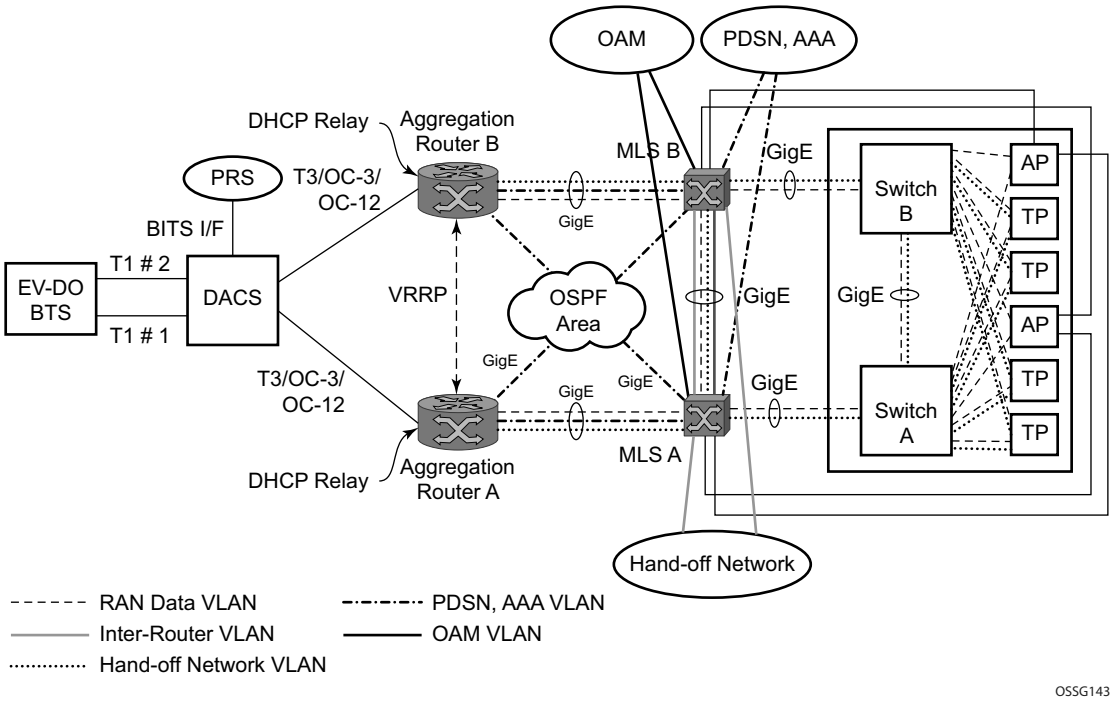

Sample APS Application: MC-APS for ATM SAP with ATM VPLS Service

In Figure 15, service router A is connected to the ATM switch or 7670 RSP through an OCx ATM 1 link. This link is configured as the working circuit. Service router B is connected to the same ATM switch or 7670 RSP through an OCx ATM 2 link. This link is configured as the protection circuit.

Figure 15 **Multi-Chassis APS Application**

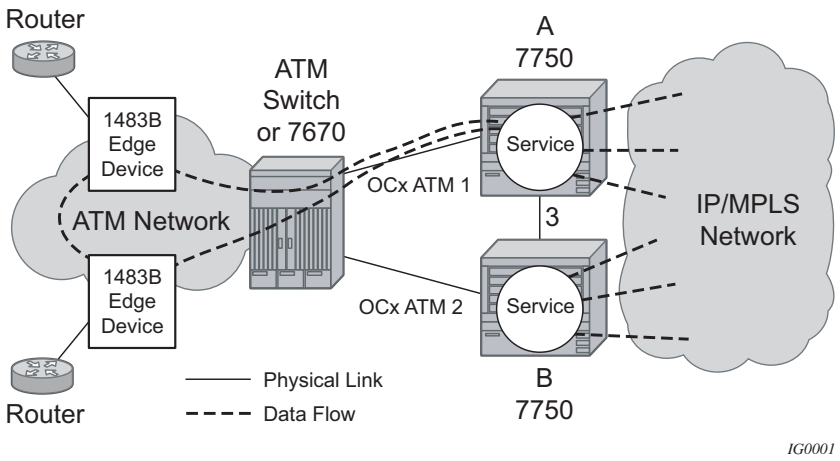

Communication between service routers A and B is established through link 3. This link is for signaling. To guarantee optimum fail-over time between service routers A and B, link 3 must be a direct physical link between routers A and B.

Sample APS Application: MC-APS with VLL Redundancy

Support of MC-APS to ATM VLLs and Ethernet VLL with ATM SAPs allows MC-APS to operate with pseudowire redundancy in a similar manner that MC-LAG operates with pseudowire redundancy.

The combination of these features provides a solution for access node redundancy and network redundancy as shown in Figure 16.

MC-APS groups are configured as follows:

- MC-APS group between the MSAN on the left and Aggregation Nodes A & B
- MC-APS group between the MSAN on the right and Aggregation Nodes C & D

Figure 16 **Access and Node and Network Resilience**

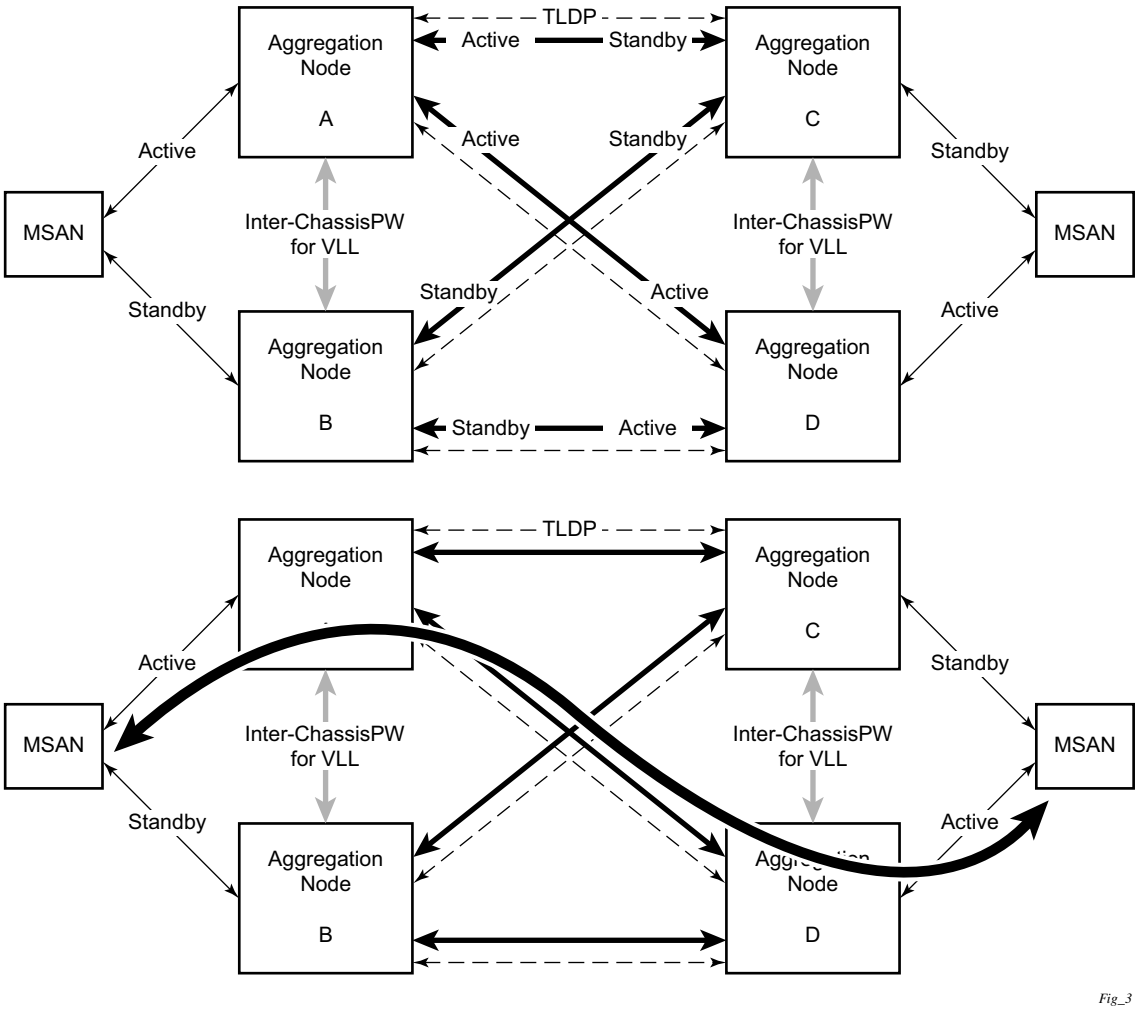

An example of a customer application in the mobile market is shown in Figure 17.

Figure 17 **MC-APS with ATM VLL Redundancy**

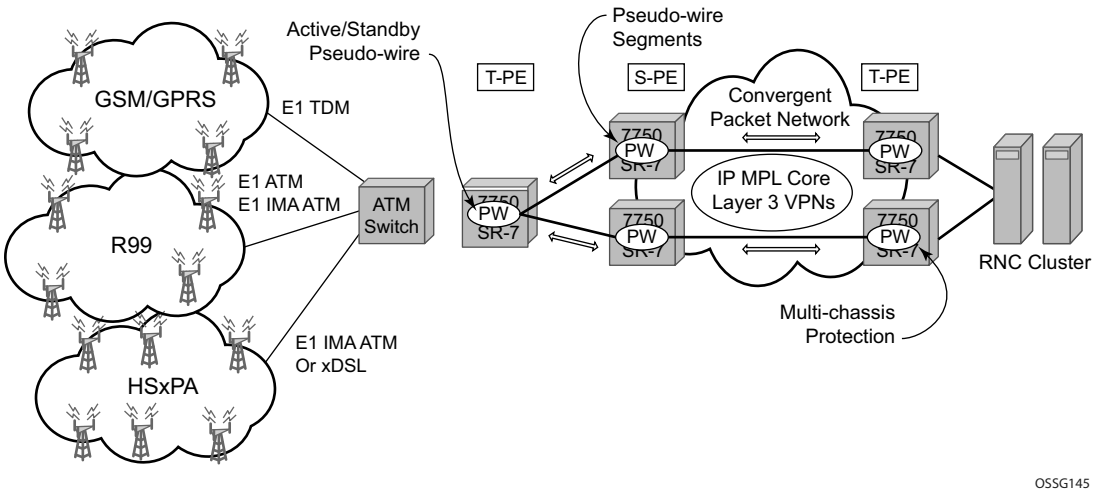

In the application shown in Figure 17, 2G and 3G cell sites are aggregated into a Tier 2 or Tier 3 hub site before being backhauled to a Tier 1 site where the radio network controller (RNC) which terminates user calls is located. This application combines MC-APS on the RNC access side and pseudowire redundancy and pseudowire switching on the core network side. pseudowire switching is used in order to separate the routing domains between the access network and the core network.

Sample APS Application: RAN Aggregation with Microwave Radio Transport

Figure 18 shows a RAN aggregation network deployment example. In this example Uni-dir 1+1 Sig+Data APS is being used.

Figure 18 **Mobile RAN with Microwave Transport Example**

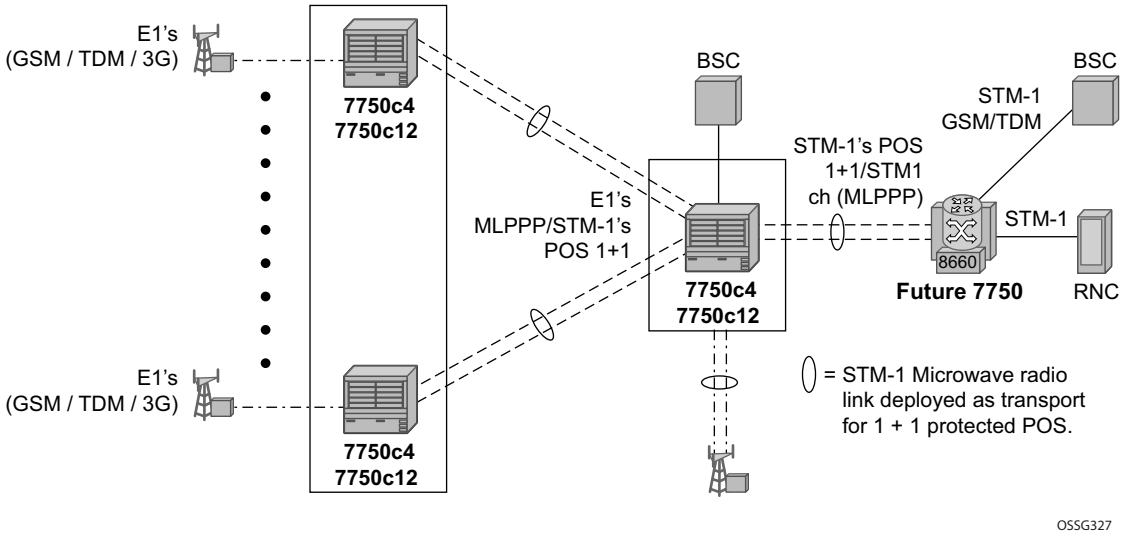

As shown in Figure 18, some APS-protected interfaces may require microwave radio transport. Figure 19 shows APS-protected links between two routers that use Microwave transport. The radio equipment acts as a SONET section/SDH regenerator section equipment, yet it implements Unidirectional APS-like processing to provide equipment protection on the local/remote radio sites respectively.

The active RX line signal (switched independently from TX) is being transmitted over the radio link to the far end radio where the signal gets transmitted on both active and inactive circuits.

The radio reacts on APS triggered failures as detected by the segment termination function: LOS, LOF, manual APS commands, and optionally BER SF/SD. Since the radio does not terminate the SONET/SDH line layer, any line signaling (including Kbytes signaling for APS, line alarms like RDI/AIS) are not terminated by the radio and arrive at a far-end router.

Note that the far-end router can either send line alarms based on its active link status or based on physical circuit status (for example, an L-RDI with valid data will be received on the router).

To facilitate a deployment, as shown in this example, some of following features of the 7750 SR-c12 routers are employed:

- Uni-dir 1+1 Sig+Data APS switching mode.
- Configurable L-RDI suppression.

- Active RX circuits are selected based on local conditions only. The SONET K Bytes are not needed to coordinate switch actions, but they are still used since they flow through and reach the far-end router.
- Ports are not failed on L-RDI, as L-RDI may be received on both ports momentarily, as a result of a local radio APS switch or, permanently as a result of a remote router APS switch (with remote radio selecting traffic from the TX line on the same port as failed RX line on the router).
- For some radio equipment, a radio can cause an APS switch resulting in the far end radio detecting radio alarm and generating L-AIS toward its locally attached router on both circuits. In some cases, that router also detects BER SD/BER SF conditions on both circuits as well. Therefore, to localize failure recovery, the 7750 SR-c12 can optionally debounce those alarms so a remote router does not invoke an APS switch on a local failure condition.

Figure 19 **1+1 APS Protected Microwave SDH Transport**

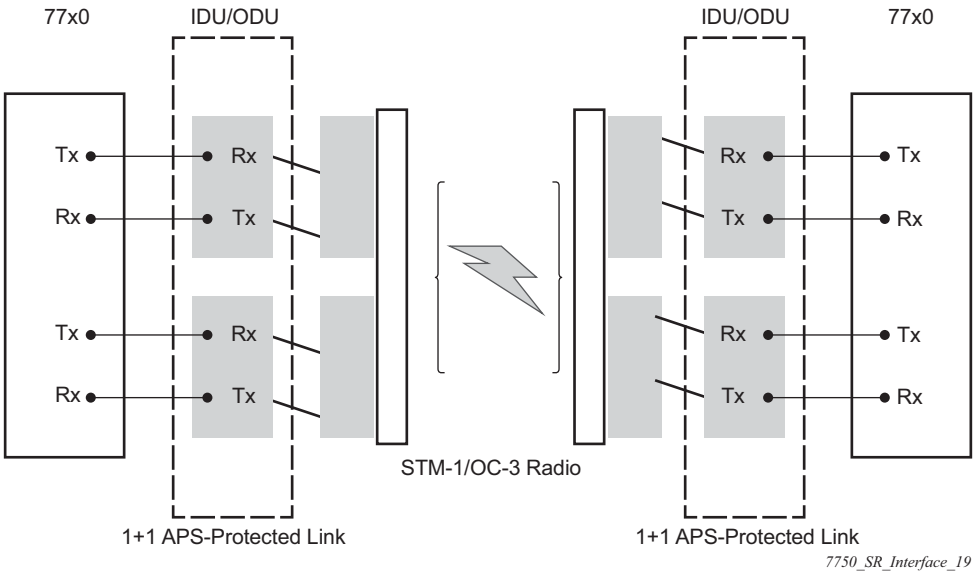

2.4.2.13 Inverse Multiplexing Over ATM (IMA)

IMA is a cell based protocol where an ATM cell stream is inverse-multiplexed and de-multiplexed in a cyclical fashion among ATM-supporting channels to form a higher bandwidth logical link where the logical link concept is referred as an IMA group. By grouping channels into an IMA group, customers gain bandwidth management capability at in-between rates (for example, between E-1/DS-1 and E-3/DS-3 respectively) through addition/removal of channels to/from the IMA group.

In the ingress direction, traffic coming over multiple ATM channels configured as part of a single IMA group, is converted into a single ATM stream and passed for further processing to the ATM Layer where service-related functions, for example L2 TM, or feeding into a pseudowire are applied. In the egress direction, a single ATM stream (after service functions are applied) is distributed over all paths that are part of an IMA group after ATM layer processing takes place.

An IMA group interface compensates for differential delay and allows only for a minimal cell delay variation. The interface deals with links that are added, deleted or that fail. The higher layers see only an IMA group and not individual links, therefore service configuration and management is done using IMA groups, and not individual links that are part of it.

The IMA protocol uses an IMA frame as the unit of control. An IMA frame consists of a series of consecutive (128) cells. In addition to ATM cells received from the ATM layer, the IMA frame contains IMA OAM cells. Two types of cells are defined: IMA Control Protocol (ICP) cells and IMA filler cells. ICP cells carry information used by IMA protocol at both ends of an IMA group (for example IMA frame sequence number, link stuff indication, status and control indication, IMA ID, TX and RX test patters, version of the IMA protocol, etc.). A single ICP cell is inserted at the ICP cell offset position (the offset may be different on each link of the group) of each frame. Filler cells are used by the transmitting side to fill up each IMA frame in case there are not enough ATM stream cells from the ATM layer, so a continuous stream of cells is presented to the physical layer. Those cells are then discarded by the receiving end. IMA frames are transmitted simultaneously on all paths of an IMA group and when they are received out of sync at the other end of the IMA group link, the receiver compensates for differential link delays among all paths.

2.4.2.13.1 Inverse Multiplexing over ATM (IMA) Features

Hardware Applicability

IMA is supported on channelized ASAP MDAs.

Software Capabilities

Nokia’s implementation supports IMA functionality as specified in ATM Forum’s Inverse Multiplexing for ATM (IMA) Specification Version 1.1 (af-phy-0086.001, March 1999). The following capabilities are supported:

- TX Frame length — Only IMA specification default of 128 cells is supported.

- IMA version — Both versions 1.0 and 1.1 of IMA are supported. There is no support for automatically falling to version 1.0 if the far end advertises 1.0 support, and the local end is configured as 1.1. Due to potential protocol interoperability issues between IMA 1.0 implementations, it is recommended that IMA version 1.1 is used whenever possible.
- Alpha, beta, and gamma values supported are defaults required by the IMA specification (values of 2, 2, and 1 respectively).
- Clock mode — Only IMA specification default of common clock mode is supported (CTC).
- Timing reference link — The transmit timing reference link is chosen first among the active links in an IMA group. If none found, then it is chosen among the usable links or finally, among the unusable links.
- Cell Offset Configuration — The cell offsets for IMA links are not user configurable but internally assigned according to the recommended distribution described in the IMA spec.
- TX IMA ID — An internally assigned number equal to the IMA bundle number.
- Minimum Links — A configurable value is supported to control minimum member links required to be up for an IMA group to stay operationally up.
- Maximum Group Bandwidth — A configurable value is supported to specify maximum bandwidth available to services over an IMA group. The maximum may exceed the number of minimum/configured/active links allowing for overbooking of ATM shaped traffic.
- Symmetry mode — Only IMA specification default of symmetric operation and configuration is supported.
- Re-alignment — Errors that require a re-alignment of the link (missing or extra cells, corrupted frame sequence numbers), are dealt with by automatically resetting the IMA link upon detection of an error.
- Activation/Deactivation Link Delay Timers — Separate, configurable timers are supported defining the amount of delay between detection of LIF, LODS and RFI-IMA change and raising/clearing of a respective alarm to higher layers and reporting RXIFailed to the far end. This protocol dampening mechanism protects those higher layers from bouncing links.
- Differential delay — A configurable value of differential delay that will be tolerated among the members of the IMA group is supported. If a link exceeds the configured delay value, then LODS defect is declared and protocol management actions are initiated as required by the IMA protocol and as governed by Link Activation and Deactivation procedures. The differential delay of a link is calculated based on the difference between the frame sequence number received on the link and the frame sequence number received on the fastest link (a link on which the IMA frame was received first).

- Graceful link deletion — The option is supported for remotely originated requests only. To prevent data loss on services configured over an IMA group, it is recommended to initiate graceful deletion from the far end before a member link is deleted or a physical link is shutdown.
- IMA test pattern — Nokia's implementation supports test pattern procedures specified in the IMA specification. Test pattern procedures allow debugging of IMA group problems without affecting user data. Test pattern configurations are not preserved upon a router reboot.
- Statistics — Nokia's IMA implementation supports all standard-defined IMA group and IMA link status and statistics through proprietary TIMETRA-PORT-MIB. Display and monitoring of traffic related interface/SAP statistics is also available for IMA groups and services over IMA groups on par with physical ATM interfaces and services.
- Scaling — Up to 8 member links per IMA group, up to 128 groups per MDA and all DS-1/E-1 links configurable per MDA in all IMA groups per MDA are supported.

2.4.2.14 Ethernet Local Management Interface (E-LMI)

The Ethernet Local Management Interface (E-LMI) protocol is defined in Metro Ethernet Forum (MEF) technical specification MEF16. This specification largely based on Frame Relay - LMI defines the protocol and procedures that convey the information for auto-configuration of a CE device and provides the means for EVC status notification. MEF16 does not include link management functions like Frame Relay LMI does. In the Ethernet context that role is already accomplished with Clause 57 Ethernet OAM (formerly 802.3ah).

The SR OS currently implements the User Network Interface-Network (UNI-N) functions for status notification supported on Ethernet access ports with dot1q encapsulation type. Notification related to status change of the EVC and CE-VLAN ID to EVC mapping information is provided as a one to one between SAP and EVC.

The E-LMI frame encapsulation is based on IEEE 802.3 untagged MAC frame format using an ether-type of 0x88EE. The destination MAC address of the packet 01-80-C2-00-00-07 will be dropped by any 802.1d compliant bridge that does not support or have the E-LMI protocol enabled. This means the protocol cannot be tunneled.

Status information is sent from the UNI-N to the UNI-C, either because a status inquiry was received from the UNI-C or unsolicited. The Active and Not Active EVC status are supported. The Partially Active state is left for further study.

The bandwidth profile sub-information element associated with the EVC Status IE does not use information from the SAP QoS policy. A value of 0 is used in this release as MEF 16 indicates the bandwidth profile sub-IE is mandatory in the EVC Status IE. The EVC identifier is set to the description of the SAP and the UNI identifier is set to the description configured on the port. Further, the implementation associates each SAP with an EVC. Currently, support exists for CE-VLAN ID/EVC bundling mode.

The E-LMI the UNI-N can participate in the OAM fault propagation functions. This is a unidirectional update from the UNI-N to the UNI-C and interacting with service manager of VLL, VPLS, VPRN and IES services.

2.4.2.15 Link Layer Discovery Protocol (LLDP)

The IEEE 802.1ab Link Layer Discovery Protocol (LLDP) standard defines protocol and management elements that are suitable for advertising information to stations attached to the same IEEE 802 LAN (emulation) for the purpose of populating physical or logical topology and device discovery management information databases. The protocol facilitates the identification of stations connected by IEEE 802 LANs/MANs, their points of interconnection, and access points for management protocols.

Note that LAN emulation and logical topology wording is applicable to customer bridge scenarios (enterprise/carrier of carrier) connected to a provider network offering a transparent LAN emulation service to their customers. It helps the customer bridges detect misconnection by an intermediate provider by offering a view of the customer topology where the provider service is represented as a LAN interconnecting these customer bridges.

The IEEE 802.1ab standard defines a protocol that:

- Advertises connectivity and management information about the local station to adjacent stations on the same IEEE 802 LAN.
- Receives network management information from adjacent stations on the same IEEE 802 LAN.
- Operates with all IEEE 802 access protocols and network media.
- Establishes a network management information schema and object definitions that are suitable for storing connection information about adjacent stations.
- Provides compatibility with a number of MIBs as shown in Figure 20.

Figure 20 **LLDP Internal Architecture for a Network Node**

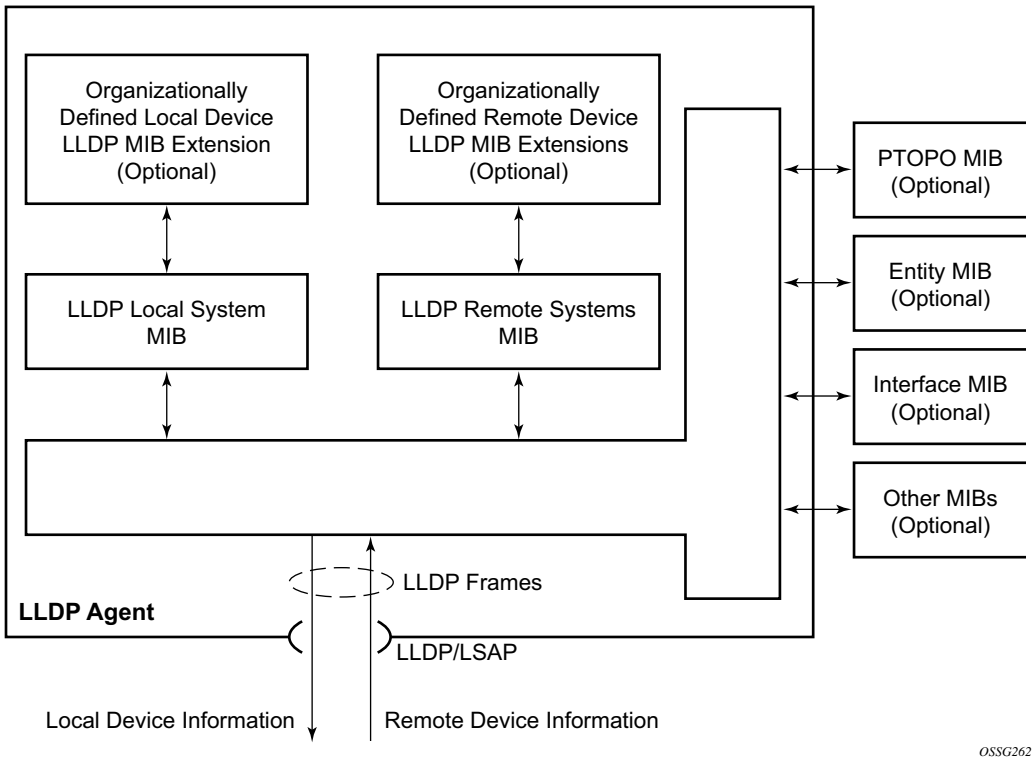

Network operators must be able to discover the topology information in order to detect and address network problems and inconsistencies in the configuration. Moreover, standard-based tools can address the complex network scenarios where multiple devices from different vendors are interconnected using Ethernet interfaces.

The example shown in Figure 21 depicts a MPLS network that uses Ethernet interfaces in the core or as an access/handoff interfaces to connect to different kind of Ethernet enabled devices such as service gateway/routers, QinQ switches, DSLAMs or customer equipment.

Figure 21 **Generic Customer Use Case For LLDP**

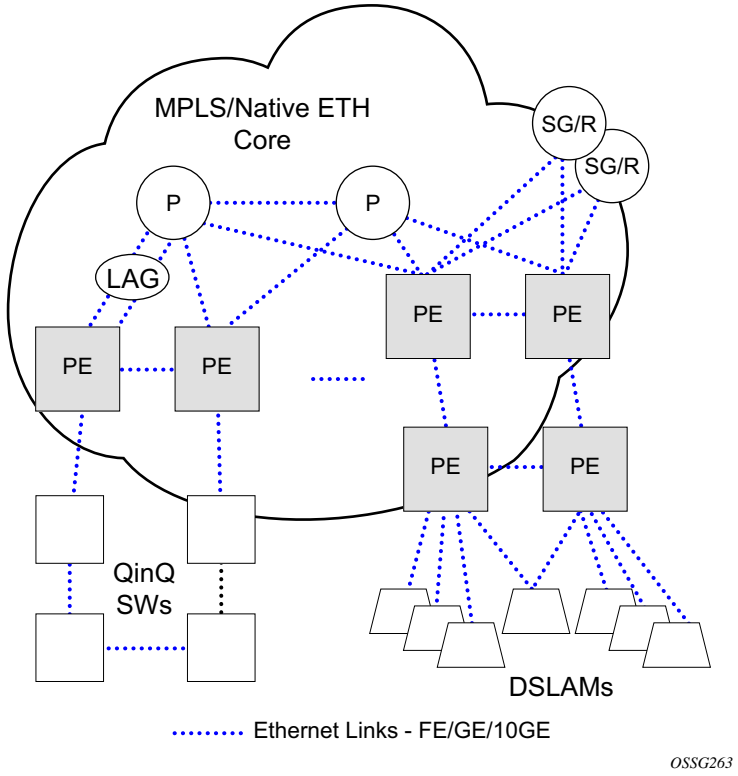

IEEE 802.1ab LLDP running on each Ethernet interfaces in between all the above network elements may be used to discover the topology information.

Operators who are utilizing IOM3/IMM and above can tunnel the nearest-bridge at the port level using the **tunnel-nearest-bridge** command under the **config>port>ethernet>lldp>destmac** (nearest-bridge) hierarchy. The dest-mac nearest-bridge must be disabled for tunneling to occur.

2.4.2.15.1 LLDP Protocol Features

LLDP is an unidirectional protocol that uses the MAC layer to transmit specific information related to the capabilities and status of the local device. Separately from the transmit direction, the LLDP agent can also receive the same kind of information for a remote device which is stored in the related MIBs.

LLDP itself does not contain a mechanism for soliciting specific information from other LLDP agents, nor does it provide a specific means of confirming the receipt of information. LLDP allows the transmitter and the receiver to be separately enabled, making it possible to configure an implementation so the local LLDP agent can either transmit only or receive only, or can transmit and receive LLDP information.

The information fields in each LLDP frame are contained in a LLDP Data Unit (LLDPDU) as a sequence of variable length information elements, that each include type, length, and value fields (known as TLVs), where:

- Type identifies what kind of information is being sent.
- Length indicates the length of the information string in octets.
- Value is the actual information that needs to be sent (for example, a binary bit map or an alphanumeric string that can contain one or more fields).

Each LLDPDU contains four mandatory TLVs and can contain optional TLVs as selected by network management:

- Chassis ID TLV
- Port ID TLV
- Time To Live TLV
- Zero or more optional TLVs, as allowed by the maximum size of the LLDPDU
- End Of LLDPDU TLV

The chassis ID and the port ID values are concatenated to form a logical identifier that is used by the recipient to identify the sending LLDP agent/port. Both the chassis ID and port ID values can be defined in a number of convenient forms. Once selected however, the chassis ID/port ID value combination remains the same as long as the particular port remains operable.

A non-zero value in the TTL field of the Time To Live TLV tells the receiving LLDP agent how long all information pertaining to this LLDPDU’s identifier will be valid so that all the associated information can later be automatically discarded by the receiving LLDP agent if the sender fails to update it in a timely manner. A zero value indicates that any information pertaining to this LLDPDU’s identifier is to be discarded immediately.

Note that a TTL value of zero can be used, for example, to signal that the sending port has initiated a port shutdown procedure. The End Of LLDPDU TLV marks the end of the LLDPDU.

The implementation defaults to setting the port-id field in the LLDP OAMPDU to **tx-local**. This encodes the port-id field as ifIndex (sub-type 7) of the associated port. This is required to support some releases of SAM. SAM may use the ifIndex value to properly build the Layer Two Topology Network Map. However, this numerical value is difficult to interpret or readily identify the LLDP peer when reading the CLI or MIB value without SAM. Including the **port-desc** option as part of the **tx-tlv** configuration allows an ALU remote peer supporting **port-desc** preferred display logic (11.0r1) to display the value in the port description TLV instead of the port-id field value. This does not change the encoding of the port-id field. That value continues to represent the ifIndex. In some environments, it may be important to select the specific port information that is carried in the port-id field. The operator has the ability to control the encoding of the port-id information and the associated subtype using the **port-id-subtype** option. Three options are supported for the port-id-subtype:

tx-if-alias — Transmits the ifAlias String (subtype 1) that describes the port as stored in the IF-MIB, either user configured description or the default entry (i.e.10/100/Gig Ethernet SFP)

tx-if-name — Transmits the ifName string (subtype 5) that describes the port as stored in the IF-MIB, ifName info.

tx-local — The interface ifIndex value (subtype 7)

IPv6 (address subtype 2) and IPv4 (address subtype 1) LLDP System Management addresses are supported.

2.4.3 Per Port Aggregate Egress Queue Statistics Monitoring

Monitoring the aggregate egress queue statistics per port provides in-profile, out-of-profile, and total statistics for both forwarded and dropped packets and octets on a given port.

When enabled, all queues on the port are monitored, including SAP egress, network egress, subscriber egress, and egress queue group queues, as well as system queues which can be used, for example, to send port-related protocol packets (LACP, EFM, and so on).

This is enabled and disabled using the following command:

```
config port <port-id> [no] monitor-agg-egress-queue-stats
```

When enabled, the line card will poll the related queues to derive the aggregates which provide the delta of the queue statistics since turning on the monitoring. This means that the reported statistics are not reduced by those from a deleted queue and so the aggregates correctly represent the forwarded/dropped statistics since the start of monitoring.

The aggregates can be shown with the following command:

```
show port [<port-id>] [statistics [egress-aggregate]] [detail]
```

As an example, the output below enables monitoring of aggregate egress queue statistics on port 2/1/1 and then shows the monitored statistics:

```
*A:PE# configure port 2/1/1 monitor-agg-egress-queue-stats
*A:PE# show port 2/1/1 statistics egress-aggregate

===============================================================================
Port 2/1/1 Egress Aggregate Statistics on Slot 2
===============================================================================
                          Forwarded                Dropped                  Total
-------------------------------------------------------------------------------
PacketsIn                       144                      0                    144
PacketsOut                        0                      0                      0
OctetsIn                      12353                      0                  12353
OctetsOut                         0                      0                      0
===============================================================================
*A:PE#
```

To clear the aggregate statistics, the monitoring must be disabled and then re-enabled. The aggregate statistics are also cleared when the card is cleared (using a **clear card** *slot-number* command) or power-cycled (with the **tools perform card** *slot-id* command). Additionally, aggregate statistics related to MDA are cleared when the MDA is cleared (using the **clear mda** *mda-id* command) or the MDA is inserted into an IOM. The aggregate statistics are not cleared when a **shutdown**/**no shutdown** is performed on the card and/or MDA.

There is no specific limit on the number of queues that can be monitored, but the amount of each line card's CPU resources allocated to the monitoring is bounded; consequently, when more queues on a card's ports are monitored, the aggregate statistics will be updated the less frequently.

Monitoring of aggregate statistics is supported on **PXC** sub-ports but not on a **PXC** physical port. It is also not supported on satellite ports, ports on an HSMDA, or ports on FP1-based hardware.

2.5 Port Cross-Connect (PXC)

Port Cross-Connect (PXC) functionality refers to a method of redirecting ingress traffic received on I/O ports to an operator-chosen forwarding complex (anchor point). This traffic is then pre-processed in the egress data path of the anchor card and consequently looped back into the ingress data path on the same anchor card. This is shown in Figure 22. Pre-processing of the traffic is necessary in some cases due to its complex nature. Examples of traffic pre-processing include removal of an encapsulation layer in the packet or modifying IP header fields that cannot be performed in the ingress data path. With this, the service termination point is moved from the I/O port (where traffic is received on a node) to a PXC port on the anchor card. Looping the traffic from egress to ingress on the anchor point is performed by a physical port in a loopback mode. This port is referred to as a PXC port or simply as a PXC.

Conceptually, PXC functionality is similar to the functionality provided by two externally interconnected physical ports where the packets leave the system through one port and then immediately looped back into another port through an external cable. Figure 22 depicts the steps involved in traffic preprocessing that utilizes a PXC:

- Traffic entering a node through an I/O port is processed by the local ingress forwarding path (1) on the line cards 1 and 2. Traffic is then directed (1) toward the PXC port (3) on the line card 3.
- Additional pre-processing is performed in the egress forwarding path (2) in line card 3 just before traffic is sent to the PXC port 3.
- The PXC loops the traffic toward the local ingress forwarding path (4) where it is further processed.

Figure 22 **Traffic Pre-Processing Utilizing Cross-Connected Port (PXC)**

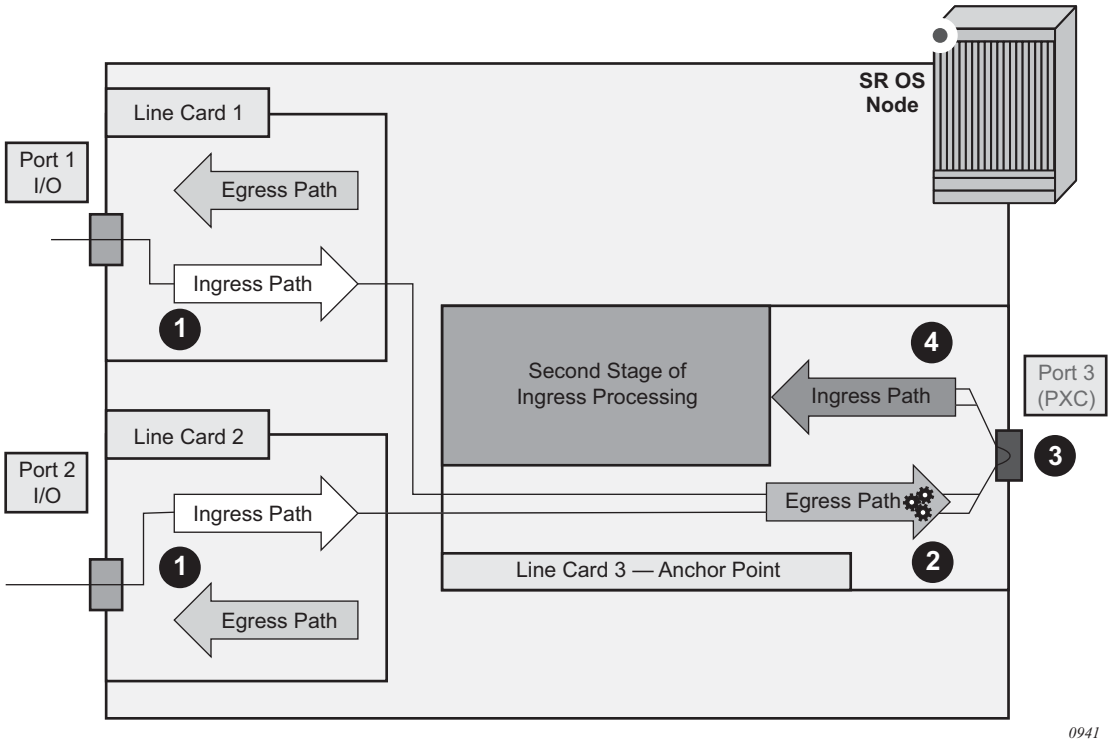

2.5.1 PXC Terminology

Port Cross-Connect (PXC) or pxc port — This is a physical port that is internally looped to connect the egress forwarding path to the ingress forwarding path within the same line card.

PXC sub-port — This is a logical port that is created under the PXC port. Two PXC sub-ports are created per PXC and represent an upstream path and a downstream path. This is shown in Figure 22.

Anchor Point — This refers to a location in the node where a PXC or a group of PXCs are created. An anchor point can represent a PXC on a single line card or a group of line cards where PXCs are distributed over multiple line cards in a LAG fashion for redundancy purposes.

2.5.2 Caveats

PXC ports do not support the following:

- Named buffer-pools
- Eth-Tunnels and Eth-Rings
- Dot1x
- MC-LAG
- BFD

2.5.3 PXC - Physical Port in Cross-Connect (Loopback) Mode

The concept of a PXC port on a FP3-based line card is shown in Figure 23. The PXC does not require an optical transceiver.

Figure 23 **PXC**

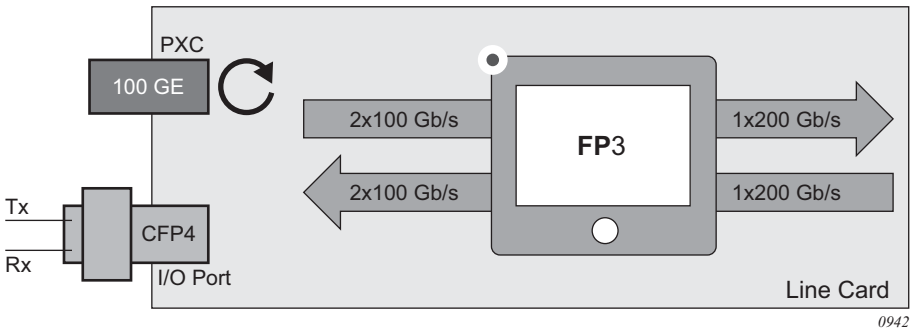

The physical port is placed in a cross-connect mode with the following commands:

```
configure
     port-xc
          pxc <pxc-id> create
               description <string>
               port <port-id>
               [no] shutdown
```

Once a physical port is associated with a PXC ID using the above commands, the node will automatically create a corresponding pair of mated PXC sub-ports (these are logical ports representing upstream/downstream paths under the PXC). The PXC is auto-configured as a hybrid port. The MTU is preset to 9212 bytes and the encapsulation is set to dot1q and dot1x. Tunneling is turned on.

These parameters cannot be changed once the physical port becomes cross-connected.

The following applies to PXC ports:

- Only unused physical ports (not associated with an interface or SAP) can be referenced inside of a PXC ID configuration.
- Once inside the PXC ID configuration, the physical port cannot be removed from that PXC ID if the corresponding PXC sub-ports are currently in use.
- Once inside the PXC ID configuration, the physical port cannot be used outside of the PXC context. For example, a regular IP interface cannot use this physical port, or a SAP on that port cannot be associated with a service.
- A physical port can be associated with only one PXC ID configuration.

2.5.3.1 Operational State

The operational state of the PXC is dependent on its administrative state. When a PXC is operationally up, the port status LED on the faceplate blinks amber. The port activity LED will be lit green in the presence of traffic on PXC ports and will turn off in absence of traffic on PXC ports.

The presence of the optical transceiver on the PXC has no effect on its operational state. Traffic cannot be sent out through the transceiver or be received from the transceiver from the outside. However, the existing traps related to insertion or removal of a transceiver (SFF Inserted/Removed), are supported.

The “Signal-Fail” alarm on the PXC is suppressed.

The operational state of the PXC ID is derived from its administrative state which is the operational state of the underlying physical port and the admin state of the corresponding PXC sub-ports.

2.5.4 PXC Sub-Ports

To explain the need for PXC sub-ports under an internally cross-connected physical port, an analogy with two distinct physical ports that are connected via external cable is shown in Figure 24.

Figure 24 **Two Cross-Connected Ports vs Single Cross-Connected Port**

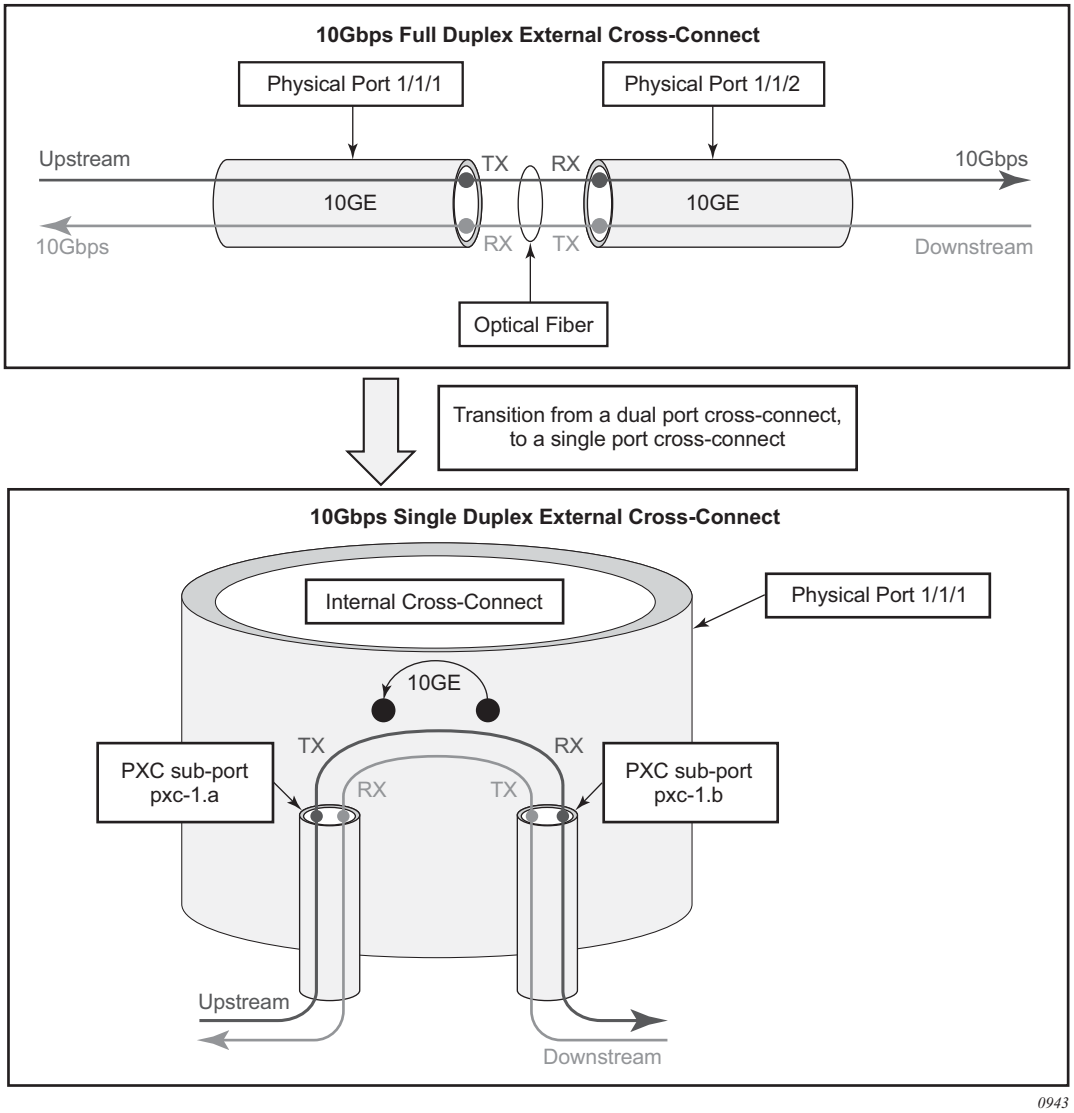

Bidirectional connectivity provided by the PXC requires two sub-ports (one in each direction). These sub-ports are referred to as PXC sub-ports and are used by the router as logical configurations to transmit traffic in both directions over a single physical port that is internally cross-connected.

Once the physical port is associated with a PXC ID, a pair of mated PXC sub-ports is automatically created by the system:

```
configure
     port pxc-<pxc-id>.a
          shutdown
     port pxc-<pxc-id>.b
          shutdown
```

The two PXC sub-ports are distinguishable by .a and .b suffixes. They transmit traffic toward each other, thus simulating two ports that are interconnected.

The PXC sub-ports can be accessed through the configuration in order to modify their parameters (QoS, etc.). However, certain PXC parameters are fixed and cannot be changed. For example, PXC sub-ports are created in a hybrid mode and therefore cannot be modified.

Each PXC sub-port is internally (within the system) represented by an internal four byte VLAN tag. Traffic carried over the PXC will contain four extra bytes which is accounted for in QoS provisioning.

Configuration example:

```
configure
     port-xc
          pxc 1 create
               port 1/1/1
               [no] shutdown
          pxc 2 create
               port 1/1/2
               [no] shutdown
```

The configuration shown above automatically creates the following:

```
configure
     port
          pxc-1.a     → cross-connected with pxc-1.b

          pxc-1.b     → cross-connected with pxc-1.a

          pxc-2.a     → cross-connected with pxc-2.b

          pxc-2.b     → cross-connected with pxc-2.a
```

2.5.4.1 PXC Sub-Port Operational State

At creation time, the administrative state of the PXC sub-ports is set to shutdown.

The operational state of the PXC sub-ports is dependent on the operational state of the underlying physical port and the state of the corresponding PXC ID.

2.5.5 Port Statistics

There are two types of statistics that can be collected on a regular (non PXC) Ethernet port:

- **Physical port level statistics** provide information about conditions on the data-link layer and physical level, for example, the aggregate number of forwarded and dropped octets/bytes on a MAC level, FCS errors, number of collisions, and so on. These statistics can be viewed with the **show port** *port-id* command and they can be collected into a local file in XML format. Local file collection is enabled with either of the following commands:
  - **config>port>ethernet>collect-stats**
  - **config>port>ethernet>accounting-policy** *policy-id*
- **Network level statistics** provide information about forwarded and dropped octets and packets on a per queue level on network ports. These statistics can be viewed with the **show port** *port-id* **detail** command and they can be collected into a local file in XML format. Local file collection is enabled with either of the following commands:
  - **config>port>ethernet>network>collect-stats**
  - **config>port>ethernet>network>accounting-policy** *policy-id*

PXC ports will inherit some of those statistics.

2.5.5.1 Statistics on Physical PXC Ports

The statistics on physical PXC ports are maintained only on MAC level. The internal q-tag used for PXC sub-port identification within the router is included in the displayed octet count. The port-level statistics on a physical PXC port represent the combined upstream and downstream traffic carried by the corresponding PXC sub-ports.

For example, in port level statistics output for a physical PXC port, the **output** count represents the upstream and downstream traffic flowing ‘out’ of the physical port while the **input** count represents the same looped traffic ‘returning into’ the same port.

```
================================================================================
Traffic Statistics
================================================================================
                                                    Input                 Output
--------------------------------------------------------------------------------
Octets                                          290164703              290164703
Packets                                           2712661                2712661
Errors                                                  0                      0
```

Statistics are cleared when a physical port enters or leaves the PXC mode.

Statistics collection to a local file is not supported on physical PXC ports.

Queues are not instantiated on physical PXC ports and therefore, the network level (queue) statistics are not maintained on physical PXC ports.

2.5.6 LAG with PXC Ports – PXC LAG

PXC sub-ports can be aggregated to form a PXC LAG for increased capacity and anchor point redundancy.

A logical concept of a PXC LAG is shown in Figure 25.

Figure 25 **Logical Concept of a LAG on PXC Ports**

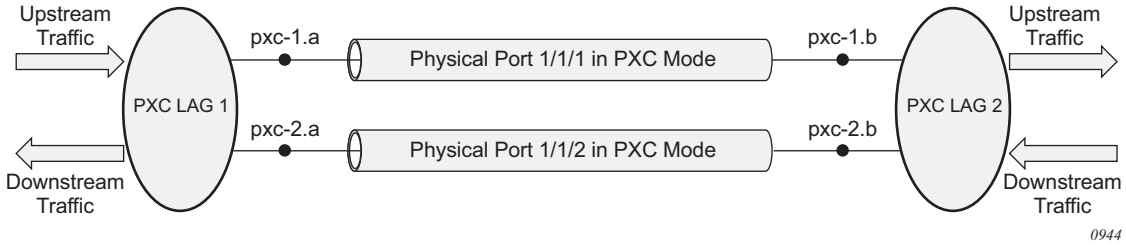

The LAGs on physical PXC ports must be configured in pairs. A pair of PXC LAGs (LAG1 and LAG2) as shown in this example:

```
configure
     lag 1
          description "lag in the up direction"
          port pxc-1.a
          port pxc-2.a

     lag 2
          description "lag in the down direction"
          port pxc-1.b
          port pxc-2.b
```

Within the router, the two sides of the PXC LAG (LAG 1 and LAG 2 in above example) are not aware that they are cross-connected. As a result, the operational state of one side of the PXC LAG will not be influenced by the state of the PXC LAG on the other side.

PXC sub-ports in a LAG must have the same properties (such as the same speed, and so on). Mixing PXC sub-ports and non-PXC ports is not allowed. The first port added to a LAG will determine the LAG port-type (PXC or non-PXC).

Statistics in the output of the **show lag** *id* **statistics** command represent combined traffic carried over the referenced **lag** *id* and its pair (LAG 1 and LAG 2 in the above example).

2.5.7 Basic PXC Provisioning

The CLI flow is shown in Figure 25. The oval marked ‘Operator’ represents a configuration step that must be performed by the operator. The block marked ‘Dynamic’ represents a step that is performed automatically by the system without an operator’s assistance.

Figure 26 **CLI Flow**

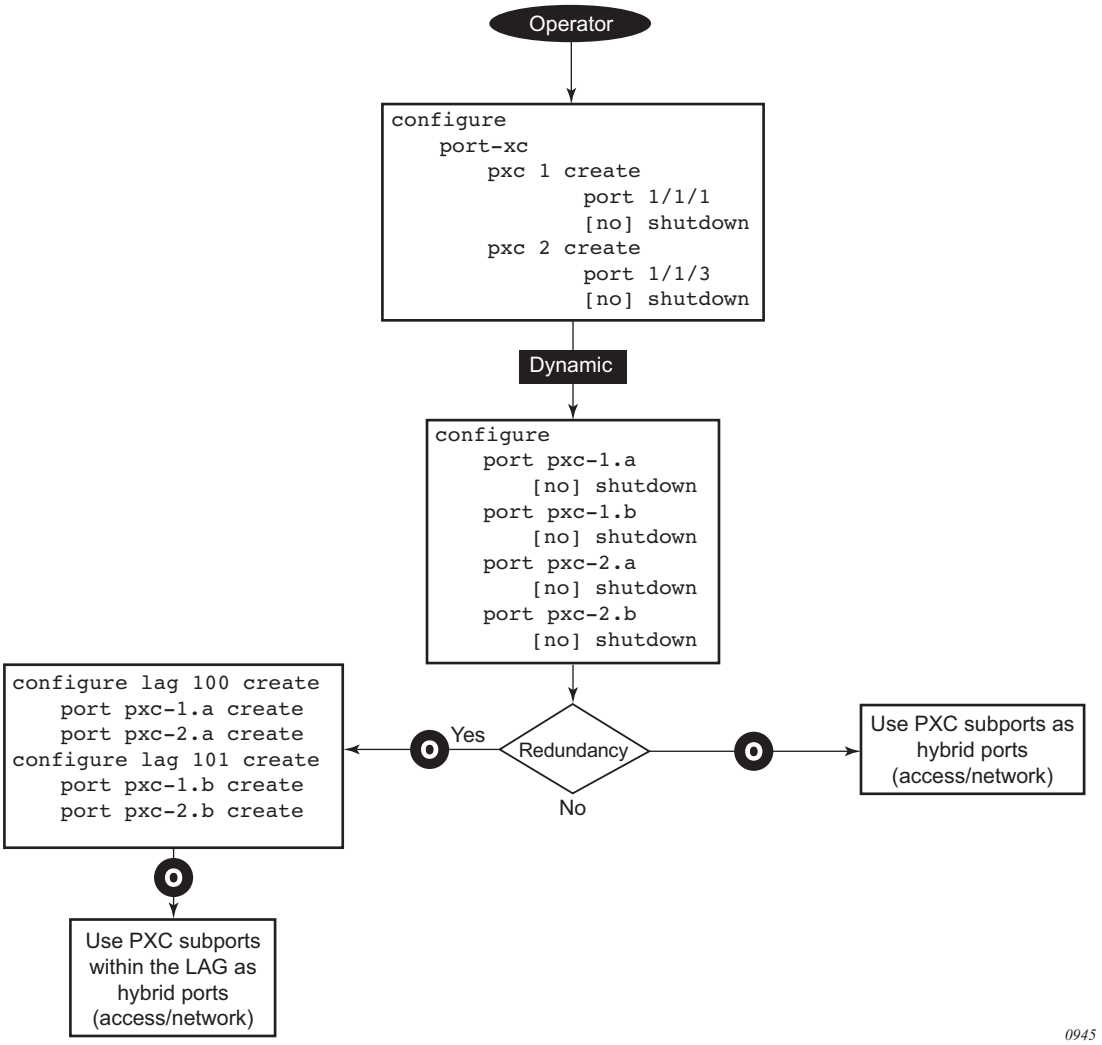

2.5.8 QoS

Upstream and downstream traffic on a PXC is funneled through the same physical port. In other words, upstream and downstream traffic is transmitted and then received by the same port. Each forwarding direction (upstream and downstream) is represented by a corresponding PXC sub-port (.a or .b). This is fundamental difference from a non-PXC port which transmits traffic only in one direction.

Traffic traversing a PXC contains an overhead of four bytes per packet that are attributed to the internal VLAN tag used for PXC sub-port identification within the 7750 SR. However, these four bytes are not accounted in configured QoS rates. Therefore, the operator should take this into consideration when configuring rates on QoS objects under PXC ports.

Funneling traffic from two PXC sub-ports through a single physical PXC ports requires separate bandwidth management per PXC sub-port. The sum of the configured bandwidth maximums for the egress port scheduler (EPS) under the two PXC sub-ports should not exceed the bandwidth capacity of the underlying physical port minus the overhead introduced by the four bytes attributed to the internal VLAN tag.

If the sum of the configured EPS bandwidth under the two PXC sub-ports exceeds the bandwidth capacity of the underlying physical port, the traffic scheduling, if there is PXC congestion, will be performed according to the configured queue types (expedited, non-expedited) and their configured CIR/PIR rates. However, then the configured EPS bandwidth limits will not be honored.

2.5.8.1 Queue Allocation on PXC Sub-Ports

PXC sub-ports are auto-configured in a hybrid mode and cannot be changed via configuration. They each have a set of queues on the network egress and a set of queues on the access egress/ingress (per SAP or ESM subscriber). Queues on the network ingress are shared per MDA, just as they are on non-PXC ports in the hybrid mode.

Queue groups are allocated per PXC sub-ports.

2.5.8.2 Pool Allocations on PXC Ports

Queue buffers are created in buffer pools and are used for traffic buffering when queues are congested. Buffer pools are allocated per forwarding complex or per PXC physical port.

Each physical PXC port has three associated buffer pools:

- access ingress
- access egress
- network egress

The network ingress pool is shared between all physical ports on a forwarding complex. The size of the buffer pools is automatically determined by the system based on the forwarding complex type and port configuration.

2.5.8.3 QoS Summary

The QoS hierarchy supported on a PXC is similar to the existing QoS hierarchy supported on regular (non-PXC) Ethernet ports.

A notable difference between PXC and non-PXC ports in the area of QoS is the bandwidth control per physical port. In the PXC. The sum of the configured bandwidth maximums for the two Ethernet port schedulers applied to the PXC sub-ports must not exceed the bandwidth capacity of the underlying physical PXC port. This means that the bandwidth on a PXC should be partitioned per direction (upstream and downstream).

With regular (non-PXC) Ethernet ports, this sum is not relevant in the context of a single physical port. Each non PXC Ethernet port can transmit traffic only in one direction (upstream or downstream), and thus, only one EPS is sufficient to control port congestion. The configured bandwidth of the EPS should not exceed the bandwidth capacity of the physical port.

2.5.9 Mirroring and LI on PXC Ports

Traffic on a PXC sub-port can be mirrored or lawfully intercepted (LI). For example, subscriber “Annex1” traffic arriving on a PXC sub-port will be mirrored if “Annex1” is configured as a mirror or LI source. A PXC sub-port can also be used to transmit mirror/LI traffic out from a mirror-destination service (such as a mirror-dest SAP or SDP can egress out a PXC sub-port, or a routable LI encapsulated packet can be forwarded and transmitted out a PXC sub-port).

Note that a mirror destination can be configured to transmit mirrored and LI traffic out a SAP on a PXC sub-port that is then cross connected into a VPLS service where a VXLAN encapsulation is then added to the mirrored packets before transmission out of the node.

The internal q-tag that represent the PXC sub-port within the system (a satellite or anchor tag) will be included in the lawfully intercepted copy of the packet for traffic intercepted (mirrored) on the ingress side of a PXC sub-port when the associate mirror-dest service is of type **ether** (the default) with routable lawful interception the encapsulation (**mirror-dest>encap**).

2.5.10 Multi-Chassis Redundancy

Multi-Chassis Synchronization (MCS) configuration (**config>redundancy>multi-chassis>peer>sync**) is supported for entities utilizing PXCs. However, MC-LAG is not supported directly on PXCs since PXC are not directly connected to external equipment. MC-LAG is supported on I/O ports that are front ending PXC ports.

2.5.11 Health Monitoring on the PXC Sub-Ports

Health monitoring on the PXC ports is based on the following:

- CRC monitoring (link quality) on the RX side of the port (**config>port>ethernet>crc-monitor**) and/or
- CRC monitoring (link quality) on the path from the IOM toward the MDA (**config>port>ethernet>down-on-internal-error**). Note that the **tx-disable** flag (disable remote laser on error) is not supported on PXC ports since PXC ports are looped.

Health monitoring of the PXC **sub**-ports is based on:

- efm-oam — The Information OAMPDUs are transmitted by each peer (PXC sub-port) at the configured intervals. Their purpose is to perform keepalive and critical notification functions.
- CRC errors are only recorded, if frames are transmitted.
- Crossing the signal degrade (SD) threshold: raise log event

CRC monitoring on the RX side of the PXC ports has the following characteristics:

- Monitors ingress error conditions
- Compares error counts against configurable thresholds
- CRC errors are only recorded if frames are transmitted
- Crossing the signal degrade (SD) threshold raises an log event
- Crossing the signal failure (SF) threshold takes the port operational state down
- Error rate thresholds uses format m•10-n

  Both threshold (n) and multiplier (m) are configurable.

Health monitoring on PXC ports is disabled by default.

In addition to the explicitly configured aforementioned health monitoring mechanisms, PXC operational state transitions will be, by default, reported by a port UP/DOWN trap:

```
478 2015/10/22 14:08:15.86 UTC WARNING: SNMP #2004 Base pxc-1.b Interface pxc-
1.b is not operational

478 2015/10/22 14:08:15.86 UTC WARNING: SNMP #2004 Base pxc-1.b Interface pxc-
1.b is operational
```

2.5.12 Configuration Example

In the following example, subscriber (ESM) traffic with QinQ encapsulation arriving on two different I/O line cards (3 and 4) is terminated on the PXC LAG on line cards 1 and 2. With this method, if one of the I/O line cards fails, the subscriber traffic remains unaffected (continues to be terminated on line cards 1 and 2) provided that the proper protection mechanism is implemented in the access part of the network. This protection mechanism in the access part of the network must ensure that traffic arriving on card 3 can be rerouted to card 4 if card 3 fails. The opposite must be true as well (path to card 4 must be protected by a path to card 3).

A PXC can be on any card, independent of I/O ports.

The following displays an example of an I/O port configuration on cards 3 and 4:

```
configure
     port 3/1/1
          description "access I/O port on card 3; ecap is null which means that
               all VLAN tagged and untagged traffic will be accepted"
          ethernet
               mode access
               encap-type null
     port 4/1/1
          description "access I/O port on card 4; ecap is null which means that
               all VLAN tagged and untagged traffic will be accepted"
          ethernet
               mode access
               encap-type null
```

The following displays an example of a PXC configuration on cards 1 and 2:

```
configure
     port-xc
          pxc 1 create
               description "PXC on card 1"
               port 1/1/1
               no shutdown
          pxc 2 create
               description "PXC on card 2"
               port 2/1/1
     no shutdown
```

The above configuration segment will trigger automatic creation of a pair of mated PXC sub-ports. This is shown below. The desired sub-port encapsulation must be set manually by the operator (the default is dot1q). PXC sub-ports will transparently pass traffic with preserved QinQ tags from the **.b** side of the PXC (I/O side) to the **.a** side of the PXC where ***.*** capture SAP will be configured.

```
configure
     port pxc-1.a
          description "termination PXC side; *.* capture SAP will be
```

```
            configured here”
        encap-type qinq
        no shutdown
    port pxc-1.b
        description "transition PXC side; all VLAN tags (*) will be
            transparently passed via this side”
        encap-type dot1q
        no shutdown
    port pxc-2.a
        description "together with pxc-1.a, this sub-port is a member of
            LAG 1”
        encap-type qinq
        no shutdown
    port pxc-2.b
        description "together with pxc-1.b, this sub-port is a member of
            LAG 2”
        encap-type dot1q
        no shutdown
```

The following displays an example of a PXC LAG configuration:

```
configure
    lag 1 create
        description "terminating side of the cross-connect”
        port pxc-1.a
        port pxc-2.a
    lag 2 create
        description "transient side of the cross-connect”
        port pxc-1.b
        port pxc-2.b
```

Passing traffic from the I/O side on access (ports 3/1/1 and 4/1/1) via the transient PXC sub-ports pxc-1.b and pxc-2.b to the termination side of the PXC is performed via VPLS.

```
configure
    service vpls 1 create customer 1
        description "stitching access side to the anchor"
            split-horizon-group "access (I/O) side" create
            sap 3/1/1 split-horizon-group "access" create
                description "I/O port”
            sap 4/1/1 split-horizon-group "access" create
                description "I/O port”
            sap lag-2:*
                description "transient side od PXC”
```

The following displays an example of capture SAPs on the anchor:

```
configure
    service vpls 3 create customer 1
        description "VPLS with capture SAPs”
        sap lag-1:10.* capture-sap create
            description "termination side of PXC; traffic with
                S-tag=10 will be extracted here”
            trigger-packet dhcp dhcpv6 pppoe
```

```
sap lag-1:11.* capture-sap create
     description "termination side of PXC; traffic with
         S-tag=11 will be extracted here".
```

2.6 Forwarding Path Extensions (FPE)

Certain applications in the SR OS require extra traffic processing in the forwarding plane. Such additional traffic processing is facilitated by an internal cross-connect that utilizes PXC ports (described in the Port Cross-Connect (PXC)). Application-specific use of the cross-connect is built on the common premise that the traffic must be steered from the input ports to the PXC ports where the traffic can be looped for additional processing in the forwarding plane. To shield the operator from the intricacies involved when configuring application-specific cross-connect attributes, a CLI construct referred to as Forwarding Path Extensions (FPE) simplifies provisioning of various applications which rely on PXC functionality.

Two examples of applications which rely on PXC and FPE are:

- Anchored PW-ports where PW payload termination in Layer 3 services is disjointed from I/O ports in the system.
- VXLAN termination on non-system IPv4 addresses and VXLAN IPv6 underlay.

Application-specific uses of PXC ports and FPEs are described in the respective user guides (Triple Play Service Delivery Architecture Guide, Layer 3 Services Guide, and Layer 2 Services Guide).

The FPE configuration provides information to the SR OS node necessary to associate the application with the PXC (paired PXC sub-ports or PXC based LAG ids). Consequently, the SR OS node will set up the internal logic utilizing PXC as required by the application.

An example of FPE provisioning is given in Figure 27.

- The first three steps are applicable to PXC port provisioning.
- Association between the application and the PXC is performed in steps 4 and 5. In this particular example, two applications can be configured: PW-port or VXLAN-termination (non-system IPv4 termination or IPv6 underlay). These applications require internal configuration of SDPs and their IDs are allocated from the user configurable range. In order to prevent conflict between the user provisioned SDP ids and internally configured SDP id in FPE case, a range of SDP ids that will be used by FPE is reserved by the **sdp-id-range** commands under the **configure>fwd-path-ext** CLI hierarchy.
- Application-specific configuration is performed in step 6, partially by the operator and partially by the system. This is described in the application- specific user guides.

Figure 27 **FPE - Sample Provisioning Steps**

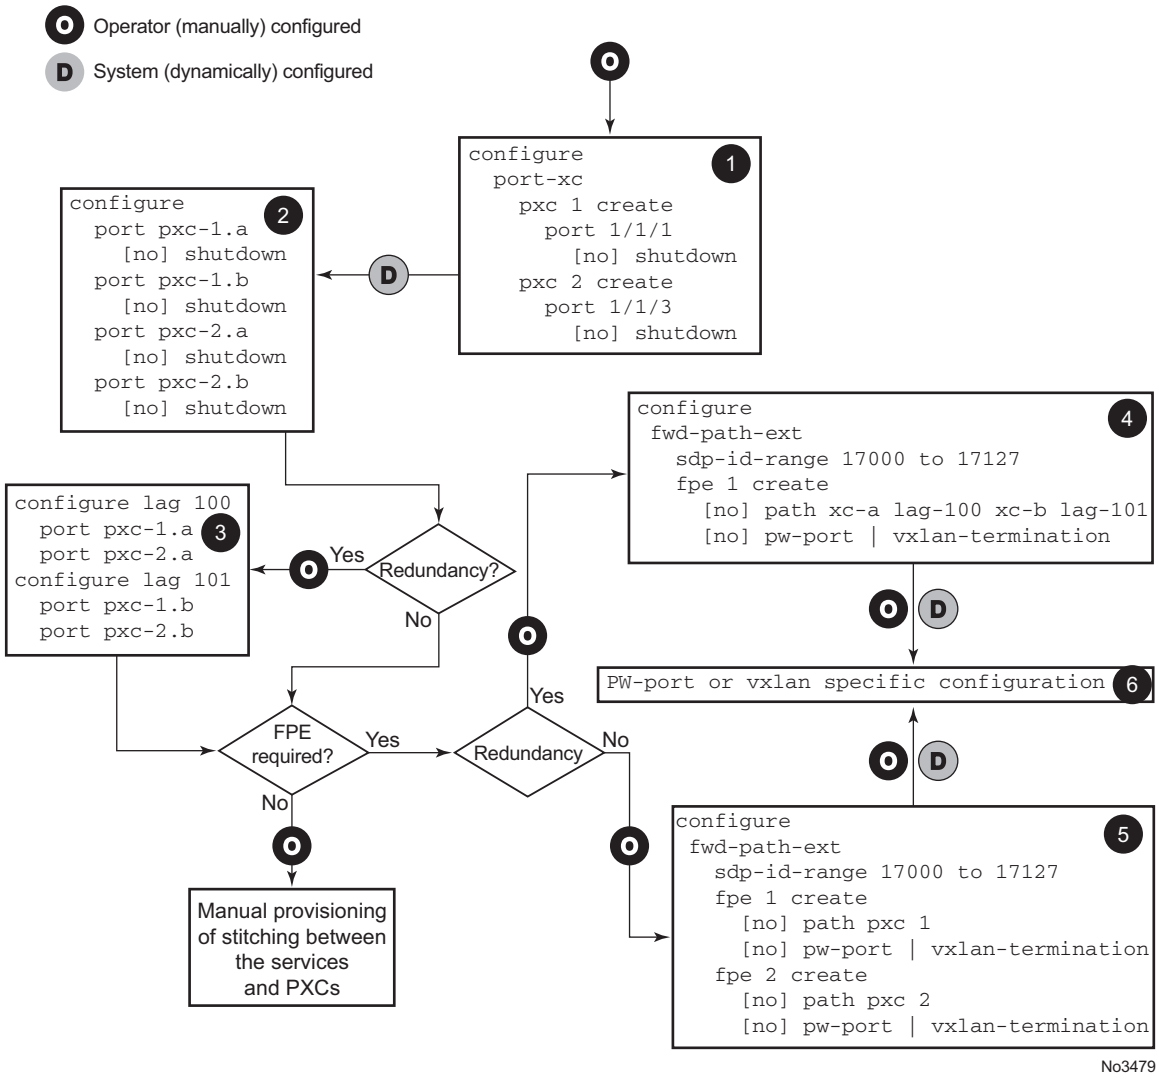

Once the PXC sub-port or LAG is associated with an FPE object, the manual creation (by the operator) of IP interfaces and SAPs under such PXC sub-ports/LAGs is not permitted. Only the internal SR OS system is allowed to reference these PXC sub-ports/LAGs in internal IP interfaces and SAPs, as required by each application.

However, the PXC sub-ports and LAG parameters (QoS, lag-profiles, and so on) can be modified by the operator.

PXC sub-ports or LAGs can be removed from the FPE object only if they are not associated with an application.

2.7 LAG

Based on the IEEE 802.1ax standard (formerly 802.3ad), Link Aggregation Groups (LAGs) can be configured to increase the bandwidth available between two network devices, depending on the number of links installed. LAG also provides redundancy in the event that one or more links participating in the LAG fail. All physical links in a given LAG links combine to form one logical interface.

Packet sequencing must be maintained for any given session. The hashing algorithm deployed by the Nokia routers is based on the type of traffic transported to ensure that all traffic in a flow remains in sequence while providing effective load sharing across the links in the LAG.

LAGs must be statically configured or formed dynamically with Link Aggregation Control Protocol (LACP). The optional marker protocol described in IEEE 802.1ax is not implemented. LAGs can be configured on network and access ports.

The LAG load sharing is executed in hardware, which provides line rate forwarding for all port types.

The LAG implementation supports LAG that with all member ports of the same speed and LAG with mixed port-speed members (see later section for details).

The LAG implementation is supported on access and network interfaces.

2.7.1 LACP

Under normal operation, all non-failing links in a given LAG will become active and traffic is load balanced across all active links. In some circumstances, however, this is not desirable. Instead, it desired that only some of the links are active (for example, all links on the same IOM) and the other links be kept in stand-by condition.

LACP enhancements allow active lag-member selection based on particular constrains. The mechanism is based on the IEEE 802.1ax standard so interoperability is ensured.

To use LACP on a given LAG, operator must enable LACP on the LAG including, if desired, selecting non-default LACP mode: active/passive and configuring administrative key to be used (**configure lag lacp**). IN addition an operator can configure desired LACP transmit interval (**configure lag lacp-xmit-interval**).

When LACP is enabled, an operator can see LACP changes through traps/log messages logged against the LAG. See the TIMETRA-LAG-MIB.mib for more details.

2.7.1.1 LACP Multiplexing

The router supports two modes of multiplexing RX/TX control for LACP: coupled and independent.

In coupled mode (default), both RX and TX are enabled or disabled at the same time whenever a port is added or removed from a LAG group.

In independent mode, RX is first enabled when a link state is UP. LACP sends an indication to the far-end that it is ready to receive traffic. Upon the reception of this indication, the far-end system can enable TX. Therefore, in independent RX/TX control, LACP adds a link into a LAG only when it detects that the other end is ready to receive traffic. This minimizes traffic loss that might occur in coupled mode if a port is added into a LAG before notifying the far-end system or before the far-end system is ready to receive traffic. Similarly, on link removals from LAG, LACP turns off the distributing and collecting bit and informs the far-end about the state change. This allows the far-end side to stop sending traffic as soon as possible.

Independent control provides for lossless operation for unicast traffic in most scenarios when adding new members to a LAG or when removing members from a LAG. It also reduces loss for multicast and broadcast traffic.

Note that independent and coupled mode are interoperable (connected systems can have either mode set).

2.7.2 Active-Standby LAG Operation

Active/standby LAG is used to provide redundancy by logically dividing LAG into subgroups. The LAG is divided into subgroups by either assigning each LAG's ports to an explicit subgroup (1 by default), or by automatically grouping all LAG's ports residing on the same line card into a unique sub-group (auto-iom) or by automatically grouping all LAG's ports residing on the same MDA into a unique sub-group (auto-mda). When a LAG is divided into sub-groups, only a single sub-group is elected as active. Which sub-group is selected depends on selection criterion chosen.

The active/standby decision for LAG member links is a local decision driven by preconfigured selection-criteria. When LACP is configured, this decision was communicated to remote system using LACP signaling.

To allow non-LACP operation, an operator must disable LACP on a given LAG and select transmitter-driven standby signaling (configure lag standby-signaling power-off). As a consequence, the transmit laser will be switched off for all LAG members in standby mode. On switch over (active-links failed) the laser will be switched on all standby LAG members so they can become active.

When the power-off is selected as the standby-signaling, the selection-criteria **best-port** can be used.

It is not be possible to have an active LACP in power-off mode before the correct selection criteria is selected.

Figure 28 shows how LAG in Active/Standby mode can be deployed towards a DSLAM access using sub-groups with auto-iom sub-group selection. LAG links are divided into two sub-groups (one per line card).

Figure 28 **Active-Standby LAG Operation without Deployment Examples**

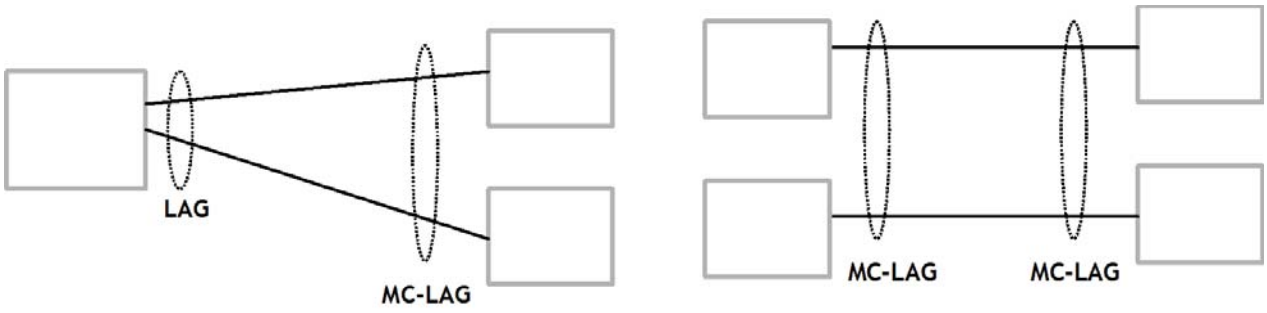

In case of a link failure, as shown in Figure 29 and Figure 30, the switch over behavior ensures that all lag-members connected to the same IOM as failing link will become stand-by and lag-members connected to other IOM will become active. This way, QoS enforcement constraints are respected, while the maximum of available links is utilized.

Figure 29 **LAG on Access Interconnection**

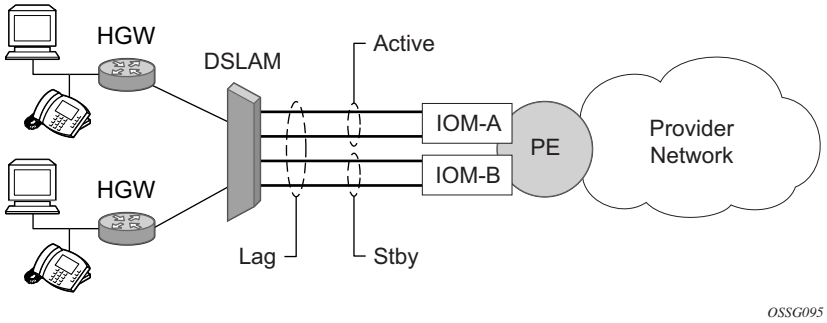

Figure 30 **LAG on Access Failure Switchover**

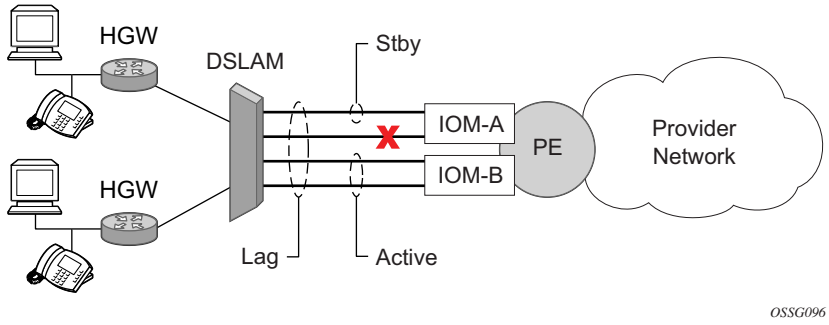

2.7.3 LAG on Access QoS Consideration

The following section describes various QoS related features applicable to LAG on access.

2.7.3.1 Adapt QoS Modes

Link Aggregation is supported on access side with access/hybrid ports. Similarly to LAG on network side, LAG on access is used to aggregate Ethernet ports into all active or active/standby LAG. The difference with LAG on networks lies in how the QoS/H-QoS is handled. Based on hashing configured, a given SAP's traffic can be sprayed on egress over multiple LAG ports or can always use a single port of a LAG. There are three user-selectable modes that allow operator to best adapt QoS configured to a LAG the SAPs are using:

1. adapt-qos distributed (default)

   In a distributed mode the SLA is divided among all line cards proportionally to the number of ports that exist on that line card for a given LAG. For example a 100 Mbps PIR with 2 LAG links on IOM A and 3 LAG links on IOM B would result in IOM A getting 40 Mbps PIR and IOM B getting 60Mbps PIR. Because of this distribution, SLA can be enforced. The disadvantage is that a single flow is limited to IOM's share of the SLA. This mode of operation may also result in underrun due to a "hash error" (traffic not sprayed equally over each link). This mode is best suited for services that spray traffic over all links of a LAG.

2. adapt-qos link

   In a link mode the SLA is given to each and every port of a LAG. With the example above, each port would get 100 Mbps PIR. The advantage of this method is that a single flow can now achieve the full SLA. The disadvantage is that the overall SLA can be exceeded, if the flows span multiple ports. This mode is best suited for services that are guaranteed to hash to a single egress port.

3. adapt-qos port-fair

   Port-fair distributes the SLA across multiple line cards relative to the number of active LAG ports per card (in a similar way to distribute mode) with all LAG QoS objects parented to scheduler instances at the physical port level (in a similar way to link mode). This provides a fair distribution of bandwidth between cards and ports whilst ensuring that the port bandwidth is not exceeded. Optimal LAG utilization relies on an even hash spraying of traffic to maximize the use of the schedulers' and ports' bandwidth. With the example above, enabling port-fair would result in all five ports getting 20 Mbps.

   When port-fair mode is enabled, per-Vport hashing is automatically disabled for subscriber traffic such that traffic sent to the Vport no longer uses the Vport as part of the hashing algorithm. Any QoS object for subscribers, and any QoS object for SAPs with explicitly configured hashing to a single egress LAG port, will be given the full bandwidth configured for each object (in a similar way to link mode). A Vport used together with an egress port scheduler is supported with a LAG in port-fair mode, whereas it is not supported with a distribute mode LAG.

4. adapt-qos distributed include-egr-hash-cfg

This mode can be considered a mix of link and distributed mode. The mode uses the configured hashing for LAG/SAP/service to choose either link or distributed adapt-qos modes. The mode allows:

- SLA enforcement for SAPs that through configuration are guaranteed to hash to a single egress link using full QoS per port (as per link mode)
- SLA enforcement for SAPs that hash to all LAG links proportional distribution of QoS SLA amongst the line cards (as per distributed mode)
- SLA enforcement for multi service sites (MSS) that contain any SAPs regardless of their hash configuration using proportional distribution of QoS SLA amongst the line cards (as per distributed mode)

The following caveats apply to adapt-qos distributed include-egr-hash-cfg:

- The feature requires chassis mode D.
- LAG mode must be access or hybrid.
- The operator cannot change from **adapt-qos distribute include-egr-hash-cfg** to **adapt-qos distribute** when link-map-profiles or per-link-hash is configured.
- The operator cannot change from **adapt-qos link** to **adapt-qos distribute include-egr-hash-cfg** on a LAG with any configuration.

Table 27 shows examples of rate/BW distributions based on the **adapt-qos** mode used.

Table 27 **Adapt QoS Bandwidth/Rate Distribution**

	distribute	**link**	**port-fair**	**distribute include-egr-hash-cfg**
SAP Queues	% # local links [1]	100% rate	100% rate (SAP hash to one link) or %# all links [2] (SAP hash to all links)	100% rate (SAP hash to one link) or % # local linksa (SAP hash to all links)
SAP Scheduler	% # local linksa	100% bandwidth	100% rate (SAP hash to one link) or %# all linksb (SAP hash to all links)	100% bandwidth (SAP hash to a one link) or % # local linksa (SAP hash to all links)
SAP MSS Scheduler	% # local linksa	100% bandwidth	% # local linksa	% # local linksa

Notes:

1. * % # local links = X * (number of local LAG members on a given line card/ total number of LAG members)
2. %# all links = X* (link speed)/(total LAG speed)

2.7.3.2 Per-fp-ing-queuing

Per-fp-ing-queuing optimization for LAG ports provides the ability to reduce the number of hardware queues assigned on each LAG SAP on ingress when the flag at LAG level is set for per-fp-ing-queuing.

When the feature is enabled in the **config>lag>access** context, the queue allocation for SAPs on a LAG will be optimized and only one queuing set per ingress forwarding path (FP) is allocated instead of one per port.

The following rules will apply for configuring the per-fp-ing-queuing at LAG level:

- To enable per-fp-ing-queuing, the LAG must be in access mode
- The LAG mode cannot be set to network mode when the feature is enabled
- Per-fp-ing-queuing can only be set if no port members exists in the LAG
- Per-fp-ing-queuing cannot be set if LAG's port-type is hsmda

2.7.3.3 Per-fp-egr-queuing

Per-fp-egr-queuing optimization for LAG ports provides the ability to reduce the number of egress resources consumed by each SAP on a LAG, and by any encap groups that exist on those SAPs.

When the feature is enabled in the **config>lag>access** context, the queue and virtual scheduler allocation will be optimized. Only one queuing set and one H-QoS virtual scheduler tree per SAP/encap group will be allocated per egress forwarding path (FP) instead of one set per each port of the LAG. In case of a link failure/ recovery, egress traffic uses failover queues while the queues are moved over to a newly active link.

Per-fp-egr-queuing can be enabled on existing LAG with services as long as the following conditions are met.

- The LAG's mode must be **access** or **hybrid.**
- The LAG's port-type must be **standard.**

- The LAG must have either **per-link-hash** enabled or all SAPs on the LAG must use **per-service-hashing** only and be of a type: VPLS SAP, i-VPLS SAP, or e-Pipe VLL or PBB SAP.
- The system must be, at minimum, in chassis mode **d** (**config>system>chassis-mode**)

To disable per-fp-egr-queuing, all ports must first be removed from a given LAG.

2.7.3.4 Per-fp-sap-instance

Per-fp-sap-instance optimization for LAG ports provides the ability to reduce the number of SAP instance resources consumed by each SAP on a lag.

When the feature is enabled, in the config>lag>access context, a single SAP instance is allocated on ingress and on egress per each forwarding path instead of one per port. Thanks to an optimized resource allocation, the SAP scale on a line card will increase, if a LAG has more than one port on that line card. Because SAP instances are only allocated per forwarding path complex, hardware reprogramming must take place when as result of LAG links going down or up, a SAP is moved from one LAG port on a given line card to another port on a given line card within the same forwarding complex. This results in an increased data outage when compared to per-fp-sap-instance feature being disabled. During the reprogramming, failover queues are used when SAP queues are reprogrammed to a new port. Any traffic using failover queues will not be accounted for in SAPs statistics and will be processed at best-effort priority.

The following rules apply when configuring a per-fp-sap-instance on a given LAG:

- Minimum chassis mode D is required.
- Per-fp-sap-ingress-queuing and per-fp-sap-egr-queuing must be enabled.
- The functionality can be enabled/disabled on LAG with no member ports only. Services can be configured.

Other caveats:

- SAP instance optimization applies to LAG-level. Whether a LAG is sub-divided into sub-groups or not, the resources are allocated per forwarding path for all complexes LAG’s links are configured on (i.e. irrespective of whether a given sub-group a SAP is configured on uses that complex or not).
- Egress statistics continue to be returned per port when SAP instance optimization is enabled. If a LAG links are on a single forwarding complex, all ports but one will have no change in statistics for the last interval – unless a SAP moved between ports during the interval.

- Rollback that changes per-fp-sap-instance configuration is service impacting.

2.7.4 LAG and ECMP Hashing

When a requirement exists to increase the available bandwidth for a logical link that exceeds the physical bandwidth or add redundancy for a physical link, typically one of two methods is applied: equal cost multi-path (ECMP) or Link Aggregation (LAG). A system can deploy both at the same time using ECMP of two or more Link Aggregation Groups (LAG) and/or single links.

Different types of hashing algorithms can be employed to achieve one of the following objectives:

- ECMP and LAG load balancing should be influenced solely by the offered flow packet. This is referred to as *per-flow* hashing.
- ECMP and LAG load balancing should maintain consistent forwarding within a given service. This is achieved using *consistent per-service* hashing.
- LAG load balancing should maintain consistent forwarding on egress over a single LAG port for a specific network interface, SAP, etc. This is referred as *per link* hashing (including explicit per link hashing with LAG link map profiles). Note that if multiple ECMP paths use a LAG with per link hashing, the ECMP load balancing is done using either *per flow* or *consistent per service* hashing.

These hashing methods are described in the following subsections. Although multiple hashing options may be configured for a given flow at the same time, only one method will be selected to hash the traffic based on the following decreasing priority order:

For ECMP load balancing:

1. Consistent per service hashing
2. Per flow hashing

For LAG load balancing:

1. LAG link map profile
2. Per link hash
3. Consistent per service hashing
4. Per flow hashing

2.7.4.1 Per Flow Hashing

Per flow hashing uses information in a packet as an input to the hash function ensuring that any given flow maps to the same egress LAG port/ECMP path. Note that because the hash uses information in the packet, traffic for the same SAP/ interface may be sprayed across different ports of a LAG or different ECMP paths. If this is not desired, other hashing methods outlined in this section can be used to change that behavior. Depending on the type of traffic that needs to be distributed into an ECMP and/or LAG, different variables are used as input to the hashing algorithm that determines the next hop selection. The following outlines default per flow hashing behavior for those different types of traffic:

- VPLS known unicast traffic is hashed based on the IP source and destination addresses for IP traffic, or the MAC source and destination addresses for non-IP traffic. The MAC SA/DA are hashed and then, if the Ethertype is IPv4 or IPv6, the hash is replaced with one based on the IP source address/destination address.
- VPLS multicast, broadcast and unknown unicast traffic.
  - Traffic transmitted on SAPs is not sprayed on a per-frame basis, but instead the service ID is used to pick ECMP and LAG paths statically.
  - Traffic transmitted on SDPs is hashed on a per packet basis in the same way as VPLS unicast traffic. However, per packet hashing is applicable only to the distribution of traffic over LAG ports, as the ECMP path is still chosen statically based on the service ID.

    Data is hashed twice to get the ECMP path. If LAG and ECMP are performed on the same frame, the data will be hashed again to get the LAG port (three hashes for LAG). However, if only LAG is performed, then hashing will only be performed twice to get the LAG port.
  - Multicast traffic transmitted on SAPs with IGMP snooping enabled is load-balanced based on the internal multicast ID, which is unique for every (s,g) record. This way, multicast traffic pertaining to different streams is distributed across different LAG member ports.
  - The hashing procedure that used to be applied for all VPLS BUM traffic would result in PBB BUM traffic being sent out on BVPLS SAP to follow only a single link when MMRP was not used. Therefore, in chassis mode D, traffic flooded out on egress BVPLS SAPs is now load spread using the algorithm described above for VPLS known unicast.
- Unicast IP traffic routed by a router is hashed using the IP SA/DA in the packet.

- MPLS packet hashing at an LSR is based on the whole label stack, along with the incoming port and system IP address. Note that the EXP/TTL information in each label is not included in the hash algorithm. This method is referred to as *Label-Only Hash* option and is enabled by default, or can be re-instated in CLI by entering the lbl-only. A couple of options to further hash on the header of an IP packet in the payload of the MPLS packet are also provided.
- VLL traffic from a service access point is not sprayed on a per-packet basis, but as for VPLS flooded traffic, the service ID is used to pick one of the ECMP/LAG paths. The exception to this is when shared-queuing is configured on an e-pipe SAP, i-pipe SAP, or f-pipe SAP, or when H-POL is configured on an e-pipe SAP. In those cases, traffic spraying is the same as for VPLS known unicast traffic. Packets of the above VLL services received on a spoke-SDP are sprayed the same as for VPLS known unicast traffic.
- Note that a-pipe and c-pipe VLL packets are always sprayed based on the service-id in both directions.
- Multicast IP traffic is hashed based on an internal multicast ID, which is unique for every record similar to VPLS multicast traffic with IGMP snooping enabled.

In addition to the above outlined per-flow hashing inputs, the system supports multiple option to modify default hash inputs.

For all cases that involve per-packet hashing, the NPA produces a 20-bit result based on hashing the relevant packet data. This result is input to a modulo like calculation (divide by the number of routes in the ECMP and use the remainder) to determine the ECMP index.

If the ECMP index results in the selection of a LAG as the next hop, then the hash result is hashed again and the result of the second hash is input to the modulo like operation (divide by the number of ports in the LAG and use the remainder) to determine the LAG port selection.

Note that when the ECMP set includes an IP interface configured on a spoke-SDP (IES/VPRN spoke interface), or a Routed VPLS interface, the unicast IP packets—which will be sprayed over this interface—will not be further sprayed over multiple RSVP LSPs (part of the same SDP), or multiple LDP FEC next-hops when available. In this case, a single RSVP LSP or LDP FEC next-hop will be selected based on a modulo operation of the service ID. The second round of the hash is exclusively used for LAG link selection. IP unicast packets from different IES/VPRN services or Routed VPLS services will be distributed across RSVP LSPs or LDP FEC next-hops based on the modulo operation of their respective service ID.

2.7.4.1.1 Changing Default Per Flow Hashing Inputs

For some traffic patterns or specific deployments, per-flow hashing is desired but the hashing result using default hash inputs as outlined above may not be produce a desired distribution. To alleviate this issue, the system allows operators to modify default hash inputs as outlined in the following subsections.

LSR Hashing

The LSR hash routine operates on the label stack only. However, there is also the ability to hash on the IP header if a packet is IP. An LSR will consider a packet to be IP if the first nibble following the bottom of the label stack is either 4 (IPv4) or 6 (IPv6). This allows the user to include an IP header in the hashing routine at an LSR for the purpose of spraying labeled IP packets over multiple equal cost paths in ECMP in an LDP LSP and/or over multiple links of a LAG group in all types of LSPs.

The user enables the LSR hashing on label stack and/or IP header by entering the following system-wide command: **config>system>load-balancing>lsr-load-balancing** [**lbl-only** | **lbl-ip** | **ip-only**]

By default, the LSR falls back to the hashing on label stack only. This option is referred to as lbl-only and the user can revert to this behavior by entering one of the two commands:

config>system>load-balancing>lsr-load-balancing lbl-only

config>system>load-balancing>no lsr-load-balancing

The user can also selectively enable or disable the inclusion of label stack and IP header in the LSR hash routine on a specific network interface by entering the following command:

config>router>if>load-balancing>lsr-load-balancing [lbl-only | lbl-ip | ip-only]

This provides some control to the user such that this feature is disabled if labeled packets received on a specific interface include non IP packets that can be confused by the hash routine for IP packets. These could be VLL and VPLS packets without a PW control word.

When the user performs the **no** form of this command on an interface, the interface inherits the system level configuration.

The default **lbl-only** hash option and the label-ip option with IPv4 payload is supported on all platforms and chassis modes. The **ip-only** option with both IPv4 and IPv6 payloads as well as the lbl-ip option with IPv6 payload are only supported on IP interfaces on IOM3/IMM ports.

LSR Default Hash Routine—Label-Only Hash Option

The following is the behavior of ECMP and LAG hashing at an LSR in the existing implementation. These are performed in two rounds.

First the ECMP hash. It consists of an initial hash based on the source port/system IP address. Each label in the stack is then hashed separately with the result of the previous hash, up to a maximum of five labels. The net result will be used to select which LDP FEC next-hop to send the packet to using a modulo operation of the net result with the number of next-hops. If there is a single next-hop for the LDP FEC, or if the packet is received on an RSVP LSP ILM, then a single next-hop exists.

This same net result will feed to a second round of hashing if there is LAG on the egress port where the selected LDP or RSVP LSP has its NHLFE programmed.

LSR Label-IP Hash Option Enabled

In the first hash round for ECMP, the algorithm will parse down the label stack and once it hits the bottom it checks the next nibble. If the nibble value is 4 then it will assume it is an IPv4 packet. If the nibble value is 6 then it will assume it is an IPv6 packet. In both cases, the result of the label hash is fed into another hash along with source and destination address fields in the IP packet header. Otherwise, it will just use the label stack hash already calculated for the ECMP path selection.

If there are more than five labels in the stack, then the algorithm will also use the result of the label hash for the ECMP path selection.

The second round of hashing for LAG re-uses the net result of the first round of hashing. This means IPv6 packets will continue to be hashed on label stack only.

LSR IP-Only Hash Option Enabled

This option behaves like the label-IP hash option except that when the algorithm reached the bottom of the label stack in the ECMP round and finds an IP packet, it throws the outcome of the label hash and only uses the source and destination address fields in the IP packet’s header.

LSR Ethernet Encapsulated IP Hash only Option Enabled

This option behaves like LSR IP only hash except for how the IP SA/DA information is found. The following conditions are verified to find IP SA/DA for hash.

- Label stack must not exceed 3 labels deep
- After the bottom of the stack is reached, the hash algorithm verifies that what follows is Ethernet II untagged frame (by looking at the value of ethertype at the expected packet location whether it contains Ethernet encapsulated IPv4 (0x0800) or IPv6 (0x86DD) value.

  When the ethertype verification passes, the first nibble of the expected IP packet location is then verified to be 4 (IPv4) or 6 (IPv6).

L4 Load Balancing

Operator may enable L4 load balancing to include TCP/UDP source/destination port numbers in addition to source/destination IP addresses in per flow hashing of IP packets. By including the L4 information, a SA/DA default hash flow can be sub-divided into multiple finer-granularity flows if the ports used between a given SA/DA vary.

L4 load balancing can be enabled/disabled on system and interface levels. When enabled, the extra L4 port inputs apply to per-flow hashing for unicast IP traffic and multicast traffic (if **mc-enh-load-balancing** is enabled).

System IP Load Balancing

This enhancement adds an option to add the system IP address into the hash algorithm. This adds a per system variable so that traffic being forward through multiple routers with similar ECMP paths will have a lower chance of always using the same path to a given destination.

Currently, if multiple routers have the same set of ECMP next hops, traffic will use the same nexthop at every router hop. This can contribute to the unbalanced utilization of links. The new hash option avoids this issue.

This feature when enabled, enhances the default per-flow hashing algorithm described earlier. It however does not apply to services which packets are hashed based on service-id or when per service consistent hashing is enabled. This hash algorithm is only supported on IOM3-XPs/IMMs or later generations of hardware.The System IP load balancing can be enabled per-system only.

TEID Hash for GTP-Encapsulated Traffic

This options enables TEID hashing on L3 interfaces. The hash algorithm identifies GTP-C or GTP-U by looking at the UDP destination port (2123 or 2152) of an IP packet to be hashed. If the value of the port matches, the packet is assumed to be GTP-U/C. For GTPv1 packets TEID value from the expected header location is then included in hash. For GTPv2 packets the TEID flag value in the expected header is additionally checked to verify whether TEID is present. If TEID is present, it is included in hash algorithm inputs. TEID is used in addition to GTP tunnel IP hash inputs: SA/DA and SPort/DPort (if L4 load balancing is enabled). If a non-GTP packet is received on the GTP UDP ports above, the packets will be hashed as GTP**.**

Source-Only/Destination-Only Hash Inputs

This option allows an operator to only include source parameters or only include destination parameters in the hash for inputs that have source/destination context (such as IP address and L4 port). Parameters that do not have source/destination context (such as TEID or System IP for example) are also included in hash as per applicable hash configuration. The functionality allows, among others, to ensure that both upstream and downstream traffic hash to the same ECMP path/LAG port on system egress when traffic is sent to a hair-pinned appliance (by configuring source-only hash for incoming traffic on upstream interfaces and destination-only hash for incoming traffic on downstream interfaces).

Enhanced Multicast Load Balancing

Enhanced multicast load balancing allows operators to replace the default multicast per flow hash input (internal multicast ID) with information from the packet. When enabled, multicast traffic for Layer 3 services (such as IES, VPRN, r-VPLS) and ng-MVPN (multicast inside RSVP-TE, LDP LSPs) are hashed using information from the packet. Which inputs are chosen depends on which per flow hash inputs options are enabled based on the following:

- IP replication—The hash algorithm for multicast mimics unicast hash algorithm using SA/DA by default and optionally TCP/UDP ports (Layer 4 load balancing enabled) and/or system IP (System IP load balancing enabled) and/or source/destination parameters only (Source-only/Destination-only hash inputs).
- MPLS replication—The hash algorithm for multicast mimics unicast hash algorithm is described in the LSR Hashing section.

Note: Enhanced multicast load balancing requires minimum chassis mode D. It is not supported with Layer 2 and ESM services. It is supported on all platforms except for the 7750 SR-c4 and SR-c12 and the 7450 ESS in standard mode.

Security Parameter Index (SPI) Load Balancing

IPSec tunneled traffic transported over LAG typically falls back to IP header hashing only. For example, in LTE deployments, TEID hashing cannot be performed because of encryption, and the system performs IP-only tunnel-level hashing. Because each SPI in the IPSec header identifies a unique SA, and thus flow, these flows can be hashed individually without impacting packet ordering. In this way, SPI load balancing provides a mechanism to improve the hashing performance of IPSec encrypted traffic.

The system allows enabling SPI hashing per L3 interface (this is the incoming interface for hash on system egress)/L2 VPLS service. When enabled, an SPI value from ESP/AH header is used in addition to any other IP hash input based on per-flow hash configuration: source/destination IPv6 addresses, L4 source/dest ports in case NAT traversal is required (l4-load-balancing is enabled). If the ESP/AH header is not present in a packet received on a given interface, the SPI will not be part of the hash inputs, and the packet is hashed as per other hashing configurations. SPI hashing is not used for fragmented traffic to ensure first and subsequent fragments use the same hash inputs.

SPI hashing is supported for IPv4 and IPv6 tunnel unicast traffic and for multicast traffic (mc-enh-load-balancing must be enabled) on all platforms and requires L3 interfaces or VPLS service interfaces with SPI hashing enabled to reside on IOM3-XP or newer line-cards.

2.7.4.2 Per Link Hashing

The hashing feature described in this section applies to traffic going over LAG and MC-LAG. Per link hashing ensures all data traffic on a given SAP or network interface uses a single LAG port on egress. Because all traffic for a given SAP/ network interface egresses over a single port, QoS SLA enforcement for that SAP, network interface is no longer impacted by the property of LAG (distributing traffic over multiple links). Internally-generated, unique IDs are used to distribute SAPs/ network interface over all active LAG ports. As ports go UP and DOWN, each SAP and network interface is automatically rehashed so all active LAG ports are always used.

The feature is best suited for deployments when SAPs/network interfaces on a given LAG have statistically similar BW requirements (since per SAP/network interface hash is used). If more control is required over which LAG ports SAPs/network interfaces egress on, a LAG link map profile feature described later in this guide may be used.

Per link hashing, can be enabled on a LAG as long as the following conditions are met:

- LAG **port-type** must be *standard*.
- LAG **access adapt-qos** must be *link* or *port-fair* (for LAGs in **mode** access or hybrid).
- System must be at minimum in chassis mode *d* (configure system chassis-mode)
- LAG mode is access/hybrid and the **access adapt-qos** mode is distribute **include-egr-hash-cfg**

2.7.4.2.1 Weighted per-link-hash

Weighted per-link-hash allows higher control in distribution of SAPs/interfaces/subscribers across LAG links when significant differences in SAPs/interfaces/subscribers bandwidth requirements could lead to an unbalanced distribution bandwidth utilization over LAG egress. The feature allows operators to configure for each SAPs/interfaces/subscribers on a LAG one of three unique classes and a weight value to be used to when hashing this service/subscriber across the LAG links. SAPs/interfaces/subscribers are hashed to LAG links, such that within each class the total weight of all SAPs/interfaces/subscribers on each LAG link is as close as possible to each other.

Multiple classes allow grouping of SAPs/interfaces/subscribers by similar bandwidth class/type. For example a class can represent: voice – negligible bandwidth, Broadband – 10 to 100 Mbps, Extreme Broadband – 300 Mbps and above types of service. If a class and weight are not specified for a given service or subscriber, values of 1 and 1 are used respectively.

The following algorithm is used to hash SAPs/interfaces/subscribers to LAG egress links:

- TPSDA subscribers are hashed to a LAG link when subscribers are active, MSE SAPs/interfaces are hashed to a LAG link when configured
- For a new SAP/interface/subscriber to be hashed to an egress LAG link:
  - Select active link with the smallest current weight for the SAP/network/subscriber class

- On a LAG link failure:
  - Only SAPs/interfaces/subscribers on a failed link are rehashed over the remaining active links
  - Processing order: Per class from lowest numerical, within each class per weight from highest numerical value
- LAG link recovery/new link added to a LAG:
  - auto-rebalance disabled: Existing SAPs/interfaces/subscribers remain on the currently active links, new SAPs/interfaces/subscribers naturally prefer the new link until balance reached.
  - auto-rebalance is enabled: When a new port is added to a LAG a non-configurable 5 second rebalance timer is started. Upon timer expiry, all existing SAPs/interfaces/subscribers are rebalanced across all active LAG links minimizing the number of SAPs/interfaces/subscribers moved to achieve rebalance. The rebalance timer is restarted if a new link is added while the timer is running. If a port bounces 5 times within a 5 second interval, the port is quarantined for10 seconds. This behavior is not configurable.
  - On a LAG start-up, the rebalance timer is always started irrespective of auto-rebalance configuration to avoid hashing SAPs/interfaces/subscribers to a LAG before ports have a chance to come UP.
- Weights for network interfaces are separated from weights for access SAPs/interfaces/subscribers.
- On a mixed-speed LAG, link selection is made with link speeds factoring into the overall weight for the same class of traffic. This means that higher-speed links will be preferred over lower-speed links.

Optionally an operator can use a **tools perform lag load-balance** command to manually re-balance ALL weighted per-link-hashed SAPs/interfaces/subscribers on a LAG. The rebalance follows the algorithm as used on a link failure moving SAPs/interfaces/subscribers to different LAG links to minimize SAPs/interfaces/subscribers impacted.

Along with the caveats for standard per-link hashing, the following caveats exist:

- When weighted per-link-hash is deployed on a given LAG, no other methods of hash for subscribers/SAPs/interfaces on that LAG (like service hash or LAG link map profile) should be deployed, since the weighted hash is not able to account for loads placed on LAG links by subscriber/SAPs/interfaces using the other hash methods.
- For the TPSDA model only the 1:1 (subscriber to SAP) model is supported.

This feature will not operate properly if the above conditions are not met.

2.7.4.3 Explicit Per Link Hash Using LAG Link Mapping Profiles

The hashing feature described in this section applies to traffic going over LAG and MC-LAG. LAG link mapping profile feature gives operators full control of which links SAPs/network interface use on a LAG egress and how the traffic is rehashed on a LAG link failure. Some benefits that such functionality provides include:

- Ability to perform management level admission control onto LAG ports thus increasing overall LAG BW utilization and controlling LAG behavior on a port failure.
- Ability to strictly enforce QoS contract on egress for a SAP/network interface or a group of SAPs/network interfaces by forcing it/them to egress over a single port and using **access adapt-qos** link or port-fair mode.

To enable LAG Link Mapping Profile Feature on a given LAG, operators configure one or more of the available LAG link mapping profiles on the LAG and then assign that profile(s) to all or a subset of SAPs and network interfaces as needed. Enabling per LAG link Mapping Profile is allowed on a LAG with services configured, a small outage may take place as result of re-hashing SAP/network interface when a lag profile is assigned to it.

Each LAG link mapping profile allows operators to configure:

- Primary link—defines a port of the LAG to be used by a SAP/network interface when the port is UP. Note that a port cannot be removed from a LAG if it is part of any LAG link profile.
- Secondary link—defines a port of the LAG to be used by a SAP/network interface as a backup when the primary link is not available (not configured or down) and the secondary link is UP.
- Mode of operation when neither primary, nor secondary links are available (not configured or down):
  - **discard** – traffic for a given SAP/network interface will be dropped to protect other SAPs/network interfaces from being impacted by re-hashing these SAPs/network interfaces over remaining active LAG ports.

Note: SAP/network interface status will not be affected when primary and secondary links are unavailable, unless an OAM mechanism that follows the data path hashing on egress is used and will cause a SAP/network interface to go down.

– **per-link-hash** – traffic for a given SAP/network interface will be re-hashed over remaining active ports of a LAG links using per-link-hashing algorithm. This behavior ensures SAP/network interfaces using this profile will be given available resources of other active LAG ports even if that means impacting other SAP/network interfaces on the LAG. The system will use the QoS configuration to provide fairness and priority if congestion is caused by the default-hash recovery.

LAG link mapping profiles, can be enabled on a LAG as long as the following conditions are met:

- LAG **port-type** must be *standard*.
- LAG **access adapt-qos** must be *link* or *port-fair* (for LAGs in **mode** access or hybrid)
- All ports of a LAG on a given router must belong to a single sub-group.
- System must be at minimum in chassis mode *d* (**configure system chassis-mode**)
- Access adapt-qos mode is distribute include-egr-hash-cfg.

LAG link mapping profile can co-exist with any-other hashing used over a given LAG (for example, per flow hashing or per-link-hashing). SAPs/network interfaces that have no link mapping profile configured will be subject to LAG hashing, while SAPs/network interfaces that have configured LAG profile assigned will be subject to LAG link mapping behavior, which is described above.

2.7.4.4 Consistent Per Service Hashing

The hashing feature described in this section applies to traffic going over LAG, Ethernet tunnels (eth-tunnel) in loadsharing mode, or CCAG load balancing for VSM redundancy. The feature does not apply to ECMP.

Per-service-hashing was introduced to ensure consistent forwarding of packets belonging to one service. The feature can be enabled using the [**no**] **per-service-hashing** configuration option under **config>service>epipe** and **config>service>vpls**, valid for Epipe, VPLS, PBB Epipe, IVPLS and BVPLS. Chassis mode D is required for the 7450 ESS and 7750 SR.

The following behavior applies to the usage of the [no] per-service-hashing option.

- The setting of the PBB Epipe/I-VPLS children dictates the hashing behavior of the traffic destined to or sourced from an Epipe/I-VPLS endpoint (PW/SAP).

- The setting of the B-VPLS parent dictates the hashing behavior only for transit traffic through the B-VPLS instance (not destined to or sourced from a local I-VPLS/Epipe children).

The following algorithm describes the hash-key used for hashing when the new option is enabled:

- If the packet is PBB encapsulated (contains an I-TAG ethertype) at the ingress side and enters a B-VPLS service, use the ISID value from the I-TAG. For PBB encapsulated traffic entering other service types, use the related service ID.
- If the packet is not PBB encapsulated at the ingress side
  - For regular (non-PBB) VPLS and EPIPE services, use the related service ID
  - If the packet is originated from an ingress IVPLS or PBB Epipe SAP
    - If there is an ISID configured use the related ISID value
    - If there is no ISID configured use the related service ID
  - For BVPLS transit traffic use the related flood list id
    - Transit traffic is the traffic going between BVPLS endpoints
    - An example of non-PBB transit traffic in BVPLS is the OAM traffic
- The above rules apply regardless of traffic type
  - Unicast, BUM flooded without MMRP or with MMRP, IGMP snooped

Operators may sometimes require the capability to query the system for the link in a LAG or Ethernet tunnel that is currently assigned to a given service-id or ISID. This capability is provided using the **tools>dump>map-to-phy-port** {**ccag** *ccag-id* | **lag** *lag-id* | **eth-tunnel** *tunnel-index*} {**isid** *isid* [**end-isid** *isid*] | **service** *servid-id* | *svc-name* [**end-service** *service-id* | *syc-name*]} [**summary**] command.

A sample usage is as follows:

```
A:Dut-B# tools dump map-to-phy-port lag 11 service 1

ServiceId  ServiceName   ServiceType     Hashing                  Physical Link
---------- ------------- --------------  -----------------------  -------------
1                        i-vpls          per-service(if enabled)  3/2/8

A:Dut-B# tools dump map-to-phy-port lag 11 isid 1

ISID     Hashing                  Physical Link
-------- -----------------------  -------------
1        per-service(if enabled)  3/2/8

A:Dut-B# tools dump map-to-phy-port lag 11 isid 1 end-isid 4
ISID     Hashing                  Physical Link
-------- -----------------------  -------------
1        per-service(if enabled)  3/2/8
2        per-service(if enabled)  3/2/7
3        per-service(if enabled)  1/2/2
```

```
4        per-service(if enabled)  1/2/3
```

2.7.4.5 ESM – LAG Hashing per Vport

2.7.4.5.1 Background

Vport is a router BNG representation of a remote traffic aggregation point in the access network. It is a level in the hierarchical QoS model implemented within the BNG that requires QoS treatment.

When the BNG is connected to access network via LAG, a VPort construct within the BNG is instantiated per member link on that LAG. Each instance of the Vport in such a configuration receives the entire amount of configured bandwidth. When traffic is sprayed in a per-subscriber fashion over member links in an LAG without awareness of the Vport, it can lead to packet drops on one member link irrespective of the relative traffic priority on another LAG member link in the same Vport. The reason is that multiple Vport instances of the same Vport on different LAG member links are not aware of each other.

With a small number of subscribers per Vport and a great variation in bandwidth service offering per subscriber (from mbps to gbps), there is a great chance that the load distribution between the member links will be heavily unbalanced. For example, if the lag consists of two member links on the same IOM, three 1Gbps high priority subscribers can saturate the 2 Gbps Vport bandwidth on one member link of the LAG. And all the while, twenty low priority 10 Mbps subscribers that are using the other link are significantly under-utilizing available bandwidth on the corresponding Vport.

To remedy this situation, all traffic flowing through the same Vport must be hashed to a single LAG member link. This way, the traffic treatment will be controlled by a single Vport instance, and achieve a desired behavior where low priority 10 Mbps subscribers traffic will be affected before any traffic from the high priority subscribers.

2.7.4.5.2 Hashing per Vport

Hashing traffic per Vport ensures that the traffic on the same PON (or DSLAM) traverse the same Vport, and therefore, it is the same member link that this Vport is associated with. The Vport instances of the same Vport on another member links are irrelevant for QoS treatment.

The Vport for Nokia routers is referenced via inter-dest-string, which can be returned via RADIUS. For this reason, the terms hashing per inter-dest-string or hashing per Vport can be interchangeably used.

If the subscriber is associated with a Vport, hashing will be automatically performed per inter-dest-string. In case that no such association exists, hashing will default to per-subscriber hashing.

In certain cases, S-vlan tag can represent Vport. In such a case, per S-vlan hashing is desired. This can be implicitly achieved by the following configuration:

```
configure
  subscr-mgmt
    msap-policy <name>
      sub-sla-mgmt
  def-inter-dest-id use-top-queue

configure
  port <port-id>
    ethernet
      access
        egress
    vport <name>
      host-match dest <s-tag>
```

Through this CLI hierarchy, S-tag is implicitly associated with the inter-dest-string and consequently with the Vport.

2.7.4.5.3 Link Placement

This feature requires that all active member ports in a LAG reside on the same forwarding complex (IOM/IMM).

2.7.4.5.4 Multicast Consideration

Multicast traffic that is directly replicated per subscriber follows the same hashing algorithm as the rests of the subscribers (per inter-dest-string hashing).

Multicast traffic that is redirected to a regular Layer 3 interface outside of the ESM will be hashed per destination group (or IP address).

2.7.4.5.5 VPLS and Capture SAP Considerations

VPLS environment in conjunction with ESM allows hashing based on destination mac address. This is achieved through the following CLI hierarchy:

```
configure
  service vpls <vpls-id>
    sap lag-<id>
sub-sla-mgmt
  mac-da-hashing
```

Note that this is only applicable to L2 ESM. In the case where this is configured and Vport hashing is required, the following order of evaluation must be executed:

1. Hashing based on subscriber-id or inter-dest-string
2. If configured, mac-da-hashing

Hashing per inter-dest-string will win if a <Vport, subscriber> association is available at the same time as the mac-da-hashing is configured.

The Mac-da-hashing mechanism cannot transition from a capture SAP to a derived MSAP.

2.7.4.5.6 LSR Default Hash Routine— Label-Only Hash Option

The following is the behavior of ECMP and LAG hashing at an LSR in the existing implementation. These are performed in two rounds.

First the ECMP hash. It consists of an initial hash based on the source port/system IP address. Each label in the stack is then hashed separately with the result of the previous hash, up to a maximum of five labels. The net result will be used to select which LDP FEC next-hop to send the packet to using a modulo operation of the net result with the number of next-hops. If there is a single next-hop for the LDP FEC, or if the packet is received on an RSVP LSP ILM, then a single next-hop exists.

This same net result will feed to a second round of hashing if there is LAG on the egress port where the selected LDP or RSVP LSP has its NHLFE programmed.

2.7.4.5.7 LSR Label-IP Hash Option Enabled

In the first hash round for ECMP, the algorithm will parse down the label stack and once it hits the bottom it checks the next nibble. If the nibble value is 4 then it will assume it is an IPv4 packet. If the nibble value is 6 then it will assume it is an IPv6 packet. In both cases, the result of the label hash is fed into another hash along with source and destination address fields in the IP packet's header. Otherwise, it will just use the label stack hash already calculated for the ECMP path selection.

If there are more than five labels in the stack, then the algorithm will also use the result of the label hash for the ECMP path selection.

The second round of hashing for LAG re-uses the net result of the first round of hashing. This means IPv6 packets will continue to be hashed on label stack only.

2.7.4.5.8 LSR IP-Only Hash Option Enabled

This option behaves like the label-IP hash option except that when the algorithm reached the bottom of the label stack in the ECMP round and finds an IP packet, it throws the outcome of the label hash and only uses the source and destination address fields in the IP packet's header.

2.7.5 LAG Hold Down Timers

Operators can configure multiple hold down timers that allow control how quickly LAG responds to operational port state changes. The following timers are supported:

1. Port-level hold-time up/down timer
   This optional timer allows operator to control delay for adding/removing a port from LAG when the port comes UP/goes DOWN. Each LAG port runs the same value of the timer, configured on the primary LAG link. See Port Link Dampening description in Port Features section of this guide for more details on this timer.
2. Sub-group-level hold-time timer
   This optional timer allows operator to control delay for a switch to a new candidate sub-group selected by LAG sub-group selection algorithm from the current, operationally UP sub-group. The timer can also be configured to never expire, which prevents a switch from operationally up sub-group to a new candidate sub-group (manual switchover is possible using tools perform force lag command). Note that, if the port link dampening is deployed, the port level timer must expire before the sub-group-selection takes place and this timer is started. Sub-group-level hold-down timer is supported with LAGs running LACP only.

3. LAG-level hold-time down timer
   This optional timer allows operator to control delay for declaring a LAG operationally down when the available links fall below the required port/BW minimum. The timer is recommended for LAG connecting to MC-LAG systems. The timer prevents a LAG going down when MC-LAG switchover executes break-before-make switch. Note that, if the port link dampening is deployed, the port level timer must expire before the LAG operational status is processed and this timer is started.

2.7.6 BFD over LAG Links

The router supports the application of BFD to monitor individual LAG link members to speed up the detection of link failures. When BFD is associated with an Ethernet LAG, BFD sessions are setup over each link member, and are referred to as micro-BFD sessions. A link is not operational in the associated LAG until the associated micro-BFD session is fully established. In addition, the link member is removed from the operational state in the LAG if the BFD session fails.

When configuring the local and remote IP address for the BFD over LAG link sessions, the **local-ip** parameter should always match an IP address associated with the IP interface to which this LAG is bound. In addition, the **remote-ip** parameter should match an IP address on the remote system and should also be in the same subnet as the **local-ip** address. If the LAG bundle is re-associated with a different IP interface, the **local-ip** and **remote-ip** parameters should be modified to match the new IP subnet. The **local-ip** and **remote-ip** values do not have to match in the case of hybrid mode, q-tag or QInQ tagging.

2.7.7 Mixed Port-Speed LAG Support

Nokia routers support mixing different speed member ports in a single LAG. The LAG must be configured explicitly to allow mixed port-speed operation through the port-weight-speed command. The port-weight-speed defines both the lowest port speed for a member port in that LAG and the type of higher speed ports allowed to be mixed in the same LAG. For example, port-weight-speed 10 defines the minimum member port speed of 10GE and allows addition of any port that has a speed, which is a multiple of 10GE as long as the mix is supported by a given release, refer to specific Release Notes. Any LAG can be configured to support mixed port-speed operation.

For mixed port-speed LAGs:

- Both LACP and non-LACP configurations are supported. With LACP enabled, LACP is unaware of physical port differences.
- QoS is distributed proportionally to port-speed, unless explicitly configured not to do so (see internal-scheduler-weight-mode)
- User data traffic is hashed proportionally to port speed when any per-flow hash is deployed.
- CPM-originated OAM control traffic that requires per LAG hashing is hashed per physical port.
- Nokia recommends that operators use **weight-threshold** instead of **port-threshold** to control LAG operational status. For example, when 10GE and 100GE ports are mixed in a LAG, each 10GE port will have a weight of 1, while each 100GE port will have a weight of 10.

  Note that the weight-threshold can also be used for LAGs not in mixed port-speed mode to allow common operational model (each port has a weight of 1 to mimic **port-threshold** and related configuration).
- Nokia recommends that operators use weight-based thresholds for other system configurations that react to operational change of LAG member ports, like MCAC (see **use-lag-port-weight**) and VRRP (see **weight-down**).
- When sub-groups are used, the following behavior should be noted for selection criteria:
  - highest-count – continues to operate on physical link counts. Therefore, a sub-group with lower speed links will be selected even if its total bandwidth is lower. For example: a 4 * 10GE subgroup will be selected over a 100GE + 1 GE sub-group).
  - highest-weight – continues to operate on operator-configured priorities. Therefore, it is expected that configured weights take into account the proportional bandwidth difference between member ports to achieve the desired behavior. For example, to favor sub-groups with higher bandwidth capacity but lower link count in a 10GE/100GE LAG, 100GE ports need to have their priority set to a value that is at least 10 times that of the 10GE ports priority value.
  - best-port – continues to operate on operator-configured priorities. Therefore, it is expected that the configured weights will take into account proportional bandwidth difference between member ports to achieve the desired behavior.

Operators can add higher speed member ports to an existing LAG in service when all ports of the LAG have the speed as selected by port-weight-speed or when port-weight-speed is disabled (non-mixed port-speed operation). To do so, first port-based thresholds related to that LAG should be switched to weight-based thresholds, and then port-speed-weight should be set to the port speed of the existing member ports. After that, operators can add higher speed ports adjusting weight-based thresholds as required.

Similarly, operators can disable mixed port-speed operation in service if all ports have the same port speed and port-weight-speed equals to member ports' speed. Note that weight-based thresholds may remain to be in use for the LAG.

Feature limitations:

- requires chassis mode D
- supported on network, access, and hybrid mode LAGs, including MC-LAG
- supported for standard-port LAGs and on 10GE WAN/100GE LAN port combinations
- PIM lag-usage-optimization is not supported and must not be configured
- LAG member links must have the default configuration for **config port ethernet egress-rate/ingress-rate**
- not supported on the 7450 ESS-6V
- not supported for ESM
- not supported with weighted per-link-hash

2.7.7.1 LAG Upgrade

Migrating LAGs to higher speed links involves using mixed-speed LAGs initially, and later removing lower speed links. However, a consequence is that the lower speed links in the mixed-speed LAG set the member link limit. Even after all lower speed links are removed, the higher-speed links maintain a higher weight and this limits how many physical links that a mixed-port speed LAG can include.

LAG upgrade support allows migration from 1GE to 10GE to 40/100GE without removing all the ports from the LAG.

LAG upgrade support requires turning on mixed-speed LAG and adding higher speed links to an existing LAG. Once the lower speed links are removed, the **no-port-weight-speed** command is used to turn off mixed-speed LAG and to re-calibrate the number of logical links. Figure 30 illustrates the steps in this scenario.

Figure 31 **LAG Upgrade (Mixed Speed LAGs)**

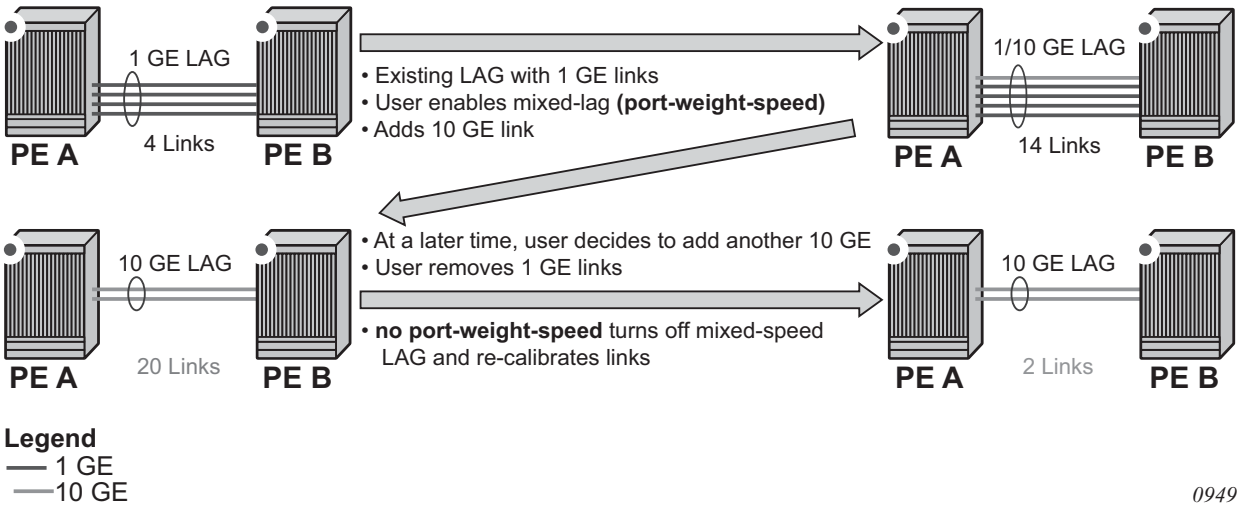

If a 10GE or 100GE port is allocated as 10 links, it would be converted to one link per port if all the ports in the LAG are the same speed.

2.7.8 Multi-Chassis LAG

This section describes the Multi-Chassis LAG (MC-LAG) concept. MC-LAG is an extension of a LAG concept that provides node-level redundancy in addition to link-level redundancy provided by “regular LAG”.

Typically, MC-LAG is deployed in a network-wide scenario providing redundant connection between different end points. The whole scenario is then built by combination of different mechanisms (for example, MC-LAG and redundant pseudowire to provide e2e redundant p2p connection or dual homing of DSLAMs in Layer 2/3 TPSDA).

2.7.8.1 Overview

Multi-chassis LAG is a method of providing redundant Layer 2/3 access connectivity that extends beyond link level protection by allowing two systems to share a common LAG end point.

The multi-service access node (MSAN) node is connected with multiple links towards a redundant pair of Layer 2/3 aggregation nodes such that both link and node level redundancy, are provided. By using a multi-chassis LAG protocol, the paired Layer 2/3 aggregation nodes (referred to as redundant-pair) appears to be a single node utilizing LACP towards the access node. The multi-chassis LAG protocol between redundant-pair ensures a synchronized forwarding plane to/from the access node and is used to synchronize the link state information between the redundant-pair nodes such that proper LACP messaging is provided to the access node from both redundant-pair nodes.

In order to ensure SLAs and deterministic forwarding characteristics between the access and the redundant-pair node, the multi-chassis LAG function provides an active/standby operation towards/from the access node. LACP is used to manage the available LAG links into active and standby states such that only links from 1 aggregation node are active at a time to/from the access node.

Alternatively, when access nodes does not support LACP, the **power-off** option can be used to enforce active/standby operation. In this case, the standby ports are **trx_disabled** (power off transmitter) to prevent usage of the lag member by the access-node.Characteristics related to MC are:

- Selection of the common system ID, system-priority and administrative-key are used in LACP messages so partner systems consider all links as the part of the same LAG.
- Extension of selection algorithm in order to allow selection of active sub-group.
  - The sub-group definition in LAG context is still local to the single box, meaning that even if sub-groups configured on two different systems have the same sub-group-id they are still considered as two separate subgroups within given LAG.
  - Multiple sub-groups per PE in a MC-LAG is supported.
  - In case there is a tie in the selection algorithm, for example, two sub-groups with identical aggregate weight (or number of active links) the group which is local to the system with lower system LACP priority and LAG system ID is taken.
- Providing inter-chassis communication channel allows inter-chassis communication to support LACP on both system. This communication channel enables the following:
  - Supports connections at the IP level which do not require a direct link between two nodes. The IP address configured at the neighbor system is one of the addresses of the system (interface or loop-back IP address).
  - The communication protocol provides heartbeat mechanism to enhance robustness of the MC-LAG operation and detecting node failures.
  - Support for operator actions on any node that force an operational change.

  - The LAG group-ids do not have to match between neighbor systems. At the same time, there can be multiple LAG groups between the same pair of neighbors.
  - Verification that the physical characteristics, such as speed and auto-negotiation is configured and initiates operator notifications (traps) if errors exist. Consistency of MC-LAG configuration (system-id, administrative-key and system-priority) is provided. Similarly, load-balancing mode of operation must be consistently configured on both nodes.
  - Traffic over the signaling link is encrypted using a user configurable message digest key.
- MC-LAG function provides active/stand-by status to other software applications in order to built a reliable solutions.

Figure 32 and Figure 33 show the different combinations of MC-LAG attachments that are supported. The supported configurations can be sub-divided into following sub-groups:

- Dual-homing to remote PE pairs
  - both end-points attached with MC-LAG
  - one end-point attached
- Dual-homing to local PE pair
  - both end-points attached with MC-LAG
  - one end-point attached with MC-LAG
  - both end-points attached with MC-LAG to two overlapping pairs

Figure 32 **MC-LAG L2 Dual Homing to Remote PE Pairs**

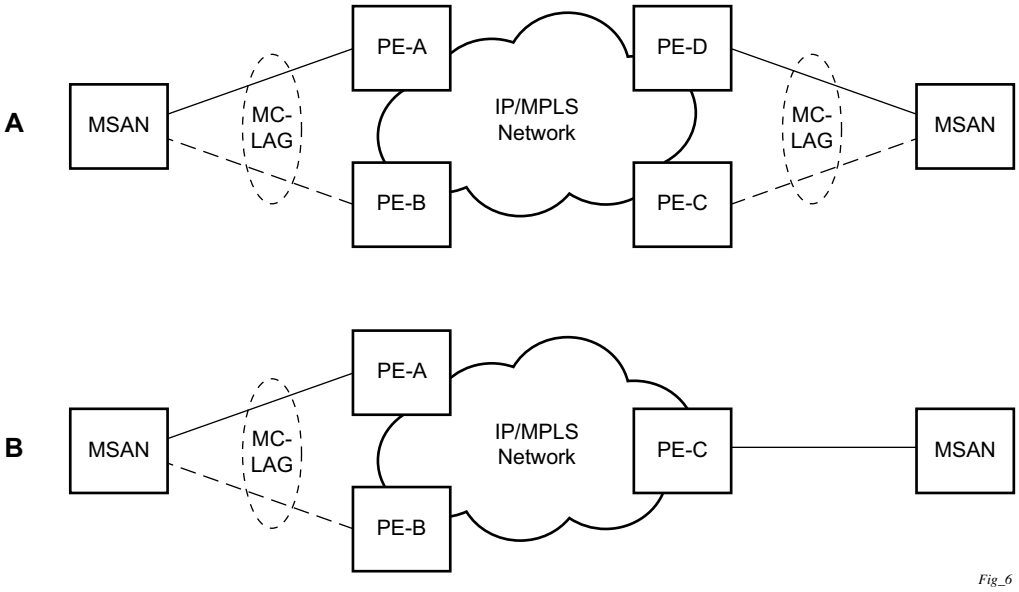

Figure 33 **MC-LAG L2 Dual Homing to Local PE-Pairs**

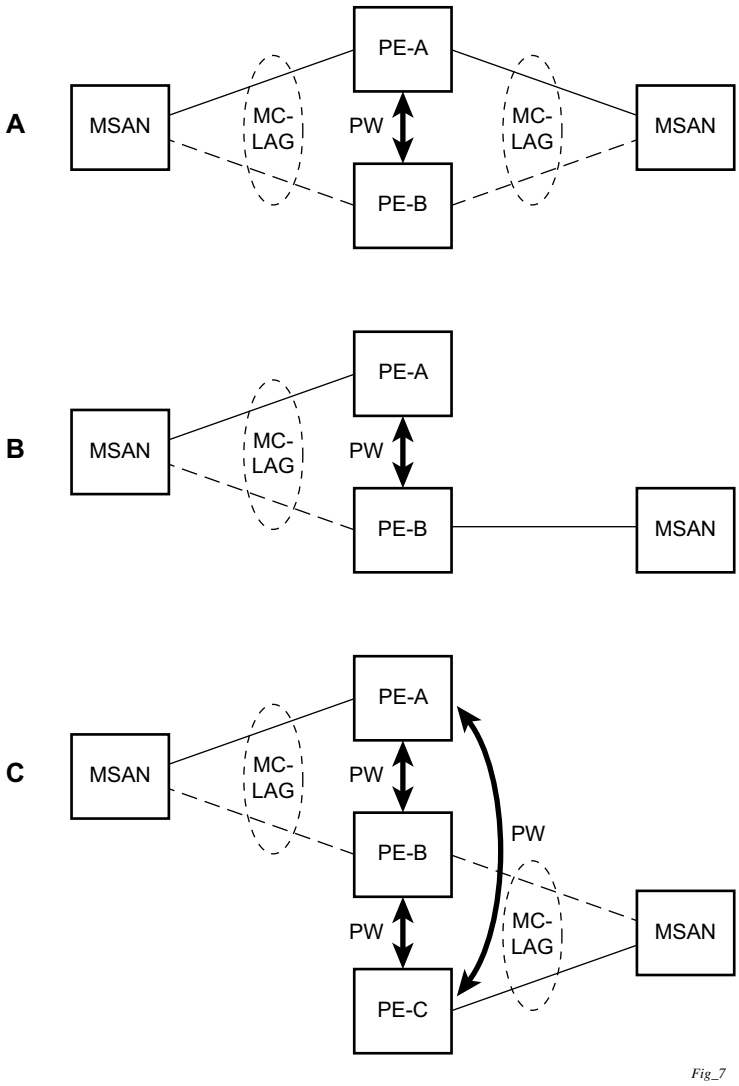

The forwarding behavior of the nodes abide by the following principles. Note that logical destination (actual forwarding decision) is primarily determined by the service (VPLS or VLL) and the principle below applies only if destination or source is based on MC-LAG:

- Packets received from the network will be forwarded to all local active links of the given destination-sap based on conversation hashing. In case there are no local active links, the packets will be cross-connected to inter-chassis pseudowire.

- Packets received from the MC-LAG sap will be forwarded to active destination pseudo-wire or active local links of destination-sap. In case there are no such objects available at the local node, the packets will be cross-connected to inter-chassis pseudowire.

2.7.8.2 MC-LAG and Subscriber Routed Redundancy Protocol (SRRP)

MC-LAG and SRRP enable dual-homed links from any IEEE 802.1ax (formerly 802.3ad) standards-based access device (for example, a IP DSLAM, Ethernet switch or a Video on Demand server) to multiple Layer 2/3 or Layer 3 aggregation nodes. In contrast with slow recovery mechanisms such as Spanning Tree, multi-chassis LAG provides synchronized and stateful redundancy for VPN services or triple play subscribers in the event of the access link or aggregation node failing, with zero impact to end users and their services.

Refer to the Triple Play Services Delivery Guide for information about SRRP.

2.7.8.3 Point-to-Point (p2p) Redundant Connection Across Layer 2/3 VPN Network

Figure 34 shows the connection between two multi-service access nodes (MSANs) across network based on Layer 2/3 VPN pseudo-wires. The connection between MSAN and a pair of PE routers is realized by MC-LAG. From MSAN perspective, redundant pair of PE routers acts as a single partner in LACP negotiation. At any point in time, only one of the routers has an active link(s) in a given LAG. The status of LAG links is reflected in status signaling of pseudo-wires set between all participating PEs. The combination of active and stand-by states across LAG links as well and pseudo-wires give only 1 unique path between pair of MSANs.

Figure 34 **P2P Redundant Connection Through a Layer 2 VPN Network**

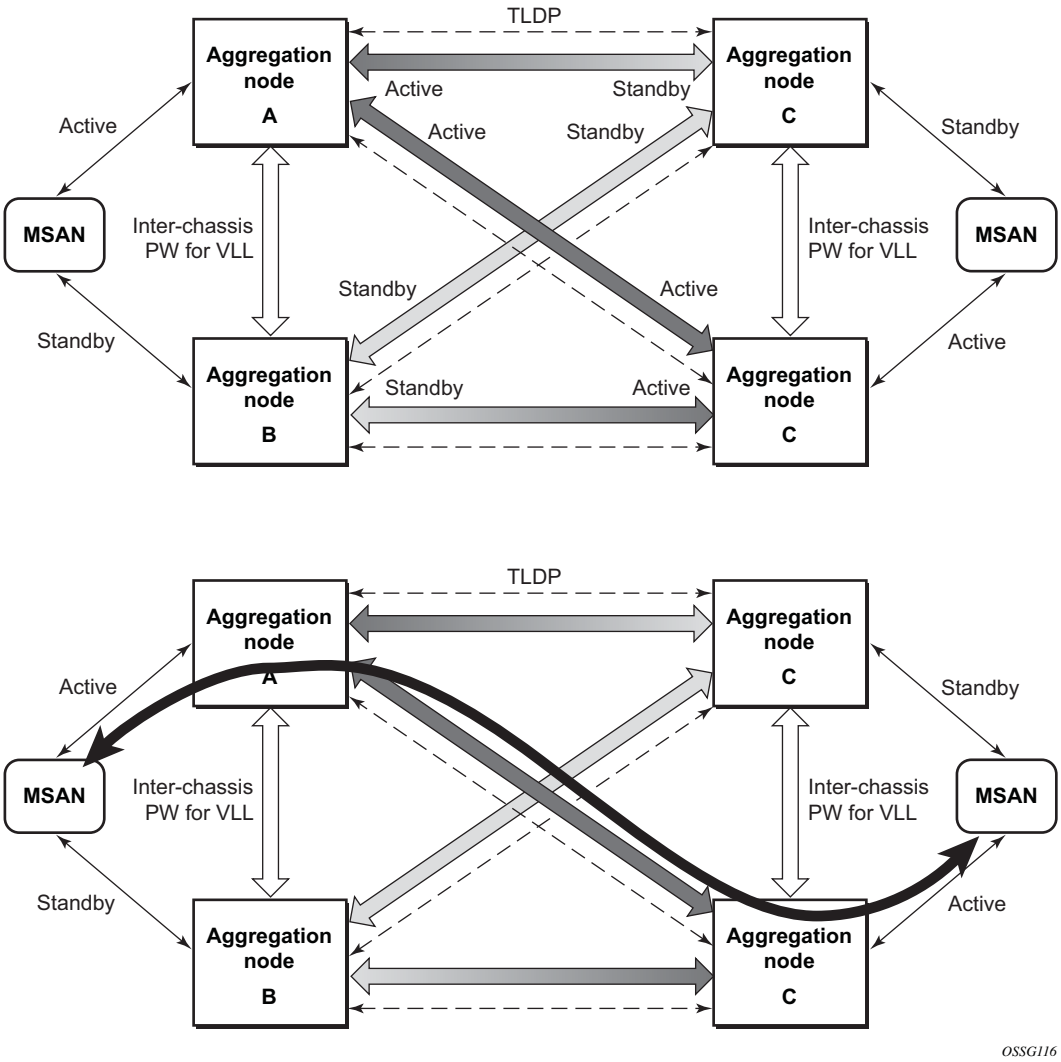

Note that the configuration in Figure 34 shows one particular configuration of VLL connections based on MC-LAG, particularly the VLL connection where two ends (SAPs) are on two different redundant-pairs. In addition to this, other configurations are possible, such as:

- Both ends of the same VLL connections are local to the same redundant-pair.
- One end VLL endpoint is on a redundant-pair the other on single (local or remote) node.

2.7.8.4 DSLAM Dual Homing in Layer 2/3 TPSDA Model

Figure 35 shows a network configuration where DSLAM is dual homed to pair of redundant PEs by using MC-LAG. Inside the aggregation network redundant-pair of PEs is connecting to VPLS service which provides reliable connection to single or pair of Broadband Service Routers (BSRs).

Figure 35 **DSLAM Dual-Homing Using MC-LAG**

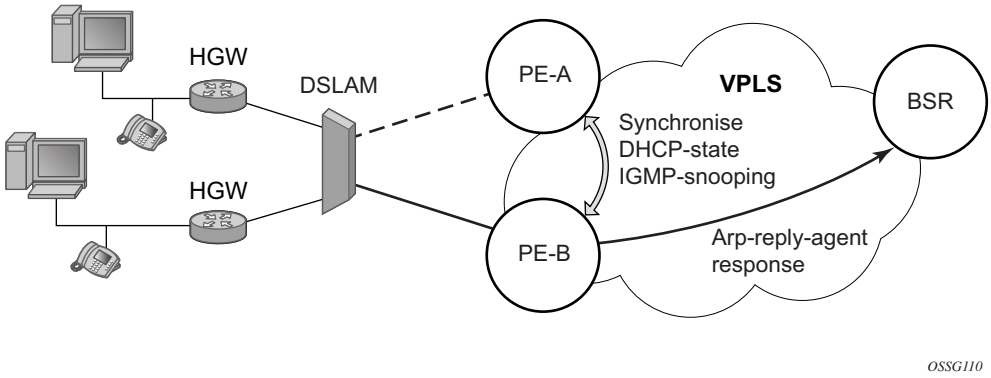

MC-LAG and pseudo-wire connectivity, PE-A and PE-B implement enhanced subscriber management features based on DHCP-snooping and creating dynamic states for every subscriber-host. As in any point of time there is only one PE active, it is necessary to provide the mechanism for synchronizing subscriber-host state-information between active PE (where the state is learned) and stand-by PE. In addition, VPLS core must be aware of active PE in order to forward all subscriber traffic to a PE with an active LAG link. The mechanism for this synchronization is outside of the scope of this document.

2.8 G.8031 Protected Ethernet Tunnels

The Nokia PBB implementation offers the capability to use core Ethernet tunnels compliant with ITU-T G.8031 specification to achieve 50 ms resiliency for failures in a native Ethernet backbone. For further information regarding Ethernet tunnels, see G.8031 Protected Ethernet Tunnels in the 7450 ESS, 7750 SR, and 7950 XRS Services Overview Guide.

2.9 G.8032 Protected Ethernet Rings

Ethernet ring protection switching offers ITU-T G.8032 specification compliance to achieve resiliency for Ethernet Layer 2 networks. Similar to G.8031 linear protection (also called Automatic Protection Switching (APS)), G.8032 (Eth-ring) is also built on Ethernet OAM and often referred to as Ring Automatic Protection Switching (R-APS).

For further information regarding Ethernet rings, see G.8032 Protected Ethernet Rings section in the 7450 ESS, 7750 SR, and 7950 XRS Services Overview Guide.

2.10 Ethernet Port Monitoring

Ethernet ports can record and recognize various medium statistics and errors. There are two main types of errors:

- Frame Based — Frame based errors are counted when the arriving frame has an error that means the frame is invalid. These types of errors are only detectable when frames are presents on the wire.
- Symbol Based — Symbol errors are invalidly encoded symbols on the physical medium. Symbols are always present on an active Ethernet port regardless of the presence of frames.

CRC-Monitor and Symbol-Monitor allows the operator to monitor ingress error conditions on the Ethernet medium and compare these error counts to the thresholds. CRC-Monitor monitors CRC errors. Symbol-Monitor monitors symbol errors. Symbol Error is not supported on all Ethernet ports. Crossing a signal degrade (SD) threshold will cause a log event to be raised. Crossing the configured signal failure (SF) threshold will cause the port to enter an operation state of down. The operator may consider the configuration of other protocols to convey the failure, through timeout conditions.

The error rates are in the form of M*10E-N. The operator has the ability to configure both the threshold (N) and a multiplier (M). By default if the multiplier is not configured the multiplier is 1. As an example, sd-threshold 3 would result in a signal degrade error rate of 1*10E-3 (one error per 1000). Changing the configuration to would sd-threshold 3 multiplier 5 result in a signal degrade rate of 5*10E-3 (5 errors per 1000). The signal degrade value must be a lower error rate than the signal failure threshold. This threshold can be used to provide notification that the port is operating in a degraded but not failed condition. These do not equate to a bit error rate (BER). CRC-Monitor provides a CRC error rate. Symbol-Monitor provides a symbol error rate.

The configured error thresholds are compared to the operator specified sliding window to determine if one or both of the thresholds have been crossed. Statistics are gathered every second. This means that every second the oldest statistics are dropped from the calculation. The default 10 second sliding window means that at the 11th second the oldest 1 second statistical data is dropped and the 11th second is included.

Symbol error crossing differs slightly from CRC based error crossing. The error threshold crossing is calculated based on the window size and the fixed number of symbols that will arrive (ingress) that port during that window. The following configuration is used to demonstrate this concept.

```
config>port>ethernet# info detail
----------------------------------------------
            symbol-monitor
                sd-threshold 5 multiplier 5
                sf-threshold 3 multiplier 5
                no shutdown
            exit

show port 2/1/2 ethernet
===============================================================================
Ethernet Interface
===============================================================================
Description        : 2/1/2
Interface          : 2/1/2                       Oper Speed       : N/A
Link-level         : Ethernet                    Config Speed     : 1 Gbps
Admin State        : down                        Oper Duplex      : N/A
Oper State         : down                        Config Duplex    : full
Physical Link      : No                          MTU              : 9212
Single Fiber Mode  : No                          Min Frame Length : 64 Bytes
IfIndex            : 69271552                    Hold time up     : 0 seconds
Last State Change  : 06/29/2014 05:04:12         Hold time down   : 0 seconds
Last Cleared Time  : N/A                         DDM Events       : Enabled
Phys State Chng Cnt: 0

Configured Mode    : network                     Encap Type       : null
Dot1Q Ethertype    : 0x8100                      QinQ Ethertype   : 0x8100
PBB Ethertype      : 0x88e7
Ing. Pool % Rate   : 100                         Egr. Pool % Rate : 100
Ing. Pool Policy   : n/a
Egr. Pool Policy   : n/a
Net. Egr. Queue Pol: default
Egr. Sched. Pol    : n/a
Auto-negotiate     : true                        MDI/MDX          : unknown
Oper Phy-tx-clock  : not-applicable
Accounting Policy  : None                        Collect-stats    : Disabled
Acct Plcy Eth Phys : None                        Collect Eth Phys : Disabled
Egress Rate        : Default                     Ingress Rate     : Default
Load-balance-algo  : Default                     LACP Tunnel      : Disabled

Down-when-looped   : Disabled                    Keep-alive       : 10
Loop Detected      : False                       Retry            : 120
Use Broadcast Addr : False

Sync. Status Msg.  : Disabled                    Rx Quality Level : N/A
```

```
Tx DUS/DNU         : Disabled                  Tx Quality Level : N/A
SSM Code Type      : sdh

Down On Int. Error : Disabled

CRC Mon SD Thresh  : Disabled                  CRC Mon Window   : 10 seconds
CRC Mon SF Thresh  : Disabled

Sym Mon SD Thresh  : 5*10E-5                   Sym Mon Window   : 10 seconds
Sym Mon SF Thresh  : 5*10E-3                   Tot Sym Mon Errs : 0

EFM OAM            : Disabled                  EFM OAM Link Mon : Disabled

Configured Address : 8c:90:d3:a0:c7:42
Hardware Address   : 8c:90:d3:a0:c7:42

Transceiver Data

Transceiver Status : not-equipped
===============================================================================
Traffic Statistics
===============================================================================
                                                    Input                Output
-------------------------------------------------------------------------------
Octets                                                  0                     0
Packets                                                 0                     0
Errors                                                  0                     0
===============================================================================
===============================================================================
Port Statistics
===============================================================================
                                                    Input                Output
-------------------------------------------------------------------------------
Unicast Packets                                         0                     0
Multicast Packets                                       0                     0
Broadcast Packets                                       0                     0
Discards                                                0                     0
Unknown Proto Discards                                  0
===============================================================================
===============================================================================
Ethernet-like Medium Statistics
===============================================================================
Alignment Errors :                   0  Sngl Collisions  :                   0
FCS Errors       :                   0  Mult Collisions  :                   0
SQE Test Errors  :                   0  Late Collisions  :                   0
CSE              :                   0  Excess Collisns  :                   0
Too long Frames  :                   0  Int MAC Tx Errs  :                   0
Symbol Errors    :                   0  Int MAC Rx Errs  :                   0
In Pause Frames  :                   0  Out Pause Frames :                   0
===============================================================================
```

The above configuration results in an SD threshold of 5*10E-5 (0.00005) and an SF threshold of 5*10E-3 (0.005) over the default 10 second window. If this port is a 1GbE port supporting symbol monitoring then the error rate is compared against 1,250,000,000 symbols (10 seconds worth of symbols on a 1GbE port 125,000,000). If the error count in the current 10 second sliding window is less than 62,500 then the

error rate is below the signal degrade threshold and no action is taken. If the error count is between 62,501 and 6,250,000 then the error rate is above signal degrade but has not breached the signal failure signal threshold and a log event will be raised. If the error count is above 6,250,000 the signal failure threshold is crossed and the port will enter an operation state of down. Consider that this is a very simple example meant to demonstrate the function and not meant to be used as a guide for configuring the various thresholds and window times.

A port is not returned to service automatically when a port enters the failed condition as a result of crossing a signal failure threshold for both CRC-Monitor and Symbol-Monitor. Since the port is operationally down without a physical link error monitoring stops. The operator may enable the port using the **shutdown** and **no shutdown port** commands. Other port transition functions like clearing the MDA or slot, removing the cable, and other physical link transition functions.

2.11 802.3ah OAM

802.3ah Clause 57 (**efm-oam**) defines the Operations, Administration, and Maintenance (OAM) sub-layer, which provides mechanisms useful for monitoring link operation such as remote fault indication and remote loopback control. In general, OAM provides network operators the ability to monitor the health of the network and quickly determine the location of failing links or fault conditions. **efm-oam** described in this clause provides data link layer mechanisms that complement applications that may reside in higher layers.

OAM information is conveyed in slow protocol frames called OAM protocol data units (OAMPDUs). OAMPDUs contain the appropriate control and status information used to monitor, test and troubleshoot OAM-enabled links. OAMPDUs traverse a single link, being passed between peer OAM entities, and as such, are not forwarded by MAC clients (like bridges or switches).

The following **efm-oam** functions are supported:

- **efm-oam** capability discovery
- Active and passive modes
- Remote failure indication — Handling of critical link events (link fault, dying gasp, etc.)
- Loopback — A mechanism is provided to support a data link layer frame-level loopback mode. Both remote and local loopback modes are supported
- **efm-oam** PDU tunneling
- High resolution timer for **efm-oam** in 100ms interval (minimum)

- **efm-oam** link monitoring
- Non-zero Vendor Specific Information Field — The 32-bit field is encoded using the format 00:PP:CC:CC and references TIMETRA-CHASSIS-MIB.
  - 00 — Must be zeroes
  - PP — Platform type based on the installed IOM from tmnxHwEquippedPlatform. Mixed mode deployments may yield different platform values in the same chassis. Since this is IOM-specific, the IOM's unique hardware ID (tmnxCardHwIndex) must be included to retrieve the proper value.
  - CC:CC — Chassis type index value from tmnxChassisType which is indexed in tmnxChassisTypeTable. The table identifies the specific chassis backplane.

  The value 00:00:00:00 is sent for all releases that do not support the non-zero value or are unable to identify the required elements. There is no decoding of the peer or local vendor information fields on the network element. The hexadecimal value is included in the **show port** *port-id* **ethernet efm-oam** output.

When the **efm-oam** protocol fails to negotiate a peer session or encounters a protocol failure following an established session the *Port State* will enter the *Link Up* condition. This port state is used by many protocols to indicate the port is administratively UP and there is physical connectivity but a protocol, such as **efm-oam**, has caused the ports operational state to enter a DOWN state. A reason code has been added to help discern if the **efm-oam** protocol is the underlying reason for the Link Up condition.

```
show port
===============================================================================
Ports on Slot 1
===============================================================================
Port        Admin Link Port    Cfg  Oper LAG/ Port Port Port   C/QS/S/XFP/
Id          State      State   MTU  MTU  Bndl Mode Encp Type   MDIMDX
-------------------------------------------------------------------------------
1/1/1       Down  No   Down    1578 1578    - netw null xcme
1/1/2       Down  No   Down    1578 1578    - netw null xcme
1/1/3       Up    Yes  Link Up 1522 1522    - accs qinq xcme
1/1/4       Down  No   Down    1578 1578    - netw null xcme
1/1/5       Down  No   Down    1578 1578    - netw null xcme
1/1/6       Down  No   Down    1578 1578    - netw null xcme

# show port 1/1/3
===============================================================================
Ethernet Interface
===============================================================================
Description        : 10/100/Gig Ethernet SFP
Interface          : 1/1/3                       Oper Speed       : N/A
Link-level         : Ethernet                    Config Speed     : 1 Gbps
Admin State        : up                          Oper Duplex      : N/A
Oper State         : down                        Config Duplex    : full
Reason Down        : efmOamDown
```

```
Physical Link      : Yes                        MTU              : 1522
Single Fiber Mode  : No                         Min Frame Length : 64 Bytes
IfIndex            : 35749888                   Hold time up     : 0 seconds
Last State Change  : 12/18/2012 15:58:29        Hold time down   : 0 seconds
Last Cleared Time  : N/A                        DDM Events       : Enabled
Phys State Chng Cnt: 1

Configured Mode    : access                     Encap Type       : QinQ
Dot1Q Ethertype    : 0x8100                     QinQ Ethertype   : 0x8100
PBB Ethertype      : 0x88e7
Ing. Pool % Rate   : 100                        Egr. Pool % Rate : 100
Ing. Pool Policy   : n/a
Egr. Pool Policy   : n/a
Net. Egr. Queue Pol: default
Egr. Sched. Pol    : n/a
Auto-negotiate     : true                       MDI/MDX          : unknown
Oper Phy-tx-clock  : not-applicable
Accounting Policy  : None                       Collect-stats    : Disabled
Acct Plcy Eth Phys : None                       Collect Eth Phys : Disabled
Egress Rate        : Default                    Ingress Rate     : Default
Load-balance-algo  : Default                    LACP Tunnel      : Disabled

Down-when-looped   : Disabled                   Keep-alive       : 10
Loop Detected      : False                      Retry            : 120
Use Broadcast Addr : False

Sync. Status Msg.  : Disabled                   Rx Quality Level : N/A
Tx DUS/DNU         : Disabled                   Tx Quality Level : N/A
SSM Code Type      : sdh

Down On Int. Error : Disabled

CRC Mon SD Thresh  : Disabled                   CRC Mon Window   : 10 seconds
CRC Mon SF Thresh  : Disabled

Configured Address : d8:ef:01:01:00:03
Hardware Address   : d8:ef:01:01:00:03
```

The operator also has the opportunity to decouple the **efm-oam** protocol from the port state and operational state. In cases where an operator wants to remove the protocol, monitor the protocol only, migrate, or make changes the **ignore-efm-state** can be configured in the **port>ethernet>efm-oam** context. When the **ignore-efm-state** command is configured on a port the protocol continues as normal. However, any failure in the protocol state machine (discovery, configuration, time-out, loops, etc.) will not impact the port on which the protocol is active and the optional ignore command is configured. There will only be a protocol warning message if there are issues with the protocol. The default behavior when this optional command is not configured means the port state will be affected by any **efm-oam** protocol fault or clear conditions. Adding and removing this optional ignore command will immediately represent the *Port State* and *Oper State* based on the active

configuration. For example, if the **ignore-efm-state** is configured on a port that is exhibiting a protocol error that protocol error does not affect the port state or operational state and there is no *Reason Down* code. If the **ignore-efm-state** is removed from a port with an existing **efm-oam** protocol error, the port will transition to *Link UP*, *Oper Down* with the reason code *efmOamDown*.

2.11.1 OAM Events

The Information OAMPDU is transmitted by each peer at the configured intervals. This OAMPDU performs keepalive and critical notification functions. Various local conditions are conveyed through the setting of the Flags field. The following Critical Link Event defined in IEEE 802.3 Section 57.2.10.1 are supported;

- Link Fault: The PHY has determined a fault has occurred in the receive direction of the local DTE
- Dying Gasp: An unrecoverable local failure condition has occurred
- Critical Event: An unspecified critical event has occurred

The local node can set an unset the various Flag fields based on the operational state of the port, shutdown or activation of the efm-oam protocol or locally raised events. These Flag fields maintain the setting for the continuance of a particular event. Changing port conditions, protocol state or operator intervention may impact the setting of these fields in the Information OAMPDU.

A peer processing the Information OAMPDU can take a configured action when one or more of these Flag fields are set. By default, receiving a set value for any of the Flag fields will cause the local port to enter the previous mentioned *Link Up* port state and an event will be logged. If this default behavior is not desired, the operator may choose to log the event without affecting the local port. This is configurable per Flag field using the options under **config>port>ethernet>efm-oam>peer-rdi-rx**.

2.11.1.1 Link Monitoring

The efm-oam protocol provides the ability to monitor the link for error conditions that may indicate the link is starting to degrade or has reached an error rate that exceeds acceptable threshold.

Link monitoring can be enabled for three types of frame errors; **errored-frame**, **errored-frame-period** and **errored-frame-seconds**. The **errored-frame** monitor is the number of frame errors compared to the threshold over a window of time. The **errored-frame-period** monitor is the number of frame errors compared to the threshold over a window of number of received packets. This window is checked once per second to see if the window parameter has been reached. The **errored-frame-seconds** monitor is the number of errored seconds compared to the threshold over a window of time. An errored second is any second with a single frame error.

An errored frame is counted when any frame is in error as determined by the Ethernet physical layer, including jabbers, fragments, FCS or CRC and runts. This excludes jumbo frames with a byte count higher than 9212, or any frame that is dropped by the phy layer prior to reaching the monitoring function.

Each frame error monitor functions independently of other monitors. Each of monitor configuration includes an optional signal degrade threshold **sd-threshold**, a signal failure threshold **sf-threshold**, a **window** and the ability to communicate failure events to the peer by setting a Flag field in the Information OAMPDU or the generation of the Event Notification OAMPDU, **event-notification**. The parameters are uniquely configurable for each monitor.

A degraded condition is raised when the configured signal degrade **sd-threshold** is reached. This provides a first level log only action indicating a link could become unstable. This event does not affect the port state. The critical failure condition is raised when the configured **sf-threshold** is reached. By default, reaching the signal failure threshold will cause the port to enter the *Link Up* condition unless the local signal failure **local-sf-action** has been modified to a **log-only** action. Signal degrade conditions for a monitor in signal failed state will be suppressed until the signal failure has been cleared.

The initial configuration or the modification of either of the threshold values will take affect in the current window. When a threshold value for a monitor is modified, all active local events for that specific monitor will be cleared. The modification of the threshold acts the same as the **clear** command described later in this section.

Notification to the peer is required to ensure the action taken by the local port detecting the error and its peer are synchronized. If peers do not take the same action then one port may remain fully operational while the other enters a non-operational state. These threshold crossing events do not shutdown the physical link or cause the protocol to enter a non-operational state. The protocol and network element configuration is required to ensure these asymmetrical states do not occur. There are two options for exchanging link and event information between peers; Information OAMPDU and the Event Notification OAMPDU.

As discussed earlier, the Information OAMPDU conveys link information using the Flags field; dying gasp, critical link and link fault. This method of communication has a number of significant advantages over the Event Notification OAMPDU. The Information OAMPDU is sent at every configured **transmit-interval**. This will allow the most recent information to be sent between peers, a critical requirement to avoid asymmetrical forwarding conditions. A second major advantage is interoperability with devices that do not support Link Monitoring and vendor interoperability. This is the lowest common denominator that offers a robust communication to convey link event information. Since the Information OAMPDU is already being sent to maintain the peering relationship this method of communication adds no additional overhead. The l**ocal-sf-action** options allow the dying gasp and critical event flags to be set in the Information OAMPDU when a signal failure threshold is reached. It is suggested that this be used in place of or in conjunction with Event Notification OAMPDU.

Event Notification OAMPDU provides a method to convey very specific information to a peer about various Link Events using Link Event TLVs. A unique Event Notification OAMPDU will be generated for each unique frame error event. The intension is to provide the peer with the Sequence Number, Event Type, Timestamp, and the local information that caused the generation of the OAMPDU; window, threshold, errors and error running total and event running total specific to the port.

- Sequence Number: The unique identification indicating a new event.
- Window: The size of the unique measurement period for the error type. The window is only checked at the end. There is not mid-window checking.
- Threshold: The value of the configured sf-threshold
- Errors: The errors counted in that specific window
- Error Running Total: The number of errors accumulated for that event type since monitoring started and the protocol and port have been operational or a reset function has occurred
- Event Running Total: The number of events accumulated for that event type since the monitoring started and the protocol and port have been operational

By default, the Event Notification OAMPDU is generated by the network element detecting the signal failure event. The Event Notification OAMPDU is sent only when the initial frame event occurs. No Event Notification OAMPDU is sent when the conditions clears. A port that has been operationally affected as a result of a Link Monitoring frame error event must be recovered manually. The typical recovery method is to shutdown the port and no shutdown the port. This will clear all events on the port. Any function that affects the port state, physical fiber pull, soft or hard reset functions, protocol restarts, etc will also clear the all local and remote events on the affected node experiencing the operation. None of these frame errors

recovery actions will cause the generation of the Event Notification OAMPDU. If the chosen recovery action is not otherwise recognized by the peer and the Information OAMPDU Flag fields have not been configured to maintain the current event state, there is a high probability that the ports will have different forwarding states, notwithstanding any higher level protocol verification that may be in place.

A burst of between one and five Event Notification OAMPDU packets may be sent. By default, only a single Event Notification OAMPDU is generated, but this value can be changed under the **local-sf-action** context. An Event Notification OAMPDU will only be processed if the peer had previously advertised the EV capability. The EV capability is an indication the remote peer supports link monitoring and may send the Event Notification OAMPDU.

The network element receiving the Event Notification OAMPDU will use the values contained in the Link event TLVs to determine if the remote node has exceeded the failure threshold. The locally configured action will determine how and if the local port is affected. By default, processing of the Event Notification OAMPDU is log only and does not affect the port state. By default, processing of the Information OAMPDU Flag fields is port affecting. When Event Notification OAMPDU has been configured as port affecting on the receiving node, action is only taken when errors are equal to or above the threshold and the threshold value is not zero. No action is taken when the errors value is less than the threshold or the threshold is zero.

Symbol error, **errored-symbols**, monitoring is also supported but requires specific hardware revisions and the appropriate code release. The symbol monitor differs from than the frame error monitors. Symbols represent a constant load on the Ethernet wire whether service frames are present or not. This means the optional signal degrade threshold **sd-threshold** has an additional purpose when configured as part of the symbol error monitor. When the signal degrade threshold is not configured, the symbol monitor acts similar to the frame error monitors, requiring manual intervention to clear a port that has been operationally affected by the monitor. When the optional signal degrade threshold is configured, it again represents the first level warning. However, it has an additional function as part of the symbol monitor. If a signal failure event has been raised, the configured signal degrade threshold becomes the equivalent to a lowering threshold. If a subsequent window does not reach the configured signal degrade threshold then the previous event will be cleared and the previously affected port will be returned to service without operator intervention. This return to service will automatically clear any previously set Information OAMPDU Flags fields set as a result of the signal failure threshold. The Event Notification OAMPDU will be generated with the symbol error Link TLV that contains an error count less than the threshold. This will indicate to the peer that initial problem has been resolved and the port should be returned to service.

The **errored-symbol** window is a measure of time that is automatically converted into the number of symbols for that specific medium for that period of time. The standard MIB entries “dot3OamErrSymPeriodWindowHi” and “dot3OamErrSymPeriodWindowLo” are marked as read-only instead of read-write. There is now way to directly configure these values. The configuration of the **window** will convert the time and program those two MIB values in an appropriate manner. Both the configured **window** and the number of symbols will be displayed under the **show port** *port-id* **ethernet efm-oam** command.

```
show port 1/1/1 ethernet efm-oam
===============================================================================
Ethernet Oam (802.3ah)
===============================================================================
Admin State        : up
Oper State         : operational
Mode               : active
Pdu Size           : 1518
Config Revision    : 0
Function Support   : LB
Transmit Interval  : 1000 ms
Multiplier         : 5
Hold Time          : 0
Tunneling          : false
Loop Detected      : false
Grace Tx Enable    : true (inactive)
Grace Vendor OUI   : 00:16:4d
Dying Gasp on Reset: true (inactive)
Soft Reset Tx Act  : none
Trigger Fault      : none
Vendor OUI         : 00:16:4d (alu)
Vendor Info        : 00:01:00:02
Peer Mac Address   : d8:1c:01:02:00:01
Peer Vendor OUI    : 00:16:4d (alu)
Peer Vendor Info   : 00:01:00:02
Peer Mode          : active
Peer Pdu Size      : 1518
Peer Cfg Revision  : 0
Peer Support       : LB
Peer Grace Rx      : false
Loopback State     : None
Loopback Ignore Rx : Ignore
Ignore Efm State   : false
Link Monitoring    : disabled
Peer RDI Rx
  Critical Event   : out-of-service
  Dying Gasp       : out-of-service
  Link Fault       : out-of-service
  Event Notify     : log-only
Local SF Action                         Discovery
  Event Burst      : 1                    Ad Link Mon Cap  : yes
  Port Action      : out-of-service
  Dying Gasp       : disabled
  Critical Event   : disabled
Errored Frame                           Errored Frame Period
  Enabled          : no                   Enabled          : no
  Event Notify     : enabled              Event Notify     : enabled
  SF Threshold     : 1                    SF Threshold     : 1
```

```
  SD Threshold     : disabled (0)         SD Threshold     : disabled (0)
  Window           : 10 ds                Window           : 1488095 frames
Errored Symbol Period                   Errored Frame Seconds Summary
  Enabled          : no                   Enabled          : no
  Event Notify     : enabled              Event Notify     : enabled
  SF Threshold     : 1                    SF Threshold     : 1
  SD Threshold     : disabled (0)         SD Threshold     : disabled (0)
  Window (time)    : 10 ds                Window           : 600 ds
  Window (symbols) : 125000000
===============================================================================
Active Failure Ethernet OAM Event Logs
===============================================================================
Number of Logs : 0
===============================================================================
===============================================================================
Ethernet Oam Statistics
===============================================================================
                                                    Input                Output
-------------------------------------------------------------------------------
Information                                        238522                238522
Loopback Control                                        0                     0
Unique Event Notify                                     0                     0
Duplicate Event Notify                                  0                     0
Unsupported Codes                                       0                     0
Frames Lost                                                                   0
===============================================================================
```

A **clear** command “**clear port** *port-id* **ethernet efm-oam events [local | remote]**” has been added to clear port affecting events on the local node on which the command is issued. When the optional [**local | remote**] options are omitted, both local and remote events will be cleared for the specified port. This command is not specific to the link monitors as it clears all active events. When local events are cleared, all previously set Information OAMPDU Flag fields will be cleared regardless of the cause the event that set the Flag field.

In the case of symbol errors only, if Event Notification OAMPDU is enabled for symbol errors and a local symbol error signal failure event exists at the time of the clear, the Event Notification OAMPDU will be generate with an error count of zero and the threshold value reflecting the local signal failure threshold. The fact the error values is lower than threshold value indicates the local node is not in a signal failed state. The Event Notification OAMPDU is not generated in the case where the clear command is used to clear local frame error events. This is because frame error event monitors will only act on an Event Notification OAMPDU when the error value is higher than the threshold value, a lower value is ignored. As stated previously, there is no automatic return to service for frame errors.

If the clear command is used to clear remote events, events conveyed to the local node by the peer, no notification is generated to the peer to indicate a clear function has been performed. Since the Event Notification OAMPDU is only sent when the initial event was raised, there is no further Event Notification and blackholes can result. If the Information OAMPDU Flag fields are used to ensure a constant refresh of information, the remote error will be reinstated as soon as the next Information OAMPDU arrives with the appropriate Flag field set.

Local and remote efm-oam port events are stored in the efm-oam event logs. These logs maintain and display active and cleared signal failure degrade events. These events are interacting with the efm-oam protocol. This logging is different than the time stamped events for information logging purposes included with the system log. To view these events, the **event-log** option has been added to the s**how port** *port-id* **ethernet efm-oam** command. This includes the location, the event type, the counter information or the decoded Network Event TLV information, and if the port has been affected by this active event. A maximum of 12 port events will be retained. The first three indexes are reserved for the three Information Flag fields, dying gasp, critical link, and link fault. The other nine indexes will maintain the current state for the various error monitors in a most recent behavior and events can wrap the indexes, dropping the oldest event.

In mixed environments where Link Monitoring is supported on one peer but not the other the following behavior is normal, assuming the Information OAMPDU has been enabled to convey the monitor fault event. The arriving Flag field fault will trigger the efm-oam protocol on the receiving unsupportive node to move from operational to “send local and remote”. The protocol on the supportive node that set the Flag field to convey the fault will enter the “send local and remote ok” state. The supportive node will maintain the Flag field setting until the condition has cleared. The protocol will recover to the operational state once the original event has cleared; assuming no other fault on the port is preventing the negotiation from progressing. If both nodes were supportive of the Link Monitoring process, the protocol would remained operational.

In summary, Link monitors can be configured for frame and symbol monitors (specific hardware only). By default, Link Monitoring and all monitors are shutdown. When the Link Monitoring function is enabled, the capability (EV) will be advertised. When a monitor is enabled, a default window size and a default signal failure threshold are activated. The local action for a signal failure threshold event is to shutdown the local port. Notification will be sent to the peer using the Event Notification OAMPDU. By default, the remote peer will not take any port action for the Event Notification OAMPDU. The reception will only be logged. It is suggested the operator evaluate the various defaults and configure the **local-sf-action** to set one of the Flag fields in the Information OAMPDU using the **info-notifications** command options when fault notification to a peer is required. Vendor specific TLVs and vendors specific OAMPDUs are just that, specific to that vendor. Non-ALU vendor specific information will not be processed.

2.11.1.1.1 Capability Advertising

A supported capability, sometimes requiring activation, will be advertised to the peer. The EV capability is advertisement when Link Monitoring is active on the port. This can be disabled using the optional command **no link-monitoring** under the **config>port>ethernet>efm-oam>discovery>advertise-capabilities**.

2.11.2 Remote Loopback

EFM OAM provides a link-layer frame loopback mode that can be remotely controlled.

To initiate remote loopback, the local EFM OAM client sends a loopback control OAM PDU by enabling the OAM remote-loopback command. After receiving the loopback control OAM PDU, the remote OAM client puts the remote port into local loopback mode.

To exit remote loopback, the local EFM OAM client sends a loopback control OAM PDU by disabling the OAM remote-loopback command. After receiving the loopback control OAM PDU, the remote OAM client puts the port back into normal forwarding mode.

Note that during remote loopback test operation, all frames except EFM OAM PDUs are dropped at the local port for the receive direction, where remote loopback is enabled. If local loopback is enabled, then all frames except EFM OAM PDUs are dropped at the local port for both the receive and transmit directions. This behavior may result in many protocols (such as STP or LAG) resetting their state machines.

When a port is in loopback mode, service mirroring will not work if the port is a mirror-source or a mirror-destination.

2.11.3 802.3ah OAM PDU Tunneling for Epipe Service

Nokia routers support 802.3ah. Customers who subscribe to Epipe service treat the Epipe as a wire, so they demand the ability to run 802.3ah between their devices which are located at each end of the Epipe.

This feature only applies to port-based Epipe SAPs because 802.3ah runs at port level not VLAN level. Hence, such ports must be configured as null encapsulated SAPs.

When OAM PDU tunneling is enabled, 802.3ah OAM PDUs received at one end of an Epipe are forwarded through the Epipe. 802.3ah can run between devices that are located at each end of the Epipe. When OAM PDU tunneling is disabled (by default), OAM PDUs are dropped or processed locally according to the **efm-oam** configuration (**shutdown** or **no shutdown**).

Note that by enabling 802.3ah for a specific port and enabling OAM PDU tunneling for the same port are mutually exclusive. Enforcement is performed at the CLI level.

2.11.3.1 802.3ah Grace Announcement

Support for vendor-specific soft reset graceful recovery has been added to the SR OS implementation of the EFM-OAM protocol. This is configured using the **grace-tx-enable** command under the **config**>**system**>**ethernet**>**efm-oam** and the **config**>**port**>**ethernet**>**efm-oam** contexts. This feature is not enabled by default. When this functionality is enabled, the EFM-OAM protocol does not enter a non-operational state when both nodes acknowledge the grace function. The ports associated with the hardware that has successfully executed the soft reset will clear all local and remote events. The peer that acknowledges the graceful restart procedure for EFM-OAM will clear all remote events that it received from the peer that performed the soft reset. The local events will not be cleared on the peer that has not undergone soft reset. The Information OAM PDU Flag fields are critical in propagating the local event to the peer. The Event Notification OAM PDU will not be sent because it is only sent when the event is initially raised.

A vendor-specific Grace TLV will be included in the Information PDU generated as part of the 802.3ah OAM protocol when a network element undergoes an ISSU function. Nodes that support the Soft Rest messaging functions will allow the local node to generate the grace TLV.

The grace TLV is used to inform a remote peer that the negotiated interval and multiplier should be ignored and the new 900s timeout interval should be used to timeout the session. The peer receiving the Grace TLV must be able to parse and process the vendor specific messaging.

The new command **grace-tx-enable** has been introduced to enable this functionality. This command exists at two levels of the hierarchy, system level and port level. By default this functionality is enabled on the port. At the system level this command defaults to disabled. In order to enable this functionality both the port and the system commands must be enabled. If either is not enabled then the combination

will not allow those ports to generate the vendor specific Grace TLV. This functionality must be enabled at both the system and port level prior to the ISSU or soft reset function. If this is enabled during a soft reset or after the ISSU function is already in progress it will have no affect during that window. Both Passive and Active 802.3ah OAM peers can generate the Grace TVL as part of the informational PDU.

There is no command to enable this on the receiving node. As long as the receiver understands and can parse the Grace TLV it will enter the grace mode of operation.

The basic protocol flow below helps demonstrate the interaction between passive-active and active-active peer combinations supporting the Grace TLV. In the first diagram the passive node is entering an ISSU on a node that supports soft reset capabilities.

In Figure 36 and Figure 37, the Active node is experiencing the ISSU function on a node that supports soft reset capabilities.

Figure 36 **Grace TLV Passive Node with Soft Reset**

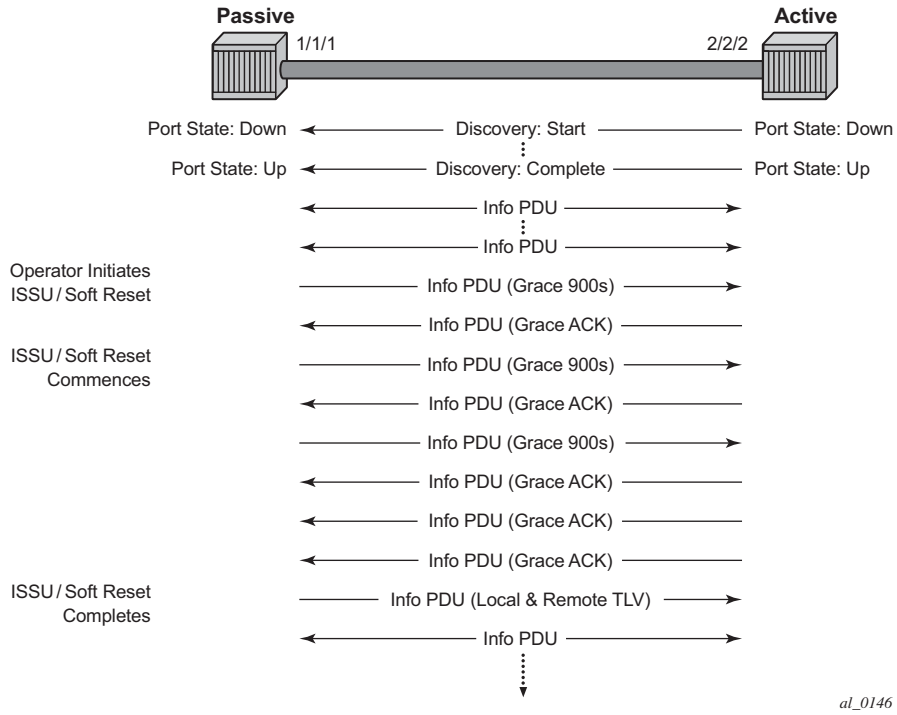

Figure 37 **Grace TLV Active Node with Soft Reset**

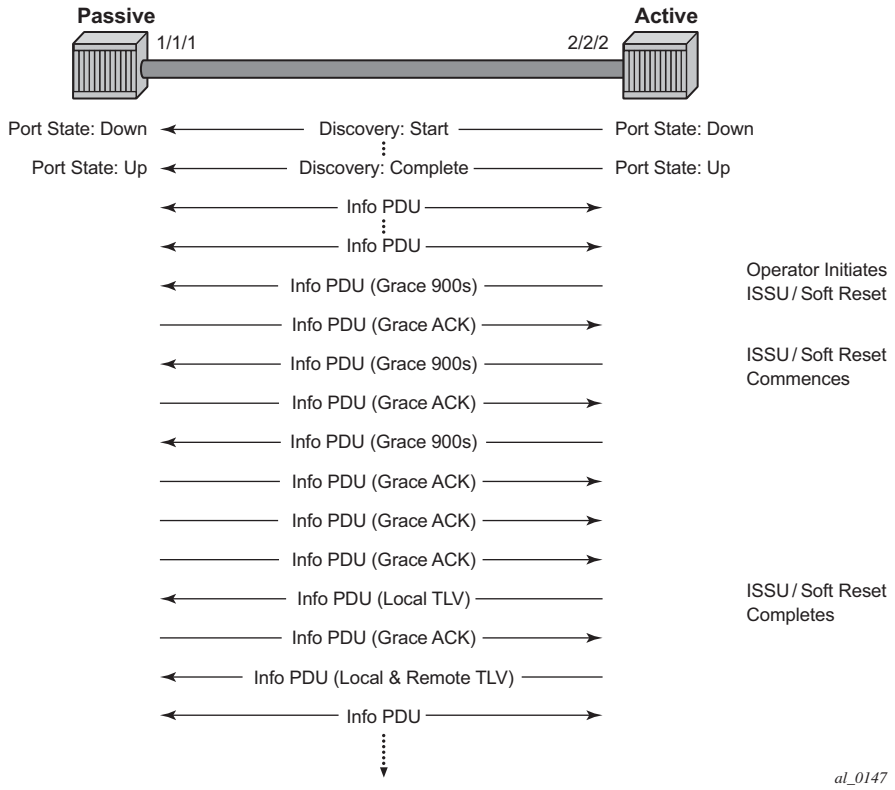

The difference between the two is subtle but important. When an active node performs this function it will generate an Informational TLV with the Local TLV following the successful soft reset. When it receives the Information PDU with the Grace Ack it will send its own Information PDU with both Local and Remote TLV completed. This will complete the protocol restart. When a passive node is reset the passive port will wait to receive the 802.3ah OAM protocol before sending its own Information PDU with both the Local and Remote TLV thus completing the protocol restart.

The renegotiation process allows the node which experienced the soft reset to rebuild the session without having to restart the session from the discovery phase. This significantly reduces the impact of the native protocol on data forwarding.

Any situation that could cause the renegotiation to fail will force the protocol to revert to the discovery phase and fail the graceful restart. During a Major ISSU when the EFM-OAM session is held operational by the Grace function, if the peer MAC address of the session changes, there will be no log event raised for the MAC address change.

The vendor-specific grace function benefits are realized when both peers support the transmitting, receiving and processing of the vendor-specific Grace TLV. In the case of mixed code versions, products, or vendor environments, a standard EFM-OAM message to the peer can be used to instruct the peer to treat the session as failed. When the command **dying-gasp-tx-on-reset** is active on a port, the soft reset function triggers ETH-OAM to set the dying gasp flag or critical event flag in the Information OAMPDU. An initial burst of three Informational OAM PDUs will be sent using a one second spacing, regardless of the protocol interval. The peer may process these flags to affect its port state and take the appropriate action. The control of the local port state where the soft reset is occurring is left to the soft reset function. This EFM-OAM function does not affect local port state. If the peer has acted on the exception flags and affected its port state, then the local node must take an action to inform the upstream nodes that a condition has occurred and forwarding is no longer possible. Routing protocols like ISIS and OSPF overload bits are typically used in routed environments to accomplish this notification.

This feature is similar to **grace-tx-enable**. Intercepting system messaging, when the feature is active on a port (enabled both at the port and at the system level) and when the messaging occurs, is a similar concept. However, because the **dying-gasp-tx-on-reset** command is not a graceful function it is interruptive and service affecting. Using **dying-gasp-tx-on-reset** requires peers to reestablish the peering session from an initial state, not rebuild the state from previous protocol information. The transmission of the dying gasp or the critical event commences when the soft reset occurs and continues for the duration of the soft reset.

If both functions are active on the same port, the **grace-tx-enable** function is preferred if the peer is setting and sending the Vendor OUI to 00:16:4d (ALU) in the Information OAMPDU. In this situation, the dying gasp function will not be invoked. A secondary Vendor OUI can be configured using the **grace-vendor-oui** *oui* command, should an additional Vendor OUI prefer to support the reception, parsing, and processing of the vendor-specific grace message instead of the dying gasp. If only one of those functions is active on the port then that specific function will be called. The grace function should not be enabled if the peer Vendor OUI is equal to 00:16:4d (ALU) and the peer does not support the grace function.

ETH-OAM allows generation of a fault condition by using the **trigger-fault** {**dying-gasp** | **critical-event**} command. This sets the appropriate flag fields in the Information OAMPDU and transitions a previously operational local port to Link Up. Removing this command from the configuration stops the flags from being set and allows the port to return to service, assuming no other faults would prevent this resumption of service. In cases where a port must be administratively shut down, this command can be used to signal a peer using the EFM-OAM protocol, and the session should be considered failed.

These features do not support the clearing of an IOM which does not trigger a soft reset. IOM clearing is a forceful event that does not trigger graceful protocol renegotiation.

A number of show commands have been enhanced to help operators determine the state of the802.3ah OAM Grace function and whether or not the peer is generating or receiving the Grace TLV.

System level information can be viewed using the **show system info** command.

```
show system information
===============================================================================
System Information
===============================================================================
System Name            : system-name
System Type            : 7750 SR-12
System Version         : 11.0r4
System Contact         :
System Location        :
System Coordinates     :
System Active Slot     : A
System Up Time         : 62 days, 20:29:48.96 (hr:min:sec)

…snip…

EFM OAM Grace Tx Enable: False
===============================================================================
```

EFM OAM Grace Tx Enable:

- False — The system level functionality is not enabled. Grace will not be generated on any ports regardless of the state of the option on the individual ports
- True — The system level functionality is enabled and the determination of whether to send grace is base on the state of the option configured at the port level

Individual ports also contain information about the current port configuration and whether or not the Grace TLV is being sent or received.

Grace Tx Enable has two enable states with the current state in brackets to the right.

- False — The port level functionality is not enabled. Grace will not be generated on the port regardless of the state of the option at the system level.
- True — The port level functionality is enabled and the determination of whether to send grace is based on the state of the option configured at the system level
  - (inactive) Not currently sending Grace TLV
  - (active) Currently sending the Grace TLV as part of the Information PDU

Peer Grace Rx

- False — Not receiving Grace TLV from the peer
- True — Receiving Grace TLV from the peer

2.12 MTU Configuration Guidelines

Observe the following general rules when planning your service and physical MTU configurations:

- The router must contend with MTU limitations at many service points. The physical (access and network) port, service, and SDP MTU values must be individually defined.
- Identify the ports that will be designated as network ports intended to carry service traffic.
- MTU values should not be modified frequently.
- MTU values must conform to both of the following conditions:
  - The service MTU must be less than or equal to the SDP path MTU.
  - The service MTU must be less than or equal to the access port (SAP) MTU.

2.12.1 Default MTU Values

Table 28 shows the default MTU values which are dependent upon the (sub-) port type, mode, and encapsulation.

Table 28 **MTU Default Values**

Port Type	Mode	Encap Type	Default (bytes)
Ethernet	access	null	1514
Ethernet	access	dot1q	1518
Fast Ethernet	network	—	1514
Other Ethernet	network	—	9212 [1]
SONET path or TDM channel	access	BCP-null	1518
SONET path or TDM channel	access	BCP-Dot1q	1522

Table 28 **MTU Default Values (Continued)**

Port Type	Mode	Encap Type	Default (bytes)
SONET path or TDM channel	access	IPCP	1502
SONET path or TDM channel	network	—	9208
SONET path or TDM channel	access	frame-relay	1578
SONET path or TDM channel	access	atm	1524

Note:

1. The default MTU for Ethernet ports other than Fast Ethernet is actually the lesser of 9212 and any MTU limitations imposed by hardware which is typically 16K.

2.12.2 Modifying MTU Defaults

MTU parameters must be modified on the service level as well as the port level.

- The service-level MTU parameters configure the service payload (Maximum Transmission Unit – MTU) in bytes for the service ID overriding the service-type default MTU.
- The port-level MTU parameters configure the maximum payload MTU size for an Ethernet port or SONET/SDH SONET path (sub-port) or TDM port/channel, or a channel that is part of a multilink bundle or LAG.

The default MTU values must be modified to ensure that packets are not dropped due to frame size limitations. The service MTU must be less than or equal to both the SAP port MTU and the SDP path MTU values. When an SDP is configured on a network port using default port MTU values, the operational path MTU can be less than the service MTU. In this case, enter the `show service sdp` command to check the operational state. If the operational state is down, then modify the MTU value accordingly.

2.12.3 Configuration Example

In order for the maximum length service frame to successfully travel from a local ingress SAP to a remote egress SAP, the MTU values configured on the local ingress SAP, the SDP (GRE or MPLS), and the egress SAP must be coordinated to accept the maximum frame size the service can forward. For example, the targeted MTU values to configure for a distributed Epipe service (ALA-A and ALA-B) are shown in Figure 38.

Figure 38 **MTU Configuration Example**

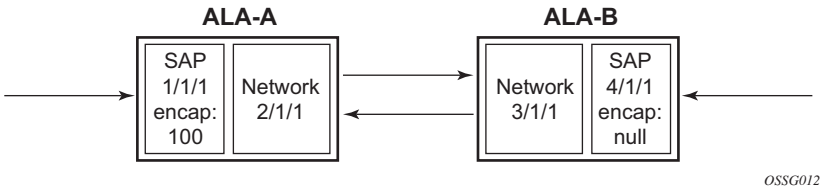

Since ALA-A uses Dot1q encapsulation, the SAP MTU must be set to 1518 to be able to accept a 1514 byte service frame (see Table 28 for MTU default values). Each SDP MTU must be set to at least 1514 as well. If ALA-A's network port (2/1/1) is configured as an Ethernet port with a GRE SDP encapsulation type, then the MTU value of network ports 2/1/1 and 3/1/1 must *each* be at least 1556 bytes (1514 MTU + 28 GRE/Martini + 14 Ethernet). Finally, the MTU of ALA-B's SAP (access port 4/1/1) must be at least 1514, as it uses null encapsulation.

Table 29 shows sample MTU configuration values.

Table 29 **MTU Configuration Example Values**

	ALA-A		**ALA-B**	
	Access (SAP)	**Network**	**Network**	**Access (SAP)**
Port (slot/MDA/port)	1/1/1	2/1/12	3/1/1	4/1/1
Mode type	dot1q	network	network	null
MTU	1518	1556	1556	1514

2.13 Deploying Preprovisioned Components

When a card, CMA, MDA, XCM or XMA is installed in a preprovisioned slot, the device detects discrepancies between the preprovisioned card type configurations and the types actually installed. Error messages display if there are inconsistencies and the card will not initialize.

When the proper preprovisioned cards are installed into the appropriate chassis slot, alarm, status, and performance details will display.

2.14 Configuring SFM5-12e Fabric Speed

With the introduction of SFM5-12e and the mini-SFM5-12e, a new tools command (**set-fabric-speed**) was added to set the fabric operating speed. (tools command does not apply to SFM4-12e fabric-speed-a). The 7750 SR-7 and 7750 SR-12 support f**abric-speed-b**.

2.14.1 fabric-speed-a

The 7750 SR-12e chassis defaults to the **fabric-speed-a** parameter when initially deployed with SFM5-12e. The **fabric-speed-a** parameter operates at 200 GB per slot which permits a mix of FP2/FP3 based cards to co-exist.

2.14.2 fabric-speed-b

The **fabric-speed-b** parameter enables the 7750 SR-12e to operate at up to 400 Gb/s, for which all cards in the 7750 SR-12e are required to be T3 based (FP3 IMM and/or IOM3-XP-C). The system will not support any FP2 based cards when the chassis is set to **fabric-speed-b**.

2.15 Configuration Process Overview

Figure 39 displays the process to provision chassis slots, cards, MDAs, and ports.

Figure 39 **Slot, Card, MDA, and Port Configuration and Implementation Flow**

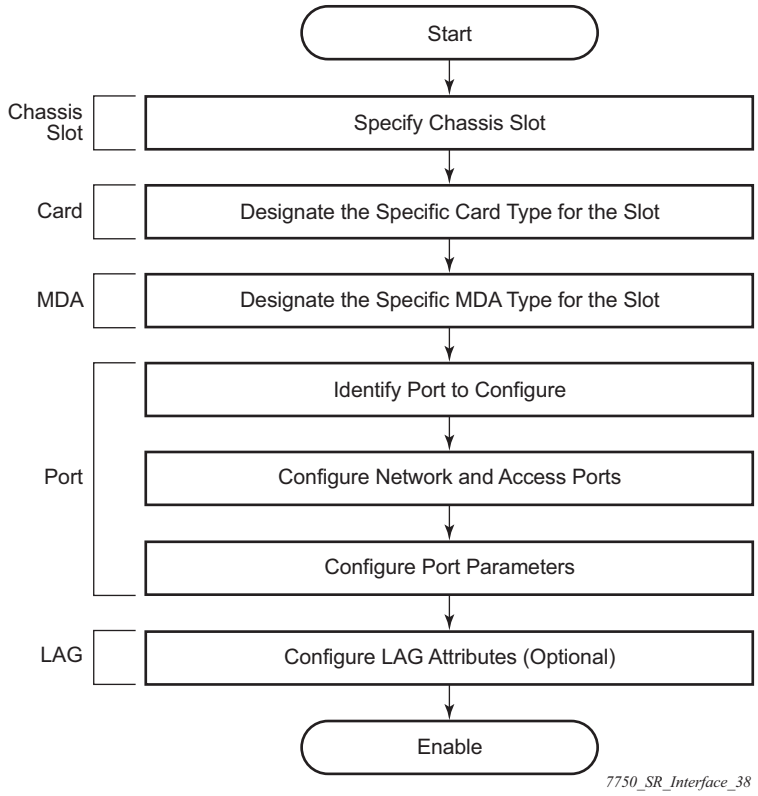

2.16 Configuration Notes

The following information describes provisioning caveats:

- If a card or MDA type is installed in a slot provisioned for a different type, the card will not initialize.
- A card or MDA installed in an unprovisioned slot remain administratively and operationally down until the card type and MDA is specified.
- Ports cannot be provisioned until the slot, card and MDA type are specified.
- cHDLC does not support HDLC windowing features, nor other HDLC frame types such as S-frames.
- cHDLC operates in the HDLC Asynchronous Balanced Mode (ABM) of operation.
- APS configuration rules:

- A physical port (either working or protection) must be shutdown before it can be removed from an APS group port.
- For a single-chassis APS group, a working port must be added first. Then a protection port can be added or removed at any time.
- A protection port must be shutdown before being removed from an APS group.
- A path cannot be configured on a port before the port is added to an APS group.
- A working port cannot be removed from an APS group until the APS port path is removed.
- When ports are added to an APS group, all path-level configurations are available only on the APS port level and configuration on the physical member ports are blocked.
- For APS-protected bundles, all members of a working bundle must reside on the working port of an APS group. Similarly all members of a protecting bundle must reside on the protecting circuit of that APS group.

2.17 Configuring Physical Ports with CLI

This section provides information to configure cards, MDAs, and ports. Topics in this section include:

- Preprovisioning Guidelines
  - Predefining Entities
  - Preprovisioning a Port
  - Maximizing Bandwidth Use
- Basic Configuration
- Common Configuration Tasks
  - Configuring Ports
  - Configuring LAG Parameters
- Common Configuration Tasks
  - Configuring Cards and MDAs
  - Configuring Cards, MCMs and MDAs
  - Configuring Ports
    - Configuring Port Pool Parameters
    - Changing Hybrid-Buffer-Allocation
    - Configuring APS Parameters
    - Configuring Ethernet Port Parameters
    - Configuring SONET/SDH Port Parameters
    - Configuring Channelized Ports
    - Configuring Cpipe Port Parameters
    - Configuring ATM SAPs
    - Configuring DWDM Port Parameters
    - Configuring OTU Port Parameters
    - Configuring ATM Interface Parameters
    - Configuring Frame Relay Parameters
    - Configuring Multilink PPP Bundles
    - Configuring Multilink ATM Inverse Multiplexing (IMA) Bundles
    - Configuring Bundle Protection Group Ports
  - Configuring LAG Parameters
    - Configuring BFD on LAG Links
- Service Management Tasks

– Modifying or Deleting an MDA, MCM, CMA or XMA
– Modifying a Card Type
– Deleting a Card
– Deleting Port Parameters

2.18 Preprovisioning Guidelines

SR OSs have a console port, either located on the CPM or CCM, or integrated into the chassis (on the 7750 SR-c4 models), to connect terminals to the router.

Configure parameters from a system console connected to a router console port, using Telnet to access a router remotely or SSH to open a secure shell connection.

2.18.1 Predefining Entities

In order to initialize a card, the chassis slot, line card type, and MDA type must match the preprovisioned parameters. In this context, *preprovisioning* means to configure the entity type (such as the card type, MDA type, port, and interface) that is planned for a chassis slot, card, or MDA. Preprovisioned entities can be installed but not enabled or the slots can be configured but remain empty until populated. *Provisioning* means that the preprovisioned entity is installed and enabled.

You can:

- Pre-provision ports and interfaces after the line card and MDA types are specified.
- Install line cards in slots with no preconfiguration parameters specified. Once the card is installed, the card and MDA types must be specified.
- Install a line card in a slot provisioned for a different card type (the card will not initialize). The existing card and MDA configuration must be deleted and replaced with the current information.

2.18.2 Preprovisioning a Port

Before a port can be configured, the slot must be preprovisoned with an allowed card type and the MDA must be preprovisioned with an allowed MDA type. Some recommendations to configure a port include:

- Ethernet
  - Configure an access port for customer facing traffic on which services are configured.

    An encapsulation type may be specified in order to distinguish services on the port or channel. Encapsulation types are not required for network ports.

    To configure an Ethernet access port, see the Ethernet Access Port section.
- SONET/SDH
  - SONET/SDH can be used only when configuring an OC-3, OC-12, OC-48, OC-192, and OC-768 SONET paths on an appropriate MDA.

    To configure a SONET path, see the Configuring SONET/SDH Port Parameters section

    Configure a network port or channel to participate in the service provider transport or infrastructure network.

    Accounting policies can only be associated with network ports/channels and Service Access Ports (SAPs). Accounting policies are configured in the **config>log> accounting-policy** context.

    To configure an Ethernet network port, see the Ethernet Network Port section.
- Channelized
  - Channelized ports can only be configured on channel-capable MDAs or CMAs such as the channelized DS-3, channelized OC-3-SFP, channelized OC-12-SFP, or channelized Any Service Any Port MDAs or CMAs.

2.18.3 Maximizing Bandwidth Use

Once ports are preprovisioned, Link Aggregation Groups (LAGs), multilink-bundles (IMA), or Bundle Protection Groups (for example IMA BPGrps), can be configured to increase the bandwidth available between two nodes.

All physical links or channels in a given LAG/bundle combine to form one logical connection. A LAG/bundle also provides redundancy in case one or more links that participate in the LAG/bundle fail. For command syntax for multilink bundles, see Configuring Multilink PPP Bundles. To configure channelized port for TDM, refer to section Configuring Channelized Ports. To configure channelized port for Sonet/SDH high speed channels (ASAP MDAs only), refer to Configuring SONET/SDH Port Parameters. For command syntax for LAG, see the Configuring LAG Parameters section.

2.19 Basic Configuration

The most basic configuration must have the following:

- Identify chassis slot
- Specify line card type (must be an allowed card type)
- Specify MCM slot for the 7750 SR-c4 and SR-c12 only (not required for CMA)
- Specify MCM type the 7750 SR-c4 and SR-c12 only (must be an allowed MCM type)
- Identify MDA slot
- Specify MDA (must be an allowed MDA type)
- Identify specific port to configure

The following is an example of card configuration for the 7750 SR:

```
ALA-A>config# info
#------------------------------------------
# Card Configuration
#------------------------------------------
card 1
        card-type iom-20g
        mda 1
            mda-type m60-10/100eth-tx
        exit
        mda 2
            mda-type m60-10/100eth-tx
        exit
    exit
    card 2
        card-type iom-20g
        mda 1
            mda-type m10-1gb-sfp
        exit
        mda 2
            mda-type m10-1gb-sfp
        exit
    exit
    card 3
        card-type iom-20g
        mda 1
            mda-type m12-ds3
        exit
        mda 2
            mda-type m12-ds3
        exit
    exit
    card 8
        card-type iom-20g
        mda 1
            mda-type m8-oc12/3-sfp
        exit
```

```
        mda 2
            mda-type m16-oc12/3-sfp
        exit
    exit
```

The following is an example of card configuration on a 7750 SR-c12:

```
#--------------------------------------------------
ALA-A> config#
#--------------------------------------------------
echo "Card Configuration "
#--------------------------------------------------
card 1
card-type iom-c4-xp
mcm 1
mcm-type mcm-v1
exit
mcm 3
mcm-type mcm-xp
exit
mda 1
mda-type m60-10/100eth-tx
exit
mda 3
mda-type m4-atmoc12/3-sfp
exit
exit
#--------------------------------------------------
ALA-A> config#
configure
    card 2
        card-type iom3-xp
        mda 1
            mda-type isa-tms
            no shutdown
        exit
        mda 2
            mda-type isa-tms
            no shutdown
        exit
        no shutdown
    exit
exit
```

The following is an example of card configurations for the 7950 XRS:

```
A:7950 XRS-20# configure card 1
A:7950 XRS-20>config>card# info
----------------------------------------------
        card-type xcm-x20
        mda 1
            mda-type cx20-10g-sfp
            no shutdown
        exit
        mda 2
            mda-type cx2-100g-cfp
```

```
            no shutdown
        exit
        no shutdown
-----------------------------------------------
```

2.20 Common Configuration Tasks

The following sections are basic system tasks that must be performed.

- Configuring Cards and MDAs
  - Configuring MDA Access and Network Pool Parameters
- Configuring Ports
  - Configuring Port Pool Parameters
  - Configuring APS Parameters
  - Configuring Ethernet Port Parameters
  - Configuring SONET/SDH Port Parameters
  - Configuring Channelized Ports
  - Configuring Frame Relay Parameters
  - Configuring Multilink PPP Bundles
- Configuring LAG Parameters
- Configuring G.8031 Protected Ethernet Tunnels
- Service Management Tasks

2.21 Configuring Cards and MDAs

Card configurations include a chassis slot designation. A slot must be preconfigured with the type of cards and MDAs which are allowed to be provisioned.

To configure the Versatile Service Module, refer to the Versatile Service Module section of the 7750 SR 7450 ESS, 7750 SR, and 7950 XRS Services Overview Guide.

The following example shows card and MDA configurations for the 7750 SR or 7450 ESS:

```
A:ALA-B>config>card# info
-----------------------------------------------
 card-type iom-20g
        mda 1
```

```
            mda-type m10-1gb-sfp
        exit
        mda 2
            mda-type m10-1gb-sfp
        exit
-----------------------------------------------
A:ALA-B>config>card#
```

The following example shows card configurations for the 7950 XRS:

```
A:7950 XRS-20# configure card 1
A:7950 XRS-20>config>card# info
-----------------------------------------------
        card-type xcm-x20
        mda 1
            mda-type cx20-10g-sfp
            no shutdown
        exit
        mda 2
            mda-type cx2-100g-cfp
            no shutdown
        exit
        no shutdown
-----------------------------------------------
```

2.22 Configuring Cards, MCMs and MDAs

Card configurations must include a chassis slot designation. A slot must be preconfigured with the type of cards, MCMs, and MDAs which are allowed to be provisioned.

Output for Media Dependent Adapters (MDAs) show an “m” in the mda-type description, for example, m60-eth10/100-tx.

Use the **config > info** command to display card configuration information:

```
A:7710-3>config# info
. . .
#------------------------------------------
echo "Card Configuration"
#------------------------------------------
    card 1
        card-type iom-xp
mcm 1
                mcm-type mcm-xp
            exit
            mcm 3
                mcm-type mcm-xp
            exit
        mda 1
```

```
            mda-type m60-eth10/100-tx
        exit
        mda 3
            mda-type m60-eth10/100-tx
        exit
    exit
```

2.22.1 Configuring Cards and CMAs

Card configurations must include a chassis slot designation. A slot must be preconfigured with the type of cards and CMAs (Compact Media Adapters) which are allowed to be provisioned.

CMAs are configured using the MDA command. Output for Compact Media Adapter MDAs show a “c” in the mda-type description, for example, c8-10/100eth-tx.

Use the **config > info** command to display card configuration information:

```
A:7710-3>config# info
. . .
#------------------------------------------
echo "Card Configuration"
#------------------------------------------
    card 1
        card-type iom-xp
 mda 5
            mda-type c8-10/100eth-tx
 exit
 mda 6
            mda-type c8-10/100eth-tx
 exit
    exit
#------------------------------------------
```

2.22.2 Configuring Forwarding Plane Parameters

The **fp** command is not allowed on iom-1 or iom-2 types. An error message appears when the command is executed on an incorrect IOM type:

- **MINOR: CLI This command is not supported for iom2-20g.**

The following example shows a forwarding plane configuration for the 7750 SR or 7450 ESS:

```
*A:Dut-C# configure card 10
*A:Dut-C>config>card# info
```

```
-----------------------------------------------
        card-type iom3-xp
        fp 1
            ingress
                mcast-path-management
                    bandwidth-policy "BWP"
                    no shutdown
                exit
            exit
        exit
        mda 1
            mda-type m1-10gb
            ingress
                mcast-path-management
                    bandwidth-policy "BWP"
                    no shutdown
                exit
            exit
        exit
        mda 2
            mda-type m2-10gb-xfp
            ingress
                mcast-path-management
                    bandwidth-policy "BWP"
                    no shutdown
                exit
            exit
        exit
-----------------------------------------------
*A:Dut-C>config>card# exit
```

2.22.3 Configuring MDA Access and Network Pool Parameters

MDA-level pools are used by ingress network queues. Network policies can be applied (optional) to create and edit QoS pool resources on egress network ports, channels, and ingress MDAs. Network-queue and slope policies are configured in the `config>qos` context.

The following example shows an MDA pool configuration for 7750 SR or 7450 ESS:

```
A:ALA-B>config>card>mda# info
-----------------------------------------------
            mda-type m10-1gb-sfpcx
            network
                egress
                    pool
                        slope-policy "B"
                    exit
                exit
            exit
            access
                ingress
```

```
                    pool
                        resv-cbs 50
                        slope-policy "A"
                    exit
                exit
            exit
-----------------------------------------------
A:ALA-B>config>card>mda#
```

The following example shows an XMA pool configuration for 7950 XRS:

```
A:ALA-B>config>card>mda# info
-----------------------------------------------
            mda-type cx20-10g-sfp
            network
                egress
                    pool
                        slope-policy "B"
                    exit
                exit
            exit
            access
                ingress
                    pool
                        resv-cbs 50
                        slope-policy "A"
                    exit
                exit
            exit
-----------------------------------------------
A:ALA-B>config>card>mda#
```

2.22.4 Configuring MDA Policies for Named Pools Mode

Network ingress queues can use either MDA ingress named pools or ingress default pools but not port named pools. In the case with an IOM with multiple MDAs sharing the same buffer space (iom3-xp, iom-10g), network ingress queues will use only the MDA 1 named pools. Even if named pools are configured for MDA 2, they will not be used by network ingress queues. Network ingress queues configured to use MDA2 named pools will be considered pool orphaned. To check for orphan queues, use the command “show mda <mda> qos ingress orphaned-queues”.

SAP shared queues use by default the SAP shared pool; a system reserved buffer pool. Shared queues can be configured to use MDA named pools. Shared queues cannot be configured to use port pools since they are not port specific queues. In case a shared queue is configured to use a port named pool, the queue will be considered orphan and will get buffers from access ingress default pool.

For complete QoS configuration details reference the Named Pools section of the Quality of Service Guide. Interface Named Pools configuration details are located in the Interface CLI portion of this guide.

2.23 Configuring Ports

This section provides the CLI syntax and examples to configure the following:

- Configuring Port Pool Parameters
- Changing Hybrid-Buffer-Allocation
- Configuring APS Parameters
- Configuring Ethernet Port Parameters
- Configuring SONET/SDH Port Parameters
- Configuring Channelized Ports
- Configuring DWDM Port Parameters
- Configuring WaveTracker Parameters
- Configuring OTU Port Parameters

2.23.1 Configuring Port Pool Parameters

The buffer space is portioned out on a per port basis whether one or multiple MDAs share the same buffer space. Each port gets an amount of buffering which is its fair-share based on the port's bandwidth compared to the overall active bandwidth.

IOM with each MDA has a dedicated buffer space: iom-20g; iom2-20g.

IOM with multiple MDAs share a buffer space: iom-10g; iom3-xp.

This mechanism takes the buffer space available and divides it into a portion for each port based on the ports active bandwidth relative to the amount of active bandwidth for all ports associated with the buffer space. The number of ports sharing the same buffer space depends on the type of IOM the pools are being created on and the type of MDAs populated on the IOM. An active port is considered to be any port that has an active queue associated. Once a queue is created for the port, the system will allocate the appropriate amount of buffer space to the port. This process is independently performed for both ingress and egress.

Normally, the amount of active bandwidth is considered as opposed to total potential bandwidth for the port when determining the ports fair share. If a port is channelized and not all bandwidth is allocated, only the bandwidth represented by the configured channels with queues configured is counted towards the bandwidth represented by the port. Also, if a port may operate at variable speeds (as in some Ethernet ports), only the current speed is considered. Based on the above, the number of buffers managed by a port may change due to queue creation and deletion, channel creation and deletion and port speed variance on the local port or other ports sharing the same buffer space.

After the active bandwidth is calculated for the port, the result may be modified through the use of the ‘ing-percentage-of-rate’ and ‘egr-percent-of-rate’ commands. The default value of each is 100% which allows the system to use all of the ports active bandwidth when deciding the relative amount of buffer space to allocate to the port. When the value is explicitly modified, the active bandwidth on the port is changed according to the specified percentage. If a value of 50% is given, the ports active bandwidth will be multiplied by 5, if a value of 150% is given, the active bandwidth will be multiplied by 1.5. This capability is independent of named pool mode. The ports rate percentage parameters may be modified at any time.

Examples:

1. To modify (in this example, to double) the size of buffer allocated on ingress for a port:

   ```
   B:SR7-10# configure port 1/2/1 modify-buffer-allocation-
   rate ing-percentage-of-rate 200
   ```

2. To modify (in this example, to double) the size of buffer allocated on ingress for a port:

   ```
   B:SR7-10# configure port 1/2/1 modify-buffer-allocation-
   rate egr-percentage-of-rate 200
   ```

The Named Buffer Pools feature provides a way to customize the port ingress and/or egress buffer allocation. The port buffer allocation size and the Forwarding class (FC) queue association to the buffer pool can be changed. By mapping each FC to different pools, it is possible to achieve separation of the available buffers per forwarding class.

Previous to this feature only the default buffer allocation mode was available, withBuffer allocation has the following characteristics:

- Each port manages a buffer according to its active bandwidth (ports with equal active bandwidth get the same buffer size).
- An access port has 2 default pools created: access-ingress and access-egress.
- A network port has 2 default pools created: ingress-MDA (common pool for all ingress network ports) and network-egress.

- All queues defined for a port receive buffers from the same buffer pool.

The Named Buffer Pools feature offers the following new capabilities:

- Ability to modify the port bandwidth considered for buffer allocation without changing the active port bandwidth. (modify-buffer-allocation-rate) (ports with equal active bandwidth can be configured to get different buffer size)
- Configuration of a named pool policy that includes the customized buffer pools
- Forwarding class queues are associated with the named pools
- Pools can be default, MDA common pools, or port specific pools

The following example shows port pool configurations:

```
A:ALA-B>config>port# info
----------------------------------------------
        access
            egress
                pool
                    slope-policy "slopePolicy1"
                exit
            exit
        exit
        network
            egress
                pool
                    slope-policy "slopePolicy2"
                exit
            exit
        exit
        no shutdown
----------------------------------------------
```

The following shows a CBS configuration over subscription example:

```
*A:Dut-T>config>port# info
----------------------------------------------
        access
            ingress
                pool
                    amber-alarm-threshold 10
                    resv-cbs 10 amber-alarm-action step 1 max 30
                exit
            exit
        exit
        ethernet
            mode access
            encap-type dot1q
        exit
        no shutdown
```

2.23.2 Changing Hybrid-Buffer-Allocation

The following example shows a hybrid-buffer-allocation value change (from default) for ingress. In this example, the network-egress buffer pool is two times the size of the access-egress.

```
A:SR>config>port>hybrid-buffer-allocation# info
----------------------------------------------
egr-weight access 20 network 40
```

2.23.3 Configuring APS Parameters

Note: Nokia recommends grouping working lines and protect lines on separate IOMs.

APS configuration rules:

- A working port must be added first. Then a protection port can be added or removed at any time.
- A protection port must be shutdown before being removed from an APS group.
- A path cannot be configured on a port before the port is added to an APS group.
- A working port cannot be removed from an APS group until the APS port path is removed.
- When ports are added to an APS group, all path-level configurations are available only on the APS port level and configuration on the physical member ports are blocked.
- For a multi-chassis APS group, only one member circuit (either working or protect) can be added. Note that the neighbor IP address of an APS group must be configured before adding a member circuit in it. The configuration of a non-zero neighbor IP address indicates the APS group as multi-chassis. Thus, the member circuit and services must be removed before adding or removing the neighbor IP address (for example, before converting an APS group from multi-chassis to single-chassis or single-chassis to multi-chassis).
- Bundle Protection Group (BPGrp) — A BPGrp is a collection of two bundles created on the APS Group port. Working bundle resides on the working circuit of the APS group, while protection bundle resides on the protection circuit of the APS group. APS protocol running on the circuits of the APS Group port monitors the health of the Sonet/SDH line and based on it or administrative action moves user traffic from one bundle to another in the group as part of an APS switch.

The following shows a sample configuration for an ATM SC-APS group that contains an aPipe SAP:

```
A:ALA-274>config# port (1/1/1)
-----------------------------------------------
    sonet-sdh
        speed oc3
    exit
    no-shutdown
-----------------------------------------------
A:ALA-274>config>port# aps-1
-----------------------------------------------
    aps
        working-circuit 1/1/1
            protect-circuit 1/1/2
    exit
    sonet-sdh
        path
            atm
            exit
            no-shutdown
        exit
    exit
    no-shutdown
    exit
-----------------------------------------------
A:ALA-274>config>service# apipe 100
-----------------------------------------------
    sap aps-1:0/100 create
    exit
    spoke-sdp 1:100 create
    exit
    no-shutdown
-----------------------------------------------
```

The following shows an example of the configuration for the working circuit/node of an MC-APS group:

```
A:ALA-274>config>port (2/1/1)# info
-----------------------------------------------
        description "APS Group"
        aps
            neighbor 13.1.1.2
            working-circuit 2/1/1
        exit
        no shutdown
-----------------------------------------------
A:ALA-274>config>port#
```

The following shows an example of the configuration for the protect circuit/node of an MC-APS group:

```
A:ALA-274>config>port (2/2/2)# info
-----------------------------------------------
        description "APS Group"
        aps
```

```
            neighbor 13.1.1.1
            protect-circuit 2/2/2
        exit
        no shutdown
-------------------------------------------
A:ALA-274>config>port#
```

2.23.4 Configuring Ethernet Port Parameters

2.23.4.1 Ethernet Network Port

A network port is network facing and participates in the service provider transport or infrastructure network processes.

The following example shows a network port configuration:

```
A:ALA-B>config>port# info
-------------------------------------------
        description "Ethernet network port"
        ethernet
        exit
        no shutdown
-------------------------------------------
A:ALA-B>config>port#
```

2.23.4.2 Ethernet Access Port

Services are configured on access ports used for customer-facing traffic. If a Service Access Port (SAP) is to be configured on a port, it must be configured as access mode. When a port is configured for access mode, the appropriate encapsulation type can be specified to distinguish the services on the port. Once a port has been configured for access mode, multiple services may be configured on the port.

The following example shows an Ethernet access port configuration:

```
A:ALA-A>config>port# info
-------------------------------------------
        description "Ethernet access port"
        access
            egress
                pool
                    slope-policy "slopePolicy1"
                exit
            exit
        exit
        network
```

```
            egress
                pool
                    slope-policy "slopePolicy2"
                exit
            exit
        exit
        ethernet
            mode access
            encap-type dot1q
        exit
        no shutdown
----------------------------------------------
A:ALA-A>config>port#
```

2.23.4.3 Configuring 802.1x Authentication Port Parameters

The following example shows an 802.1x port configuration:

```
A:ALA-A>config>port>ethernet>dot1x# info detail
----------------------------------------------
                port-control auto
                radius-plcy dot1xpolicy
                re-authentication
                re-auth-period 3600
                max-auth-req 2
                transmit-period 30
                quiet-period 60
                supplicant-timeout 30
                server-timeout 30
                no tunneling
----------------------------------------------
```

2.23.5 Configuring SONET/SDH Port Parameters

SONET/SDH features can only be configured on ports on the following MDAs and CMAs:

- OC-3
- OC-3 ASAP
- OC-12/3
- OC-48
- OC-192
- OC-768
- OC-12 ASAP
- Channelized OC3

- Channelized OC12
- ATM OC-12/3
- ATM OC-12
- Channelized ASAP OC3
- Channelized ASAP OC12

When an Ethernet port is configured in WAN mode (xgig wan), you can change certain SONET/SDH parameters to reflect the SONET/SDH requirements for this port.

The following CLI output shows an example of a SONET/SDH configuration for a WAN PHY Ethernet port.

```
*A:7950 XRS-20>config>port# info
----------------------------------------------
        shutdown
        ethernet
            xgig wan
        exit
        sonet-sdh
            tx-dus
            suppress-lo-alarm
            threshold ber-sd rate 4
            section-trace increment-z0
            path
                trace-string "hello"
                report-alarm pais
                signal-label 0x20
            exit
        exit
----------------------------------------------
```

2.23.5.1 SONET/SDH Network Port

The following example shows a SONET/SDH network mode configuration:

```
A:ALA-A>config>port# info
----------------------------------------------
        description "SONET/SDH network port"
        sonet-sdh
            path
                no shutdown
            exit
        exit
        no shutdown
----------------------------------------------
A:ALA-A>config>port#
```

2.23.5.2 SONET/SDH Access Port

The following example shows a SONET/SDH access port configuration for the 7750 SR:

```
A:ALA-A>config>port# info
----------------------------------------------
        description "SONET/SDH access port"
        sonet-sdh
            path
                mode access
                encap-type frame-relay
                mac 00:03:47:c8:b4:86
                frame-relay
                exit
                no shutdown
            exit
        exit
        no shutdown
----------------------------------------------
A:ALA-A>config>port#
```

2.23.6 Configuring Channelized Ports

- Configuring a Channelized DS3 Port
- Configuring a Channelized OC-12-SFP Port
- Configuring a Channelized Any Service Any Port (ASAP) OC3-SFP Port
- Configuring a Channelized DS1 Card
- Configuring Cisco HDLC on a Channelized Port

When configuring channelized ports, the port ID is specified in different ways depending on the MDA type and level of channelization. Ethernet ports cannot be channelized. Table 30 lists the channelization options and port syntax available on the 7750 SR channelized MDAs.

Table 30 **Channelization Options Available on the 7750 SR Channelized MDAs**

Framing	Channelization/Mapping Option	Channelized MDAs Supporting Services on the Port/ Channel
599,040 kbits/s (clear channel OC12/STM-4)		
SDH	STM4>AUG4>VC4-C4	None

Table 30 **Channelization Options Available on the 7750 SR Channelized MDAs (Continued)**

Framing	Channelization/Mapping Option	Channelized MDAs Supporting Services on the Port/ Channel
SONET	OC12>STS12>STS12c SPE	None
139,264 kbits/s ñ 149,760 Kbits/s (clear channel STS-3/STM-1 or STS-3/STM-1 channel within STS12-STM4		
SDH	STM4>AUG4>AUG1>VC4	m4-choc3-as
SONET	OC12>STS12>STS3c SPE	m4-choc3-as
44,763 kbits/s (DS3 or sub-DS3 port or a channel)		
SDH	STM4>AUG4>AUG1>VC4>TUG3>VC3	m1-choc12 m4-choc3 m12-chds3 m4-choc3-as
SDH	STM4>AUG4>AUG1>VC3	m1-choc12 m4-choc3 m12-chds3 m4-choc3-as
SONET	OC12>STS12>STS1 SPE	m1-choc12 m4-choc3 m12-chds3 m4-choc3-as
SDH	STM4>AUG4>AUG1>VC4>TUG3>VC3	m1-choc12 m4-choc3 m12-chds3 m4-choc3-as
SDH	STM4>AUG4>AUG1>VC3	m1-choc12 m4-choc3 m12-chds3 m4-choc3-as
SONET	OC12>STS12>STS1 SPE	m1-choc12 m4-choc3 m12-chds3 m4-choc3-as
Up to 2,048 kbits/s (n*DS0 within E1 up to E1)		

Table 30 **Channelization Options Available on the 7750 SR Channelized MDAs (Continued)**

Framing	Channelization/Mapping Option	Channelized MDAs Supporting Services on the Port/ Channel
SDH	STM4>AUG4>AUG1>VC4>TUG3>TUG2>VC12	m1-choc12 m4-choc3 m12-chds3 m4-choc3-as
SDH	STM4>AUG4>AUG1>VC3>TUG2>VC12	m1-choc12 m4-choc3 m12-chds3 m4-choc3-as
SDH	STM4>AUG4>AUG1>VC4>TUG3>VC3>DS3	m1-choc12 m4-choc3 m12-chds3 m4-choc3-as
SDH	STM4>AUG4>AUG1>VC3>DS3	m1-choc12 m4-choc3 m12-chds3 m4-choc3-as
SONET	OC12>STS12>STS1 SPE>VT GROUP>VT2 SPE	m1-choc12 m4-choc3 m12-chds3 m4-choc3-as
SONET	OC12>STS12>STS1 SPE>DS3	m1-choc12 m4-choc3 m12-chds3 m4-choc3-as
Up to 1,544 kbits/s (n*DS0 within DS1 up to DS1)		
SDH	STM4>AUG4>AUG1>VC4>TUG3>TUG2>TU11>VC11	m1-choc12 m4-choc3 m12-chds3 m4-choc3-as
SDH	STM4>AUG4>AUG1>VC4>TUG3>TUG2>TU12>VC11	None

Table 30 **Channelization Options Available on the 7750 SR Channelized MDAs (Continued)**

Framing	Channelization/Mapping Option	Channelized MDAs Supporting Services on the Port/ Channel
SDH	STM4>AUG4>AUG1>VC3>TUG2>VC11	m1-choc12 m4-choc3 m12-chds3 m4-choc3-as
SDH	STM4>AUG4>AUG1>VC4>TUG3>TUG2>VC12	m1-choc12 m4-choc3 m12-chds3
SDH	STM4>AUG4>AUG1>VC3>TUG2>VC12	m1-choc12 m4-choc3 m12-chds3 m4-choc3-as
SDH	STM4>AUG4>AUG1>VC4>TUG3>VC3>DS3	m1-choc12 m4-choc3 m12-chds3 m4-choc3-as
SDH	STM4>AUG4>AUG1>VC3>DS3	m1-choc12 m4-choc3 m12-chds3 m4-choc3-as
SONET	OC12>STS12>STS1 SPE>VT GROUP>VT1.5 SPE	m1-choc12 m4-choc3 m12-chds3 m4-choc3-as
SONET	OC12>STS12>STS1 SPE>VT GROUP>VT2 SPE	m1-choc12 m4-choc3 m12-chds3
SONET	OC12>STS12>STS1 SPE>DS3	m1-choc12 m4-choc3 m12-chds3 m4-choc3-as

Note: The E1 encapsulation in the ASAP MDA and in the channelized MDAs is compliant to G.704 and G.703. The G.703 feature allows a user to configure an unstructured E1 channel on deep channel MDAs and ASAP MDAs. In G.704, time slot 0 is used to carry timing information by a service provider and thus, only 31 slots are available to the end user. In G.703, all 32 time slots are available to the end user. Timing is provided by the end user.

A port ID for channels has one of the following syntax as applicable to channelization and mapping options where the port configuration syntax is slot/mda/port (Table 31):

Table 31 **Channelized Port Syntax Examples**

Port ID for Physical Port Speed			
Channel speed	OC12/STM4	OC3/STM1	DS3/E3
SONET/SDH			
STS12/STM4	port.sts12	N/A	N/A
STS3/STM1	port.sts3-{1..4}	port.sts3	N/A
STS1/STM0	port.sts1-{1..4}.{1..3}	port.sts1-{1..3}	N/A
TUG3	port.tug3-{1..4}.{1..3}	port.tug3-{1..3}	N/A
TU3	port.tu3-{1..4}.{1..3}	port.tu3-{1..3}	N/A
VT15/VC1.1	port.vt15-{1..4}.{1..3}.{1..4}.{1..7}	port.vt15-{1..3}.{1..4}.{1..7}	N/A
VT2/VC12	port.vt2-{1..4}.{1..3}.{1..3}.{1..7}	port.vt2-{1..3}.{1..3}.{1..7}	N/A
TDM			
DS3/E3	port.{1..4}.{1..3}	port.{1..3}	port
DS1 in DS3	port.{1..4}.{1..3}.{1..28}	port.{1..3}.{1..28}	port.{1..28}
DS1 in VT2	port.{1..4}.{1..3}.{1..3}.{1..7}	port.{1..3}.{1..3}.{1..7}	N/A
DS1 in VT15	port.{1..4}.{1..3}.{1..4}.{1..7}	port.{1..3}.{1..4}.{1..7}	N/A
E1 in DS3	port.{1..4}.{1..3}.{1..21}	port.{1..3}.{1..21}	port.{1..21}
E1 in VT2	port.{1..4}.{1..3}.{1..3}.{1..7}	port.{1..3}.{1..3}.{1..7}	N/A
N*DS0 in DS1 in DS3	port.{1..4}.{1..3}.{1..28}.{1..24}	port.{1..3}.{1..28}.{1..24}	port.{1..28}.{1..24}
N*DS0 in DS1 in VT2	port.{1..4}.{1..3}.{1..3}.{1..7}.{1..24}	port.{1..3}.{1..3}.{1..7}.{1..24}	N/A
N*DS0 in DS1 in VT15	port.{1..4}.{1..3}.{1..4}.{1..7}.{1..24}	port.{1..3}.{1..4}.{1..7}.{1..24}	N/A

Table 31 **Channelized Port Syntax Examples (Continued)**

Port ID for Physical Port Speed			
N*DS0 in E1in DS3	port.{1..4}.{1..3}.{1..21}.{2..32}	port.{1..3}.{1..21}.{2..32}	port.{1..21}.{2..32}
N*DS0 in E1in VT2	port.{1..4}.{1..3}.{1..3}.{1..7}.{2..32}	port.{1..3}.{1..3}.{1..7}.{2..32}	N/A

2.23.6.1 Verify the MDA Type

To make sure that you have a channel-capable MDA, verify that the MDA-type you are configuring by entering a **show mda** *slot-id* command.

The MDAs shown in the *MDA Provisioned* column in the following output are a 12-port channelized DS3 MDA (m12-ds3) on card 1, MDA slot 1, and a 1-port channelized OC12-SFP MDA (m1-choc12-sfp) on card 1, MDA slot 2.

```
A:ALA-A# show mda 1
===============================================================================
MDA 1/1
===============================================================================
Slot  Mda   Provisioned           Equipped              Admin     Operational
            Mda-type              Mda-type              State     State
-------------------------------------------------------------------------------
1     1     m12-ds3               m12-ds3               up        provisioned
===============================================================================
ALA-A# show mda 2
===============================================================================
MDA 1/2
===============================================================================
Slot  Mda   Provisioned           Equipped              Admin     Operational
            Mda-type              Mda-type              State     State
-------------------------------------------------------------------------------
1     2     m1-choc12-sfp         m1-choc12-sfp         up        provisioned
===============================================================================
A:ALA-A#
```

2.23.6.2 Configuring a Channelized DS3 Port

Figure 40 shows the logic of the DS3 port configuration.

Figure 40 **Channelized DS3 Port Structure**

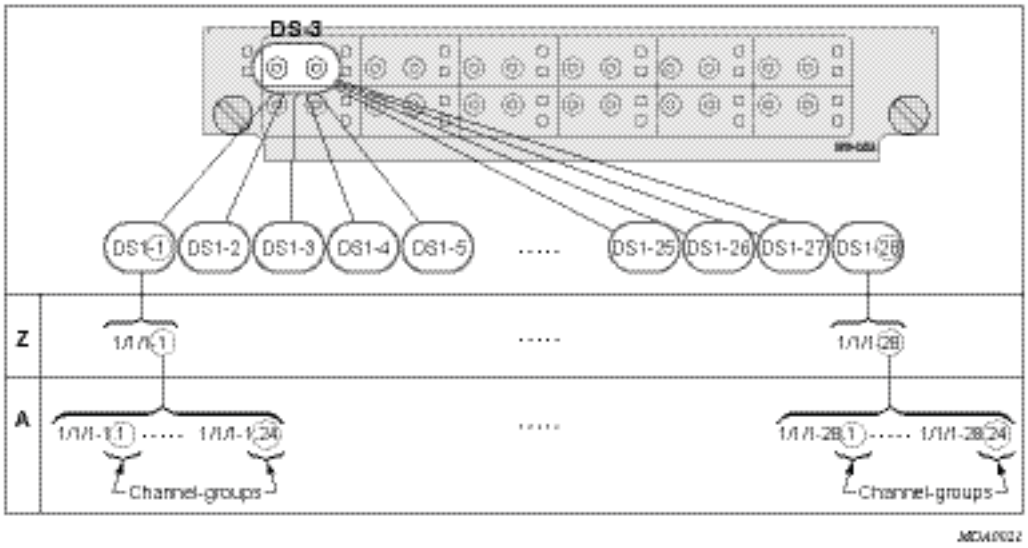

The following shows the steps to configure a channelized port on a 12-port DS3 MDA:

```
A:ALA-A>config# port 7/1/1
A:ALA-A>config>port# tdm
```

In order to set the channelized mode on a port, the DS3 parameter must be in a shut down state. Clear channel uses out-of-band signaling, not in-band signaling, so the channel's entire bit rate is available. Channelized ports use in-band signaling and must be explicitly enabled as shown:

```
A:ALA-A>config>port>tdm# ds3
A:ALA-A>config>port>tdm>ds3# shutdown
A:ALA-A>config>port>tdm>ds3# channelized ds1
A:ALA-A>config>port>tdm>ds3# no shutdown
A:ALA-A>config>port>tdm>ds3# exit
```

In the DS1 context, configure DS0 channel groups parameters. 24 timeslots can be configured per channel group as shown:

```
A:ALA-A>config>port>tdm# ds1 1
A:ALA-A>config>port>tdm>ds1# no shutdown
A:ALA-A>config>port>tdm>ds1# channel-group 1
A:ALA-A>config>port>tdm>ds1>channel-group# timeslots 1
A:ALA-A>config>port>tdm>ds1>channel-group# encap-type frame-relay
A:ALA-A>config>port>tdm>ds1>channel-group# no shutdown
A:ALA-A>config>port>tdm>ds1>channel-group# exit
A:ALA-A>config>port>tdm>ds1# channel-group 2
A:ALA-A>config>port>tdm>ds1>channel-group# timeslots 2-10
A:ALA-A>config>port>tdm>ds1>channel-group# no shutdown
A:ALA-A>config>port>tdm>ds1>channel-group# exit
```

```
A:ALA-A>config>port>tdm>ds1# exit
A:ALA-A>config>port>tdm# ds1 2
A:ALA-A>config>port>tdm>ds1# channel-group 1
A:ALA-A>config>port>tdm>ds1>channel-group# timeslots 1
A:ALA-A>config>port>tdm>ds1>channel-group# exit
A:ALA-A>config>port>tdm>ds1# no shutdown
A:ALA-A>config>port>tdm>ds1# channel-group 2
A:ALA-A>config>port>tdm>ds1>channel-group# timeslots 2
A:ALA-A>config>port>tdm>ds1>channel-group# exit
A:ALA-A>config>port>tdm>ds1# no shutdown
```

The following output shows the channelized mode configuration:

```
A:ALA-A>config>port># info
----------------------------------------------
        tdm
            ds3 ds3
                channelized ds1
                no shutdown
            exit
            ds1 ds1-1
                channel-group 1
                    encap-type frame-relay
                    timeslots 1
                    frame-relay
                    exit
                    no shutdown
                exit
                channel-group 2
                    shutdown
                    timeslots 2-10
                exit
                no shutdown
            exit
            ds1 ds1-2
                channel-group 1
                    shutdown
                    timeslots 1
                exit
                channel-group 2
                    timeslots 2
                    no shutdown
                exit
                no shutdown
            exit
        exit
        no shutdown
----------------------------------------------
A:ALA-A>config>port#
```

Services can be applied to the configured channelized ports. The following example shows the CLI usage to configure a customer IES service with interface SAPs on the channelized ports. Refer to the 7450 ESS, 7750 SR, and 7950 XRS Services Overview Guide for information about how to configure services.

```
A:ALA-A>config>service# ies 103 customer 1 create
```

```
A:ALA-A>config>service>ies$ interface test1 create
A:ALA-A>config>service>ies>if$ address 102.21.1.1/24
A:ALA-A>config>service>ies>if# sap 7/1/1.1.2 create
A:ALA-A>config>service>ies>if>sap$ exit
A:ALA-A>config>service>ies>if# no shutdown
A:ALA-A>config>service>ies>if# exit
A:ALA-A>config>service>ies# interface test2 create
A:ALA-A>config>service>ies>if$ address 102.22.1.1/24
A:ALA-A>config>service>ies>if$ sap 7/1/1.2.1 create
A:ALA-A>config>service>ies>if>sap$ exit
A:ALA-A>config>service>ies>if# no shutdown
A:ALA-A>config>service>ies>if# exit
A:ALA-A>config>service>ies>if#
```

The following output shows the channelized ports (7/1/1.1.1 and 7/1/1.1.2) applied to SAPs on the IES service configuration:

```
A:ALA-A>config>service>ies# info
----------------------------------------------
...
        ies 103 customer 1 vpn 103 create
            interface "test2" create
                address 102.22.1.1/24
                sap 7/1/1.2.1 create
                exit
            exit
            interface "test1" create
                address 102.21.1.1/24
                sap 7/1/1.1.2 create
                exit
            exit
            no shutdown
        exit
...
----------------------------------------------
A:ALA-A>config>service>ies#
```

2.23.6.3 Configuring a Channelized OC-12-SFP Port

Figure 41 shows the logic of the channelized OC-12 port configuration.

Figure 41 **Channelized OC-12 Port Structure**

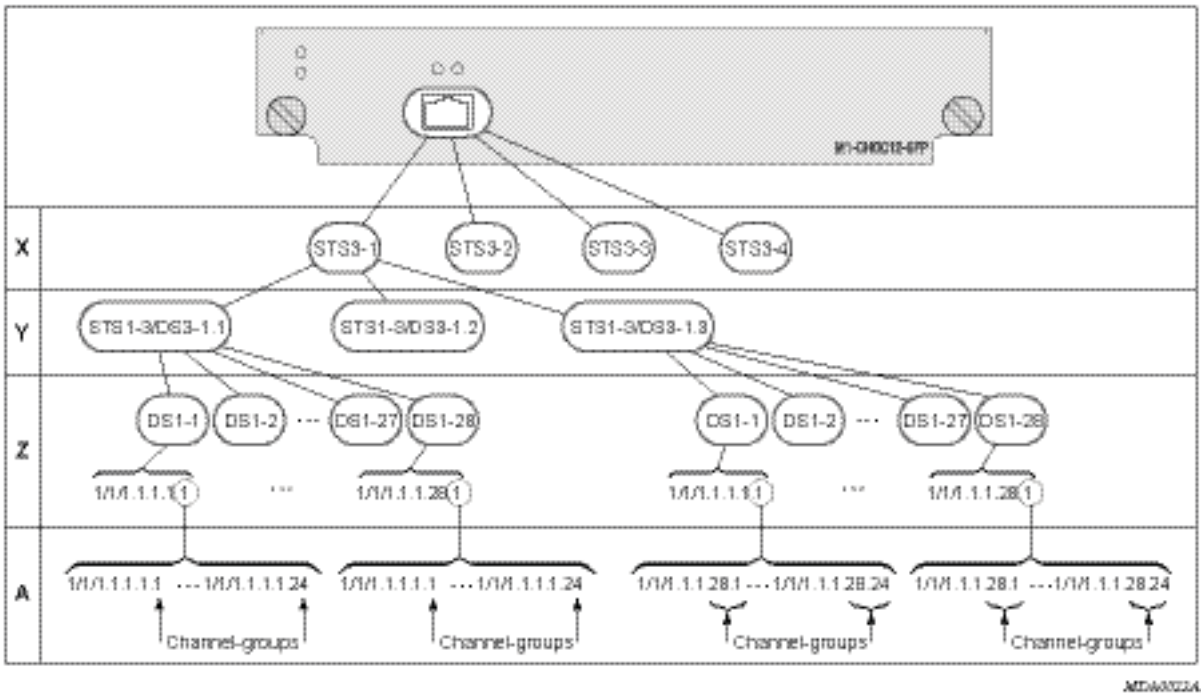

The following shows an example to configure a channelized port on a 1-port channelized OC-12-SFP MDA:

```
ALA-A>config# port 5/2/1
```

At this level you must choose the tributary. When provisioning DS3 nodes on a channelized OC-12 MDA, you must provision the parent STS1-1 SONET path first.

```
A:ALA-A>config>port# sonet-sdh
A:ALA-A>config>port>sonet-sdh# path sts1-1.1
A:ALA-A>config>port>sonet-sdh>path# no shutdown
A:ALA-A>config>port>sonet-sdh>path# exit
```

The following shows the output:

```
A:ALA-A>config>port>sonet-sdh# info
----------------------------------------------
        sonet-sdh
            path sts1-1.1
                no shutdown
            exit
        exit
----------------------------------------------
A:ALA-A>config>port>sonet-sdh#
```

In order to set the channelized mode on a port, the DS3 parameter must be in a shut down state. Clear channel uses out-of-band signaling, not in-band signaling, so the channel's entire bit rate is available. Channelized ports use in-band signaling and must be explicitly enabled.

```
A:ALA-A>config>port# tdm
A:ALA-A>config>port>tdm# ds3 1.1
A:ALA-A>config>port>tdm>ds3# shutdown
A:ALA-A>config>port>tdm>ds3# channelized ds1
A:ALA-A>config>port>tdm>ds3# no shutdown
A:ALA-A>config>port>tdm>ds3# exit
```

The following shows an example of the output:

```
A:ALA-A>config>port# info
----------------------------------------------
        sonet-sdh
            path sts12
                no shutdown
            exit
            path sts3-1
                no shutdown
            exit
            path sts1-1.1
                no shutdown
            exit
        exit
        tdm
            ds3 ds3-1.1
                channelized
                no shutdown
            exit
        exit
        no shutdown
----------------------------------------------
A:ALA-A>config>port#
```

In the TDM context, configure DS0 channel groups parameters. 24 timeslots can be configured per channel group.

```
A:ALA-A>config>port>tdm# ds1 1.1.1
A:ALA-A>config>port>tdm>ds1# no shutdown
A:ALA-A>config>port>tdm>ds1# channel-group 1
A:ALA-A>config>port>tdm>ds1>channel-group# timeslots 1
A:ALA-A>config>port>tdm>ds1>channel-group# no shutdown
A:ALA-A>config>port>tdm>ds1>channel-group# exit
A:ALA-A>config>port>tdm>ds1# no shutdown
A:ALA-A>config>port>tdm>ds1# channel-group 2
A:ALA-A>config>port>tdm>tds1>channel-group# timeslots 2
A:ALA-A>config>port>tdm>ds1>channel-group# no shutdown
A:ALA-A>config>port>tdm>ds1>channel-group# exit
A:ALA-A>config>port>tdm>ds1# exit


A:ALA-A>config>port>tdm# info
----------------------------------------------
```

```
            sonet-sdh
                path sts12
                    no shutdown
                exit
                path sts3-1
                    no shutdown
                exit
                path sts1-1.1
                    no shutdown
                exit
            exit
            tdm
                ds3 ds3-1.1
                    channelized
                    no shutdown
                exit
                ds1 ds1-1.1.1
                    channel-group 1        (see SAP 5/2/1.1.1.1.1 below)
                        timeslots 1
                        no shutdown
                    exit
                    channel-group 2        (see SAP 5/2/1.1.1.1.2 below)
                        timeslots 2
                        no shutdown
                    exit
                    no shutdown
                exit
            exit
            no shutdown
-------------------------------------------
A:ALA-A>config>port>tdm#
```

Services can be applied to the configured channelized ports. The following example shows the CLI usage to configure a customer IES service with interface SAPs on the channelized ports. Refer to the 7450 ESS, 7750 SR, and 7950 XRS Services Overview Guide for information about how to configure services.

```
A:ALA-A>config>service# ies 104 customer 1 create
A:ALA-A>config>service>ies$ interface testA create
A:ALA-A>config>service>ies>if$ address 192.22.1.1/24
A:ALA-A>config>service>ies>if# sap 5/2/1.1.1.1.1 create
A:ALA-A>config>service>ies>if>sap$ exit
A:ALA-A>config>service>ies>if# no shutdown
A:ALA-A>config>service>ies>if# exit
A:ALA-A>config>service>ies# interface testB create
A:ALA-A>config>service>ies>if$ address 192.23.1.1/24
A:ALA-A>config>service>ies>if# sap 5/2/1.1.1.1.2 create
A:ALA-A>config>service>ies>if>sap$ exit
A:ALA-A>config>service>ies>if# no shutdown
A:ALA-A>config>service>ies>if# exit
A:ALA-A>config>service>ies# no shutdown
```

The following output shows the channelized ports 5/2/1.1.1.1.1 and 5/2/1.1.1.1.2) applied to SAPs on the IES service configuration:

```
A:ALA-A>config>service>ies# info
```

```
-----------------------------------------------
            interface "testA" create
                address 192.22.1.1/24
                sap 5/2/1.1.1.1.1 create
                exit
            exit
            interface "testB" create
                address 192.23.1.1/24
                sap 5/2/1.1.1.1.2 create
                exit
            exit
            no shutdown
-----------------------------------------------
A:ALA-A>config>service>ies#
```

2.23.6.4 Configuring a Channelized Any Service Any Port (ASAP) OC3-SFP Port

This section provides examples to configure PPP, FR, cHDLC, and ATM n*DS0 channels on a channelized port on channelized ASAP OC-3 SFP MDA in slot 1/1/1. The ASAP OC-12 SFP MDA also supports the SONET options.

```
ALA-A>config# port 1/1/1
```

At this level you must choose the tributary. When provisioning DS3 nodes on a channelized ASAP OC-3 MDA, you must provision the parent STS1-1 SONET path first.

```
A:ALA-A>config>port# sonet-sdh
A:ALA-A>config>port>sonet-sdh# framing sdh
A:ALA-A>config>port>sonet-sdh# path sts1-1
A:ALA-A>config>port>sonet-sdh>path# no shutdown
A:ALA-A>config>port>sonet-sdh>path# exit
A:ALA-A>config>port>sonet-sdh# info
-----------------------------------------------
        sonet-sdh
               framing sdh
               path sts1-1
                    no shutdown
               exit
        exit
-----------------------------------------------
A:ALA-A>config>port>sonet-sdh#
```

In order to set the channelized mode on a port, the DS3 parameter must be in a shut down state. Clear channel uses out-of-band signaling, not in-band signaling, so the channel's entire bit rate is available. Channelized ports use in-band signaling and must be explicitly enabled.

```
A:ALA-A>config>port# tdm
A:ALA-A>config>port>tdm# ds3 1
```

```
A:ALA-A>config>port>tdm>ds3# shutdown
A:ALA-A>config>port>tdm>ds3# channelized e1
A:ALA-A>config>port>tdm>ds3# no shutdown
A:ALA-A>config>port>tdm>ds3# exit
A:ALA-A>config>port# info
----------------------------------------------
        sonet-sdh
               path sts1-1
                    no shutdown
               exit
        exit
        tdm
           ds3 1
                channelized e1
                no shutdown
            exit
        exit
        no shutdown
----------------------------------------------
A:ALA-A>config>port#
```

In the TDM E1 context, configure DS0 channel groups and their parameters. For a DS1 channel-group, up to 24 timeslots can be assigned (numbered 1 to 24). For an E1 channel-group, up to 31 timeslots can be assigned (numbered 2 to 32). For ATM, all timeslots are auto-configured when a channel group gets created (there is no sub-E1 for ATM). ATM, Frame Relay and BCP-NULL encapsulation examples follow:

```
A:ALA-A>config>port>tdm# e1 1.1
A:ALA-A>config>port>tdm>e1# channel-group 1
A:ALA-A>config>port>tdm>e1>channel-group# timeslots 2
A:ALA-A>config>port>tdm>e1>channel-group# no shutdown
A:ALA-A>config>port>tdm>e1>channel-group#
A:ALA-A>config>port>tdm>e1# no shutdown
A:ALA-A>config>port>tdm>e1# channel-group 2
A:ALA-A>config>port>tdm>e1>channel-group# timeslots 3
A:ALA-A>config>port>tdm>e1>channel-group# encap-type frame-relay
A:ALA-A>config>port>tdm>e1>channel-group# no shutdown
A:ALA-A>config>port>tdm>e1>channel-group# exit
A:ALA-A>config>port>tdm>e1# channel-group 3
A:ALA-A>config>port>tdm>e1>channel-group# timeslots 11,12
A:ALA-A>config>port>tdm>e1>channel-group# encap-type cisco-hdlc
A:ALA-A>config>port>tdm>e1>channel-group# no shutdown
A:ALA-A>config>port>tdm>e1>channel-group# exit
A:ALA-A>config>port>tdm>e1# no shutdown
A:ALA-A>config>port>tdm>e1# exit
A:ALA-A>config>port>tdm# e1 1.2
A:ALA-A>config>port>tdm>e1# no shutdown
A:ALA-A>config>port>tdm>e1# channel-group 1
A:ALA-A>config>port>tdm>e1>channel-group# encap-type atm
A:ALA-A>config>port>tdm>e1>channel-group# no shutdown
A:ALA-A>config>port>tdm>e1>channel-group# exit
A:ALA-A>config>port>tdm>e1# no shutdown
A:ALA-A>config>port>tdm# info
----------------------------------------------
        tdm
           ds3 1
                channelized e1
```

```
                no shutdown
             exit
            e1 1.1
                channel-group 1
                    timeslots 2
                    no shutdown
                exit
                channel-group 2
                    encap-type frame-relay
                    frame-relay
                    exit
                    timeslots 10
                    no shutdown
                exit
                channel-group 3
                    encap-type cisco-hdlc
                    cisco-hdlc
                    exit
                    timeslots 11,12
                    no shutdown
                exit
                no shutdown
             exit
            e1 1.2
                channel-group 1
                    encap-type atm
                    atm
                    exit
                    no shutdown
                exit
                no shutdown
        exit
        no shutdown
-------------------------------------------
A:ALA-A>config>port>tdm#
```

Services can now be applied to the configured channelized ports. Follow examples of other channelized ports in this document.

2.23.6.5 Configuring Cisco HDLC on a Channelized Port

Use the following CLI syntax to configure cHDLC:

CLI Syntax:

```
config# port port-id
tdm
     ds3 [sonet-sdh-index]
          channelized {ds1|e1}
          no shutdown
     ds1
          channel-group channel-group
               cisco-hdlc
                    down-count down-count
```

```
        keepalive time-interval
        up-count up-count
    encap-type {bcp-null|bcp-dot1q|ipcp|ppp-
      auto|frame-relay|wan-mirror|cisco-
      hdlc}
    timeslots timeslots
    no shutdown
```

The following example shows SONET/SDH access mode configuration command usage:

Example:

```
A:ALA-29>config>port>tdm# ds3
A:ALA-29>config>port>tdm>ds3# channelized ds1
A:ALA-29>config>port>tdm>ds3# no shutdown
A:ALA-29>config>port>tdm>ds3# exit
A:ALA-29>config>port>tdm# ds1 1
A:ALA-29>config>port>tdm>ds1# no shutdown
A:ALA-29>config>port>tdm>ds1# channel-group 1
A:ALA-29>config>port>tdm>ds1>channel-group# timeslots 1-
 20
A:ALA-29>config>port>tdm>ds1>channel-group# encap-type
 cisco-hdlc
A:ALA-29>config>port>tdm>ds1>channel-group# exit
A:ALA-29>config>port>tdm>ds1# channel-group 1
A:ALA-29>config>port>tdm>ds1>channel-group# no shutdown
A:ALA-29>config>port>tdm>ds1>channel-group# exit
A:ALA-29>config>port>tdm>ds1# exit
A:ALA-29>config>port>tdm#
```

The following example shows a configuration:

```
A:ALA-29>config>port# inf
----------------------------------------------
        tdm
            ds3
                channelized ds1
                no shutdown
            exit
            ds1 1
                channel-group 1
                    encap-type cisco-hdlc
                    timeslots 1-20
                    cisco-hdlc
                    exit
                    no shutdown
                exit
                no shutdown
            exit
        exit
        no shutdown
----------------------------------------------
A:ALA-29>config>port#
```

2.23.7 Configuring Channelized STM1/OC3 Parameters

The following example shows basic syntax to configure channelized STM1/OC3 parameters:

CLI Syntax:

```
config# port port-id
sonet-sdh
     framing {sonet|sdh}
     group sonet-sdh-index payload {tu3|vt2|vt15}
     path [sonet-sdh-index]
          payload {sts3|tug3|ds3|e3}
          trace-string [trace-string]
          no shutdown
```

Example:

```
config# port 5/2/1
config>port# sonet-sdh
config>port>sonet-sdh# framing sdh
config>port>sonet-sdh# path sts3
config>port>sonet-sdh>path# trace-string "HO-path"
config>port>sonet-sdh>path# exit
config>port>sonet-sdh# group tug3-1 payload vt2
config>port>sonet-sdh# group tug3-3 payload vt2
config>port>sonet-sdh# path vt2-1.1.1
config>port>sonet-sdh>path# trace-string "LO-path 3.7.3"
config>port>sonet-sdh>path# no shutdown
config>port>sonet-sdh>path# exit
config>port>sonet-sdh# exit
config>port# tdm
config>port>tdm# e1 1.1.1
config>port>tdm>e1# channel-group 1
config>port>tdm>e1>channel-group# timeslots 2-32
config>port>tdm>e1>channel-group# no shutdown
config>port>tdm>e1>channel-group# exit
config>port>tdm# e1 3.7.3
config>port>tdm>e1# channel-group 2
config>port>tdm>e1>channel-group# timeslots 2-32
config>port>tdm>e1>channel-group# no shutdown
config>port>tdm>e1>channel-group# exit
```

The following shows the configuration output:

```
A:ALA-49>config>port# info
----------------------------------------------------------------------------------
        sonet-sdh
            framing sdh
            path sts3
                trace-string "HO-path"
                no shutdown
            exit
```

```
            group tug3-1 payload vt2
            group tug3-3 payload vt2
            path vt2-1.1.1
                trace-string "LO-path 3.7.3"
                no shutdown
            exit
            path vt2-3.7.3
                no shutdown
            exit
        exit
        tdm
            e1 1.1.1
                channel-group 1
                    timeslots 2-32
                    no shutdown
                exit
                no shutdown
            exit
            e1 3.7.3
                channel-group 2
                    timeslots 2-32
                    no shutdown
                exit
                no shutdown
            exit
        exit
        no shutdown
-----------------------------------------------
A:ALA-49>config>port#
```

2.23.7.1 Configuring Cpipe Port Parameters

Before a Cpipe service can be provisioned, the following entities must be configured:

- Configuring a DS1 Port
- Configuring a Channel Group

2.23.7.1.1 Configuring a DS1 Port

The following shows an example of a DS1 port configured for CES.

```
A:sim216#  show port 1/5/1.1.3.1
===============================================================================
TDM DS1 Interface
===============================================================================
Description        : DS1
Interface          : 1/5/1.1.3,1
Type               : ds1                       Framing             : esf
Admin Status       : up                        Oper Status         : up
Physical Link      : yes                       Clock Source        : loop-timed
Signal Mode        : none
```

```
Last State Change  : 10/31/2006 14:23:12     Channel IfIndex      : 580943939
Loopback           : none                    Invert Data          : false
Remote Loop respond: false                   In Remote Loop       : false
Load-balance-algo  : default                 Egr. Sched. Pol      : n/a
BERT Duration      : N/A                     BERT Pattern         : none
BERT Synched       : 00h00m00s               Err Insertion Rate   : 0
BERT Errors        : 0                       BERT Status          : idle
BERT Total Bits    : 0
Cfg Alarm          : ais los
Alarm Status       :
===============================================================================
A:sim216#
```

Configuring a Channel Group

The following shows an example of a DS1 channel group configured for CES.

```
A:sim216#  show port 1/5/1.1.3.1
===============================================================================
TDM DS0 Chan Group
===============================================================================
Description        : DS0GRP
Interface          : 1/5/1.1.3.1
TimeSlots          : 1-12
Speed              : 64                      CRC                  : 16
Admin Status       : up                      Oper Status          : up
Last State Change  : 10/31/2006 14:23:12     Chan-Grp IfIndex     : 580943940
Configured mode    : access                  Encap Type           : cem
Admin MTU          : 4112                    Oper MTU             : 4112
Physical Link      : Yes                     Bundle Number        : none
Idle Cycle Flags   : flags                   Load-balance-algo    : default
Egr. Sched. Pol    : n/a
===============================================================================
A:sim216#
```

2.23.8 Configuring ATM SAPs

2.23.8.1 ATM SAP in an IES Service

The following shows a sample IES service SAP configuration:

```
:ALA-701>config>service>ies# info
----------------------------------------------
            interface "atm_1" create
                address 2.3.4.1/24
                sap 2/1/1:17/24 create
                exit
            exit
            interface "atm_2" create
```

```
                address 2.4.5.1/24
                sap 2/1/1:18/300 create
                exit
            exit
            no shutdown
-------------------------------------------
B:ALA-701>config>service>ies#
```

2.23.8.2 ATM SAP in an Epipe Service

The following shows a sample Epipe service SAP configuration:

```
B:ALA-701>config>service# info
-------------------------------------------
...
            epipe 5 customer 1 create
                shutdown
                sap 2/1/2:15/25 create
                exit
                sap 2/1/3:25/35 create
                exit
            exit
-------------------------------------------
B:ALA-701>config>service#
```

2.23.9 Configuring DWDM Port Parameters

The following shows a sample DWDM port configuration:

```
*A:ALA-A>config>port>dwdm># info
-------------------------------------------
           channel 44
           wavetracker
               power-control
                   target-power -7.50
               exit
               encode key1 205 key2 749
           exit
-------------------------------------------

*A:ALA-A>config>port>dwdm># info detail
-------------------------------------------
           channel 44
           wavetracker
               power-control
                   target-power -7.50
               exit
               encode key1 205 key2 749
               report-alarm enc-fail enc-degr pwr-fail pwr-degr pwr-high pwr-low
           exit
           rxdtv-adjust
```

```
-------------------------------------------
*A:ALA-A>config>port>dwdm># wavetracker

*A:ALA-A>config>port>dwdm>wavetracker># info
-------------------------------------------
               power-control
                   target-power -7.50
               exit
               encode key1 205 key2 749
-------------------------------------------


*A:ALA-A>config>port>dwdm>wavetracker># info detail
-------------------------------------------
               power-control
                   target-power -7.50
               exit
               encode key1 205 key2 749
               report-alarm enc-fail enc-degr pwr-fail pwr-degr pwr-high pwr-low
-------------------------------------------
```

2.23.10 Configuring WaveTracker Parameters

The following example shows the default configuration with WaveTracker disabled:

```
*A:ALA-A>config>port>dwdm># info
-------------------------------------------
           channel 44
-------------------------------------------


*A:ALA-A>config>port>dwdm># info detail
-------------------------------------------
           channel 44
           wavetracker
               no power-control
               no encode
               report-alarm enc-fail enc-degr pwr-fail pwr-degr pwr-high pwr-low
           exit
           rxdtv-adjust
-------------------------------------------
```

The following example shows a configuration with DWDM channel 44, WaveTracker power control transmit power at -7.5 dBm and WaveTracker encoded keys 205 and 749.

```
*A:ALA-A>config>port>dwdm># info
-------------------------------------------
           channel 44
           wavetracker
               power-control
                   target-power -7.50
               exit
```

```
            encode key1 205 key2 749
        exit
-----------------------------------------------

*A:ALA-A>config>port>dwdm># info detail
-----------------------------------------------
        channel 44
        wavetracker
            power-control
                target-power -7.50
            exit
            encode key1 205 key2 749
            report-alarm enc-fail enc-degr pwr-fail pwr-degr pwr-high pwr-low
        exit
        rxdtv-adjust
-----------------------------------------------
*A:ALA-A>config>port>dwdm># wavetracker

*A:ALA-A>config>port>dwdm>wavetracker># info
-----------------------------------------------
            power-control
                target-power -7.50
            exit
            encode key1 205 key2 749
-----------------------------------------------


*A:ALA-A>config>port>dwdm>wavetracker># info detail
-----------------------------------------------
            power-control
                target-power -7.50
            exit
            encode key1 205 key2 749
            report-alarm enc-fail enc-degr pwr-fail pwr-degr pwr-high pwr-low
-----------------------------------------------
```

The following is an example of the show port <portId> wavetracker command for the non-default WaveTracker configuration as shown above:

```
*A:ALA-A# show port 3/2/1 wavetracker

===============================================================================
Wavelength Tracker
===============================================================================
Power Control      : Enabled                 WaveKey Status     : Enabled
Target Power       :  -7.50 dBm              WaveKey 1          : 205
Measured Power     :  -7.49 dBm              WaveKey 2          : 749

Cfg Alarms         : enc-fail enc-degr pwr-fail pwr-degr pwr-high pwr-low
Alarm Status       :

Maximum Power      :   0.47 dBm              Power Upper Margin :   7.96 dB
Minimum Power      : -21.23 dBm              Power Lower Margin :  13.74 dB
===============================================================================
```

The following example shows the Wavetracker keys allowed for each DWDM channel:

ITU Channel	Key1 Min	Key1 Max	Key2 Min	Key2 Max
61	1548	1548	2032	2032
59	1	15	545	559
58	18	32	562	576
57	35	49	579	593
56	52	66	596	610
54	69	83	613	627
53	86	100	630	644
52	103	117	647	661
51	120	134	664	678
49	137	151	681	698
48	154	168	698	712
47	171	185	715	729
46	188	202	732	746
44	205	219	749	763
43	222	236	766	780
42	239	253	783	797
41	256	270	800	814
39	273	287	817	831
38	290	304	834	848
37	307	321	851	865
36	324	338	868	882
34	341	355	885	899
33	358	372	902	916
32	375	389	919	933
31	392	406	936	950
29	409	423	953	967
28	426	440	970	984
27	443	457	987	1001
26	460	474	1004	1018
24	477	491	1021	1035
23	494	508	1038	1052
22	511	525	1055	1069
21	528	542	1072	1086
60	1089	1103	1573	1587
55	1106	1120	1590	1604
50	1123	1137	1607	1621
45	1140	1154	1624	1638
40	1157	1171	1641	1655
35	1174	1188	1658	1672
30	1191	1205	1675	1689
25	1208	1222	1692	1706
20	1225	1239	1709	1723
19	1242	1256	1726	1740
18	1259	1273	1743	1757
17	1276	1290	1760	1774
595	1293	1307	1777	1791
585	1310	1324	1794	1808
575	1327	1341	1811	1825
565	1344	1358	1828	1842
545	1361	1375	1845	1859
535	1378	1392	1862	1876
525	1395	1409	1879	1893
515	1412	1426	1896	1910
495	1429	1443	1913	1927
485	1446	1460	1930	1944
475	1463	1477	1947	1961

```
465      1480  1494  1964  1978
445      1497  1511  1981  1995
435      1514  1528  1998  2012
425      1531  1545  2015  2029
415      1548  1562  2032  2046
395      3585  3599  2049  2063
385      3602  3616  2066  2080
375      3619  3633  2083  2097
365      3636  3650  2100  2114
345      3653  3667  2117  2131
335      3670  3684  2134  2148
325      3687  3701  2151  2165
315      3704  3718  2168  2182
295      3721  3735  2185  2199
285      3738  3752  2202  2216
275      3755  3769  2219  2233
265      3772  3786  2236  2250
245      3789  3803  2253  2267
235      3806  3820  2270  2284
225      3823  3837  2287  2301
215      3840  3854  2304  2318
605      3857  3871  2321  2335
555      3874  3888  2338  2352
505      3891  3905  2355  2369
455      3908  3922  2372  2386
405      3434  3448  3946  3960
355      3451  3465  3963  3977
305      3468  3482  3980  3994
255      3485  3499  3997  4011
205      3502  3516  4014  4028
195      3519  3533  4031  4045
185      3536  3550  4048  4062
175      3553  3567  4065  4079
```

2.23.11 Configuring OTU Port Parameters

The following example shows an OTU port configuration:

```
*A:ALA-A>config>port>otu# info detail
----------------------------------------------
          otu2-lan-data-rate 11.049
          sf-sd-method fec
          sf-threshold 5
          sd-threshold 7
          fec enhanced
          no report-alarm otu-ais otu-ber-sd otu-tim otu-iae otu-biae fec-sd
          no report-alarm fec-fail fec-uncorr odu-ais odu-oci odu-lck odu-bdi
          no report-alarm odu-tim opu-tim opu-plm
          report-alarm loc los lof lom otu-ber-sf otu-bdi fec-sf
          sm-tti
              tx auto-generated
              expected auto-generated
              no mismatch-reaction
          exit
          pm-tti
```

```
            tx auto-generated
            expected auto-generated
            no mismatch-reaction
        exit
        psi-tti
            tx auto-generated
            expected auto-generated
            no mismatch-reaction
        exit
        psi-payload
            tx auto
            expected auto
            no mismatch-reaction
        exit
-----------------------------------------------
```

The following example shows the show port <portId> otu detail for the default OTU configuration as shown above:

```
*A:ALA-A# show port 3/2/1 otu detail

===============================================================================
OTU Interface
===============================================================================
OTU Status         : Enabled                    FEC Mode         : enhanced
Async Mapping      : Disabled                   Data Rate        : 11.049 Gb/s

Cfg Alarms         : loc los lof lom otu-ber-sf otu-bdi fec-sf
Alarm Status       :
SF/SD Method       : FEC                        SF Threshold     : 1E-5
                                                SD Threshold     : 1E-7

SM-TTI Tx (auto)   : ALA-A:3/2/1/C44
SM-TTI Ex (bytes)  : (Not Specified)
SM-TTI Rx          : ALA-A:5/2/1/C34
OTU-TIM reaction   : none

PM-TTI Tx (auto)   : ALA-A:3/2/1/C44
PM-TTI Ex (bytes)  : (Not Specified)
PM-TTI Rx          : ALA-A:5/2/1/C34
ODU-TIM reaction   : none

PSI-TTI Tx (auto)  : ALA-A:3/2/1/C44
PSI-TTI Ex (bytes) : (Not Specified)
PSI-TTI Rx         : ALA-A:5/2/1/C34
OPU-TIM reaction   : none

PSI-PT Tx (auto)   : 0x03 (syncCbr)
PSI-PT Ex (auto)   : 0x03 (syncCbr)
PSI-PT Rx          : 0x03 (syncCbr)
OPU-PLM reaction   : none
===============================================================================
OTU Statistics
===============================================================================
Elapsed Seconds                                              10
-------------------------------------------------------------------------------
Near End Statistics                                    Count
-------------------------------------------------------------------------------
```

```
FEC Corrected 0s                                                    0
FEC Corrected 1s                                                    0
FEC Unrrectable Sub-rows                                            0
FEC ES                                                              0
FEC SES                                                             0
FEC UAS                                                             0
Pre-FEC BER                                                 0.000E+00
Post-FEC BER                                                0.000E+00
-------------------------------------------------------------------------------
SM BIP8                                                             0
SM ES                                                               0
SM SES                                                              0
SM UAS                                                              0
SM-BIP8-BER                                                 0.000E+00
-------------------------------------------------------------------------------
PM BIP8                                                             0
PM ES                                                               0
PM SES                                                              0
PM UAS                                                              0
PM-BIP8-BER                                                 0.000E+00
-------------------------------------------------------------------------------
NPJ                                                                 0
PPJ                                                                 0

-------------------------------------------------------------------------------
Far End Statistics                                          Count
-------------------------------------------------------------------------------
SM BEI                                                              0
PM BEI                                                              0
===============================================================================
```

The window over which the Bit Error Rate (BER) determined is based on the configured threshold level. The higher the error rate the shorter the window and as the error rate decreases the window increases. Table 32 lists the configured BER thresholds and corresponding window lengths.

Table 32 **Configured BER Thresholds and Window Lengths**

Configured BER Threshold	Window Length
10^-3	8ms
10^-4	8ms
10^-5	8ms
10^-6	13ms
10^-7	100ms
10^-8	333ms
10^-9	1.66s

2.23.12 Configuring ATM Interface Parameters

ATM interface parameters can only be configured for SONET/SDH ports/paths and TDM ports/channels supporting ATM encapsulation, and for IMA multilink bundles.

ATM interface parameters allow users to configure characteristics of an ATM interface. The Nokia routers support configuration of the following ATM interface characteristics:

- Cell-format — Allows user to select the ATM cell format to be used on a given interface: UNI/NNI
- ILMI — Allows user to enable/disable ILMI protocol
- Traffic-desc — Allows user to configure ILMI PVCC TM characteristics over a given ATM interface ingress and egress direction characteristics can be configured separately)
- Mapping — Allows user to select ATM cell mapping into an HDLC frame: Direct/PLCP

2.23.12.1 PLCP/Direct Mapping

Setting mapping to PLCP changes the effective speed of a DS3 interface to 40.704 M. When a port operates in a PLCP mode, the OCD events and LCD are not applicable (including related status fields and counters).

Similarly the below-defined PLCP statuses, alarms, counters do not apply for direct mapped ports.

When a path operates in the PLCP mode, the router supports the standard ATM MIB monitoring of the PLCP operations, for example:

- PLCP severely errored framing seconds
- PLCP alarm state
- PLCP unavailable seconds counter

Table 33 shows how SONET alarm status, path operational status, ATM interface and PLCP status and PLCP Alarm state interact.

Table 33 **Alarm State Interactions**

Content of the Received Signal						**Status Field Values**			
Local Signal	Local Frame	Local Payld	Local PLCP Framing	Far End Framing	Far End PLCP Framing	Path Sonet Alarm Status	Path Oper Status	Atm Interface Oper Status	PLCP Alarm State
Y	Y	Y	Y	Y	Y	None	Up	Up	No Alarm
Y	Y	Y	Y	Y	Prob	None	Up	Lower Layer Down	Far End Alarm Rx
Y	Y	Y	Y	Prob	Prob	RDI	Down	Lower Layer Down	Far End Alarm Rx
Y	Y	Y	Prob	Y	N/A	None	Up	Lower Layer Down	Incoming LOF
Y	Y	Y	Prob	Prob	N/A	RDI	Down	Lower Layer Down	Incoming LOF
Y	Prob	N/A	N/A	N/A	N/A	LOF	Down	Lower Layer Down	Incoming LOF
AIS	N/A	N/A	N/A	N/A	N/A	AIS	Down	Lower Layer Down	Incoming LOF
Prob	N/A	N/A	N/A	N/A	N/A	LOS	Down	Lower Layer Down	Incoming LOF

A DS3 path configured for PLCP mapping:

- Supports transmit and receive of the Ax, Px and C1 bits.
- Ignores the received Z1, Z2, Z3 octets of the PLCP frame and transmits all zeros in the Z1, Z2, Z3 octets of the PLCP frame.
- Ignores the received F1 octet of the PLCP frame, and transmits all zeros in the F1 octet of the PLCP frame.

- Samples and uses for performance monitoring received FEBE bits of G1 octet and transmits the number of BIP-8 errors detected by the receive framer using the FEBE bits of the G1 octet.Detects a PLCP Far End Alarm when 10 consecutive PLCP frames are received with the RAI bit set, and transmits a set RAI bit when the local port has declared PLCP-LOF. When the local port declares PLCP-LOF is cleared, the outgoing RAI bit is cleared.
- Ignores the received X bits of the G1 octet, and transmits all zeros in the X bits of the G1 octet of the PLCP frame.
- Ignores the received M1 and M2 octets and transmits all zeros in the M1 and M2 octets of the PLCP frame.

2.23.12.2 ATM Interface Configurations

Use the following CLI syntax to configure ATM interface parameters for SONET/SDH paths:

CLI Syntax:
```
config# port port-id
sonet-sdh
     path [sonet-sdh-index]
               atm
                    cell-format cell-format
                    ilmi [vpi/vci]
                         egress
                              traffic-desc traffic-desc-
                                 profile-id
                         ingress
                              traffic-desc traffic-desc-
                                 profile-id
                         keep-alive [poll-frequency
                            seconds] [poll-count value]
                            [test-frequency seconds]
                         protocol protocol-type
                         [no] shutdown
                    min-vp-vpi value
```

Use the following CLI syntax to configure ATM interface parameters for IMA bundles.

CLI Syntax:
```
config>port>multilink-bundle
ima
     atm
          cell-format cell-format
          min-vp-vpi value
```

Use the following CLI syntax to configure ATM interface parameters for TDM channels:

CLI Syntax:

```
config# port {port-id}
tdm
     ds1 [ds1-id]
          channel-group 1
               atm
                    cell-format cell-format
                    min-vp-vpi value
     ds3 [sonet-sdh-index]
          atm
               cell-format cell-format
               min-vp-vpi value
               mapping {direct | plcp}
     e1 [e1-id]
          channel-group 1
               atm
                    cell-format cell-format
                    min-vp-vpi value
     e3 [sonet-sdh-index]
          atm
               cell-format cell-format
               min-vp-vpi value
```

2.23.13 Configuring Frame Relay Parameters

Frame Relay pipes are used to provide customer-to-customer Frame Relay PVCs or to interconnect individual Frame Relay clouds.

Frame Relay parameters can only be configured in SONET/SDH and channelized TDM MDA contexts.

The following example shows a channelized interface configuration:

```
A:ALA-7>config>port# info detail
----------------------------------------------
        description "DS3/E3"
...
        tdm
            buildout long
            ds3 ds3
                type t3
                channelized
                clock-source loop-timed
                framing c-bit
                no feac-loop-respond
                no mdl
```

```
                    no mdl-transmit
                    no loopback
                    report-alarm ais los
                    no report-alarm oof rai looped
                    no shutdown
                exit
                ds1 ds1-1
                    shutdown
                    framing esf
                    no loopback
                    report-alarm ais los
                    no report-alarm oof rai looped
                    channel-group 1
                        description "DS3/E3"
                        mode access
                        encap-type frame-relay
                        no mtu
                        no mac
                        timeslots 1
                        speed 64
                        crc 16
                        frame-relay
                            lmi-type itu
                            mode dte
                            n393dce 4
                            n393dte 4
                            n391dte 6
                            n392dce 3
                            n392dte 3
                            t391dte 10
                            t392dce 15
                        exit
                        no shutdown
                    exit
                exit
            exit
            no shutdown
-------------------------------------------
A:ALA-7>config>port#
```

2.23.13.1 SONET/SDH Interfaces

This section applies also to FR interfaces on Sonet/SDH high-speed channels on ASAP MDAs. In order to configure Frame Relay on the associated port/channel, the `frame-relay` encapsulation type must be specified.

The following output shows a Frame Relay encapsulation type and the Frame Relay defaults.

```
A:ALA-7>config>port# info detail
-------------------------------------------
        description "OC-3/OC-12 SONET/SDH"
        access
            ingress
```

```
                    pool default
                        resv-cbs default
                        slope-policy "default"
                    exit
                exit
                egress
                    pool default
                        resv-cbs sum
                        slope-policy "default"
                    exit
                exit
            exit
            network
                egress
                    pool default
                        resv-cbs default
                        slope-policy "default"
                    exit
                exit
            exit
            sonet-sdh
                framing sonet
                clock-source node-timed
                no loopback
                speed oc12
                report-alarm loc lrdi lb2er-sf slof slos
                no report-alarm lais ss1f lb2er-sd lrei
                threshold ber-sd rate 6
                threshold ber-sf rate 3
                section-trace byte 0x1
                path
                    description "OC-3/OC-12 SONET/SDH"
                    mode access
                    encap-type frame-relay
                    no mtu
                    no mac
                    crc 32
                    no scramble
                    trace-string "Nokia 7750 ALA-"
                    report-alarm plop pplm puneq
                    no report-alarm pais prdi prei
                    signal-label 0xcf
                    frame-relay
                        lmi-type itu
                        mode dte
                        n393dce 4
                        n393dte 4
                        n391dte 6
                        n392dce 3
                        n392dte 3
                        t391dte 10
                        t392dce 15
                    exit
                    no shutdown
                exit
            exit
            no shutdown
-------------------------------------------
A:ALA-7>config>port# pwc
```

2.23.14 Configuring Multilink PPP Bundles

Multilink bundles can have from 1 to 8 members (ports) specified. The bundles aggregate channelized ports which define available bandwidth to carry data over a DS1 channel. 56 multilink bundles can be configured per MDA. 256 MLPPP groups are supported per ASAP MDA. Each bundle represents a single connection between two routers.

Multilink bundling is based on a link control protocol (LCP) option negotiation that permits a system to indicate to its peer that it is capable of combining multiple physical links into a bundle.

Multilink bundling operations are modeled after a virtual PPP link-layer entity where packets received over different physical link-layer entities are identified as belonging to a separate PPP network protocol (the Multilink Protocol, or MP) and recombined and sequenced according to information present in a multilink fragmentation header. All packets received over links identified as belonging to the multilink arrangement are presented to the same network-layer protocol processing machine, whether they have multilink headers or not.

When you configure multilink bundles, consider the following guidelines:

- Multilink bundle configuration should include at least two ports.
- A maximum of 8 ports can be included in a multilink bundle.
- Multilink bundles can only be aggregated on a single MDA.

```
A:ALA-A>config# port bundle-5/2.1
A:ALA-A>config>port# multilink-bundle
A:ALA-A>config>port>ml-bundle# member 5/2/1.ds0grp-1.1
A:ALA-A>config>port>ml-bundle# member 5/2/1.ds0grp-2.2
A:ALA-A>config>port>ml-bundle# member 5/2/1.ds0grp-1.1
```

2.23.15 Configuring Multilink ATM Inverse Multiplexing (IMA) Bundles

IMA bundles are supported on Channelized ASAP MDAs. The bundles aggregate E1 or DS1 ATM channels into a single logical ATM interface.

2.23.15.1 IMA Bundles

Use the following CLI syntax to configure IMA bundle parameters:

CLI Syntax:

```
configure# port bundle-type-slot/mda.bundle-num
description description-string
multilink-bundle
     fragment-threshold value
     ima
          atm
               cell-format {uni|nni}
               min-vp-vpi vp-vpi-value
          exit
          link-delay {activate |deactivate} milli-
            seconds
          max-bandwidth number-links
          version ima-version
     red-differential-delay red-diff-delay down
     member port-id
```

Configuration notes:

An IMA group has common interface characteristics (for example, configuration that applies to a logical ATM interface either configured via the IMA group context or taken from the primary link) The following list details those common IMA group interface characteristics:

- Encapsulation type (ATM)
- ATM interface characteristics (under the ATM menu context)
- Interface mode type (only access is supported)
- MTU value (derived from the primary link)

Member links inherit those common characteristics from the IMA group that they are part of and as long as they are part of an IMA group. Characteristics derived from the primary link (MTU, interface mode type) can be changed on the primary link only and not on other links in the bundle or a bundle itself. The primary link is the member which has the lowest ifindex. When a member is added/deleted the primary member may be changed based on ifIndicies of all member links.

Once a path becomes part of an IMA group logical link, the path ceases to exist as a physical ATM path interface. This means that:

1. ATM interface bundle characteristics enforced over the link. Note that when a link is removed from an IMA bundle, the link's ATM characteristics are reset to ATM interface defaults.
2. No services can be configured on the member link itself.

After the primary member has been added each additional member added to the group will only be accepted if it matches the configuration of the IMA group. ATM interface characteristics are not part of this verification as they are overwritten/reset to defaults when a link is added to/removed from an IMA bundle.

Upon addition to an IMA group, each added member is automatically assigned an IMA link Id. IMA link Ids are in range from 0 to 7 and stay constant as long as the router does not reboot.

When configuring IMA bundles, consider the following guidelines:

- IMA bundles should contain at least two members.
- A maximum of eight members can be included in an IMA bundle.
- IMA links can only be aggregated into a bundle within a single MDA.
- IMA group maximum bandwidth and minimum link settings allows, by default, for over-subscription of shaped services; however when that occurs scheduling of traffic over an IMA group ATM interface degrades to round-robin between shaped services, therefore to preserve full ATM TM even during a member link failure, it is recommended that maximum bandwidth is set to minimum links.
- When configuring the red differential delay for IMA groups on ASAP MDAs, the value configured is converted into acceptable frame sequence number delay on a link since delay is granular to IMA frame sequence number difference. For E1 channels (receiving frame time 27 ms), configured values map to the enforced values as follows: 0 ms maps to 0 frame sequence number difference (27 ms delay), 1 to 27 ms maps to 1 frame sequence number difference (54 ms delay), 28 - 50 ms maps to 2 frame sequence number difference (81 ms delay). Similarly, for DS1 channels (receiving frame time 35 ms), configured values map to enforced values as follows: 0 ms maps to 0 frame sequence number difference (35 ms delay), 1 to 35 ms maps to 1 frame sequence number difference (70 ms delay), 36 to 50 ms maps to 2 frame sequence number difference (105 ms delay).
- When a channel is deleted from an IMA group it is recommended that a deletion takes place at the far end first when the far end supports graceful deletion to ensure no cell loss takes place on the 7750 SR RX end of the channel. When a channel is deleted on the 7750 SR end first, a small data loss will take place on the 7750 SR RX side (depending on the time required for the far end to deactivate its TX on the link being deleted).
- When no member links are configured on an IMA group, the speed of an E1 channel will be used to compute the maximum IMA group bandwidth that may be allocated to shaped services.
- The shutdown command for IMA groups sets the IMA group state to “Blocking”. This makes the group operationally down but will not bring down the individual IMA links. Services configured on the IMA group will go operationally down as well.

- The 7750 SR supports automatic IMA version changing when the far end IMA group version matches the configured version. The group will remain operationally down until one of the IMA groups changes version.
- When adding member links to an IMA group, the clock-source of the e1 or ds1 link must be set to node-timed.

The following example shows the creation of an IMA bundle with 3 group members residing on a channelized OC-3 ASAP MDA in slot 5/2/1:

```
A:ALA-A>config# port bundle-ima-5/2.1
A:ALA-A>config>port# multilink-bundle
A:ALA-A>config>port>ml-bundle# member 5/2/1.1.1.1
A:ALA-A>config>port>ml-bundle# member 5/2/1.1.2.1

A:ALA-A>config>port>ml-bundle# member 5/2/1.1.3.1
```

2.23.16 Multi-Class MLPPP

The following guidelines apply to multi-class MLPPP:

- MC-MLPPP must be configured before links are added to a bundle.
- MC-MLPPP and LFI (**config>port>ml-bundle>interleave-fragments**) are mutually exclusive.
- MC-MLPPP is not supported when port is configured as **network** mode.
- MC-MLPPP can be enabled on every MLPPP bundle and bundle protection group.
- MC-MLPPP is supported only on ASAP MDAs (for example, m4-choc3-as-sfp, m1-choc12-as-sfp, m4-chds3-as, m12-chds3-as).
- Short and long sequence packet formats are supported (both ends must be of the same type) with static mapping of forwarding classes to MC-MLPPP class (based on the number of classes negotiated with the far end).
- Single fragment size for all classes is supported.
- Prefix elision is not supported. The prefix elision (compressing common header bytes) option advises the peer that, in each of the given classes, the implementation expects to receive only packets with a certain prefix; this prefix is not to be sent as part of the information in the fragment(s) of this class.
- Fractional DS1/E1 MLPPP links are supported. This is applicable to MLPPP bundles on ASAP MDAs. Fractional E1 and Fractional DS1 links cannot be combined in the same bundle.

2.23.16.1 IMA Test Procedure

Use the following CLI commands to perform an IMA Test Pattern Procedure on a member link of an IMA group:

CLI Syntax:

```
configure# port bundle-type-slot/mda.bundle-num
multilink-bundle
     ima
     test-pattern-procedure
          test-link port-id
          test-pattern [pattern]
          no shutdown
```

An operator can deploy IMA test procedures to verify operations of IMA group and its member links. The following is a list of key points about the test pattern procedure:

1. The test procedure is performed as defined by the IMA specification version 1.1, i.e. a test pattern is sent over the specified link and is expected to be looped back over all the links in the group. ICP cells are used to perform the test.
2. The test procedure is not traffic affecting, for example, data traffic will not be affected by the ongoing test.
3. There can only be a single test executed per an IMA group at any given time
4. The IMA member link must exist in the specified group for the command to be accepted.
5. The test-pattern-procedure must be shutdown before a new test-link value or test pattern is accepted.
6. The current IMA group test pattern configuration and result of a given IMA test can be seen by executing a show command for the IMA group. A test-link result can have three values:

   a. Disabled: The test-link is currently not running.

   b. Operating: The test pattern procedure is **no shutdown** and there are currently no failed-links for this running test-pattern-procedure.

   c. Link-Failed: One or more links have failed the test-pattern-procedure. Execute a **show port <slot/mda/port.sonet-sdh-index> ima-link** command to see the failed link and received pattern value.
7. Deleting a member link that is the same as the specified test-link, to stay in compliance with key point 4, will result in the test-link value being reset to default.
8. IMA test procedure configurations are not saved when the admin save command is executed.

2.23.17 Configuring Bundle Protection Group Ports

Bundle Protection groups enable APS protection of one bundle residing on a working circuit of an APS group port by another bundle residing on the protection circuit of that APS group port. Bundle protection groups apply to MLPPP as well, and are configured the same way. The following examples show the process to configure BPGrp on ASAP MDAs to provide an APS protection for an IMA/MLPPP bundle.

First, two ASAP MDAs must be configured.

Example:
```
config# card 3
config>card# mda 2
config>card>mda# mda-type m4-choc3-as-sfp
config>card>mda# no shutdown
config>card>mda# exit
config>card# exit
config# card 10
config>card# mda 2
config>card>mda# mda-type m4-choc3-as-sfp
config>card>mda# no shutdown
config>card>mda# exit
```

Configure an APS group with working and protection circuits on the ASAP MDAs.

Example:
```
config# port aps-1
config>port# aps
config>port>aps# working-circuit 3/2/1
config>port>aps# protect-circuit 10/2/1
config>port>aps# exit
config>port# no shutdown
```

Create eight ATM DS1 channels on the APS group.

Example:
```
config>port>aps#
config>port# sonet-sdh
config>port>sonet-sdh# path sts1-1
config>port>sonet-sdh>path# no shutdown
config>port>sonet-sdh>path# exit
config>port>sonet-sdh# exit
config>port# tdm
config>port>tdm#
config>port>tdm# ds3 1
config>port>tdm>ds3# channelized ds1
config>port>tdm>ds3# no shutdown
config>port>tdm>ds3# exit
config>port>tdm# ds1 1.1
config>port>tdm>ds1# channel-group 1
```

```
config>port>tdm>ds1>channel-group# encap-type atm
config>port>tdm>ds1>channel-group# no shutdown
config>port>tdm>ds1>channel-group# exit
config>port>tdm# ds1 1.8
config>port>tdm>ds1# channel-group 1
config>port>tdm>ds1>channel-group# encap-type atm
config>port>tdm>ds1>channel-group# no shutdown
config>port>tdm>ds1>channel-group# exit
```

Next, configure an IMA-type/MLPPP-type BPGrp with working and protection bundles on working and protection circuits of aps-1 and members the created DS1s (this creates 2 IMA bundles, one on working and one on protection circuit):

Example:

```
config# port bpgrp-ima-1
config>port# multilink-bundle
config>port>multilink-bundle# working-bundle bundle-ima-
 1/1.1
config>port>multilink-bundle# protect-bundle bundle-ima-
 2/1.1
config>port>multilink-bundle# member aps-1.1.1.1
config>port>multilink-bundle# member aps-1.1.2.1
config>port>multilink-bundle# member aps-1.1.3.1
config>port>multilink-bundle# member aps-1.1.4.1
config>port>multilink-bundle# member aps-1.1.5.1
config>port>multilink-bundle# member aps-1.1.6.1
config>port>multilink-bundle# member aps-1.1.7.1
config>port>multilink-bundle# member aps-1.1.8.1
config>port>multilink-bundle# exit
config>port>multilink-bundle# no shutdown
config>port>multilink-bundle# exit
config>port# no shutdown
```

Finally, a service can be configured on this bundle using the BPGrp ID (for example, an ATM VC 0/32 SAP would be: `sap bpg-ima-1:0/32`).

Configuration Notes and Guidelines:

- Any configuration on a BPGrp applies to both the working and protection bundle.
- Working and protection bundles can be shutdown individually.
- Services cannot be configured on a BPGrp until at least one member link has been configured.
- The published switchover times for bundle protection groups on the router are dependent on the far end being able to recover from cell loss within that time. To ensure this, the following recommendations are given:

- The BPGrp link activation timer should be configured to a value small enough to allow a quick recovery from any IMA failure occurring during the switchover. A recommended value is 1 second.
- The ADM that terminates APS should support standard APS switchover time requirements.
- The far end IMA/MLPPP links must be able to tolerate cell loss during APS switchover without bringing links down. This includes, for example, a combination of link activation/deactivation and appropriate configuration of TDM/SONET debounce timers.
- Because of the temporary cell loss during the APS switchover, the far end IMA/MLPPP will experience a misalignment between individual links within an IMA/MLPPP group. The far end IMA/MLPPP group must support fast-realignment of links without having to bring the links down. The router synchronizes the IMA/MLPPP streams the far end receives between switchovers in an effort to cause the least amount of misalignment.
- To increase the BPGrp robustness, it is recommended to provision more IMA/MLPPP links than is required and set the minimum links and max bandwidth parameters to the number of required links. This type of configuration is required on the far end as well.

2.23.17.1 Configuring a Channelized DS1 Card

The 7750 SR-c12 and 7750 SR-c4 support channelized DS-1 cards. The channelization is as follows:

- N*DS0 in DS1 port.{1..24}
- N*DS0 in E1 port.{1..32}

To make sure you have a channel-capable MDA or CMA, verify the MDA-type that you are configuring by entering a **show mda** *slot-id* command.

In the following example, MDA 7 shows a channelized DS1 CMA.

```
A:7710-3>config# show mda
===============================================================================
MDA Summary
===============================================================================
Slot  Mda   Provisioned           Equipped              Admin     Operational
            Mda-type              Mda-type              State     State
-------------------------------------------------------------------------------
1     1     m60-10/100eth-tx      m60-10/100eth-tx      up        up
      3     m4-atmoc12/3-sfp      m4-atmoc12/3-sfp      up        up
      5     c8-10/100eth-tx       c8-10/100eth-tx       up        up
      6     c1-1gb-sfp            c1-1gb-sfp            up        up
      7     c8-chds1              c8-chds1              up        up
```

```
      8     c4-ds3               c4-ds3               up        up
===============================================================================
A:7710-3>

A:7710-3>config# show mda 1/7 detail
===============================================================================
MDA 1/7 detail
===============================================================================
Slot  Mda   Provisioned           Equipped             Admin     Operational
            Mda-type             Mda-type             State     State
-------------------------------------------------------------------------------
      7     c8-chds1             c8-chds1             up        up
MDA Specific Data
    Maximum port count            : 8
    Number of ports equipped      : 8
    Network ingress queue policy  : default
    Capabilities                  : TDM, PPP, FR
    Min channel size              : PDH DS0 Group
    Max channel size              : PDH DS1
    Max number of channels        : 64
    Channels in use               : 0

Hardware Data
    Part number                   : Sim Part#
    CLEI code                     : Sim CLEI
    Serial number                 : mda-7
    Manufacture date              : 01012003
    Manufacturing string          : Sim MfgString mda-7
    Manufacturing deviations      : Sim MfgDeviation mda-7
    Administrative state          : up
    Operational state             : up
    Temperature                   : 35C
    Temperature threshold         : 75C
    Time of last boot             : 2006/10/02 09:28:22
    Current alarm state           : alarm cleared
    Base MAC address              : 04:7b:01:07:00:01
===============================================================================
A:7710-3>
```

In the TDM E1 context, configure DS0 channel groups and their parameters. For a DS1 channel-group, up to 24 timeslots can be assigned (numbered 1 to 24). For an E1 channel-group, up to 31 timeslots can be assigned (numbered 2 to 32). For ATM, all timeslots are auto-configured when a channel group gets created (there is no sub-E1 for ATM). ATM, Frame Relay and BCP-NULL encapsulation examples follow:

```
ALA-A>config>port>tdm# e1 1.1
ALA-A>config>port>tdm>e1# channel-group 1
ALA-A>config>port>tdm>e1>channel-group# timeslots 2
ALA-A>config>port>tdm>e1>channel-group# no shutdown
ALA-A>config>port>tdm>e1>channel-group#
ALA-A>config>port>tdm>e1# no shutdown
ALA-A>config>port>tdm>e1# channel-group 2
ALA-A>config>port>tdm>e1>channel-group# timeslots 3
ALA-A>config>port>tdm>e1>channel-group# encap-type frame-relay
ALA-A>config>port>tdm>e1>channel-group# no shutdown
ALA-A>config>port>tdm>e1>channel-group# exit
ALA-A>config>port>tdm>e1# channel-group 3
```

```
ALA-A>config>port>tdm>e1>channel-group# timeslots 11,12
ALA-A>config>port>tdm>e1>channel-group# encap-type cisco-hdlc
ALA-A>config>port>tdm>e1>channel-group# no shutdown
ALA-A>config>port>tdm>e1>channel-group# exit
ALA-A>config>port>tdm>e1# no shutdown
ALA-A>config>port>tdm>e1# exit
ALA-A>config>port>tdm# e1 1.2
ALA-A>config>port>tdm>e1# no shutdown
ALA-A>config>port>tdm>e1# channel-group 1
ALA-A>config>port>tdm>e1>channel-group# encap-type atm
ALA-A>config>port>tdm>e1>channel-group# no shutdown
ALA-A>config>port>tdm>e1>channel-group# exit
ALA-A>config>port>tdm>e1# no shutdown
ALA-A>config>port>tdm# info
----------------------------------------------
        tdm
           ds3 1
                no shutdown
            exit
           e1 1.1
                channel-group 1
                     timeslots 2
                     no shutdown
               exit
                channel-group 2
                    encap-type frame-relay
                    frame-relay
                    exit
                    timeslots 10
                    no shutdown
                exit
                channel-group 3
                    encap-type cisco-hdlc
                    cisco-hdlc
                    exit
                    timeslots 11,12
                    no shutdown
                exit
                no shutdown
            exit
           e1 1.2
                channel-group 1
                    encap-type atm
                    atm
                    exit
                    no shutdown
                exit
                no shutdown
        exit
        no shutdown
----------------------------------------------
ALA-A>config>port>tdm#
```

Services can now be applied to the configured channelized ports.

2.23.18 Configuring LAG Parameters

LAG configurations should include at least two ports. Other considerations include:

- A maximum of 64 ports (depending on IOM type, chassis-mode and lag-id) can be included in a LAG. All ports in the LAG must share the port characteristics inherited from the primary port.
- Autonegotiation must be disabled or set limited mode for ports that are part of a LAG to guarantee a specific port speed.
- Ports in a LAG must be configured as full duplex.

The following example shows LAG configuration output:

```
A:ALA-A>config>lag# info detail
----------------------------------------------
        description "LAG2"
        mac 04:68:ff:00:00:01
        port  1/1/1
        port  1/3/1
        port  1/5/1
        port  1/7/1
        port  1/9/1
        dynamic-cost
        port-threshold 4 action down
----------------------------------------------
A:ALA-A>config>lag#
```

2.23.18.1 Configuring BFD on LAG Links

BFD can be configured under the LAG context to create and establish the micro-BFD session per link after the LAG and associated links have been configured. An IP interface must be associated with the LAG or a VLAN within the LAG, if dot1q encapsulation is used, before the micro-BFD sessions can be established.

Complete the following steps to enable and configure BFD over the individual LAG links:

Step 1. Enable BFD within the LAG context, which also enters the CLI into the BFD context

Step 2. Configure the address family which is to be used for the micro BFD sessions. Only one address family can be configured per LAG

Step 3. Configured the local-IP address to be used for the BFD sessions

Step 4. Configure the remote-IP address to be used for the BFD sessions

When configuring the local and remote IP address for the BFD over LAG link sessions, the *local-ip* parameter should always match an IP address associated with the IP interface to which this LAG is bound. In addition, the *remote-ip* parameter should match an IP address on the remote system and should also be in the same subnet as the *local-ip* address. If the LAG bundle is re-associated with a different IP interface, the *local-ip* and *remote-ip* parameters should be modified to match the new IP subnet. The *local-ip* and *remote-ip* values do not have to match a configured interface in the case of tagged LAG/ports.

The optional parameters that can be configured for the BFD over LAG links include:

- Transmit Interval
- Receive Interval
- Multiplier
- Max-Wait-for-Up-Time - This parameter controls how long a link will remain active if BFD is enabled after the LAG and associated links are active and in a forwarding state.
- Max-Time-Admin-Down - This parameter controls how long the system will wait before bringing the associated link out of service if an admin down message is received from the far-end.

The following is a sample configuration:

```
*A:Dut-C>config>lag# info
----------------------------------------------
        bfd
            family ipv4
                local-ip-address 10.120.1.2
                receive-interval 1000
                remote-ip-address 10.120.1.1
                transmit-interval 1000
                no shutdown
            exit
        exit
        no shutdown
```

2.23.19 Configuring G.8031 Protected Ethernet Tunnels

Ethernet tunnel configuration can include at most two paths. Other considerations include:

- A path contains one member port and one control-tag (backbone VLAN ID/ BVID)

- If the operator wants to replace an existing member port or a control-tag, the whole path needs to be shutdown first. The alternate path will be activated as a result keeping the traffic interruption to a minimum. Then the whole path must be deleted and re-created. To replace an existing member port or control tag, the whole path needs to be shutdown first. The alternate path will be activated as a result keeping traffic interruption to a minimum. Then the whole path must be deleted, the alternate path precedence modified to primary before re-creating the new path.
- The Ethernet tunnel will inherit the configuration from the first member port. The following port-level configuration needs to be the same between member ports of an Ethernet tunnel:
  - config>port>ethernet>access>{ingress|egress}>queue-group
  - config>port>ethernet>egress-scheduler-policy
  - config>port>access>egress>pool
  - config>port>ethernet>dot1q-etype
  - config>port>ethernet>qinq-etype
  - config>port>ethernet>pbb-etype
  - config>port>ethernet> mtu
- The operator can update these port parameters only if the port is the sole member of an Ethernet tunnel. This means that in the example below, the operator needs to remove port 1/1/4 and port 1/1/5 before being allowed to modify 1/1/1 for the above parameters.

CLI Syntax:

```
eth-tunnel 1
     path 1
          member 1/1/1
     path 2
          member 1/1/4
eth-tunnel 2
     path 1
          member 1/1/1
  path 2
         member 1/1/5
```

The following example shows eth-tunnel configuration output:

```
port 1/1/1
     ethernet
          encap-type dot1q
port 2/2/2
     ethernet
          encap-type dot1q

config eth-tunnel 1
```

```
        path 1
             member 1/1/1
             control-tag 100
             precedence primary
             eth-cfm
                  mep 51 domain 1 association 1
                  ccm-enable
                  low-priority-defect allDef
                  mac-address 00:AE:AE:AE:AE:AE
                  control-mep
                  no shutdown
        no shutdown
        path 2
             member 2/2/2
             control-tag 200
eth-cfm
        mep
             mep 52 domain 1 association 2 direction down
             ccm-enable
             low-priority-defect allDef
             mac-address 00:BE:BE:BE:BE:BE
             control-mep
             no shutdown
no shutdown
```

2.24 Service Management Tasks

This section discusses basic procedures of the following service management tasks:

- Modifying or Deleting an MDA, MCM, CMA or XMA
- Modifying a Card Type
- Deleting a Card
- Deleting Port Parameters

2.24.1 Modifying or Deleting an MDA, MCM, CMA or XMA

To change an MDA, MCM, CMA, or XMA type already provisioned for a specific slot or card, first you must shut down the slot/MDA/port configuration and then delete the MDA,MCM, CMA, or the XMA from the configuration.

To modify or delete CMAs or XMAs, use the MDA command structure.

Use the following CLI syntax to modify an MDA on the 7450 ESS and 7750 SR platforms (or an XMA on the 7950 XRS platforms):

CLI Syntax:
```
config> port port-id
shutdown
```

CLI Syntax:
```
config> card slot-number
     shutdown
[no] mda mda-number
     [no] mda-type mda-type
     [no] hi-bw-mcast-src [alarm] [group group-id]
     shutdown
```

Note: You do not have to shutdown and remove an MCM to remove or modify an MDA on the 7750 SR. Use the following sequence if changing the MCM type or slot configuration.

2.24.2 Modifying a Card Type

In order to modify the card type already provisioned for a specific slot, you must shutdown existing port configurations and shutdown and remove all MDA, XMA, or CMA configurations. For 7750 SR-c12/c4 systems, after removing MDA configurations, shutdown and remove the MCM from service before modifying the card.

Note that CMAs do not require an MCM, therefore, if removing a CMA-type MDA from service, it is not required to shutdown and remove an MCM before modifying the card.

You must reset the IOM after changing the MDA type from MS-ISA to any other MDA type.

Use the following CLI syntax to modify a card type already provisioned for a specific slot:

CLI Syntax:
```
config> port port-id
[no] shutdown
```

CLI Syntax:
```
config> card slot-number
mda mda-number
     [no] mda-type mda-type
     [no] shutdown
```

CLI Syntax:
```
config> card slot-number
```

```
     shutdown
[no] mcm mcm-number
     no mcm-type mcm-type
     shutdown
```

2.24.3 Deleting a Card

To delete a card type provisioned for a specific slot, you must shutdown existing port configurations and shutdown and remove all MDA, XMA, or CMA configurations. For 7750 SR-c12/c4 systems, after removing MDA configurations, you can shutdown and remove the MCM from service before modifying the card.

Use the following CLI syntax to delete a card provisioned for a specific slot:

CLI Syntax:

```
config> port port-id
shutdown
```

CLI Syntax:

```
config> card slot-number
card-type card-type
mda mda-number
     no mda-type mda-type
     no shutdown
mcm mcm-number (for 7750 SR-c12/c4 only)
no mcm-type mcm-type
     no shutdown
```

2.24.4 Deleting Port Parameters

Use the following CLI syntax to delete a port provisioned for a specific card or CMA:

CLI Syntax:

```
config>port port-id
shutdown
no port port-id
```

2.24.5 Soft IOM Reset

This section provides basic procedures for the following service management tasks:

- Soft Reset
- Deferred MDA Reset

2.24.5.1 Soft Reset

Soft reset is an advanced high availability feature that greatly reduces the impact of IOM/IMM resets either during a software upgrade or during other maintenance or debug operations. The combination of In Service Software Upgrade (ISSU) and Soft reset maximizes service availability in an operational network.

A soft reset re-initializes the control plane while the data plane continues operation with only very minimal impact to data forwarding. During the soft reset some processes that rely on the IOM control plane will not run for a duration that is similar to the duration of an IOM Hard reset. These processes include the updating of the IP forwarding table on the IOM (IP FIB downloads from the CPM), Layer 2 learning of new MAC addresses on the IOM, updating of the MAC forwarding table (for MAC addresses learned from other IOMs), ARP, Ethernet OAM 802.3ah, LLDP and handling for certain ICMP functions such as Can't Fragment, Redirect, Host Unreachable, Network Unreachable and TTL Expired. Note that protocols and processes on the CPM continue to operate during a Soft Reset (BGP continues to learn new routes from peers, and the new routes will be downloaded to the IOM once the Soft Reset has completed).

The combination of the very small data plane impact and special soft reset enhancements for protocols ensures that most protocols do not go down and no visible impacts to most protocols are detected externally to the SR/ESS platforms. BFD timers are temporarily increased for the duration of a soft reset in order to keep BFD sessions up. Protocols such as BGP, OSPF, IS-IS, PIM, etc with default timers remain up. A protocol using aggressive timers may go down momentarily during a soft reset.

Although the majority of protocols stay up during a Soft Reset, there are some limitations for a few protocols. Refer to the Known Limitations section of the Release Notes for the relevant release for details.

The soft IOM reset procedure is applicable during the ISSU process and for a manual soft reset procedure.

To manually perform a soft IOM reset, enter the **clear card** *slot-number* **soft** command.

Soft Reset is supported on Ethernet IMMs and on IOMs that have Ethernet MDAs provisioned. The operator can optionally force a Soft Reset on an IOM that contains at least one MDA that supports Soft Reset but also has an MDA that does not support Soft Reset or is operationally down. To force Soft Reset in this case the **hard-reset-unsupported-mdas** is used and the supported MDAs and the card itself are soft reset while the MDAs that do not support soft reset (or are operationally down) are hard reset.

The **show card** and **show mda** commands indicate that a soft IOM reset is occurring during the soft reset process.

Soft Reset is not supported on the 7750 SR-c4. On the 7750 SR-c12, Soft Reset is not supported but the ISSU procedure will avoid resetting soft reset capable MDAs/CMAs (as long as there is not new firmware for the CMA/MDA in the new image).

2.24.5.2 Deferred MDA Reset

As part of an ISSU, soft reset is supported even if the (old) firmware version on the MDAs is not the same as the (new) firmware version in the software load to which the operator is upgrading. The soft reset is allowed to proceed by leaving the previous version of the firmware running while upgrading the rest of the MDA/IOM/IMM. The operator can then issue a hard reset of the MDA/IMM at some time in the future to upgrade the firmware.

The soft reset is only allowed to proceed if the older firmware is compatible with the new IOM/IMM software load. Otherwise the soft reset is blocked and a hard reset must be used instead.

After a soft reset has been completed, a log event will be raised to warn the operator that the MDA (or IMM) is running older firmware and that they can perform a hard reset of the MDA (or IMM) at some point if required.

If the MDA/IMM is not hard reset by the operator, and then a software upgrade is performed, and the older firmware is no longer compatible with the newest load being upgraded to, then the soft reset will be blocked (or an automatic hard reset will occur for Major ISSU).

The operator can see whether they are running with older MDA/IMM firmware at any time by using the show mda detail command.

2.25 Configuration Command Reference

2.25.1 Command Hierarchies

- Card Commands
- MCM Commands
- MDA Commands
- Power Commands
- Virtual Scheduler Commands
- Forwarding Plane (FP) Commands
- Port Configuration Commands
- Port XC Commands
- Forwarding Path Extension (FPE) Commands
- Port APS Commands
- Ethernet Commands
- Interface Group Handler Commands
- Multilink Bundle Commands
- SONET-SDH Commands
- TDM Commands
- DS3 Commands
- E1 Commands
- E3 Commands
- LAG Commands
- Ethernet Tunnel Commands
- Multi-Chassis Redundancy Commands
- Forward Path Extension Commands

2.25.1.1 Card Commands

```
config
    — [no] card slot-number
        — card-type card-type
        — no card-type
        — [no] fail-on-error
        — [no] named-pool-mode
```

2.25.1.2 MCM Commands

```
        — [no] mcm mcm-slot
            — mcm-type mcm-type
            — no mcm-type
            — [no] shutdown
```

2.25.1.3 MDA Commands

```
    — [no] card slot-number
        — [no] mda mda-slot
            — access
                — egress
                    — [no] pool [name]
                        — amber-alarm-threshold percentage
                        — no amber-alarm-threshold
                        — red-alarm-threshold percentage
                        — no red-alarm-threshold
                        — resv-cbs percent-or-default amber-alarm-action step
                            percent  max percent
                        — resv-cbs percent-or-default
                        — no resv-cbs
                        — slope-policy name
                        — no slope-policy
                — ingress
                    — [no] pool [name]
                        — amber-alarm-threshold percentage
                        — no amber-alarm-threshold
                        — red-alarm-threshold percentage
                        — no red-alarm-threshold
                        — resv-cbs percent-or-default amber-alarm-action step
                            percent  max percent
                        — resv-cbs percent-or-default
                        — no resv-cbs
                        — slope-policy name
                        — no slope-policy
            — clock-mode adaptive
            — clock-mode differential [timestamp-freq {frequency}]
```

```
— egress
— egress-xpl
    — threshold threshold
    — window window
— [no] fail-on-error
— hi-bw-mcast-src [alarm] [group group-id]
— no hi-bw-mcast-src
— ingress
    — mcast-path-management
        — ancillary-override
            — path-limit megabits-per-second
            — no path-limit
        — bandwidth-policy policy-name
        — no bandwidth-policy
        — primary-override
            — path-limit megabits-per-second
            — no path-limit
        — secondary-override
            — path-limit megabits-per-second
            — no path-limit
        — [no] shutdown
— ingress-xpl
    — threshold threshold
    — window window
— mda-type mda-type
— no mda-type
— named-pool-mode
    — egress
        — named-pool-policy policy-name
        — no named-pool-policy
    — ingress
        — named-pool-policy policy-name
        — no named-pool-policy
— network
    — egress
        — [no] pool [name]
            — amber-alarm-threshold percentage
            — no amber-alarm-threshold
            — red-alarm-threshold percentage
            — no red-alarm-threshold
            — resv-cbs percent-or-default amber-alarm-action step
                percent  max [percentage]
            — resv-cbs percent-or-default
            — no resv-cbs
            — slope-policy name
            — no slope-policy
    — ingress
        — [no] pool [name]
            — amber-alarm-threshold percentage
            — no amber-alarm-threshold
            — red-alarm-threshold percentage
            — no red-alarm-threshold
            — resv-cbs percent-or-default amber-alarm-action step
                percent  max [percentage]
```

```
                                    — resv-cbs percent-or-default
                                    — no resv-cbs
                                    — slope-policy name
                                    — no slope-policy
                                — queue-policy name
                                — no queue-policy
                        — power-priority-level priority
                        — [no] shutdown
                        — [no] sync-e
                — [no] named-pool-mode [now]
                — [no] shutdown
```

2.25.1.4 Power Commands

```
config
    — system
        — power-management
            — mode [none | basic | advanced]
            — peq peq-slot
                — [no] peq-type peq-type
                — input-power-mode amperage [60 | 80]
            — power safety-alert value in watts
            — power-safety-level %
                — [no] shutdown
```

2.25.1.5 Virtual Scheduler Commands

```
— [no] card slot-number
    — virtual-scheduler-adjustment
        — rate-calc-min-int [fast-queue percent-of-default] [slow-queue percent-of-
          default]
        — no rate-calc-min-int
        — sched-run-min-int percent-of-default
        — no sched-run-min-int
        — slow-queue-thresh kilobits-per-second
        — no slow-queue-thresh
        — task-scheduling-int percent-of-default
        — no task-scheduling-int
```

2.25.1.6 Forwarding Plane (FP) Commands

```
config
    — card
        — fp [fp-number]
            — egress
```

```
            — wred-queue-control
                — buffer-allocation min percentage max percentage
                — no buffer-allocation
                — resv-cbs min percentage max percentage
                — no resv-cbs
                — [no] shutdown
                — slope-policy slope-policy-name
                — no slope-policy
        — hi-bw-mcast-src [alarm] [group group-id] [default-paths-only]
        — no hi-bw-mcast-src
        — ingress
            — access
                — queue-group queue-group-name instance instance-id
                    [create]
                    — accounting-policy policy-name
                    — no accounting-policy
                    — [no] collect-stats
                    — description long-description-string
                    — no description
                    — policer-control-override [create]
                    — no policer-control-override
                        — max-rate {rate | max}
                        — priority-mbs-thresholds
                            — min-thresh-separation size [bytes |
                                kilobytes]
                            — [no] priority level
                            — mbs-contribution [bytes | kilobytes]
                    — policer-control-policy policy-name
                    — no policer-control-policy
                    — [no] policer-override
                        — policer policer-id [create]
                        — no policer policer-id
                            — cbs {size [bytes | kilobytes] | default}
                            — no cbs
                            — mbs {size [bytes | kilobytes] | default}
                            — no mbs
                            — packet-byte-offset {add bytes | subtract
                                bytes}
                            — no packet-byte-offset
                            — rate {max | kilobits-per-second} [cir {max
                                | kilobits-per-second}]
                            — no rate
                            — stat-mode stat-mode
                            — no stat-mode
            — mcast-path-management
                — ancillary-override
                    — path-limit megabits-per-second
                    — no path-limit
                — bandwidth-policy policy-name
                — no bandwidth-policy
                — primary-override
                    — path-limit megabits-per-second
                    — no path-limit
```

```
— secondary-override
    — path-limit megabits-per-second
    — no path-limit
— [no] shutdown
— network
    — queue-group queue-group-name instance instance-id
    — no queue-group
        — accounting-policy acct-policy-id
        — no accounting-policy
        — [no] collect-stats
        — description description-string
        — no description
        — policer-control-override [create]
        — no policer-control-override
            — max-rate {rate | max}
            — priority-mbs-thresholds
                — min-thresh-separation size [bytes |
                    kilobytes]
                — [no] priority level
                — mbs-contribution [bytes | kilobytes]
        — policer-control-policy policy-name
        — no policer-control-policy
        — [no] policer-override
            — policer policer-id [create]
            — no policer policer-id
                — mbs {size [bytes | kilobytes] | default}
                — no mbs
                — cbs {size [bytes | kilobytes] | default}
                — no cbs
                — packet-byte-offset{add bytes | subtract
                    bytes}
                — no packet-byte-offset
                — rate {max | kilobits-per-second} [cir {max
                    | kilobits-per-second}]
                — no rate
                — stat-mode stat-mode
                — no stat-mode
— ingress-buffer-allocation hundredths-of-a-percent
— no ingress-buffer-allocation
— [no] stable-pool-sizing
```

2.25.1.7 Port Configuration Commands

config
- — **port** {*port-id* | *bundle-id* | *bpgrp-id* | *aps-id*}*port-id*
- — **no port** {*bundle-id* | *bpgrp-id* | *aps-id*}*port-id*
  - — **access**
    - — **egress**
      - — [**no**] **pool** [*name*]
        - — **amber-alarm-threshold** *percentage*
        - — **no amber-alarm-threshold**
        - — **red-alarm-threshold** *percentage*
        - — **no red-alarm-threshold**
        - — **resv-cbs** *percent-or-default* **amber-alarm-action step** *percent* **max** [*percentage*]
        - — **resv-cbs** *percent-or-default*
        - — **no resv-cbs**
        - — **slope-policy** *name*
        - — **no slope-policy**
    - — **ingress**
      - — [**no**] **pool** [*name*]
        - — **amber-alarm-threshold** *percentage*
        - — **no amber-alarm-threshold**
        - — **red-alarm-threshold** *percentage*
        - — **no red-alarm-threshold**
        - — **resv-cbs** *percent-or-default* **amber-alarm-action step** *percent* **max** [*percentage*]
        - — **resv-cbs** *percent-or-default*
        - — **no resv-cbs**
        - — **slope-policy** *name*
        - — **no slope-policy**
  - — [**no**] **ddm-events**
  - — **description** **long-description-string**
  - — **no description**
  - — **dwdm**
    - — **amplifier**
      - — **report-alarms** [**ild**] [**tmp**] [**mth**] [**mtl**] [**los**] [**lop**] [**com**]
    - — **channel** *channel*
    - — **coherent**
      - — **channel** *channel*
      - — **cpr-window-size** *window-size*
      - — **dispersion** *dispersion*
      - — **mode** {**automatic** | **manual**}
      - — **report-alarms** [**modflt**] [**mod**] [**netrx**] [**nettx**] [**hosttx**]
      - — **rx-los-thresh** *threshold*
      - — **sweep** **start** *dispersion-start* **end** *dispersion-end*
      - — **target-power** *power*
    - — [**no**] **rxdtv-adjust**
    - — **tdcm**
      - — **channel**
      - — **dispersion** *dispersion*
      - — **mode** {**automatic** | **manual**}
      - — **report-alarms** [**nrdy**] [**mth**] [**mtl**] [**unlck**] [**tlim**] [**einv**] [**com**]
      - — **sweep** **start** *dispersion-start* **end** *dispersion-end*

- **wavetracker**
  - **encode** *wave-key* **key2** *wave-key*
  - **no encode**
  - [**no**] **power-control**
    - [**no**] **report-alarm** [**encode-fail**] [**encode-degrade**] [**power-fail**] [**power-degrade**] [**power-high**] [**power-low**]
    - **target-power** d*Bm*
- **hybrid-buffer-allocation**
  - **egr-weight** **access** *access-weight* **network** *network-weight*
  - **no egr-weight**
  - **ing-weight** **access** *access-weight* **network** *network-weight*
  - **no ing-weight**
- [**no**] **monitor-agg-egress-queue-stats**
- **modify-buffer-allocation-rate**
  - **egr-percentage-of-rate** *rate-percentage*
  - **no egr-percentage-of-rate**
  - **ing-percentage-of-rate** *rate-percentage*
  - **no ing-percentage-of-rate**
- [**no**] **named-pool-mode**
- **named-pool-mode**
  - **egress**
    - **named-pool-policy** *policy-name*
    - **no named-pool-policy**
  - **ingress**
    - **named-pool-policy** *policy-name*
    - **no named-pool-policy**
- **network**
  - **egress**
    - [**no**] **pool** [*name*]
      - **amber-alarm-threshold** *percentage*
      - **no amber-alarm-threshold**
      - **red-alarm-threshold** *percentage*
      - **no red-alarm-threshold**
      - **resv-cbs** *percent-or-default* **amber-alarm-action step** *percent* **max** [*percentage*]
      - **resv-cbs** *percent-or-default*
      - **no resv-cbs**
      - **slope-policy** *name*
      - **no slope-policy**
- [**no**] **otu**
  - [**no**] **async-mapping**
  - **fec** {**enhanced** | **g709**}
  - **no fec**
  - **otu2-lan-data-rate** {**11.049** | **11.0957**}
  - **pm-tti**
    - **expected** **auto-generated**
    - **expected** **bytes** *byte* [*byte* (up to 64 max)]
    - **expected** **string** *identifier*
    - **expected** **use-rx**
    - **mismatch-reaction** {**squelch-rx**}
    - **no mismatch-reaction**
    - **tx** **auto-generated**
    - **tx** **bytes** *bytes* [*bytes*]
    - **tx** **string** *identifier*

```
            — no tx
        — psi-payload
            — expected bytes byte
            — expected auto
            — mismatch-reaction {squelch-rx}
            — no mismatch-reaction
            — tx byte
            — tx auto
        — [no] psi-tti
            — expected auto-generated
            — expected bytes byte [byte]
            — expected string identifier
            — expected use-rx
            — mismatch-reaction {squelch-rx}
            — no mismatch-reaction
            — tx auto-generated
            — tx bytes bytes [bytes]
            — tx string identifier
            — no tx
        — [no] report-alarms [loc] [los] [lof] [lom] [otu-ais] [otu-ber-sf] [otu-ber-sd]
          [otu-bdi] [otu-tim] [otu-iae] [otu-biae] [fec-sf] [fec-sd] [fec-fail] [fec-
          uncorr] [odu-ais] [odu-oci] [odu-lck] [odu-bdi] [odu-tim] [opu-tim] [opu-
          plm]
        — sd-threshold threshold
        — sf-sd-method {bip8 | fec}
        — sf-threshold threshold
        — signal-type {otu4 | otu4x2}
        — sm-tti
            — expected auto-generated
            — expected bytes byte [byte]
            — expected string identifier
            — expected use-rx
            — mismatch-reaction {squelch-rx}
            — no mismatch-reaction
            — tx {auto-generated | string identifier | bytes byte1 [byte2]}
            — no tx
        — [no] shutdown
```

2.25.1.8 Port XC Commands

```
config
    — port-xc
        — pxc pxc-id [create]
        — no pxc pxc-id
            — description description-string
            — no description
            — port port-id
            — no port
    — [no] shutdown
```

2.25.1.9 Forwarding Path Extension (FPE) Commands

config
— **fwd-path-ext**
— [**no**] **fpe**
— **description** *description-string*
— **no description**
— **path xc-a** *lag-id* **xc-b** *lag-id*
— **path pxc** *pxc-id*
— **no path**
— [**no**] **pw-port**
— [**no**] **vxlan-termination**
— **sdp-id-range from** *start-id* **to** *stop-id*
— **no sdp-id-range**

2.25.1.10 Port APS Commands

config
— [**no**] **port** {aps-id}
— **aps**
— **advertise-interval advertise-interval**
— **no advertise-interval**
— **hold-time** *hold-time*
— **no hold-time**
— **hold-time-aps** [**lsignal-failure** *sf-time*][**lsignal-degrade** *sd-time*]
— **no hold-time-aps**
— **no mode-annexb**
— **neighbor** *ip-address*
— **no neighbor**
— **protect-circuit port-id**
— **no protect-circuit**
— **rdi-alarms** [**suppress** | **circuit**]
— **revert-time minutes**
— **no revert-time**
— **switching-mode** {**bi-directional** | **uni-directional** | **uni-1plus1**}
— **working-circuit** *port-id* [**number** *number*]
— **no working-circuit**
— **wtr-annexb** *minute*

2.25.1.11 Ethernet Commands

config
— [**no**] **port** {*port-id*}
— **ethernet**
— **access**
— **bandwidth** *bandwith*
— **no bandwidth**

- **booking-factor** *percentage*
- **no booking-factor**
- **egress**
  - **queue-group** *queue-group-name* [**instance** *instance-id*]
  - **no queue-group** *queue-group-name*
    - **accounting-policy** *acct-policy-id*
    - **no accounting-policy**
    - [**no**] **agg-rate**
      - [**no**] **limit-unused-bandwidth**
      - [**no**] **queue-frame-based-accounting**
      - **rate** {**max** | *rate*}
      - **no rate**
    - [**no**] **collect-stats**
    - **description** *description-string*
    - **no description**
    - **host-match** *destination-string* [**create**]
    - **no host-match** *destination-string*
    - **queue-overrides**
      - **queue** *queue-id* [**create**]
      - **no queue** *queue-id*
        - **adaptation-rule** [**pir** {**max** | **min** | **closest**}] [**cir** {**max** | **min** | **closest**}]
        - **no adaptation-rule**
        - **cbs** *size-in-kbytes*
        - **no cbs**
        - **high-prio-only** *percent*
        - **no high-prio-only**
        - **mbs** *size-in-kbytes*
        - **no mbs**
        - **monitor-depth**
        - [**no**] **monitor-depth**
        - **parent** [[**weight** *weight*] [**cir-weight** *cir-weight*]]
        - **no parent**
        - **rate** *pir-rate* [**cir** *cir-rate*]
        - **no rate**
    - **scheduler-policy** *scheduler-policy-name*
    - **no scheduler-policy**
    - **scheduler-policy**
  - **vport** *name* [**create**]
  - **no vport** *name*
    - **agg-rate** *agg-rate*
    - [**no**] **agg-rate**
      - **rate** {**max** | **rate**}
      - **no rate**
      - [**no**] **limit-unused-bandwidth**
    - **description** *description-string*
    - **no description**
    - [**no**] **egress-rate-modify**
    - **host-match dest** *description-string* [**create**]
    - **no host-match** *destination-string*
    - **mon-port-sch**
    - **no mon-port-sch**
    - **port-scheduler-policy** *port-scheduler-policy-name*

```
                    — no port-scheduler-policy
            — ingress
                — queue-group queue-group-name [create]
                — no queue-group queue-group-name
                    — accounting-policy acct-policy-id
                    — no accounting-policy
                    — [no] collect-stats
                    — description description-string
                    — no description
                    — queue-overrides
                        — queue queue-id [create]
                        — no queue queue-id
                            — adaptation-rule [pir {max | min |
                                  closest}] [cir {max | min | closest}]
                            — no adaptation-rule
                            — cbs size-in-kbytes
                            — no cbs
                            — high-prio-only percent
                            — no high-prio-only
                            — mbs size-in-kbytes
                            — no mbs
                            — monitor-depth
                            — [no] monitor-depth
                            — rate pir-rate [cir cir-rate]
                            — no rate
                    — scheduler-policy scheduler-policy-name
                    — no scheduler-policy
        — accounting-policy policy-id
        — no accounting-policy
        — autonegotiate [limited]
        — no autonegotiate
        — [no] collect-stats
        — crc-monitor
            — sd-threshold threshold [multiplier multiplier]
            — no sd-threshold
            — sf-threshold threshold [multiplier multiplier]
            — no sf-threshold
            — window-size seconds
            — no window-size
        — dot1q-etype value
        — no dot1q-etype
        — dot1x
            — max-auth-req max-auth-request
            — port-control {auto | force-auth | force-unauth}
            — quiet-period seconds
            — radius-plcy name
            — no radius-plcy
            — re-auth-period seconds
            — no re-auth-period
            — [no] re-authentication
            — server-timeout seconds
            — no server-timeout
            — supplicant-timeout seconds
            — no supplicant-timeout
```

- **transmit-period** *seconds*
- **no transmit-period**
- **tunneling**
- **no tunneling**

- **down-on-internal-error** [**tx-disable**]
- **no down-on-internal-error**
- **down-when-looped**
  - **keep-alive** *timer*
  - **no keep-alive**
  - **retry-timeout** *timer*
  - **no retry-timeout**
  - [**no**] **shutdown**
  - [**no**] **use-broadcast-address**
- **duplex** {**full** | **half**}
- **efm-oam**
  - [**no**] **accept-remote-loopback**
  - **discovery**
    - **advertise-capabilities**
      - **link-monitoring**
      - [**no**] **link-monitoring**
  - [**no**] **dying-gasp-tx-on-reset**
  - [**no**] **grace-tx-enable**
  - **grace-vendor-oui** *oui*
  - **no grace-vendor-oui**
  - **hold-time** *time-value*
  - **no hold-time**
  - [**no**] **ignore-efm-state**
  - **link-monitoring**
    - **errored-frame**
      - [**no**] **event-notification**
      - **sd-threshold** *errored-frames*
      - **no sd-threshold**
      - **sf-threshold** *errored-frames*
      - [**no**] **shutdown**
      - **window** *deciseconds*
    - **errored-frame-period**
      - [**no**] **event-notification**
      - **sd-threshold** *errored-frames*
      - **no sd-threshold**
      - **sf-threshold** *errored-frames*
      - [**no**] **shutdown**
      - **window** *packets*
    - **errored-frame-seconds**
      - [**no**] **event-notification**
      - **sd-threshold** *errored-seconds*
      - **no sd-threshold**
      - **sf-threshold** *errored-seconds*
      - [**no**] **shutdown**
      - **window** *deciseconds*
    - **errored-symbols**
      - [**no**] **event-notification**
      - **sd-threshold** *errored-symbols*
      - **no sd-threshold**
      - **sf-threshold** *errored-symbols*

```
                        — [no] shutdown
                        — window deciseconds
                    — local-sf-action
                        — event-notification-burst packets
                        — info-notification
                            — [no] critical-event
                            — [no] dying-gasp
                        — local-port-action {log-only | out-of-service}
                    — [no] shutdown
                — mode {active | passive}
                — peer-rdi-rx
                    — critical-event local-port-action {log-only | out-of-service}
                    — dying-gasp local-port-action {log-only | out-of-service}
                    — event-notification local-port-action {log-only | out-of-
                        service}
                    — link-fault local-port-action {log-only |out-of-service}
                — [no] shutdown
                — [no] transmit-interval interval [multiplier multiplier]
                — trigger-fault {dying-gasp | critical-event}
                — no trigger-fault
                — [no] tunneling
        — egress
                — [no] exp-secondary-shaper
                    — class class-number rate {kilobits-per-second | max} [monitor-
                        threshold size-in-kilobytes]
                    — no class
                    — low-burst-max-class class
                    — no low-burst-max-class
                    — rate {max | kilobits-per-second}
                    — no rate
        — egress-rate sub-rate
        — no egress-rate
        — [no] egress-scheduler-override
                — level priority-level rate pir-rate [cir cir-rate]
                — no level priority-level
                — max-rate rate
                — no max-rate
        — egress-scheduler-policy port-scheduler-policy-name
        — no egress-scheduler-policy
        — elmi
                — mode {none | uni-n}
                — n393
                — no n393
                — t391
                — no t391
                — t392
                — no t392
        — encap-type
        — encap-type {dot1q | null | qinq}
        — no encap-type
        — eth-cfm
                — [no] mep mep-id domain md-index association ma-index [vlan vlan-
                    id]
                    — [no] ais-enable
```

```
                        — client-meg-level [level [level]]
                        — no client-meg-level
                        — interface-support-enable
                        — interval
                        — no interval
                        — priority priority-value
                        — no priority
                    — alarm-notification
                        — fng-alarm-time
                        — fng-reset-time
                    — [no] ccm-enable
                    — ccm-ltm-priority priority
                    — no ccm-ltm-priority
                    — ccm-padding-size ccm-padding
                    — no ccm-padding-size
                    — ccm-tlv-ignore [port-status] [interface-status]
                    — no ccm-tlv-ignore
                    — collect-lmm-stats
                    — no collect-lmm-stats
                    — description description-string
                    — no description
                    — [no] eth-test-enable
                        — bit-error-threshold bit-errors
                        — test-pattern {all-zeros | all-ones} [crc-enable]
                        — no test-pattern
                    — [no] facility-fault
                    — low-priority-defect {allDef | macRemErrXcon | remErrXcon |
                          errXcon | xcon | noXcon}
                    — mac-address mac-address
                    — no mac-address
                    — one-way-delay-threshold seconds
                    — [no] shutdown
            — hold-time {[up hold-time up] [down hold-time down] [seconds|
                centiseconds]}
            — no hold-time
            — [no] hsmda-scheduler-overrides
                — group group-id rate rate
                — no group group-id
                — max-rate rate
                — no max-rate
                — scheduling-class class rate rate
                — scheduling-class class weight weight-in-group
                — no scheduling-class class
            — ingress-rate ingress-rate
            — no ingress-rate
            — [no] lacp-tunnel
            — lldp
                — dest-mac {nearest-bridge | nearest-non-tpmr | nearest-customer}
                    — admin-status {rx | tx | tx-rx | disabled}
                    — [no] notification
                    — portid-subtype {tx-if-alias | tx-if-name | tx-local}
                    — [no] tunnel-nearest-bridge
                    — tx-mgmt-address [system] [system-ipv6]
```

```
                    — no tx-mgmt-address
                    — tx-tlvs [port-desc] [sys-name] [sys-desc] [sys-cap]
                    — no tx-tlvs
— load-balancing-algorithm option
— no load-balancing-algorithm
— mac ieee-address
— no mac
— min-frame-length
— mode {access | network | hybrid}
— no mode
— mon-port-sch
— mtu mtu-bytes
— no mtu
— network
    — accounting-policy policy-id
    — no accounting-policy
    — [no] collect-stats
    — egress
        — queue-group queue-group-name [instance instance id]
                [create]
        — no queue-group queue-group-name
            — accounting-policy acct-policy-id
            — no accounting-policy
            — agg-rate kilobits-per-second [queue-frame-based-
                accounting]
            — no agg-rate
                — [no] limit-unused-bandwidth
                — [no] queue-frame-based-accounting
                — rate {max | rate}
                — no rate
            — agg-rate-limit
            — [no] collect-stats
            — description description-string
            — no description
            — policer-control-policy policy-name
            — queue-overrides
                — queue queue-id [create]
                — no queue queue-id
                    — adaptation-rule [pir {max | min |
                        closest}] [cir {max | min | closest}]
                    — no adaptation-rule
                    — cbs size-in-kbytes
                    — no cbs
                    — high-prio-only percent
                    — no high-prio-only
                    — mbs size-in-kbytes
                    — no mbs
                    — [no] monitor-depth
                    — rate pir-rate [cir cir-rate]
                    — no rate
            — scheduler-policy scheduler-policy-name
            — no scheduler-policy
    — queue-policy name
    — no queue-policy
```

```
            — pbb-etype [ethertype-value]
            — no pbb-etype
            — qinq-etype qinq-etype-value
            — no qinq-etype
            — [no] report-alarm [signal-fail] [remote] [local] [no-frame-lock]
            — [no] sflow
            — [no] single-fiber
            — speed {10 | 100 | 1000}
            — ssm
                — [no] shutdown
                — code-type {sonet | sdh}
                — no code-type
                — [no] tx-dus
            — symbol-monitor
                — sd-threshold threshold [multiplier multiplier]
                — no sd-threshold
                — sf-threshold threshold [multiplier multiplier]
                — no sf-threshold
                — [no] shutdown
                — window-size seconds
                — no window-size
            — xgig {lan | wan}

config
    — system
        — ethernet
            — efm-oam
                — dying-gasp-tx-on-reset
```

2.25.1.12 Interface Group Handler Commands

```
config
    — [no] interface-group-handler group-id
        — [no] member portid
        — threshold min
        — no threshold
```

2.25.1.13 Multilink Bundle Commands

```
config
    — [no] port {bundle-id}
        — multilink-bundle
            — fragment-threshold fragment-threshold
            — fragment-threshold unlimited
            — no fragment-threshold
            — ima
                — atm
                    — cell-format cell-format
```

- **min-vp-vpi** *value*
- **link-delay** {**activate** | **deactivate**} *milli-seconds*
- **no link-delay** {**activate** | **deactivate**}
- **max-bandwidth** *number-links*
- **no max-bandwidth**
- **test-pattern-procedure**
  - [**no**] **shutdown**
  - **test-link** *port-id*
  - **no test-link**
  - **test-pattern** *pattern*
  - **no test-pattern**
- **version** *IMA-version*
- **no version**

- [**no**] **interleave-fragments**
- [**no**] **member** *port-id*
- **minimum-links** *minimum-links*
- **no minimum-links**
- **mlfr**
  - **ack-timeout** *seconds*
  - **no ack-timeout**
  - **egress**
    - **qos-profile** *profile-id*
    - **no qos-profile**
  - **frame-relay**
    - **lmi-type** {**ansi** | **itu** | **none** | **rev1**}
    - **mode** {**dce** | **dte** | **bidir**}
    - **n391dte** *intervals*
    - **n392dce** *threshold*
    - **n392dte** *threshold*
    - **n393dce** *count*
    - **n393dte** *count*
    - **t391dte** *keepalive*
    - **t392dce** *keepalive*
  - **hello-timeout** *seconds*
  - **no hello-timeout**
  - [**no**] **identifier** *bundle-id-string*
  - **ingress**
    - **qos-profile** *profile-id*
    - **no qos-profile**
  - **retry-limit** *integer*
  - **no retry-limit**
- **mlppp**
  - **egress**
    - **qos-profile** *profile-id*
    - **no qos-profile**
  - **endpoint-discriminator class** {**ip-address** | **global-mac-address**} [**discriminator-id** *discriminator-id*]
  - **no endpoint-discriminator**
  - **ingress**
    - **qos-profile** *profile-id*
    - **no qos-profile**
  - [**no**] **magic-number**
  - **multiclass** *count*
  - **no multiclass**

— [**no**] **stateless-aps-switchover**
— **mrru** *mrru*
— **no mrru**
— [**no**] **protect-bundle**
— **red-differential-delay** *red-diff-delay* [**down**]
— **no red-differential-delay**
— [**no**] **short-sequence**
— [**no**] **working-bundle**
— **yellow-differential-delay** *yellow-diff-delay*
— **no yellow-differential-delay**

2.25.1.14 SONET-SDH Commands

```
config
    — [no] port {port-id}
        — sonet-sdh
            — clock-source {loop-timed | node-timed}
            — framing {sonet | sdh}
            — group sonet-sdh-index  payload {tu3 | vt2 | vt15}
            — hold-time hold-time {[up hold-time up] [down hold-time down]}
            — no hold-time
            — loopback {line | internal}
            — no loopback
            — [no] path [sonet-sdh-index]
                — access
                    — egress
                        — vport name [create]
                        — no vport name
                            — agg-rate agg-rate
                            — [no] agg-rate
                                — rate {max | rate}
                                — no rate
                                — [no] limit-unused-bandwidth
                                — [no] queue-frame-based-accounting
                            — description description-string
                            — no description
                            — [no] egress-rate-modify
                            — host-match dest description-string [create]
                            — no host-match destination-string
                            — port-scheduler-policy port-scheduler-policy-
                              name
                            — no port-scheduler-policy
                — atm
                    — cell-format cell-format
                    — ilmi [vpi/vci]
                    — no ilmi
                        — egress
                            — traffic-desc traffic-desc-profile-id
                            — no traffic-desc
                        — ingress
                            — traffic-desc traffic-desc-profile-id
                            — no traffic-desc
                        — keep-alive [poll-frequency seconds] [poll-count value]
                          [test-frequency seconds]
                        — no keep-alive
                        — protocol protocol-type
                        — no protocol
                        — [no] shutdown
                    — min-vp-vpi value
                — cisco-hdlc
                    — down-count down-count
                    — no down-count
                    — keepalive time-interval
                    — no keepalive
```

- — **up-count** *up-count*
- — **no up-count**
- — **crc** {**16** | **32**}
- — **description** *description*
- — **no description**
- — [**no**] **egress-scheduler-override**
  - — **level** *priority-level* **rate** *pir-rate* [**cir** *cir-rate*]
  - — **no level** *priority-level*
  - — **max-rate** *rate*
  - — **no max-rate**
- — **egress-scheduler-policy** *port-scheduler-policy-name*
- — **no egress-scheduler-policy**
- — **encap-type** {**atm** | **bcp-null** | **bcp-dot1q** | **ipcp** | **ppp-auto** | **frame-relay** | **wan-mirror** | **cisco-hdlc**}{**bcp-null** | **bcp-dot1q** | **ipcp** | **ppp-auto** | **frame-relay** | **wan-mirror**}
- — **frame-relay**
  - — [**no**] **frf-12**
    - — **egress**
      - — **qos-profile** *profile-id*
      - — **no qos-profile**
    - — **fragment-threshold** *threshold*
    - — **no fragment-threshold**
  - — **lmi-type** {**ansi** | **itu** | **none** | **rev1**}
  - — **mode** {**dce** | **dte** | **bidir**}
  - — **n391dte** *intervals*
  - — **no n391dte**
  - — **n392dce** *threshold*
  - — **no n392dce**
  - — **n392dte** *threshold*
  - — **no n392dte**
  - — **n393dce** *count*
  - — **no n393dce**
  - — **n393dte** *count*
  - — **no n393dte**
  - — **t391dte** *keepalive*
  - — **no t391dte**
  - — **t392dce** *keepalive*
  - — **no t392dce**
- — **mac** *ieee-address*
- — **no mac**
- — **mode** {**access** | **network** | **hybrid**}
- — **mtu** *mtu*
- — **no mtu**
- — **network**
  - — **accounting-policy** *policy-id*
  - — **no accounting-policy**
  - — [**no**] **collect-stats**
  - — **queue-policy** *name*
  - — **no queue-policy**
- — **payload** {**sts3** | **tug3** | **ds3** | **e3** | **vt2** | **vt15** | **ds1** | **e1**}
- — **ppp**
  - — **keepalive** *time-interval* [**dropcount** *drop-count*]
  - — **no keepalive**
- — [**no**] **report-alarm** [**pais**] [**plop**] [**prdi**] [**pplm**] [**prei**] [**puneq**] [**plcd**]

```
                    — [no] scramble
                    — [no] shutdown
                    — signal-label value
                    — no signal-label
                    — trace-string [trace-string]
                    — no trace-string
                — [no] report-alarm [loc] [lais] [lrdi] [ss1f] [lb2er-sd] [lb2er-sf] [slof][slos] [lrei]
                — [no] reset-port-on-path-down
                — section-trace {increment-z0 | byte value | string string}
                — [no] single-fiber
                — speed {oc3 | oc12}
                — no speed
                — [no] suppress-lo-alarm
                — threshold {ber-sd | ber-sf} rate threshold-rate
                — no threshold {ber-sd | ber-sf}
                — [no] tx-dus
```

2.25.1.15 TDM Commands

```
config
    — [no] port {port-id}
        — tdm
            — buildout {long | short}
            — [no] ds1 ds1-id
                — bert {2e3 | 2e9 | 2e11 | 2e15 | 2e20 | 2e20q | 2e23 | ones | zeros |
                    alternating} duration duration
                — no bert
                — bit-error-insertion rate
                — no bit-error-insertion
                — [no] channel-group channel-group
                    — atm
                        — cell-format cell-format
                        — min-vp-vpi value
                    — cisco-hdlc
                        — down-count down-count
                        — no down-count
                        — keepalive time-interval
                        — no keepalive
                        — up-count up-count
                        — no up-count
                    — crc {16 | 32}
                    — [no] description description-string
                    — [no] egress-scheduler-override
                        — level priority-level rate pir-rate [cir cir-rate]
                        — no level priority-level
                        — max-rate rate
                        — no max-rate
                    — egress-scheduler-policy port-scheduler-policy-name
                    — [no] encap-type {atm | bcp-null | bcp-dot1q | ipcp | ppp-auto
                            | frame-relay | wan-mirror | cisco-hdlc | cem}
                    — frame-relay
```

- [no] frf-12
  - egress
    - qos-profile *profile-id*
    - no qos-profile
  - fragment-threshold *threshold*
  - no fragment-threshold
- [no] identifier *frf16-link-id-string*
- lmi-type {ansi | itu | none | rev1}
- mode {dce | dte | bidir}
- n391dte *intervals*
- no n391dte
- n392dce *threshold*
- no n392dce
- n392dte *threshold*
- no n392dte
- n393dce *count*
- no n393dce
- n393dte *count*
- no n393dte
- t391dte *keepalive*
- no t391dte
- t392dce *keepalive*
- no t392dce

- idle-cycle-flag {flags | ones}
- no idle-cycle-flag
- idle-payload-fill {all-ones}
- idle-payload-fill pattern *pattern*
- no idle-payload-fill
- idle-signal-fill {all-ones}
- idle-signal-fill pattern *pattern*
- no idle-signal-fill
- load-balancing-algorithm *option*
- no load-balancing-algorithm
- mac *ieee-address*
- no mac
- [no] mode {access | network}
- mtu *mtu-bytes*
- no mtu
- network
  - accounting-policy *policy-id*
  - no accounting-policy
  - [no] collect-stats
  - queue-policy *name*
  - no queue-policy
- ppp
  - [no] ber-sf-link-down
  - compress {acfc [pfc] | pfc [acfc]}
  - no compress
  - keepalive *time-period* [dropcount *drop count*]
  - no keepalive
- [no] scramble
- [no] shutdown
- speed {56 | 64}
- timeslots *timeslots*

- — **no timeslots**
- — **clock-source** {**loop-timed** | **node-timed** | **adaptive** | **differential**}
- — **framing (DS-1)** {**esf** | **sf** | **ds1-unframed**}
- — **insert-single-bit-error**
- — [**no**] **invert-data**
- — **loopback** {**line** | **internal** | **fdl-ansi** | **fdl-bellcore** | **payload-ansi** | **inband-ansi** | **inband-bellcore**}
- — **no loopback**
- — [**no**] **remote-loop-respond**
- — [**no**] **report-alarm** [**ais**] [**los**] [**oof**] [**rai**] [**looped**]
- — [**no**] **shutdown**
- — **signal-mode** {**cas**}
- — **no signal-mode**
- — **threshold** {**ber-sd** | **ber-sf**} **rate** {**1** | **5** | **10** | **50** | **100**}
- — **no threshold** {**ber-sd** | **ber-sf**}

— **hold-time** **hold-time** {[**up hold-time up**] [**down** *hold-time* **down**]}
— **no hold-time**
— **lbo** [**0dB** | **-7.5dB** | **-15.0dB** | -**22.5dB**]
— **length** {**133** | **266** | **399** | **533** | **655**}

2.25.1.16 DS3 Commands

— [**no**] **ds3** [*sonet-sdh-index*]

- — **atm**
  - — **cell-format** *cell-format*
  - — **mapping** *mapping*
  - — **min-vp-vpi** *value*
- — **bert** {**2e3** | **2e9** | **2e11** | **2e15** | **2e20** | **2e20q** | **2e23** | **ones** | **zeros** | **alternating**} **duration** *duration*
- — **no bert**
- — **bit-error-insertion** *rate*
- — **no bit-error-insertion**
- — **channelized** {**ds1** | **e1**}
- — **no channelized**
- — **cisco-hdlc**
  - — **down-count** *down-count*
  - — **no down-count**
  - — **keepalive** *time-interval*
  - — **no keepalive**
  - — **up-count** *up-count*
  - — **no up-count**
- — **clock-source** {**loop-timed** | **node-timed**}
- — **crc** {**16** | **32**}
- — **description** *description-string*
- — **no description**
- — [**no**] **egress-scheduler-override**
  - — **level** *priority-level* **rate** *pir-rate* [**cir** *cir-rate*]
  - — **no level** *priority-level*
  - — **max-rate** *rate*
  - — **no max-rate**
- — **egress-scheduler-policy** *port-scheduler-policy-name*

- no egress-scheduler-policy
- encap-type {atm | bcp-null | bcp-dot1q | ipcp | ppp-auto | frame-relay | wan-mirror | cisco-hdlc | cem}
- [no] feac-loop-respond
- frame-relay
  - [no] frf-12
    - egress
      - qos-profile *profile-id*
      - no qos-profile
    - fragment-threshold *threshold*
    - no fragment-threshold
  - lmi-type {ansi | itu | none | rev1}
  - mode {dce | dte | bidir}
  - n391dte *intervals*
  - no n391dte
  - n392dce *threshold*
  - no n392dce
  - n392dte *threshold*
  - no n392dte
  - n393dce *count*
  - no n393dce
  - n393dte *count*
  - no n393dte
  - t391dte *keepalive*
  - no t391dte
  - t392dce *keepalive*
  - no t392dce
- framing (DS3) {c-bit | m23}
- idle-cycle-flag {flags | ones}
- load-balancing-algorithm *option*
- no load-balancing-algorithm
- loopback {line | internal | remote}
- no loopback
- mac *ieee-address*
- no mac
- mdl {eic | lic | fic | unit | pfi | port | gen} *mdl-string*
- no mdl [eic | lic | fic | unit | pfi | port | gen]
- mdl-transmit {path | idle-signal | test-signal}
- no mdl-transmit [path | idle-signal | test-signal]
- mode {access | network}
- mtu *mtu-bytes*
- no mtu
- network
  - accounting-policy *policy-id*
  - no accounting-policy
  - [no] collect-stats
  - queue-policy *name*
  - no queue-policy
- ppp
  - keepalive *time-period* [dropcount *drop-count*]
  - no keepalive
- [no] report-alarm [ais] [los] [oof] [rai] [looped]
- [no] scramble
- [no] shutdown

- **subrate** {**digital-link** | **larscom**} *rate-step*
- **no subrate**

2.25.1.17 E1 Commands

- [**no**] **e1** [*e1-id*]
  - **bert** {**2e3** | **2e9** | **2e11** | **2e15** | **2e20** | **2e20q** | **2e23** | **ones** | **zeros** | **alternating**} **duration** *duration*
  - **no bert**
  - **bit-error-insertion** *rate*
  - **no bit-error-insertion**
  - [**no**] **channel-group** *channel-group-id*
    - **atm**
      - **cell-format** *cell-format*
      - **min-vp-vpi** *value*
    - **cisco-hdlc**
      - **down-count** *down-count*
      - **no down-count**
      - **keepalive** *time-interval*
      - **no keepalive**
      - **up-count** *up-count*
      - **no up-count**
    - **crc** {**16** | **32**}
    - **description** *description-string*
    - **no description**
    - [**no**] **egress-scheduler-override**
      - **level** *priority-level* **rate** *pir-rate* [**cir** *cir-rate*]
      - **no level** *priority-level*
      - **max-rate** *rate*
      - **no max-rate**
    - **egress-scheduler-policy** *port-scheduler-policy-name*
    - [**no**] **encap-type** {**atm** | **bcp-null** | **bcp-dot1q** | **ipcp** | **ppp-auto** | **frame-relay** | **wan-mirror** | **cisco-hdlc** | **cem**}
    - **frame-relay**
      - [**no**] **frf-12**
        - **egress**
          - **qos-profile** *profile-id*
          - **no qos-profile**
        - **fragment-threshold** *threshold*
        - **no fragment-threshold**
      - [**no**] **identifier** *frf16-link-id-string*
      - **lmi-type** {**ansi** | **itu** | **none** | **rev1**}
      - **mode** {**dce** | **dte** | **bidir**}
      - **n391dte** *intervals*
      - **no n391dte**
      - **n392dce** *threshold*
      - **no n392dce**
      - **n392dte** *threshold*
      - **no n392dte**
      - **n393dce** *count*
      - **no n393dce**

- **n393dte** *count*
- **no n393dte**
- **t391dte** *keepalive*
- **no t391dte**
- **t392dce** *keepalive*
- **no t392dce**

- **idle-cycle-flag** {**flags** | **ones**}
- **idle-payload-fill** {**all-ones**}
- **idle-payload-fill pattern** *pattern*
- **no idle-payload-fill**
- **idle-signal-fill** {**all-ones**}
- **idle-signal-fill pattern** *pattern*
- **no idle-signal-fill**
- **load-balancing-algorithm** *option*
- **no load-balancing-algorithm**
- **mac** *ieee-address*
- **no mac**
- [**no**] **mode** {**access** | **network**}
- **mtu** *mtu-bytes*
- **no mtu**
- **network**
  - **accounting-policy** *policy-id*
  - **no accounting-policy**
  - [**no**] **collect-stats**
  - **queue-policy** *name*
  - **no queue-policy**
- **ppp**
  - [**no**] **ber-sf-link-down**
  - **keepalive** *time-period* [**dropcount** *drop count*]
  - **no keepalive**
- [**no**] **scramble**
- [**no**] **shutdown**
- **speed** {**56** | **64**}
- **timeslots** *timeslots*
- **no timeslots**

- **clock-source** {**loop-timed** | **node-timed** | **adaptive** | **differential**}
- **framing (E-1)** {**no-crc-g704** | **g704** | **e1-unframed**}
- **insert-single-bit-error**
- [**no**] **invert-data**
- **loopback** {**line** | **internal**}
- **no loopback**
- [**no**] **report-alarm** [**ais**] [**los**] [**oof**] [**rai**] [**looped**]
- [**no**] **shutdown**
- **signal-mode** {**cas**}
- **no signal-mode** {**cas**}
- **threshold** {**ber-sd** | **ber-sf**} **rate** {**1** | **5** | **10** | **50** | **100**}
- **no threshold** {**ber-sd** | **ber-sf**}

2.25.1.18 E3 Commands

— [**no**] **e3** [*sonet-sdh-index*]
— **atm**
— **cell-format** *cell-format*
— **min-vp-vpi** *value*
— **bert** {**2e3** | **2e9** | **2e11** | **2e15** | **2e20** | **2e20q** | **2e23** | **ones** | **zeros** | **alternating**} **duration** *duration*
— **no bert**
— **bit-error-insertion** *rate*
— **no bit-error-insertion**
— **cisco-hdlc**
— **down-count** *down-count*
— **no down-count**
— **keepalive** *time-interval*
— **no keepalive**
— **up-count** *up-count*
— **no up-count**
— **clock-source** {**loop-timed** | **node-timed**}
— **crc** {**16** | **32**}
— **description** *description-string*
— **no description**
— [**no**] **egress-scheduler-override**
— **level** *priority-level* **rate** *pir-rate* [**cir** *cir-rate*]
— **no level** *priority-level*
— **max-rate** *rate*
— **no max-rate**
— **egress-scheduler-policy** *port-scheduler-policy-name*
— **encap-type** {**atm** | **bcp-null** | **bcp-dot1q** | **ipcp** | **ppp-auto** | **frame-relay** | **wan-mirror** | **cisco-hdlc** | **cem**}
— [**no**] **feac-loop-respond**
— **frame-relay**
— [**no**] **frf-12**
— **egress**
— **qos-profile** *profile-id*
— **no qos-profile**
— **fragment-threshold** *threshold*
— **no fragment-threshold**
— **lmi-type** {**ansi** | **itu** | **none** | **rev1**}
— **mode** {**dce** | **dte** | **bidir**}
— **n391dte** *intervals*
— **no n391dte**
— **n392dce** *threshold*
— **no n392dce**
— **n392dte** *threshold*
— **no n392dte**
— **n393dce** *count*
— **no n393dce**
— **n393dte** *count*
— **no n393dte**
— **t391dte** *keepalive*
— **no t391dte**
— **t392dce** *keepalive*

- **no t392dce**
- **framing (E-3)** {**g751** | **g832**}
- **idle-cycle-flag** {**flags** | **ones**}
- **no idle-cycle-flag**
- **load-balancing-algorithm** *option*
- **no load-balancing-algorithm**
- **loopback** {**line** | **internal** | **remote**}
- **no loopback**
- **mac** *ieee-address*
- **no mac**
- **mdl** {**eic** | **lic** | **fic** | **unit** | **pfi** | **port** | **gen**} *mdl-string*
- **no mdl** [**eic** | **lic** | **fic** | **unit** | **pfi** | **port** | **gen**]
- **mdl-transmit** {**path** | **idle-signal** | **test-signal**}
- **no mdl-transmit** [**path** | **idle-signal** | **test-signal**]
- **mode** {**access** | **network**}
- **mtu** *mtu-bytes*
- **no mtu**
- **network**
  - **accounting-policy** *policy-id*
  - **no accounting-policy**
  - [**no**] **collect-stats**
  - **queue-policy** *name*
  - **no queue-policy**
- **ppp**
  - **keepalive** *time-period* [**dropcount** *drop-count*]
  - **no keepalive**
- [**no**] **report-alarm** [**ais**] [**los**] [**oof**] [**rai**] [**looped**]
- [**no**] **scramble**
- [**no**] **shutdown**

2.25.1.19 LAG Commands

```
config
    — [no] lag lag-id
        — access
            — adapt-qos {link | port-fair | distribute [include-egr-hash-cfg]}
            — bandwidth bandwith
            — no bandwidth
            — booking-factor percentage
            — no booking-factor
            — [no] per-fp-egr-queuing
            — [no] per-fp-ing-queuing
            — [no] per-fp-sap-instance
        — bfd
            — disable-soft-reset-extension
            — family {ipv4 | ipv6}
                — [no] bfd-on-distributing-only
                — local-ip-address ip-address
                — no local-ip-address
                — max-admin-down-time [interval | infinite]
                — no max-admin-down-time
                — max-setup-time [interval | infinite]
                — no max-setup-time
                — multiplier multiplier
                — no multiplier
                — receive-interval interval
                — no receive-interval
                — remote-ip-address ip-address
                — no remote-ip-address
                — transmit-interval interval
                — no transmit-interval
                — shutdown
                — no shutdown
        — description long-description-string
        — no description
        — [no] dynamic-cost
        — encap-type {dot1q | null | qinq}
        — no encap-type
        — eth-cfm
            — [no] mep mep-id domain md-index association ma-index [vlan vlan-id]
                — [no] ais-enable
                    — client-meg-level [level [level]]
                    — no client-meg-level
                    — interval {1 | 60}
                    — no interval
                    — priority priority-value
                    — no priority
                — [no] ccm-enable
                — ccm-ltm-priority priority
                — no ccm-ltm-priority
                — ccm-padding-size ccm-padding
                — no ccm-padding-size
                — ccm-tlv-ignore [port-status] [interface-status]
```

- **no ccm-tlv-ignore**
- **collect-lmm-stats**
- **no collect-lmm-stats**
- **description** **description-string**
- **no description**
- [**no**] **eth-test-enable**
  - **bit-error-threshold** **bit-errors**
  - **test-pattern** {**all-zeros** | **all-ones**} [**crc-enable**]
  - **no test-pattern**
- [**no**] **facility-fault**
- **low-priority-defect** {**allDef** | **macRemErrXcon** | **remErrXcon** | **errXcon** | **xcon** | **noXcon**}
- **mac-address** **mac-address**
- **no mac-address**
- **one-way-delay-threshold** **seconds**
- [**no**] **shutdown**

- **hold-time** **down** *hold-down-time*
- **no hold-time**
- **lacp** [*mode*] [**administrative-key** *admin-key*] [**system-id** *system-id*] [**system-priority** *priority*]
- **lacp-mux-control** {**coupled** | **independent**}
- **no lacp-mux-control**
- **lacp-xmit-interval** {**slow** | **fast**}
- **no lacp-xmit-interval**
- [**no**] **lacp-xmit-stdby**
- **link-map-profile** *lag-link-map-profile-id* [**create**]
- **no link-map-profile** *lag-link-map-profile-id*
  - **description** *description-string*
  - **no description**
  - **failure-mode** [**discard** | **per-link-hash**]
  - **no failure-mode**
  - **link** *port-id* {**primary** | **secondary**}
  - **no link**
- **mac** *ieee-address*
- **no mac**
- **mode** {**access** | **network** | **hybrid**}
- **no mode**
- **per-link-hash**
- **per-link-hash** **weighted** [**auto-rebalance**]
- **no per-link-hash**
- **port** *port-id* | **pxc**-*pxc-id.sub-port-id* [*port-id* | *pxc-pxc-id.sub-port-id* …] [**priority** *priority*] [**subgroup** *sub-group-id*]
- **no port** *port-id* | **pxc**-*pxc-id.sub-port-id*
- **port-threshold** *value* [**action** {**dynamic-cost** | **down**}]
- **no port-threshold**
- **port-type** {**standard** | **hsmda**}
- **no port-type**
- **port-weight-speed** {**1** | **10**}
- **no port-weight-speed**
- **selection-criteria** {**highest-count** | **highest-weight** | **best-port**} [**slave-to-partner**] [**subgroup-hold-time** *hold-time*]
- **no selection-criteria**
- [**no**] **shutdown**
- **standby-signaling** {**lacp** | **power-off**}

```
— no standby-signaling
— weight-threshold value action [{dynamic-cost | down}]
— no weight-threshold
```

2.25.1.20 Ethernet Tunnel Commands

```
config
    — eth-tunnel tunnel-id
    — no eth-tunnel
        — ccm-hold-time {down down-timeout | up up-timeout}
        — no ccm-hold-time
        — description long-description-string
        — no description
        — ethernet
            — encap-type {dot1q|qinq}
            — no encap-type
            — [no] mac ieee-address
        — lag-emulation
            — access
                — adapt-qos {distribute | link | port-fair}
                — no adapt-qos
                — [no] per-fp-ing-queuing
            — path-threshold num-paths
            — nopath-threshold
        — [no] path path-index
            — description description-string
            — no description
            — control-tag vlan-id
            — no control-tag
            — eth-cfm
                — [no] mep mep-id domain md-index association ma-index
                    — [no] ccm-enable
                    — ccm-ltm-priority priority
                    — no ccm-ltm-priority
                    — [no] eth-test-enable
                        — test-pattern {all zeros | all-ones} [crc-enable]
                        — no test-pattern
                    — low-priority-defect {allDef | macRemErrXcon | remErrXcon |
                          errXcon | xcon | noXcon}
                    — mac-address mac-address
                    — no mac-address
                    — [no] control-mep
                    — [no] shutdown
            — member port-id
            — no member
            — precedence {primary | secondary}
            — no precedence
            — [no] shutdown
        — protection-type {g8031-1to1 | loadsharing}
        — revert-time time
        — no revert-time
```

— [**no**] **shutdown**

2.25.1.21 Multi-Chassis Redundancy Commands

config
— **redundancy**
— **bgp-multi-homing**
— **boot-timer** *seconds*
— **no boot-timer**
— **site-activation-timer** *seconds*
— **no site-activation-timer**
— **site-min-down-timer** *min-down-time*
— **no site-min-down-timer**
— **multi-chassis**
— [**no**] **peer** *ip-address*
— **authentication-key** [*authentication-key* | *hash-key*] [**hash** | **hash2**]
— **no authentication-key**
— **description** *description-string*
— **no description**
— [**no**] **mc-endpoint**
— [**no**] **bfd-enable**
— **boot-timer** *interval*
— **no boot-timer**
— **hold-on-neighbor-failure** *multiplier*
— **no hold-on-neighbor-failure**
— **keep-alive-interval** *interval*
— **no keep-alive-interval**
— [**no**] **passive-mode**
— [**no**] **shutdown**
— **system-priority** *value*
— **no system-priority**
— [**no**] **mc-lag**
— **hold-on-neighbor-failure** *multiplier*
— **no hold-on-neighbor-failure**
— **keep-alive-interval** *interval*
— **no keep-alive-interval**
— **lag** *lag-id* **lacp-key** *admin-key* **system-id** *system-id* [**remote-lag** *remote-lag-id*] **system-priority** *system-priority* **source-bmac-lsb** *use-lacp-key*
— **lag** *lag-id* **lacp-key** *admin-key* **system-id** *system-id* [**remote-lag** *remote-lag-id*] **system-priority** *system-priority* **source-bmac-lsb** *MAC-Lsb*
— **lag** *lag-id* **lacp-key** *admin-key* **system-id** *system-id* [**remote-lag** *remote-lag-id*] **system-priority** *system-priority*
— **lag** *lag-id* [**remote-lag** *remote-lag-id*]
— **no lag** *lag-id*
— [**no**] **shutdown**
— **mc-ring**
— **ring** *sync-tag* [**create**]
— **no ring** *sync-tag*
— **in-band-control-path**

- **dst-ip** *ip-address*
- **no dst-ip**
- **interface** *ip-int-name*
- **no interface**
- **service-id** *service-id*
- **no service-id**

- [**no**] **path-b**
  - [**no**] **range** *vlan-range*
- [**no**] **path-excl**
  - [**no**] **range** *vlan-range*
- **ring-node** *ring-node-name* [**create**]
- **no ring-node** *ring-node-name*
  - **connectivity-verify**
    - **dst-ip** *ip-address*
    - **no dst-ip**
    - **interval** *interval*
    - **no interval**
    - **service-id** *service-id*
    - **no service-id**
    - [**no**] **shutdown**
    - **src-ip** *ip-address*
    - **no src-ip**
    - **src-mac** *ieee-address*
    - **no src-mac**
    - **vlan** [*vlan-encap*]
    - **no vlan**
  - [**no**] **shutdown**

- [**no**] **shutdown**
- **source-address** *ip-address*
- **no source-address**
- [**no**] **sync**
  - [**no**] **igmp**
  - [**no**] **igmp-snooping**
  - [**no**] **mc-ring**
  - [**no**] **mld**
  - [**no**] **mld-snooping**
  - **pim-snooping** [**sap**]
  - **no pim-snooping**
  - **port** [*port-id* | *lag-id*] [**sync-tag** *sync-tag*] [**create**]
  - **no port** [*port-id* | *lag-id*]
    - **range** *encap-range* **sync-tag** *sync-tag*
    - **no range** *encap-range*
  - [**no**] **shutdown**
  - [**no**] **srrp**
  - [**no**] **sub-mgmt**

2.25.1.22 Forward Path Extension Commands

```
config
    — fwd-path-ext
        — fpe
            — vxlan-termination
```

2.25.2 Configuration Command Descriptions

- Generic Commands
- Card Commands
- MDA (XMA) Commands
- MDA/Port QoS Commands
- Power Commands
- Virtual Scheduler Commands
- Forwarding Plane Configuration Commands
- General Port Commands
- Port XC Commands
- APS Commands
- Ethernet Port Commands
- 802.1x Port Commands
- LLDP Port Commands
- Network Port Commands
- Interface Group Handler Commands
- Multilink-Bundle Port Commands
- SONET/SDH Port Commands
- SONET/SDH Path Commands
- ATM Interface Commands
- Frame Relay Commands
- TDM Commands
- LAG Commands
- Eth Tunnel Commands
- Multi-Chassis Redundancy Commands
- Forwarding Plane Tools Commands
- Forward Path Extension Commands

2.25.2.1 Generic Commands

description

Syntax **description** *description-string*
no description

Context config>port
config>port>ethernet>access>egr>vport
config>port>ethernet>access>egr>qgrp
config>port>ethernet>access>ing>qgrp
config>port>ethernet>network>egr>qgrp
config>port>sonet-sdh>path
config>port>tdm>ds1>channel-group
config>port>tdm>ds3
config>port>tdm>e1>channel-group
config>port>tdm>e3
config>lag
config>lag>link>map>profile
config>port>ethernet>eth-cfm>mep
config>card>fp>ingress>access>queue-group
config>card>fp>ingress>network>queue-group
config>port-xc>px

Description This command creates a text description for a configuration context to help identify the content in the configuration file.

The **no** form of this command removes any description string from the context.

Default No description is associated with the configuration context.

Parameters *long-description-string* — The description character string. Strings can be up to 160 characters long composed of printable, 7-bit ASCII characters. If the string contains special characters (#, $, spaces, etc.), the entire string must be enclosed within double quotes.

shutdown

Syntax [**no**] **shutdown**

Context config>card
config>card>mda
config>interface-group-handler
config>port
config>port>ethernet
config>port>sonet-sdh>path
config>port>tdm>ds1

config>port>tdm>ds1>channel-group
config>port>tdm>ds3
config>port>tdm>e1
config>port>tdm>e1>channel-group
config>port>tdm>e3
config>port>ml-bundle>ima>test-pattern-procedure
config>port>sonet-sdh>path>atm>ilmi
config>lag
config>port>ethernet>eth-cfm>mep
config>port>ethernet>efm-oam
config>redundancy>multi-chassis>peer
config>redundancy>mc>peer>mcr
config>redundancy>mc>peer>mc-lag
config>redundancy>mc>peer>mcr>ring
config>redundancy>mc>peer>mcr>node>cv
config>redundancy>multi-chassis>peer>sync

Description This command administratively disables an entity. When disabled, an entity does not change, reset, or remove any configuration settings or statistics.

The operational state of the entity is disabled as well as the operational state of any entities contained within.

The **no** form of this command administratively enables an entity.

Special Cases **card —** The default state for a card is **no shutdown**.

interface group handler (IGH) — The default state for an IGH is **shutdown**.

mda — The default state for a mda is **no shutdown**.

lag — The default state for a Link Aggregation Group (LAG) is **shutdown**.

port — The default state for a port is **shutdown**.

path — The default state for a SONET/SDH path is **shutdown**.

2.25.2.2 Card Commands

card

Syntax **card** *slot-number*
no card *slot-number*

Context config

Description This mandatory command enables access to the chassis card Input/Output, Control Forwarding Module (IOM/CFM), slot, MCM, MDA, XCM and XMA CLI contexts.

The **no** form of this command removes the card from the configuration. All associated ports, services, and MDAs must be shutdown.

Default No cards are configured.

Parameters *slot-number* — The slot number of the card in the chassis. The maximum slot number is platform dependent. See the Install Guides for more information.

card-type

Syntax **card-type** *card-type*
no card-type

Context config>card

Description This mandatory command adds an IOM/XCM to the device configuration for the slot. The card type can be preprovisioned, meaning that the card does not need to be installed in the chassis.

A card must be provisioned before an MDA, MCM, or port can be configured.

A card can only be provisioned in a slot that is vacant, meaning no other card can be provisioned (configured) for that particular slot. To reconfigure a slot position, use the **no** form of this command to remove the current information.

A card can only be provisioned in a slot if the card type is allowed in the slot. An error message is generated if an attempt is made to provision a card type that is not allowed.

If a card is inserted that does not match the configured card type for the slot, then a log event and facility alarm is raised. The alarm is cleared when the correct card type is installed or the configuration is modified.

A log event and facility alarm are is raised if an administratively enabled card is removed from the chassis. The alarm is cleared when the correct card type is installed or the configuration is modified. A log event is issued when a card is removed that is administratively disabled.

Because IMMs do not have the capability to install separate MDAs, the configuration of the MDA is automatic. This configuration only includes the default parameters such as default buffer policies. Commands to manage the MDA such as **shutdown**, named buffer pool, etc., remain in the MDA configuration context.

An appropriate alarm is raised if a partial or complete card failure is detected. The alarm is cleared when the error condition ceases.

The **no** form of this command removes the card from the configuration.

Default No cards are preconfigured for any slots.

Parameters *card-type* — The type of card to be configured and installed in that slot.

fail-on-error

Syntax [**no**] **fail-on-error**

Context config>card

Description This command controls the behavior of the card when any one of a specific set of card level errors is encountered in the system. When the **fail-on-error** command is enabled, and any one (or more) of the specific errors is detected, then the Operational State of the card is set to Failed. This Failed state will persist until the clear card command is issued (reset) or the card is removed and re-inserted (re-seat). If the condition persists after re-seating the card, then Nokia support should be contacted for further investigation.

Enabling **fail-on-error** is only recommended when the network is designed to be able to route traffic around a failed card (redundant cards, nodes or other paths exist).

The list of specific errors includes:

- CHASSIS event ID# 2063 – tmnxEqCardPChipMemoryEvent
- CHASSIS event ID# 2076 – tmnxEqCardPChipCamEvent
- CHASSIS event ID# 2059 – tmnxEqCardPChipError (for ingress Ethernet only)
- CHASSIS event ID# 2098 tmnxEqCardQChipBufMemoryEvent
- CHASSIS event ID# 2099 tmnxEqCardQChipStatsMemoryEvent
- CHASSIS event ID# 2101 tmnxEqCardQChipIntMemoryEvent
- CHASSIS event ID# 2103 tmnxEqCardChipIfCellEvent

On platforms without independent IOM/IMM and CPM cards, such as the 7750 SR c4/c12 or 7450 ESS-1, the node will be rebooted if fail-on-error is enabled and one of the card level errors is encountered.

The tmnxEqCardPChipError is only considered as a trigger for card fail-on-error for ingress FCS errors (not egress FCS errors), and only for Ethernet MDAs or IMMs.

Note that upon the detection of the event/error in the system, the reporting of the event (logs) and the **fail-on-error** behavior of the card are independent. Log event control configuration will determine whether the events are reported in logs (or SNMP traps, etc) and the **fail-on-error** configuration will determine the behavior of the card. This implies that the card can be configured to **fail-on-error** even if the events are suppressed (some may be suppressed in the system by default). In order to facilitate post-failure analysis, Nokia recommends that you enable the reporting of the specific events/errors (configure log event-control) when **fail-on-error** is enabled.

Default no fail-on-error

named-pool-mode

Syntax [**no**] **named-pool-mode** [**now**]

Context config>card

Description This command places an IOM in the named pool mode. When in named pool mode, the system will change the way default pools are created and allow for the creation of MDA and port level named buffer pools. When not enabled, the system will create default ingress and egress pools per port. When enabled, the system will not create per port pools, instead a default network and access pool is created for ingress and egress and is shared by queues on all ports.

The named pool mode may be enabled and disabled at anytime. Care should be taken when changing the pool mode for an IOM as the process of changing to or from named pool mode causes an IOM reset if MDAs are currently provisioned on the slot. If MDAs have not been provisioned at the time the named-pool-mode or no named-pool-mode command is executed, the IOM is not reset (for example, when the system is booting, the named pool mode command does not reset the IOM since the mode is set prior to provisioning the IOM's MDAs).

This command is not enabled for the ISA-AA MDA.

The **no** form of the command converts the pool mode on the IOM card to the default mode. If MDAs are currently provisioned on the IOM, the card is reset.

2.25.2.3 MCM Commands

MCM commands are supported on the 7750 SR only.

mcm

Syntax **mcm** *mcm-slot*
no mcm *mcm-slot*

Context config>card

Description This mandatory command enables access to a card's MCM CLI context to configure MCMs.

Default No MCM slots are configured by default.

Parameters *mcm-slot* — The MCM slot number to be configured. Even slot numbers 2 to 12 are invalid. MCM provisioning is not required to provision Compact Media Adapters (CMAs).

Values 7750 SR-c4: 1, 3
7750 SR-c12: 1, 3, 5, 7, 9, 11

mcm-type

Syntax **mcm** *mcm-type*
no mcm *mcm-type*

Context config>card>mcm

Description This mandatory command provisions a specific MCM type to the device configuration for the slot. The MCM can be preprovisioned but an MDA must be provisioned before ports can be configured. Ports can be configured once the MDA is properly provisioned.

To modify an MCM slot, shut down all port associations. MCMs are required to provision MDAs. MCMs are not required to provision CMAs.

Parameters *mcm-type* — The type of MCM to provision for that slot.

Values mcm-v1, mcm-v2

2.25.2.4 MDA (XMA) Commands

mda

Syntax **mda** *mda-slot*
no mda *mda-slot*

Context config>card

Description This mandatory command enables access to a card's MDA CLI context to configure MDAs.

Default No MDA slots are configured by default.

Parameters *mda-slot* — The MDA slot number to be configured. Slots are numbered 1 and 2. On vertically oriented slots, the top MDA slot is number 1, and the bottom MDA slot is number 2. On horizontally oriented slots, the left MDA is number 1, and the right MDA slot is number 2. For 7750 SR-c12/4 systems, MDAs may not be provisioned before MCMs are configured for the same slot. MCMs are not required for CMA provisioning.

Values 1, 2

Values 7710 SR c-12 MDA: 1, 3, 5, 7, 9, 11
7710 SR c-12 CMA: 1-12
7710 SR c-4 MDA: 1, 3
7710 SR c-4 CMA: 1-4

clock-mode

Syntax **clock-mode adaptive**
clock-mode differential [**timestamp-freq** {*frequency*}]

Context config>card>mda

Description This command defines the clocking mode on the specified CMA/MDA. This command is only supported on CES CMAs and MDAs.

Default adaptive

Parameters **adaptive —** Specifies that MDA is in the adaptive clock mode. This CMA/MDA can use adaptive clock recovery methods.

differential — Specifies that MDA is in the differential clock mode. This CMA/MDA can use differential clock recovery methods.

timestamp-freq — This sets the differential timestamp frequency to be 103.68 MHz (default), 77,76 MhZ or 19.44 MHz. The frequency value is entered in kHz, thus valid values are 103680, 77760 and 19440. If this parameter is omitted, the default timestamp frequency of 103.68 MHz is used.

Values 19440, 77760, 103680

fail-on-error

Syntax [**no**] **fail-on-error**

Context config>card>mda

Description This command enables the fail-on-error feature. If an MDA is experiencing too many Egress XPL Errors, this feature causes the MDA to fail. This can force an APS switchover or **traffic re-route**. The purpose of this feature is to avoid situations where traffic is forced to use a physical link that suffers from errors but is still technically operational.

The feature uses values configured in the config>card>mda>egress-xpl context. When this feature is enabled on a MDA, if *window* consecutive minutes pass in which the MDA experiences more than *threshold* Egress XPL Errors per minute, then the MDA will be put in the *failed* state.

The **no** form of this command disables the feature on the MDA.

egress

Syntax **egress**

Context config>card>mda

Description This command enables the context to configure egress MDA parameters.

egress-xpl

Syntax **egress-xpl**

Context config>card>mda

Description This command enables the context to configure **egress-xpl** settings used by the **fail-on-error** feature.

threshold

Syntax **threshold** *threshold*

Context config>card>mda>egress-xpl

Description This command configures the Egress XPL Error Threshold value used by the **fail-on-error** feature.

Default 1000

Parameters *threshold* — Specifies an upper limit on the frequency of Egress XPL Errors that can occur on the MDA. When **fail-on-error** is enabled, if the MDA experiences more than *threshold* errors per minute for *window* minutes, the MDA will be put in the *failed* state.

threshold cannot be changed while fail-on-error is enabled for this MDA.

Values 1 to 1000000

window

Syntax **window** *window*

Context config>card>mda>egress-xpl

Description This command configures the Error Window value used by the fail-on-error feature.

Default 60

Parameters *window* — Specifies the time (in minutes) that the MDA can experience frequent Egress XPL Errors. When **fail-on-error** is enabled, if more than *threshold* Egress XPL errors per minute occur on the MDA for <window> consecutive minutes, the MDA will be put in the *failed* state.

window cannot be changed while fail-on-error is enabled for this MDA.

Values 1 to 1440

ingress

Syntax **ingress**

Context config>card>mda

Description This command enables the context to configure ingress MDA parameters.

mcast-path-management

Syntax **mcast-path-management**

Context config>card>mda>ingress

Description This command enables the context to configure local MDA settings for ingress multicast path management.

ancillary-override

Syntax **ancillary-override**

Context config>card>mda>ingress>mcast-mgmt

Description This command enables the context to configure ancillary path bandwidth override parameters.

path-limit

Syntax **path-limit** *megabits-per-second*
no path-limit

Context config>card>mda>ingress>mcast-mgmt>anc-override

Description This command overrides the path limits contained in the bandwidth policy associated with the MDA.

The **no** form of the command removes the path limit override from an ingress multicast path and restores the path limit defined in the bandwidth policy associated with the MDA.

Parameters *megabits-per-second* — Specifies the path limit override to give the upper limit that multicast channels may use on each path.

Values ancillary-override: 1 to 5000
primary-override: 1 to 2000
secondary-override: 1 to 2000

bandwidth-policy

Syntax **bandwidth-policy** *policy-name*
no bandwidth-policy

Context config>card>mda>ingress>mcast-mgmt

Description This command specifies an existing multicast bandwidth policy. Bandwidth policies are used to manage the ingress multicast path bandwidth. Each forwarding plane supports multicast forwarding paths into the switch fabric. Bandwidth policy parameters are configured in the **config>mcast-mgmt** context.

Parameters *policy-name* — Specifies an existing multicast bandwidth policy.

primary-override

Syntax **primary-override**

Context config>card>mda>ingress>mcast-mgmt

Description This command enables the context to configure primary path limit override parameters.

secondary-override

Syntax **secondary-override**

Context config>card>mda>ingress>mcast-mgmt

Description This command enables the context to configure secondary path limit override parameters.

hi-bw-mcast-src

Syntax **hi-bw-mcast-src** [**alarm**] [**group** *group-id*]
no hi-bw-mcast-src

Context config>card>mda

Description This command designates the MDA as a high-bandwidth IP multicast source, expecting the ingress traffic to include high-bandwidth IP multicast traffic. When configured, the system attempts to allocate a dedicated multicast switch fabric plane (MSFP) to the MDA. If a group is specified, all MDAs in the group will share the same MSFP. If the alarm parameter is specified and the system cannot allocate a dedicated MSFP to the new group or MDA, the MDAs will be brought online and generate an event (SYSTEM: 2052 - mdaHiBwMulticastAlarm). Similarly, if during normal operation there is a failure or removal of resources, an event will be generated if the system cannot maintain separation of MSFPs for the MDAs.

This command is supported on the 7950 XRS, 7750 SR-7, 7750 SR-12, 7450 ESS-7 and 7450 ESS-12.

The **no** form of the command removes the high-bandwidth IP multicast source designation from the MDA.

Default no hi-bw-mcast-src

Parameters **alarm —** Enables event generation if the MDA is required to share an MSFP with another MDA that is in a different group. MDAs within the same group sharing an MSFP will not cause this alarm.

group *group-id* **—** Specifies the logical MSFP group for the MDA. MDAs configured with the same *group-id* will be placed on the same MSFP.

Values 0 to 32 (A value of 0 removes the MDA from the group.)

Default By default, “none” is used, and the system will attempt to assign a unique MSFP to the MDA.

mda-type

Syntax **mda-type** *mda-type*
no mda-type

Context config>card>mda

Description This mandatory command provisions a specific MDA type to the device configuration for the slot. The MDA can be preprovisioned but an MDA must be provisioned before ports can be configured. Ports can be configured once the MDA is properly provisioned.

A maximum of two MDAs can be provisioned on an IOM/XCA. Only one MDA can be provisioned per IOM/MDA slot. To modify an MDA slot, shut down all port associations.

A maximum of six MDAs or eight CMAs (or a combination) can be provisioned on a 7750 SR-c12. Only one MDA/CMA can be provisioned per MDA slot. To modify an MDA slot, shut down all port associations.

CMAs do not rely on MCM configuration and are provisioned without MCMs.

Note that CMAs/XMAs are provisioned using MDA commands. A medium severity alarm is generated if an MDA/CMA is inserted that does not match the MDA/CMA type configured for the slot. This alarm is cleared when the correct MDA/CMA is inserted or the configuration is modified. A high severity alarm is raised when an administratively enabled MDA/CMA is removed from the chassis. This alarm is cleared if the either the correct MDA/CMA type is inserted or the configuration is modified. A low severity trap is issued if an MDA/CMA is removed that is administratively disabled.

An MDA can only be provisioned in a slot if the MDA type is allowed in the MDA slot. An error message is generated when an MDA is provisioned in a slot where it is not allowed.

A medium severity alarm is generated if an MDA is inserted that does not match the MDA type configured for the slot. This alarm is cleared when the correct MDA is inserted or the configuration is modified.

A high severity alarm is raised when an administratively enabled MDA is removed from the chassis. This alarm is cleared if the either the correct MDA type is inserted or the configuration is modified. A low severity trap is issued if an MDA is removed that is administratively disabled.

An alarm is raised if partial or complete MDA failure is detected. The alarm is cleared when the error condition ceases.

All parameters in the MDA context remain and if non-default values are required then their configuration remains as it is on all existing MDAs.

The **no** form of this command deletes the MDA from the configuration. The MDA must be administratively shut down before it can be deleted from the configuration.

Default No MDA types are configured for any slots by default.

Parameters *mda-type* — The type of MDA selected for the slot position.

named-pool-mode

Syntax **named-pool-mode**

Context config>card>mda
config>port

Description The named-pool-mode CLI context is used to store the MDA and port level named pool mode configuration commands. Currently, only the ingress and egress named-pool-policy commands are supported. Any future named pool mode configuration commands or overrides will be placed in the named-pool-mode CLI context. Within the context is an ingress and egress context.

Enter the named-pool-mode to define the ingress and egress named pool policy associations for either an MDA or port. The node may be entered regardless of the current named-pool-mode state of the IOM.

egress

Syntax **egress**

Context config>card>mda>named-pool-mode
config>port>named-pool-mode

Description The egress node within the named-pool-mode context is used to contain the egress named-pool-policy configuration. Enter the egress node when defining or removing the MDA or port level egress named pool policy.

ingress

Syntax **ingress**

Context config>card>mda>named-pool-mode
config>port>named-pool-mode

Description The ingress node within the named-pool-mode context is used to contain the ingress named-pool-policy configuration. Enter the ingress node when defining or removing the MDA or port level ingress named pool policy.

named-pool-policy

Syntax **named-pool-policy** *policy-name*
no named-pool-policy

Context config>card>mda>named-pool-mode>ingress
config>card>mda>named-pool-mode>egress
config>port>named-pool-mode>ingress
config>port>named-pool-mode>egress

Description The named-pool-policy command is used to associate a named pool policy with an MDA or port ingress or egress context. The policy governs the way that named pools are created at the MDA or port level. The policy may be applied regardless of whether the IOM is in named pool mode; however, a named pool policy to an MDA or port to a card that is not on named pool mode will be ignored. Pools may not be created due to insufficient resources or pool name collisions. Pool name collisions are allowed. The name check is performed independently between ingress and egress. A port on ingress may have a named pool defined that is also on the egress side at the MDA level. Multiple ports on the same MDA may have the same policy or the same named pools defined. Ports on the same MDA may also have different named pool policies defined.

The **no named-pool-policy** command removes any existing policy associated with the MDA or port.

Parameters *policy-name* — The defined policy-name must be an existing named pool policy on the system. If policy-name does not exist, the named-pool-policy command will fail. If another named pool policy is currently associated, it will continue to be associated on the MDA or port. If the policy-name does exist, the pools within the current policy (if a policy is currently associated) will be removed and the pools defined within the new policy will be created. Queues on the port or MDA will be moved to the new pools. If a pool being used by a queue existed on the previous policy, but not in the new policy, the queue is moved to the appropriate default pool and marked as 'pool-orphaned'. The policy-name may be changed at any time.

Values Any existing Named Pool Policy

power-priority-level

Syntax **power-priority-level** *priority*

Context config>card>mda

Description This command sets the power priority value for the 7950 XRS.

Default 150

Parameters *priority* — An operator must assign a priority value to each XMA using a range of number from 1 to 200. The lowest number has the highest priority. The priority number range from 1 to 100 should be used for modules considered essential for system operation. Lower priority values of 101 to 200 should be used for non-essential modules.

sync-e

Syntax [**no**] **sync-e**

Context config>card>mda

Description This command enables synchronous Ethernet on the MDA. Then any port on the MDA can be used as a source port in the sync-if-timing configuration.

The **no** form of the command disables synchronous Ethernet on the MDA.

2.25.2.5 MDA/Port QoS Commands

access

Syntax **access**

Context config>card>mda

config>port

Description This command enables the access context to configure egress and ingress pool policy parameters.

On the MDA level, access egress and ingress pools are only allocated on channelized MDAs/CMAs.

egress

Syntax **egress**

Context config>port>access
config>card>mda>access
config>card>mda>network
config>port>network

Description This command enables the context to configure egress buffer pool parameters which define the percentage of the pool buffers that are used for CBS calculations and specify the slope policy that is configured in the **config>qos>slope-policy** context.

On the MDA level, network and access egress pools are only allocated on channelized MDAs/CMAs.

pool

Syntax [**no**] **pool** [*name*]

Context config>card>mda>access>egress
config>card>mda>access>ingress
config>card>mda>network>egress

config>port>access>egress
config>port>access>ingress
config>port>network>egress
config>port>network>ingress
config>port>access>uplink>egress

Description This command configures pool policies.

On the MDA level, access and network egress and access ingress pools are only allocated on channelized MDAs. On the MDA level, access and network egress and access ingress pools are only allocated on channelized MDAs. Network ingress pools are allocated on the MDA level for non-channelized MDAs.

Default default

Parameters *name* — Specifies the pool name, a string up to 32 characters long composed of printable, 7-bit ASCII characters. If the string contains special characters (#, $, spaces, etc.), the entire string must be enclosed within double quotes.

amber-alarm-threshold

Syntax **amber-alarm-threshold** *percentage*
no amber-alarm-threshold

Context config>card>mda>access>egress>pool
config>card>mda>access>ingress>pool
config>card>mda>network>egress>pool
config>card>mda>network>ingress>pool
config>port>access>egress>pool
config>port>access>ingress>pool
config>port>network>egress>pool

Description This command configures the threshold for the amber alarm on the over-subscription allowed.

Users can selectively enable amber or red alarm thresholds. But if both are enabled (non-zero) then the red alarm threshold must be greater than the amber alarm threshold.

The **no** form of the command reverts to the default value.

Default 0

Parameters *percentage* — Specifies the amber alarm threshold.

Values 1 to 1000

red-alarm-threshold

Syntax **red-alarm-threshold** *percentage*
no red-alarm-threshold

Context config>card>mda>access>egress>pool
config>card>mda>access>ingress>pool
config>card>mda>network>egress>pool
config>card>mda>network>ingress>pool
config>port>access>egress>pool
config>port>access>ingress>pool
config>port>network>egress>pool

Description This command configures the threshold for the red alarm on the over-subscription allowed.

Users can selectively enable amber or red alarm thresholds. But if both are enabled (non-zero) then the red alarm threshold must be greater than the amber alarm threshold.

The **no** form of the command reverts to the default value.

Default 0

Parameters *percentage* — Specifies the amber alarm threshold.

Values 1 to 1000

resv-cbs

Syntax **resv-cbs** *percent-or-default* **amber-alarm-action step** *percent* **max** [*percentage*]
resv-cbs *percent-or-default*
no resv-cbs

Context config>port>access>egress>pool
config>port>ethernet>network
config>card>mda>access>egress
config>card>mda>access>ingress
config>card>mda>network>egress
config>card>mda>network>ingress
config>port>access>egress>channel>pool
config>port>access>ingress>pool
config>port>network>egress>pool

Description This command defines the percentage or specifies the sum of the pool buffers that are used as a guideline for CBS calculations for access and network ingress and egress queues. Two actions are accomplished by this command:

- A reference point is established to compare the currently assigned (provisioned) total CBS with the amount the buffer pool considers to be reserved. Based on the percentage of the pool reserved that has been provisioned, the over provisioning factor can be calculated.
- The size of the shared portion of the buffer pool is indirectly established. The shared size is important to the calculation of the instantaneous-shared-buffer-utilization and the average-shared-buffer-utilization variables used in Random Early Detection (RED) per packet slope plotting.

It is important to note that this command does not actually set aside buffers within the buffer pool for CBS reservation. The CBS value per queue only determines the point at which enqueuing packets are subject to a RED slope. Oversubscription of CBS could result in a queue operating within its CBS size and still not able to enqueue a packet due to unavailable buffers. The resv-cbs parameter can be changed at any time.

If the total pool size is 10 MB and the resv-cbs set to 5, the ‘reserved size’ is 500 KB.

The **no** form of this command restores the default value.

The no resv-cbs command will clear all the adaptive configurations. There cannot be any adaptive sizing enabled for default resv-cbs.

Default default (30%)

Parameters *percent-or-default* — Specifies the pool buffer size percentage.

Values 0 to 100

amber-alarm-action step *percent* **—** specifies the percentage step-size for the reserved CBS size of the pool. When using the default value, the adaptive CBS sizing is disabled. To enable adaptive CBS sizing, **step** *percent* must be set to non-default value along with the **max** parameter. When reserved CBS is default adaptive CBS sizing cannot be enabled. The reserved CBS (Committed Burst Size) defines the amount of buffer space within the pool that is not considered shared.

Values 1 to 100

Default 0

max [*percentage*] **—** Specifies the maximum percentage for the reserved CBS size of the pool. When using the default value, the adaptive CBS sizing is disabled. To enable adaptive CBS sizing, **max** value must be set to non-default value along with the **step** *percent*. When reserved CBS is default adaptive CBS sizing cannot be enabled. The reserved CBS (Committed Burst Size) defines the amount of buffer space within the pool that is not considered shared. Max reserved CBS must not be more than the reserved CBS.

Values 1 to 100

Default 0

slope-policy

Syntax **slope-policy** *name*
no slope-policy

Context config>port>access>egress>pool
config>card>mda>access>egress
config>card>mda>access>ingress
config>card>mda>network>egress
config>card>mda>network>ingress
config>port>access>egress>channel>pool
config>port>access>ingress>pool
config>port>network>egress>pool

Description This command specifies an existing slope policy which defines high and low priority RED slope parameters and the time average factor. The policy is defined in the **config>qos>slope-policy** context.

ingress

Syntax **ingress**

Context config>card>mda>access
config>card>mda>network
config>port>access

Description This command enables the context to configure ingress buffer pool parameters which define the percentage of the pool buffers that are used for CBS calculations and specify the slope policy that is configured in the **config>qos>slope-policy** context.

On the MDA level, access ingress pools are only allocated on channelized MDAs/CMAs.

ingress-xpl

Syntax **ingress-xpl**

Context config>card>mda

Description This command enables the context to configure ingress MDA XPL interface error parameters.

threshold

Syntax **threshold** *threshold*

Context config>card>mda>ingress-xpl

Description This command configures the Ingress XPL Error Threshold value used by the **fail-on-error** feature.

Default 1000

Parameters *threshold* — Specifies an upper limit on the frequency of Ingress XPL Errors that can occur on the MDA. When **fail-on-error** is enabled, if the MDA experiences more than *threshold* errors per minute for *window* minutes, the MDA will be put in the *failed* state.

threshold cannot be changed while fail-on-error is enabled for this MDA.

Values 1 to 1000000

window

Syntax **window** *window*

Context config>card>mda>ingress-xpl

Description This command configures the Error Window value used by the **fail-on-error** feature.

Default 60

Parameters *window* — Specifies the time (in minutes) that the MDA can experience frequent Ingress XPL Errors. When **fail-on-error** is enabled, if more than *threshold* Ingress XPL errors per minute occur on the MDA for <window> consecutive minutes, the MDA will be put in the *failed* state.

window cannot be changed while fail-on-error is enabled for this MDA.

Values 1 to 1440

network

Syntax **network**

Context config>card>mda
config>port

Description This command enables the network context to configure egress and ingress pool policy parameters.

On the MDA level, network egress pools are only allocated on channelized MDAs/CMAs.

2.25.2.6 Power Commands

The following power commands are supported the 7950 XRS only.

mode

Syntax **mode** {**none** | **basic** | **advanced**}

Context config>system>power-management

Description This command sets the power mode.

Default **basic** mode

Parameters **none —** Specifies that there is no management of power to modules. In this mode, no gradual shutdown of active XCMs and XMAs is enforced. No spare capacity is reserved and any APEQ failure may result in brownouts or card failures.

basic — Specifies that the node will bring up as many provisioned modules (in order of priority) as possible using the N+1 algorithm. In **basic** mode the system shuts down IO cards when power capacity drops below the Power Safety Level.

advanced — Specifies that the operator can maintain a spare APEQ as long as possible to make it immune to the possibility of power brown-outs. In **advanced** mode, the system starts shutting down IO cards when the power capacity drops below the Power Safety Level + Max rated APEQ.

peq

Syntax **peq** *peq-slot*

Context config>system>power-management

Description This command sets the APEQ slot number.

Parameters *peq-slot* — An identifier the APEQ slot.

Values 1 to 12

peq-type

Syntax [**no**] **peq-type** *peq-type*

Context config>system>pwr-mgmt>peq

Description This command sets the type of APEQ for the designated APEQ slot.

The no form of the command moves the APEQ to unprovisioned state.

Parameters *peq-type* — Identifies the APEQ type.

Values apeq-dc-2000
apeq-dc-2200-2800
apeq-ac-3000
apeq-hvdc-3000

Default apeq-dc-2000

input-power-mode

Syntax **input-power-mode** *amperage* [**60** | **80**]

Context config>system>pwr-mgmt>peq

Description This command sets the input-power-mode of the APEQ for the designated APEQ slot.

Parameters *amperage* — Sets the APEQ input power mode.

Values 60
80

Default 60

shutdown

Syntax [**no**] **shutdown**

Context config>system>power-management>peq

Description This command administratively enables/disables the APEQ.

power safety-alert

Syntax **power safety-alert** *value in watts*

Context config>system>power-management

Description This command sets a value in watts for the Power Safety Alert.The Power Safety Alert minor alarm is generated when the system power capacity drops below the Power Safety Level (in watts) + the Power Safety Alert. This is a critical level, which when breached the system starts shutting down IO cards based on card priority.

power-safety-level

Syntax **power-safety-level** *%*

Context config>system>power-management

Description This command sets the Power Safety Level, which is a percentage of the calculated worst case power draw value. Once a Power Safety Level is configured by the operator, both the Basic and Advanced modes use the Power Safety Level as a reference for calculating the power redundancy using N+1 algorithm during start up and recovery from power depression.

Default 100%

Parameters *%* — Specifies the Power Safety Level as a percentage of the calculated worst case power draw value.

2.25.2.7 Virtual Scheduler Commands

rate-calc-min-int

Syntax **rate-calc-min-int** [**fast-queue** *percent-of-default*] [**slow-queue** *percent-of-default*]
no rate-calc-min-int

Context config>card>virt-sched-adj

Description This command overrides the default minimum time that must elapse before a policer or queue's offered rate may be recalculated. A minimum time between offered rate calculations is enforced to both prevent inaccurate estimation of the offered rate and excessive input to the virtual scheduler process.

In order to smooth out rapidly fluctuating offered rates, the system averages the measured offered rate with a window of previously measured offered traffic statistics and knowledge of the time between the samples.

The window size is defined by the "rate calculation minimum interval" with offered traffic statistics being read at most four times within the window. Any previous measured offered statistics within the window are used in the averaging function. Note that if there are large numbers of samples required, for example when a large number of queues are running HQoS, then it may be that a time greater than the "rate calculation minimum interval" passes before another sample of the offered statistics can be taken for a queue. In this case, in order to calculate an offered rate, HQoS will always use two samples, the current and the previous. In this case, using a smaller **rate-calc-min-int** will have no effect on the responsiveness of HQoS to queue rate changes.

The system separates policers and queues into fast and slow categories and maintains a separate "rate calculation minimum interval" for each type. The default for each type are as follows:

Slow Queue: 1.0 seconds

Fast Queue: 0.25 seconds

The actual minimum rate calculation interval may be increased or decreased by using the fast-queue and/or slow-queue keywords (which are also applicable for policers managed by HQoS) followed by a percent value which is applied to the default interval. The default slow-queue threshold rate is 1 Mbps. Once a policer or queue is categorized as slow, its rate must rise to 1.5 Mbps before being categorized as a fast policer or queue. The categorization threshold may be modified by using the slow-queue-thresh command.

The **no** rate-calc-min-interval command is used to restore the default fast queue and slow queue minimum rate calculation interval.

Parameters **fast-queue** *percent-of-default***: —** The fast-queue percent-of-default parameter is optional and is used to modify the default minimum rate calculation time for "fast" queues. Defining 100.00 percent is equivalent to removing the override (restoring the default) on the fast queue minimum rate calculation time.

Values 0.01% to 1000.00%

Default 100.00%

slow-queue *percent-of-default*: — The slow-queue percent-of-default parameter is optional and is used to modify the default minimum rate calculation time for "slow" queues. Defining 100.00 percent is equivalent to removing the override (restoring the default) on the slow queue minimum rate calculation time.

Values 0.01% to 1000.00%

Default 100.00%

sched-run-min-int

Syntax **sched-run-min-int** *percent-of-default*
no sched-run-min-int

Context config>card>virt-sched-adj

Description This command is used to override the default minimum time that must elapse before a virtual scheduler may redistribute bandwidth based on changes to the offered rates of member policers or queues. A minimum run interval is enforced to allow a minimum amount of "batching" queue changes before reacting to the changed rates. This minimum interval is beneficial since the periodic function of determining policer or queue offered rates is performed sequentially and the interval allows a number policer and queue rates to be determined prior to determining the distribution of bandwidth to the policers and queues.

The default minimum scheduler run interval is 0.5 seconds. The sched-run-min-int command uses a percent value to modify the default interval.

The **no** sched-run-min-int command is used to restore the default minimum scheduler run interval for all virtual schedulers on the card.

Parameters *percent-of-default:* — The percent-of-default parameter is required and is used to modify the default minimum scheduler run interval for all virtual schedulers on the card. Defining 100.00 percent is equivalent to removing the override (restoring the default) for the minimum scheduler run interval.

Values 0.01% to 1000.00%

Default 100.00%

slow-queue-thresh

Syntax **slow-queue-thresh** *kilobits-per-second*
no slow-queue-thresh

Context config>card>virt-sched-adj

Description This command is used to override the system default rate threshold where policers and queues are placed in the "slow" queue category. Slow rate policers and queues use a different minimum rate calculation interval time than fast rate queues. The rate is determined based on the previous calculated offered rate for the policer or queue.

The default slow policer or queue rate is 1 Mbps. The fast rate is derived by multiplying the slow rate by a factor of 1.5 resulting in a default fast rate of 1.5 Mbps. The slow-queue-thresh command uses a “Kilobit-Per-Second” value to modify the default slow queue rate threshold and indirectly changes the fast queue rate threshold.

The **no** slow-queue-thresh command is used to restore the default slow queue and fast rate thresholds.

Parameters *kilobit-per-second:* — The kilobit-per-second parameter is required and is used to modify the default slow rate threshold. Defining a value of 0 forces all policers and queues to be treated as fast rate. Defining a value of 1000 (1Mbps) returns the threshold to the default value and is equivalent to executing no slow-queue-thresh.

The fast rate threshold is derived by multiplying the new slow rate threshold by a factor of 1.5.

Values 0 to 1000000 kilobits per second

Default 1000 kilobits per second

task-scheduling-int

Syntax **task-scheduling-int** *percent-of-default*
no task-scheduling-int

Context config>card>virt-sched-adj

Description This command is used to override the system default time between scheduling the hierarchical virtual scheduling task. By default, the system “wakes” the virtual scheduler task every 50ms; this is equivalent to five 10ms timer ticks. The task-scheduling-int command uses a percent value parameter to modify the number of timer ticks.

While the system accepts a wide range of percent values, the result is rounded to the nearest 10ms tick value. The fastest wake interval is 10ms (1 timer tick).

The **no** scheduling-int command is used to restore the default task scheduling interval of the card’s hierarchical virtual scheduler task.

Parameters *percent-of-default:* — The percent-of-default parameter is required and is used to modify the default task scheduling interval for the hierarchical virtual scheduling task on the card. Defining 100.00 percent is equivalent to removing the override.

Values 0.01% to 1000.00%

Default 100.00%

2.25.2.8 Forwarding Plane Configuration Commands

fp

Syntax **fp** [*fp-number*]

Context config>card

Description This command enables access to the configuration of the forwarding planes on a card. Depending on the type of card, there may be one or two forwarding planes.

The default forwarding plane is 1. When entering the fp node, if the forwarding plane number is omitted, the system will assume forwarding plane number 1. This command is supported on FP2 and higher-based line cards.

Default 1

Parameters *fp-number* — The fp-number parameter is optional following the **fp** command. If omitted, the system assumes forwarding plane number 1.

Values 1-2

Default 1

egress

Syntax **egress**

Context config>card>fp

Description This command enables access to the egress **fp** CLI context.

wred-queue-control

Syntax **wred-queue-control**

Context config>card>fp>egress

Description This command enables the context to configure the aggregate WRED queue parameters for all WRED queues on an egress forwarding plane.

buffer-allocation

Syntax **buffer-allocation min** *percentage* **max** *percentage*
no buffer-allocation

Context config>card>fp>egress>wred-queue-control

Description The buffer-allocation command defines the amount of buffers that will be set aside for WRED queue buffer pools. Note that the **min** *percentage* and max *percentage* parameters must be set to the same value. The forwarding plane protects against cross application buffer starvation by implementing a hierarchy of buffer pools. At the top of the hierarchy are mega-pools. Mega-pools are used to manage buffers at a system application level. Two mega-pools are currently used by the system. The first (default) mega-pool services all non-WRED type queues and when WRED queues are not enabled will contain all available forwarding plane queue buffers. When WRED queuing is enabled, the second mega-pool (the WRED mega-pool) is given buffers from the default mega-pool based on the buffer-allocation command.

The mega-pools provide buffers to the second tier buffer pools. The default mega-pool services all default pools and explicitly created named pools. As the name implies, the WRED mega-pool services all the WRED buffer pools created for the WRED queues. The WRED mega-pool allows each WRED queue pool to be configured to an appropriate size while allowing the sum of the WRED queue pool sizes to oversubscribe the total amount set aside for WRED queue buffering without affecting the queues using the default or named pools.

No buffers are allocated to the WRED mega-pool until the wred-queue-control shutdown command is set to no shutdown. When the shutdown command is executed, all buffers allocated to the WRED mega-pool are returned to the default mega-pool and all WRED queues are returned either to their default buffer pool or their specified named buffer pool.

The **no** form of the command immediately restores the default min and max percentage values for sizing the WRED mega-pool.

Parameters **min** *percent-of-total* **—** This required keyword defines the minimum percentage of total egress forwarding plane queue buffers that will be applied to the WRED mega-pool. The value given for percent-of-total must be equal to the value given for the **max** *percent-of-total*. Percentages are defined with an accuracy of hundredths of a percent in the nn.nn format (15.65 = 15.65%).

Values 0.00 to 99.99

Default 25.00

max *percent-of-total* **—** This required keyword defines the maximum percentage of total egress forwarding plane queue buffers that may be applied to the WRED mega-pool. The value given for percent-of-total must be equal to the value given for the **min** *percent-of-total*. Percentages are defined with an accuracy of hundredths of a percent in the nn.nn format (15.65 = 15.65%).

Values 0.01 to 99.99

Default 25.00

resv-cbs

Syntax **resv-cbs min** *percentage* **max** *percentage*
no resv-cbs

Context config>card>fp>egress>wred-queue-control

Description This command defines the amount of buffers within the WRED mega-pool that will be set aside for WRED queues operating within their configured CBS thresholds. **Note** that the **min** *percentage* and **max** *percentage* parameters must be set to the same value. The forwarding plane protects against WRED queue buffer starvation by setting aside a portion of the buffers within the WRED mega-pool. The WRED queue CBS threshold defines when a WRED queue requests buffers from reserved portion of the WRED mega-pool and when it starts requesting buffers from the shared portion of the mega-pool. With proper oversubscription provisioning, this prevents a seldom active queue from being denied a buffer from the mega-pool when the shared portion of the mega-pool is congested.

The WRED mega-slope reserve CBS size is controlled in the same manner as the overall sizing of the WRED mega-pool. A min and max parameter is provided to scope the range that the reserved portion based on percentages of the WRED mega-pool current size.

The **no** form of the command immediately restores the default min and max percentage values for sizing the WRED mega-pool CBS reserve.

Parameters **min** *percent-of-total* **—** This required keyword defines the minimum percentage of the WRED mega-pool buffers that will be applied to the CBS reserve. The value given for percent-of-wred must be equal to the value given for the max percent-of-wred. Percentages are defined with an accuracy of hundredths of a percent in the nn.nn format (15.65 = 15.65%).

Values 0.00 to 99.99

Default 25.00

max *percent-of-total* **—** This required keyword defines the maximum percentage of the IOM3-XP WRED mega-pool buffers that may be applied to the CBS reserve. The value given for percent-of-wred must be greater than or equal to the value given for the min percent-of-wred. Percentages are defined with an accuracy of hundredths of a percent in the nn.nn format (15.65 = 15.65%).

Values 0.01 to 99.99

Default 25.00

slope-policy

Syntax **slope-policy** *slope-policy-name*
no slope-policy

Context config>card>fp>egress>wred-queue-control

Description This command configures WRED slopes within the WRED mega-pool. The WRED slopes in the WRED mega-pool are used when WRED queues are requesting buffers from the mega-pool while they are over their CBS threshold. Once over the CBS threshold, the WRED queue stops receiving buffers from the CBS reserve in the mega-pool and starts competing for buffers in the shared portion of the mega-pool. If the packet resulting in the buffer request is inplus-profile, the packet will be associated with the highplus-slope. In-profile packets are associated with the high slope. Out-of-profile packets are associated with the low slope. Exceed-profile packets are associated with the exceed slope.While the queue is within its CBS threshold, the slopes are ignored.

Within the defined slope-policy, each slope is enabled or disabled (no shutdown or shutdown) and each slope's geometry is defined as percentages of shared portion depth. If a slope is shutdown, the related traffic uses the minimum of the queue MBS and egress WRED megapool size as a drop tail.

The slope-policy also defines the time average factor (TAF) value that is used to determine how the pool's weighted average depth is calculated. The higher the factor, the slower the average depth tracks the actual pool depth.

The **no** form of the command restores the default slope policy to the WRED mega-pool.

Parameters *slope-policy-name* — This required parameter specifies which slope policy the system should apply to the WRED mega-pool. When slope-policy is not executed, the WRED mega-pool will use the default slope policy. The defined slope policy must already exist or the command will fail.

Default When not defined, the default slope policy is used

shutdown

Syntax [**no**] **shutdown**

Context config>card>fp>egress>wred-queue-control

Description This command enables or disables egress WRED queue support on the forwarding plane. By default, WRED queue support is disabled (shutdown). While disabled, the various wred-queue-control commands may be executed on the forwarding plane and SAP egress QoS policies and egress queue group templates with wred-queue enabled may be applied to egress SAPs and port, respectively. The forwarding plane will allocate WRED pools to the WRED queues and the appropriate WRED mega-pool size and CBS reserve size will be calculated, but the WRED mega-pool will be empty and all buffers will be allocated to the default mega-pool. Each WRED queue will be mapped to either its appropriate default pool or an explicitly defined named pool.

Once the **no shutdown** command is executed, the calculated WRED mega-pool buffers will be moved from the default mega-pool to the WRED mega-pool. The WRED mega-pool CBS reserve size will be applied and each egress WRED queue will be moved from its default mega-pool buffer pool to its WRED pool within the WRED mega-pool hierarchy.

The **no** form of the command enables WRED queuing on an egress forwarding plane.

hi-bw-mcast-src

Syntax **hi-bw-mcast-src** [**alarm**] [**group** *group-id*] [**default-paths-only**]
no hi-bw-mcast-src

Context config>card>fp

Description This command designates the forwarding plane as a high-bandwidth IP multicast source, expecting the ingress traffic to include high-bandwidth IP multicast traffic. When configured, the system attempts to allocate a dedicated multicast switch fabric plane (MSFP) to the forwarding plane. If a group is specified, all FPs in the group will share the same MSFP. If the alarm parameter is specified and the system cannot allocate a dedicated MSFP to the new group or FP, the FPs will be brought online and generate an event (SYSTEM: 2052 - mdaHiBwMulticastAlarm). Similarly, if during normal operation there is a failure or removal of resources, an event will be generated if the system cannot maintain separation of MSFPs for the MDAs.

The **no** form of the command removes the high-bandwidth IP multicast source designation from the forwarding plane.

Default no hi-bw-mcast-src

Parameters **alarm —** Enables event generation if the MDA is required to share an MSFP with another MDA that is in a different group. MDAs within the same group sharing an MSFP will not cause this alarm.

group *group-id* **—** Specifies the logical MSFP group for the MDA. MDAs configured with the same *group-id* will be placed on the same MSFP.

Values 0 to 32 (A value of 0 removes the MDA from the group.)

Default By default, “none” is used, and the system will attempt to assign a unique MSFP to the MDA.

default-paths-only — When this parameter is specified the system will only attempt to allocate the two default paths (one high priority and one low priority) to dedicated MSFPs.

ingress

Syntax **ingress**

Context config>card>fp

Description This command enables access to the ingress fp CLI context.

access

Syntax **access**

Context config>card>fp>ingress

Description This CLI node contains the access forwarding-plane parameters.

queue-group

Syntax **queue-group** *queue-group-name* **instance** *instance-id* [**create**]
no queue-group

Context config>card>fp>ingress>access

Description This command creates an instance of a named queue group template on the ingress forwarding plane of a given IOM/IMM. The queue-group-name and **instance** *instance-id* are mandatory parameters when executing the command.

The named queue group template can contain only policers. If it contains queues, then the command will fail.

The **no** form of the command deletes a specific instance of a queue group.

Default n/a

Parameters *queue-group-name* — Specifies the name of the queue group template to be instantiated on the forwarding plane of the IOM/IMM, up to 32 characters in length. The queue-group-name must correspond to a valid ingress queue group template name, configured under **config>qos>queue-group-templates**.

instance-id — Specifies the instance of the named queue group to be created on the IOM/IMM ingress forwarding plane.

Values 1 to 16383

create — Keyword used to associate the queue group. The **create** keyword requirement can be enabled/disabled in the **environment>create** context.

accounting-policy

Syntax **accounting-policy** *policy-name*
no accounting-policy

Context config>card>fp>ingress>access>queue-group
config>card>fp>ingress>network>queue-group

Description This command configures an accounting policy that can apply to a queue-group on the forwarding plane.

An accounting policy must be configured before it can be associated to an interface. If the accounting *policy-id* does not exist, an error is returned.

Accounting policies associated with service billing can only be applied to SAPs. The accounting policy can be associated with an interface at a time.

The **no** form of this command removes the accounting policy association from the queue-group.

Default No accounting policies are specified by default. You must explicitly specify a policy. If configured, the accounting policy configured as the default is used.

Parameters *policy-name* — Specifies the name of the accounting policy to use for the queue-group.

collect-stats

Syntax [**no**] **collect-stats**

Context config>card>fp>ingress>access>queue-group
config>card>fp>ingress>network>queue-group

Description This command enables the collection of accounting and statistical data for the queue group on the forwarding plane. When applying accounting policies, the data, by default, is collected in the appropriate records and written to the designated billing file.

When the **no collect-stats** command is issued, the statistics are still accumulated, however, the CPU does not obtain the results and write them to the billing file. If the **collect-stats** command is issued again (enabled), then the counters written to the billing file will include the traffic collected while the **no collect-stats** command was in effect.

Default no collect-stats

policer-control-policy

Syntax **policer-control-policy** *policy-name*
no policer-control-policy

Context config>card>fp>ingress>access>queue-group
config>card>fp>ingress>network>queue-group

Description This command configures an policer-control policy that can apply to a queue-group on the forwarding plane.

The **no** form of this command removes the policer-control policy association from the queue-group.

Default No policer-control policies are specified by default. You must explicitly specify a policy.

Parameters *policy-name* — Specifies the name of the policer-control policy to use for the queue-group.

max-rate

Syntax **max-rate** {*kilobits-per-second* | **max**}
no max-rate

Context config>card>fp>ingress>acc>qgrp>policer-ctrl-over
config>card>fp>ingress>network>qgrp>policer-ctrl-over

Description This command defines the parent policer's PIR leaky bucket's decrement rate. A parent policer is created for each time the policer-control-policy is applied to either a SAP or subscriber instance. Packets that are not discarded by the child policers associated with the SAP or subscriber instance are evaluated against the parent policer's PIR leaky bucket.

For each packet, the bucket is first decremented by the correct amount based on the decrement rate to derive the current bucket depth. The current depth is then compared to one of two discard thresholds associated with the packet. The first discard threshold (discard-unfair) is applied if the FIR (Fair Information Rate) leaky bucket in the packet's child policer is in the confirming state. The second discard threshold (discard-all) is applied if the child policer's FIR leaky bucket is in the exceed state. Only one of the two thresholds is applied per packet. If the current depth of the parent policer PIR bucket is less than the threshold value, the parent PIR bucket is in the conform state for that particular packet. If the depth is equal to or greater than the applied threshold, the bucket is in the violate state for the packet.

If the result is "conform," the bucket depth is increased by the size of the packet (plus or minus the per-packet-offset setting in the child policer) and the packet is not discarded by the parent policer. If the result is "violate," the bucket depth is not increased and the packet is discarded by the parent policer. When the parent policer discards a packet, any bucket depth increases (PIR, CIR and FIR) in the parent policer caused by the packet are canceled. This prevents packets that are discarded by the parent policer from consuming the child policers PIR, CIR and FIR bandwidth.

The **policer-control-policy root max-rate** setting may be overridden on each SAP or sub-profile where the policy is applied.

The **no max-rate** command returns the policer-control-policy's parent policer maximum rate to max.

Default max

Parameters *kilobits-per-second* **—** Defining a kilobits-per-second value is mutually exclusive with the max parameter. The kilobits-per-second value must be defined as an integer that represents the number of kilobytes that the parent policer will be decremented per second. The actual decrement is performed per packet based on the time that has elapsed since the last packet associated with the parent policer.

Values 0 to 2000000000

max — The **max** parameter is mutually exclusive with defining a **kilobits-per-second** value. When max is specified, the parent policer does not enforce a maximum rate on the aggregate throughput of the child policers. This is the default setting when the **policer-control-policy** is first created and is the value that the parent policer returns to when no max-rate is executed. In order for the parent policer to be effective, a kilobits-per-second value should be specified.

priority-mbs-thresholds

Syntax **priority-mbs-thresholds**

Context config>card>fp>ingress>access>queue-group>policer-control-override
config>card>fp>ingress>network>queue-group>policer-control-override

Description This command contains the root arbiter parent policer's **min-thresh-separation** command and each priority level's **mbs-contribution** command that is used to internally derive each priority level's shared-portion and fair-portion values. The system uses each priority level's shared-portion and fair-portion value to calculate each priority level's discard-unfair and discard-all MBS thresholds that enforce priority sensitive rate-based discards within the root arbiter's parent policer.

The **priority-mbs-thresholds** CLI node always exists and does not need to be created.

Default n/a

mbs-contribution

Syntax **mbs-contribution** *size* [**bytes** | **kilobytes**] [**fixed**]
no mbs-contribution

Context config>card>fp>ingress>access>queue-group>policer-control-override>priority-mbs-thresholds
config>card>fp>ingress>network>queue-group>policer-control-override>priority-mbs-thresholds

Description The **mbs-contribution** command is used to configure the policy-based burst tolerance for a parent policer instance created when the policy is applied to a SAP or subscriber context. The system uses the parent policer's **min-thresh-separation** value, the priority level's **mbs-contribution** value and the number of child policers currently attached to the priority level to derive the priority level's shared-portion and fair-portion of burst tolerance within the local priority level. The shared-portion and fair-portions for each priority level are then used by the system to calculate each priority level's discard-unfair threshold and discard-all threshold.

The value for a priority level's **mbs-contribution** within the policer-control-policy may be overridden on the SAP or subscriber sub-profile where the policy is applied in order to allow fine tuning of the discard-unfair and discard-all thresholds relevant to the needs of the local child policers on the object.

Accumulative Nature of Burst Tolerance for a Parent Policer Priority Level

When defining **mbs-contribution**, the specified size may only be a portion of the burst tolerance associated with the priority level. The packets associated with the priority level share the burst tolerance of lower within the parent policer. As the parent policer PIR bucket depth increases during congestion, the lower priority packets eventually experience discard based on each priority's discard-unfair and discard-all thresholds. Assuming congestion continues once all the lower priority packets have been prevented from consuming bucket depth, the burst tolerance for the priority level will be consumed by its own packets and any packets associated with higher priorities.

The Effect of Fair and Unfair Child Policer Traffic at a Parent Policer Priority Level

The system continually monitors the offered rate of each child policer on each parent policer priority level and detects when the policer is in a congested state (the aggregate offered load is greater than the decrement rate defined on the parent policer). As previously stated, the result of congestion is that the parent policer's bucket depth will increase until it eventually hovers around either a discard-unfair or discard-all threshold belonging to one of the priority levels. This threshold is the point where enough packets are being discarded that the increment rate and decrement rate begin to even out. If only a single child policer is associated to the priority level, the discard-unfair threshold is not used since fairness is only applicable when multiple child policers are competing at the same priority level.

When multiple child policers are sharing the congested priority level, the system uses the offered rates and the parenting parameters of each child to determine the fair rate per child when the parent policer is unable to meet the bandwidth needs of each child. The fair rate represents the amount of bandwidth that each child at the priority level should receive relative to the other children at the same level according to the policer control policy instance managing the child policers. This fair rate is applied as the decrement rate for each child's FIR bucket. Changing a child's FIR rate does not modify the amount of packets forwarded by the parent policer for the child's priority level. It simply modifies the forwarded ratio between the children on that priority level. Since each child FIR bucket has some level of burst tolerance before marking its packets as unfair, the current parent policer bucket depth may at times rise above the discard-unfair threshold. The mbs-contribution value provides a means to define how much separation is provided between the priority level's discard-unfair and discard-all threshold to allow the parent policer to absorb some amount of FIR burst before reaching the priority's discard-all threshold.

This level of fair aggregate burst tolerance is based on the decrement rate of the parent policer's PIR bucket while the individual fair bursts making up the aggregate are based on each child's FIR decrement rate. The aggregate fair rate of the priority level is managed by the system with consideration of the current rate of traffic in higher priority levels. In essence, the system ensures that for each iteration of the child FIR rate calculation, the sum of the child FIR decrement rates plus the sum of the higher priority traffic increment rates equals the parent policers decrement rate. This means that dynamic amounts of higher priority traffic can be ignored when sizing a lower priority's fair aggregate burst tolerance. Consider the following:

- The parent policer decrement rate is set to 20 Mbps (max-rate 20,000).
- A priority level's fair burst size is set to 30 Kbytes (mbs-contribution 30 kilobytes).

- Higher priority traffic is currently taking 12 Mbps.
- The priority level has three child policers attached.
- Each child's PIR MBS is set to 10 Kbytes, which makes each child's FIR MBS 10 Kbytes.
- The children want 10 Mbps, but only 8 Mbps is available,
- Based on weights, the children's FIR rates are set as follows:

	FIR Rate	**FIR MBS**
Child 1	4 Mbps	10 Kbytes
Child 2	3 Mbps	10 Kbytes
Child 3	1 Mbps	10 Kbytes

The 12 Mbps of the higher priority traffic and the 8 Mbps of fair traffic equal the 20 Mbps decrement rate of the parent policer.

It is clear that the higher priority traffic is consuming 12 Mbps of the parent policer's decrement rate, leaving 8 Mbps of decrement rate for the lower priority's fair traffic.

- The burst tolerance of child 1 is based on 10 Kbytes above 4 Mbps,
- The burst tolerance of child 2 is based on 10 Kbytes above 3 Mbps,
- The burst tolerance of child 3 is based on 10 Kbytes above 1 Mbps.

If all three children burst simultaneously (unlikely), they will consume 30 Kbytes above 8 Mbps. This is the same as the remaining decrement rate after the higher priority traffic.

Parent Policer Total Burst Tolerance and Downstream Buffering

The highest in-use priority level's discard-all threshold is the total burst tolerance of the parent policer. In some cases the parent policer represents downstream bandwidth capacity and the max-rate of the parent policer is set to prevent overrunning the downstream bandwidth. The burst tolerance of the parent policer defines how much more traffic may be sent beyond the downstream scheduling capacity. In the worst case scenario, when the downstream buffering is insufficient to handle the total possible burst from the parent policer, downstream discards based on lack of buffering may occur. However, in all likelihood, this is not the case.

In most cases, lower priority traffic in the policer will be responsible for the greater part of congestion above the parent policer rate. Since this traffic is discarded with a lower threshold, this lowers the effective burst tolerance even while the highest priority traffic is present.

Configuring a Priority Level's MBS Contribution Value

In the most conservative case, a priority level's **mbs-contribution** value may be set to be greater than the sum of child policer's mbs and one max-size-frame per child policer. This ensures that even in the absolute worst case where all the lower priority levels are simultaneously bursting to the maximum capacity of each child, enough burst tolerance for the priority's children will exist if they also burst to their maximum capacity.

Since simply adding up all the child policer's PIR MBS values may result in large overall burst tolerances that are not ever likely to be needed, you should consider some level of burst oversubscription when configuring the **mbs-contribution** value for each priority level. The amount of oversubscription should be determined based on the needs of each priority level.

Using the Fixed Keyword to Create Deterministic Parent Policer Discard Thresholds

In the default behavior, the system ignores the **mbs-contribution** values for a priority level on a subscriber or SAP parent policer when a child policer is not currently associated with the level. This prevents additional burst tolerance from being added to higher priority traffic within the parent policer.

This does cause fluctuations in the defined threshold values when child policers are added or removed from a parent policer instance. If this behavior is undesirable, the fixed keyword may be used which causes the **mbs-contribution** value to always be included in the calculation of parent policer's discard thresholds. The defined **mbs-contribution** value may be overridden on a subscriber sla-profile or on a SAP instance, but the fixed nature of the contribution cannot be overridden.

If the defined **mbs-contribution** value for the priority level is zero, the priority level will have no effect on the parent policer's defined discard thresholds. A packet associated with the priority level will use the next lower priority level's discard-unfair and discard-all thresholds.

Default **no mbs-contribution**

The **no mbs-contribution** command returns the policy's priority level's MBS contribution to the default value. When changed, the thresholds for the priority level and all higher priority levels for all instances of the parent policer will be recalculated.

Parameters *size* **[bytes, kilobytes] —** The size parameter is required when executing the **mbs-contribution** command. It is expressed as an integer and specifies the priority's specific portion amount of accumulative MBS for the priority level in bytes or kilobytes which is selected by the trailing **bytes** or **kilobytes** keywords. If both **bytes** and **kilobytes** are missing, **kilobytes** is assumed. Setting this value has no effect on parent policer instances where the priority level's **mbs-contribution** value has been overridden. Clearing an override on parent policer instance causes this value to be enforced.

Values 0 to 16777216

bytes, kilobytes: — The **bytes** keyword is optional and is mutually exclusive with the **kilobytes** keyword. When specified, size is interpreted as specifying the size of **min-thresh-separation** in bytes.

The **kilobytes** keyword is optional and is mutually exclusive with the **bytes** keyword. When specified, size is interpreted as specifying the size of min-thresh-separation in kilobytes.

Default **kilobytes**

fixed — The optional fixed keyword is used to force the inclusion of the defined **mbs-contribution** value (or an override value defined on the SAP or sla-profile) in the parent policer's discard threshold calculations. If the **mbs-contribution** command is executed without the **fixed** keyword, the fixed calculation behavior for the priority level is removed.

min-thresh-separation

Syntax **min-thresh-separation** *size* [**bytes** | **kilobytes**]
no min-thresh-separation

Context config>card>fp>ingress>access>queue-group>policer-control-override>priority-mbs-thresholds
config>card>fp>ingress>network>queue-group>policer-control-override>priority-mbs-thresholds

Description This command defines the minimum required separation between each in-use discard threshold maintained for each parent policer context associated with the policer-control-policy. The min-thresh-separation value may be overridden on each SAP or sub-profile to which the policy is applied.

The system uses the default or specified min-thresh-separation value in order to determine the minimum separation required between each of the of the parent policer discard thresholds. The system enforces the minimum separation based on the following behavior in two ways. The first is determining the size of the shared-portion for each priority level (when the **mbs-contribution** command's optional fixed keyword is not specified):

- When a parent policer instance's priority level has less than two child policers associated, the shared-portion for the level will be zero.
- When a parent policer instance's priority level has two or more child policers associated, the shared-portion for the level will be equal to the current value of **min-thresh-separation**.

The second function the system uses the **min-thresh-separation** value for is determining the value per priority level for the fair-portion:

- When a parent policer instance's priority level has no child policers associated, the fair-portion for the level will be zero.
- When a parent policer instance's priority level has one child policer associated, the fair-portion will be equal to the maximum of the min-thresh-separation value and the priority level's mbs-contribution value.
- When a parent policer instance's priority level has two or more child policers associated, the fair-portion will be equal to the maximum of the following:
  - **min-thresh-separation** value
  - The priority level's **mbs-contribution** value less **min-thresh-separation** value

When the **mbs-contribution** command's optional fixed keyword is defined for a priority level within the policy, the system will treat the defined **mbs-contribution** value as an explicit definition of the priority level's MBS. While the system will continue to track child policer associations with the parent policer priority levels, the association counters will have no effect. Instead the following rules will be used to determine a fixed priority level's shared-portion and fair-portion:

- If a fixed priority level's **mbs-contribution** value is set to zero, both the shared-portion and fair-portion will be set to zero
- If the **mbs-contribution** value is not set to zero:
  - The shared-portion will be set to the current **min-thresh-separation** value
  - The fair-portion will be set to the maximum of the following:
    - **min-thresh-separation** value
    - **mbs-contribution** value less **min-thresh-separation value**

Each time the **min-thresh-separation** value is modified, the thresholds for all instances of the parent policer created through association with this **policer-control-policy** are reevaluated except for parent policer instances that currently have a min-thresh-separation override.

Determining the Correct Value for the Minimum Threshold Separation Value

The minimum value for **min-thresh-separation** should be set equal to the maximum size packet that will be handled by the parent policer. This ensures that when a lower priority packet is incrementing the bucket, the size of the increment will not cause the bucket's depth to equal or exceed a higher priority threshold. It also ensures that an unfair packet within a priority level cannot cause the PIR bucket to increment to the discard-all threshold within the priority.

When evaluating maximum packet size, each child policer's per-packet-offset setting should be taken into consideration. If the maximum size packet is 1518 bytes and a per-packet-offset parameter is configured to add 20 bytes per packet, min-thresh-separation should be set to 1538 due to the fact that the parent policer will increment its PIR bucket using the extra 20 bytes.

In most circumstances, a value larger than the maximum packet size is not necessary. Management of priority level aggregate burst tolerance is intended to be implemented using the priority level **mbs-contribution** command. Setting a value larger than the maximum packet size will not adversely affect the policer performance, but it may increase the aggregate burst tolerance for each priority level.

One thing to note is that a priority level's shared-portion of the parent policer's PIR bucket depth is only necessary to provide some separation between a lower priority's discard-all threshold and this priority's discard-unfair threshold. It is expected that the burst tolerance for the unfair packets is relatively minimal since the child policers feeding the parent policer priority level all have some amount of fair burst before entering into an FIR exceed or unfair state. The fair burst amount for a priority level is defined using the mbs-contribution command.

The **no** form of this command returns the policy's **min-thresh-separation** value to the default value. This has no effect on instances of the parent policer where **min-thresh-separation** is overridden unless the override is removed.

Default **no min-thresh-separation**

Parameters *size* **[bytes, kilobytes] —** The size parameter is required when executing the **min-thresh-separation** command. It is expressed as an integer and specifies the shared portion in bytes or kilobytes that is selected by the trailing bytes or kilobytes keywords. If both bytes and kilobytes are missing, kilobytes is the assumed value. Setting this value has no effect on parent policer instances where the **min-thresh-separation** value has been overridden. Clearing an override on parent policer instance causes this value to be enforced.

Values 0 to 16777216

[bytes, kilobytes] — The **bytes** keyword is optional and is mutually exclusive with the **kilobytes** keyword. When specified, size is interpreted as specifying the size of **min-thresh-separation** in bytes.

The **kilobytes** keyword is optional and is mutually exclusive with the **bytes** keyword. When specified, size is interpreted as specifying the size of **min-thresh-separation** in kilobytes.

Values **bytes** or **kilobytes**

Default **kilobytes**

priority

Syntax **priority** *level*

Context config>card>fp>ingress>access>queue-group>policer-control-override>priority-mbs-thresholds
config>card>fp>ingress>network>queue-group>policer-control-override>priority-mbs-thresholds

Description The **priority** level command contains the **mbs-contribution** configuration command for a given strict priority level. Eight levels are supported numbered 1 through 8 with 8 being the highest strict priority.

Each of the eight priority CLI nodes always exists and do not need to be created. While parameters exist for each priority level, the parameters are only applied when the priority level within a parent policer instance is currently supporting child policers.

Default n/a

policer-override

Syntax [**no**] **policer-override**

Context config>card>fp>ingress>access>queue-group
config>card>fp>ingress>network>queue-group

Description This command, within the SAP ingress or egress contexts, is used to create a CLI node for specific overrides to one or more policers created on the SAP through the sap-ingress or sap-egress QoS policies.

The **no** form of the command is used to remove any existing policer overrides.

Default no policer-overrides

policer

Syntax **policer** *policer-id* [**create**]
no policer *policer-id*

Context config>card>fp>ingress>access>qgrp>policer-over
config>card>fp>ingress>network>qgrp>policer-over

Description This command is used in the sap-ingress and sap-egress QoS policies to create, modify or delete a policer. Policers are created and used in a similar manner to queues. The policer ID space is separate from the queue ID space, allowing both a queue and a policer to share the same ID. The sap-ingress policy may have up to 32 policers (numbered 1 through 32) may be defined while the sap-egress QoS policy supports a maximum of 8 (numbered 1 through 8). While a policer may be defined within a QoS policy, it is not actually created on SAPs or subscribers associated with the policy until a forwarding class is mapped to the policer's ID.

All policers must be created within the QoS policies. A default policer is not created when a sap-ingress or sap-egress QoS policy is created.

Once a policer is created, the policer's metering rate and profiling rates may be defined as well as the policer's maximum and committed burst sizes (MBS and CBS respectively). Unlike queues which have dedicated counters, policers allow various stat-mode settings that define the counters that will be associated with the policer. Another supported feature—packet-byte-offset—provides a policer with the ability to modify the size of each packet based on a defined number of bytes.

Once a policer is created, it cannot be deleted from the QoS policy unless any forwarding classes that are mapped to the policer are first moved to other policers or queues.

The system will allow a policer to be created on a SAP QoS policy regardless of the ability to support policers on objects where the policy is currently applied. The system only scans the current objects for policer support and sufficient resources to create the policer when a forwarding class is first mapped to the policer ID. If the policer cannot be created due to one or more instances of the policy not supporting policing or having insufficient resources to create the policer, the forwarding class mapping will fail.

The **no** form of this command is used to delete a policer from a sap-ingress or sap-egress QoS policy. The specified policer cannot currently have any forwarding class mappings for the removal of the policer to succeed. It is not necessary to actually delete the policer ID for the policer instances to be removed from SAPs or subscribers associated with the QoS policy once all forwarding classes have been moved away from the policer. It is automatically deleted from each policing instance although it still appears in the QoS policy.

Parameters *policer-id* **—** The *policer-id* must be specified when executing the policer command. If the specified ID already exists, the system enters that policer's context to allow the policer's parameters to be modified. If the ID does not exist and is within the allowed range for the QoS policy type, a context for the policer ID will be created (depending on the system's current create keyword requirements which may require the create keyword to actually add the new policer ID to the QoS policy) and the system will enter that new policer's context for possible parameter modification.

Values 1 to 32

cbs

Syntax **cbs** {*size* [**bytes** | **kilobytes**] | **default**}
no cbs

Context config>card>fp>ingress>access>qgrp>policer-over>plcr
config>card>fp>ingress>network>qgrp>policer-over>plcr

Description This command is used to configure the policer's CIR leaky bucket's exceed threshold. The CIR bucket's exceed threshold represents the committed burst tolerance allowed by the policer. If the policer's forwarding rate is equal to or less than the policer's defined CIR, the CIR bucket depth hovers around the 0 depth with spikes up to the maximum packet size in the offered load. If the forwarding rate increases beyond the profiling rate, the amount of data allowed to be in-profile above the rate is capped by the threshold.

The policer's **cbs** size defined in the QoS policy may be overridden on an **sla-profile** or SAP where the policy is applied.

The **no** form of this command returns the policer to its default CBS size.

Default **n/a**

Parameters *size* **[bytes, kilobytes] —** The *size* parameter is required when specifying **cbs** and is expressed as an integer representing the required size in either bytes or kilobytes. The default is kilobytes. The optional **byte** and **kilobyte** keywords are mutually exclusive and are used to explicitly define whether size represents bytes or kilobytes.

byte — When **byte** is defined, the value given for size is interpreted as the queue's MBS value given in bytes.

kilobyte — When **kilobytes** is defined, the value is interpreted as the queue's MBS value given in kilobytes.

Values 0 to 16777216

Default **kilobyte**

mbs

Syntax **mbs** {*size* [**bytes** | **kilobytes**] | **default**}
no mbs

Context config>card>fp>ingress>access>qgrp>policer-over>plcr
config>card>fp>ingress>network>qgrp>policer-over>plcr

Description This command is used to configure the policer's PIR leaky bucket's high priority violate threshold. The **high-prio-only** command is applied to the MBS value to derive the bucket's low priority violate threshold. For ingress, trusted in-profile packets and un-trusted high priority packets use the policer's high priority violate threshold while trusted out-of-profile and un-trusted low priority packets use the policer's low priority violate threshold. At egress, in-profile packets use the policer's high priority violate threshold and out-of-profile packets use the policer's low priority violate threshold.

The PIR bucket's violate threshold represent the maximum burst tolerance allowed by the policer. If the policer's offered rate is equal to or less than the policer's defined rate, the PIR bucket depth hovers around the 0 depth with spikes up to the maximum packet size in the offered load. If the offered rate increases beyond the metering rate, the amount of data allowed above the rate is capped by the threshold. The low priority violate threshold provides a smaller burst size for the lower priority traffic associated with the policer. Since all lower priority traffic is discarded at the lower burst tolerance size, the remaining burst tolerance defined by **high-prio-only** is available for the higher priority traffic.

The policer's mbs size defined in the QoS policy may be overridden on an sla-profile or SAP where the policy is applied.

The no form of this command returns the policer to its default MBS size.

Default n/a

Parameters *size* **[bytes, kilobytes] —** The *size* parameter is required when specifying **mbs** and is expressed as an integer representing the required size in either bytes or kilobytes. The default is kilobytes. The optional **byte** and **kilobyte** keywords are mutually exclusive and are used to explicitly define whether size represents bytes or kilobytes.

byte — When **byte** is defined, the value given for size is interpreted as the queue's MBS value given in bytes.

kilobyte — When **kilobytes** is defined, the value is interpreted as the queue's MBS value given in kilobytes.

Values 0 to 16777216

Default **kilobyte**

packet-byte-offset

Syntax **packet-byte-offset** {**add** *bytes* | **subtract** *bytes*}
no packet-byte-offset

Context config>card>fp>ingress>access>qgrp>policer-over>plcr
config>card>fp>ingress>network>qgrp>policer-over>plcr

Description This command is used to modify the size of each packet handled by the policer by adding or subtracting a number of bytes. The actual packet size is not modified; only the size used to determine the bucket depth impact is changed. The **packet-byte-offset** command is meant to be an arbitrary mechanism the can be used to either add downstream frame encapsulation or remove portions of packet headers. Both the policing metering and profiling throughput is affected by the offset as well as the stats associated with the policer.

When child policers are adding to or subtracting from the size of each packet, the parent policer's **min-thresh-separation** value should also need to be modified by the same amount.

The policer's **packet-byte-offset** defined in the QoS policy may be overridden on an **sla-profile** or SAP where the policy is applied.

The **no** version of this command is used to remove per packet size modifications from the policer.

Parameters **add** *bytes* **—** The **add** keyword is mutually exclusive to the **subtract** keyword. Either **add** or **subtract** must be specified. When **add** is defined the corresponding bytes parameter specifies the number of bytes that is added to the size each packet associated with the policer for rate metering, profiling and accounting purposes. From the policer's perspective, the maximum packet size is increased by the amount being added to the size of each packet.

Values 1 to 31

subtract *bytes* **—** The **subtract** keyword is mutually exclusive to the **add** keyword. Either **add** or **subtract** must be specified. When b is defined the corresponding bytes parameter specifies the number of bytes that is subtracted from the size of each packet associated with the policer for rate metering, profiling and accounting purposes. From the policer's perspective, the maximum packet size is reduced by the amount being subtracted from the size of each packet. Note that the minimum resulting packet size used by the system is 1 byte.

Values 0 to 64

rate

Syntax **rate** {**max** | **kilobits-per-second**} [**cir** {**max** | **kilobits-per-second**}]
no rate

Context config>card>fp>ingress>access>qgrp>policer-over>plcr
config>card>fp>ingress>network>qgrp>policer-over>plcr

Description This command is used to configure the policer's metering and optional profiling rates. The metering rate is used by the system to configure the policer's PIR leaky bucket's decrement rate while the profiling rate configures the policer's CIR leaky bucket's decrement rate. The decrement function empties the bucket while packets applied to the bucket attempt to fill it based on the each packets size. If the bucket fills faster than how much is decremented per packet, the bucket's depth eventually reaches it's exceed (CIR) or violate (PIR) threshold. The **cbs**, **mbs**, and **high-prio-only** commands are used to configure the policer's PIR and CIR thresholds.

If a packet arrives at the policer while the bucket's depth is less than the threshold associated with the packet, the packet is considered to be conforming to the bucket's rate. If the bucket depth is equal to or greater than the threshold, the packet is considered to be in the exception state. For the CIR bucket, the exception state is exceeding the CIR rate while the PIR bucket's exception state is violating the PIR bucket rate. If the packet is violating the PIR, the packet is marked red and will be discarded. If the packet is not red, it may be green or yellow based on the conforming or exceeding state from the CIR bucket.

When a packet is red neither the PIR or CIR bucket depths are incremented by the packets size. When the packet is yellow the PIR bucket is incremented by the packet size, but the CIR bucket is not. When the packet is green, both the PIR and CIR buckets are incremented by the packet size. This ensures that conforming packets impact the bucket depth while exceeding or violating packets do not.

The policer's **adaptation-rule** command settings are used by the system to convert the specified rates into hardware timers and decrement values for the policer's buckets.

By default, the policer's metering rate is **max** and the profiling rate is 0 Kbps (all packets out-of-profile).

The **rate** settings defined for the policer in the QoS policy may be overridden on an **sla-profile** or SAP where the policy is applied.

The **no** form of this command is used to restore the default metering and profiling rate to a policer.

Parameters **{max |** *kilobits-per-second***} —** Specifying the keyword **max** or an explicit *kilobits-per-second* parameter directly following the rate command is required and identifies the policer's metering rate for the PIR leaky bucket. When the policer is first created, the metering rate defaults to max. The *kilobits-per-second* value must be expressed as an integer and defines the rate in kilobits-per-second. The integer value is multiplied by 1,000 to derive the actual rate in bits-per-second. When max is specified, the maximum policer rate used will be equal to the maximum capacity of the card on which the policer is configured. If the policer rate is set to a value larger than the maximum rate possible for the card, then the PIR used is equivalent to max.

Values **max** or 1 to 2000000000

cir {max | *kilobits-per-second***} —** The optional **cir** keyword is used to override the default CIR rate of the policer. Specifying the keyword max or an explicit *kilobits-per-second* parameter directly following the cir keyword is required and identifies the policer's profiling rate for the CIR leaky bucket. When the policer is first created, the profiling rate defaults to 0 Kbps. The *kilobits-per-second* value must be expressed as an integer and defines the rate in kilobits-per-second. The integer value is multiplied by 1,000 to derive the actual rate in bits-per-second. When max is specified, the maximum policer rate used will be equal to the maximum capacity of the card on which the policer is configured. If the policer rate is set to a value larger than the maximum rate possible for the card, then the CPIR used is equivalent to max.

Values **max** or 0 to 2000000000

stat-mode

Syntax **stat-mode** *stat-mode*
no stat mode

Context config>card>fp>ingress>access>qgrp>policer-over>plcr
config>card>fp>ingress>network>qgrp>policer-over>plcr

Description This command is used to configure the forwarding plane counters that allow offered, output and discard accounting to occur for the policer. An ingress policer has multiple types of offered packets (explicit in-profile, explicit out-of-profile, high priority or low priority) and each of these offered types is interacting with the policer's metering and profiling functions resulting in colored output packets (green, yellow and red). Due to the large number of policers, it is not economical to allocate counters in the forwarding plane for all possible offered packet types and output conditions. Many policers will not be configured with a CIR profiling rate and not all policers will receive explicitly profiled offered packets. The **stat-mode** command allows provisioning of the number of counters each policer requires and how the offered packet types and output conditions should be mapped to the counters.

While a **no-stats** mode is supported which prevents any packet accounting, the use of the policer's **parent** command requires at the policer's **stat-mode** to be set at least to the **minimal** setting so that offered stats are available for the policer's Fair Information Rate (FIR) to be calculated. Once a policer has been made a child to a parent policer, the **stat-mode** cannot be changed to **no-stats** unless the policer parenting is first removed.

Each time the policer's **stat-mode** is changed, any previous counter values are lost and any new counters are set to zero.

Each mode uses a certain number of counters per policer instance that are allocated from the forwarding plane's policer counter resources. You can view the total/allocated/free stats by using the **tools dump system-resources** command. If insufficient counters exist to implement a mode on any policer instance, the **stat-mode** change will fail and the previous mode will continue unaffected for all instances of the policer.

The default **stat-mode** when a policer is created within the policy is **minimal**.

The **stat-mode** setting defined for the policer in the QoS policy may be overridden on an **sla-profile** or SAP where the policy is applied. If insufficient policer counter resources exist to implement the override, the **stat-mode** override command will fail. The previous **stat-mode** setting active for the policer will continue to be used by the policer.

The **no** form of this command attempts to return the policer's stat-mode setting to minimal. The command will fail if insufficient policer counter resources exist to implement minimal where the QoS policer is currently applied and has a forwarding class mapping.

Parameters — See the *Quality of Service Guide* for details on the policer stat-mode parameters.

ingress-buffer-allocation

Syntax **ingress-buffer-allocation** *hundredths-of-a-percent*
no ingress-buffer-allocation

Context config>card>fp>ingress

Description This command allows the user to configure an ingress buffer allocation percentage per forwarding plane from 20.00% to 80.00%. Ingress buffer allocation applies to user-accessible buffers (total buffers less those reserved for system use).

The ingress buffer allocation percentage determines how much of the user-accessible buffers will be available for ingress purposes. The remaining buffers will be available for egress purposes.

This command is supported on all 50G FP2-based line cards and 100G/200G FP3-based line cards.

The **no** form of this command returns the ingress buffer allocation to the default value.

Default The default value is 50.00%, which emulates the legacy behavior.

mcast-path-management

Syntax **mcast-path-management**

Context config>card>fp>ingress
config>card>mda>ingress

Description This CLI node contains the forwarding plane or MDA settings for ingress multicast path management. Enter the node to configure the bandwidth-policy, the individual path bandwidth overrides and the administrative state of ingress multicast path management.

ancillary-override

Syntax **ancillary-override**

Context config>card>mda>ingress>mcast-mgmt

Description This command enables the context to configure MDA ingress multicast path-limit overrides.

path-limit

Syntax **path-limit** *megabits-per-second*
no path-limit

Context config>card>mda>ingress>mcast-mgmt>primary-override
config>card>mda>ingress>mcast-mgmt>secondary-override
config>card>mda>ingress>mcast-mgmt>ancillary-override

Description The path-limit command is used to override the path limits contained in the bandwidth policy associated with the MDA. The path limits are used to give the upper limit that multicast channels may use on each path.

The path-limit commands are not supported on IOM-3.

The no form of the command removes a path limit override from an ingress multicast path and restore the path limit defined in the bandwidth policy associated with the MDA.

Parameters *megabits-per-second* — The megabits-per-second parameter is required when executing the path-limit command and is expressed as an integer representing multiples of 1,000,000 bits per second.

Values Primary-override:1 to 2000
Secondary-override:1 to 2000
Ancillary-override:1 to 5000

bandwidth-policy

Syntax **bandwidth-policy** *policy-name*
no bandwidth-policy

Context config>card>fp>ingress>mcast-path-management

config>card>mda>ingress>mcast-path-management

Description This command is used to explicitly associate a bandwidth policy to a forwarding plane or MDA. The bandwidth policy defines the dynamic rate table and the multicast paths bandwidth and queuing parameters.

If a bandwidth policy is not explicitly associated with a forwarding plane or MDA, the default bandwidth policy is used when ingress multicast path management is enabled.

The **no** form of the command removes an explicit bandwidth policy from a forwarding plane or MDA and restores the default bandwidth policy.

Parameters *policy-name* — The policy-name parameter is required and defines the bandwidth policy that should be associated with the MDA or forwarding plane for ingress multicast path management. If the policy name does not exist, the bandwidth-policy command will fail.

Values Any existing bandwidth policy name

Default default

primary-override

Syntax **primary-override**

Context config>card>mda>ingress>mcast-mgmt

Description This command enables the context to configure MDA ingress multicast path-limit overrides.

The path override CLI nodes are not supported on IOM-3.

secondary-override

Syntax **secondary-override**

Context config>card>mda>ingress>mcast-mgmt

Description This command enables the context to configure MDA ingress multicast path-limit overrides.

The path override CLI nodes are not supported on IOM-3.

stable-pool-sizing

Syntax [**no**] **stable-pool-sizing**

Context config>card>fp

Description The stable-pool-sizing command is used to provide a stable buffer pool allocation environment for all default port buffer pools on a forwarding plane. This stable environment is provided at the expense of optimal buffer allocation between the various port buffer pools. Normally, port pools are sized according to a ports relative bandwidth with other ports and the ability of a port to use pool buffers. As an example, on a forwarding plane with two potential MDAs and only one equipped, the normal behavior is to provide all available default pool buffers to the ports on the currently equipped MDA. If a second MDA is equipped in the future, buffers are freed from the existing MDA and provided to the ports on the new MDA. Stable pool sizing alters this behavior by reserving buffers for both MDAs whether they are equipped or not thus preventing a resizing event when an MDA is equipped. In addition, existing ports on a module always receive their maximum bandwidth share of buffers independent on any sub-rate condition that may currently exist. This provides a stable amount of buffers to other ports on the module independent of link or configuration events that may occur on the port.

Stable pool sizing preserves the ability to modify the effective bandwidth used to determine a port's relative share of the available buffers through the use of the ing-percentage-of-rate and egr-percentage-of-rate commands under the port configuration. Changing the values associated with these commands will cause a reevaluation of buffer distribution and thus a possible resizing of pools on each port within the module. These commands have no effect on ports associated with other modules on the forwarding plane.

Stable pool sizing is mutually exclusive with card level named-pool-mode. Named pool mode must be disabled and not operational before stable pool sizing can be enabled. Once stable pool sizing is enabled on any forwarding plane on a card, named-pool-mode cannot be enabled for that card.

Stable pool sizing may be enabled (while named pool mode is disabled) or disabled at any time on a forwarding plane. The system will dynamically change the pool sizes according to the stable pool sizing state.

The **no** stable-pool-sizing command is used to disable stable pool sizing on a forwarding plane. Existing buffer pools will be resized according to normal pool sizing behavior.

queue-group

Syntax **queue-group** *queue-group-name* **instance** *instance-id*
no queue-group

Context config>card>fp>ingress>network

Description This command is used to create a queue-group instance in the network ingress context of a forwarding plane.

Only a queue-group containing policers can be instantiated. If the queue-group template contains policers and queues, the queues are not instantiated. If the queue-group contains queues only, the instantiation in the data path is failed.

One or more instances of the same policer queue-group name and/or a different policer queue-group name can be created on the network ingress context of a forwarding plane.

The queue-group-name must be unique within all network ingress and access ingress queue groups in the system. The queue-group instance-id must be unique within the context of the forwarding plane.

The **no** version of this command deletes the queue-group instance from the network ingress context of the forwarding plane.

Default n/a

Parameters *queue-group-name* — Specifies the name of the queue group template up to 32 characters in length.

instance-id **—** Specifies the identification of a specific instance of the queue-group.

Values 1 to 16384

2.25.2.9 General Port Commands

port

Syntax **port** {*port-id* | *bundle-id* | *bpgrp-id* | *aps-id*} *port-id*
no port {*bundle-id* | *bpgrp-id* | *aps-id*} *port-id*

Context config

Description This command enables access to the context to configure ports, multilink bundles, and bundle protection groups (BPGs). Before a port can be configured, the chassis slot must be provisioned with a valid card type and the MDA parameter must be provisioned with a valid MDA type.

Default No ports are configured. All ports must be explicitly configured and enabled.

Parameters *port-id* — Specifies the physical port ID in the following format:

port-id	*slot*/*mda*/*port* [.*channel*]	
	eth-sat-id esat-*id*/*slot*/*port*	
	esat	keyword
	id	1 to 20
	pxc-id pxc-*id*.*sub-port*	
	pxc	keyword
	id	1 to 64
	sub-port	a, b

bundle-id — Specifies the multilink bundle to be associated with this IP interface. The command syntax must be configured as follows:

Values bundle-*type-slot/mda.bundle-num*

bundle-**ppp**-*slot/mda.bundle-num*	Creates a multilink PPP bundle.
bundle-**ima**-*slot/mda.bundle-num*	Creates an IMA bundle.
bundle-fr-*slot/mda.bundle-num*	Creates an MLFR bundle.
where:	**bundle**: keyword
	slot: IOM/MDA slot numbers
	bundle-num: 1 to 336

For example:

router1>config# port bundle-ppp-5/1.1 (multilink PPP bundle)

router1>config# port bundle-ima-5/1.2 (IMA bundle)

aps-id — This option configures APS on unbundled SONET/SDH ports. All SONET-SDH port parameters, with certain exceptions, for the working and protection circuit ports must be configured in the **config>port>aps-***group-id* context. The working and protection circuit ports inherit all those parameters configured. The exception parameters for the working and protect circuits can be configured in the **config>port>sonet-sdh** context. Exception list commands include:

- clock-source
- [no] loopback
- [no] report-alarm
- section-trace
- [no] threshold

When an **aps-***group-id* is created all applicable parameters under the port CLI tree (including parameters under any submenus) assume **aps-***group-id* defaults, or when those are not explicitly specified, default to SONET/SDH port defaults for any SONET port.

All but a few exception SONET/SDH parameters for the working channel port must be configured in the **config>port>aps>sonet-sdh** context. The protection channel inherits all the configured parameters. The exception parameters for the protection channel can be configured in the **config>port>aps>sonet-sdh** context.

Signal failure (SF) and signal degrade (SD) alarms are not enabled by default on POS interfaces. It is recommended to change the default alarm notification configuration for POS ports that belong to APS groups in order to be notified of SF/SD occurrences to be able to interpret the cause for an APS group to switch the active line.

For path alarms, modify the logical line aps-id in the **config>port aps-***id***<sonet-sdh>path report-alarm** context. For example:

configure port **aps-1** sonet-sdh path report-alarm p-ais

For line alarms, separately, modify the 2 physical ports that are members of the logical aps-id port (the working and protect lines). APS reacts only to line alarms, not path alarms.
For example:

configure port **1/2/3** sonet-sdh report-alarm lb2er-sd

configure port **4/5/6** sonet-sdh report-alarm lb2er-sd

If the SD and SF threshold rates must be modified, the changes must be performed at the line level on both the working and protect APS port member.

The **no** form of this command deletes an aps-*group-id* or bundle-aps-group-id. In order for an aps-*group-id* to be deleted,

The same rules apply for physical ports, bundles deletions apply to APS ports/ bundles deletions (for example an aps-group-id must be shutdown, have no service configuration on it, and no path configuration on it). In addition working and protection circuits must be removed before an aps-group-id may be removed.

Values **port aps**-*group-id*
aps:keyword
where *group-id*: 1 to 64

Example: **port aps**-64

bpgrp-id — Creates a bundle protection group (BPG). The BPGrp consists of a working and protection bundles that provide APS protection to each other using bi-directional APS as supported on the 7750 SR family of products. All members of a working/ protection bundle must be on the same working/protection circuit respectively of the same, already provisioned APS group. The working bundle must have already been created in the **config>port** context before services can be created on a BPGrp.

Values **bpgrp**-*type-bpgrp-num*

bpgrp:	keyword
type:	**ppp** — Provides protection of one PPP bundle by another.
	ima — Provides protection of one IMA bundle by another IMA bundle.
bpgrp-num:	1 to 1600

bundle-id — Specifies the multilink bundle to be associated with this IP interface. The command syntax must be configured as follows:

Values **bundle**-*type-slot/mda.bundle-num*

bundle:	keyword
type:	**ppp** — Provides protection of one PPP bundle by another.
	ima — Provides protection of one IMA bundle by another IMA bundle.
slot/mda	card/mda slot numbers

bundle-num: 1 to 256

For example:
router1>config# port bundle-1/1.1 (multilink PPP bundle)

ddm-events

Syntax [**no**] **ddm-events**

Context config>port

Description This command enables Digital Diagnostic Monitoring (DDM) events for the port.

The **no** form of the command disables DDM events.

dwdm

Syntax **dwdm**

Context config>port

Description This command configures the Dense Wavelength Division Multiplexing (DWDM) parameters.

amplifier

Syntax **amplifier**

Context config>port>dwdm

Description This command enables you to tune the optical amplifier parameters.

report-alarms

Syntax [**no**] **report-alarms** [**ild**] [**tmp**] [**mth**] [**mtl**] [**los**] [**lop**] [**com**]

Context config>port>dwdm>amplifier

Description This command allows users to enable/disable the optical amplifier alarms for the port.

Default All alarms are enabled

Parameters **ild —** Reports amplifier pump over-current faults.

tmp — Reports pump temperature faults.

mth — Reports module case temperature high faults.

mtl — Reports module case temperature low faults.

los — Reports loss of signal faults.

lop — Reports loss of optical power faults.

com — Reports module communication failure faults.

channel

Syntax **channel** *channel*

Context config>port>dwdm
config>port>dwdm>tdcm
config>port>dwdm>coherent

Description This command configures the Dense Wavelength Division Multiplexing (DWDM) ITU channel at which a tunable MDA optical interface will be configured to operate. It is expressed in a form that is derived from the laser's operational frequency. For example 193.40 THz corresponds to DWDM ITU channel 34 in the 100 GHz grid and 193.45 THz corresponds to DWDM ITU channel 345 in the 50 GHz grid. Provisioning rules: The provisioned MDA type must have DWDM tunable optics (m1-10gb-dwdm-tun)

- The 'dwdm channel' must set to a non zero value before the port is set to 'no shutdown'
- The port must be 'shutdown' before changing the dwdm channel.
- The port must be a physical port to set the dwdm channel

Parameters *channel* — Specifies the channel.

Values 0, 17 to 61, 175 to 605

Where: 17 to 61 is used for 100 GHz channels
175, 185 to 605 is used for 50 GHz channels
0 is only valid on disabled (shutdown) ports

Values The DWDM channel number range is listed in Table 34.

Table 34 **DWDM Channel Numbers**

C-Band					
100 GHz Grid			**50GHz Grid**		
nm	**THz**	**ITU Channel**	**nm**	**THz**	**ITU Channel**
1528.77	196.10	61	1529.16	196.05	605
1529.55	196.00	60	1529.94	195.95	595

Table 34 **DWDM Channel Numbers (Continued)**

C-Band					
100 GHz Grid			**50GHz Grid**		
nm	**THz**	**ITU Channel**	**nm**	**THz**	**ITU Channel**
1530.33	195.90	59	1530.72	195.85	585
1531.12	195.80	58	1531.51	195.75	575
1531.90	195.70	57	1532.29	195.65	565
1532.68	195.60	56	1533.07	195.55	555
1533.47	195.50	55	1533.86	195.45	545
1534.25	195.40	54	1534.64	195.35	535
1535.04	195.30	53	1535.43	195.25	525
1535.82	195.20	52	1536.22	195.15	515
1536.61	195.10	51	1537.00	195.05	505
1537.40	195.00	50	1537.79	194.95	495
1538.19	194.90	49	1538.58	194.85	485
1538.98	194.80	48	1539.37	194.75	475
1539.77	194.70	47	1540.16	194.65	465
1540.56	194.60	46	1540.95	194.55	455
1541.35	194.50	45	1541.75	194.45	445
1542.14	194.40	44	1542.54	194.35	435
1542.94	194.30	43	1543.33	194.25	425
1543.73	194.20	42	1544.13	194.15	415
1544.53	194.10	41	1544.92	194.05	405
1545.32	194.00	40	1545.72	193.95	395
1546.12	193.90	39	1546.52	193.85	385
1546.92	193.80	38	1547.32	193.75	375
1547.72	193.70	37	1548.11	193.65	365
1548.51	193.60	36	1548.91	193.55	355
1549.32	193.50	35	1549.72	193.45	345

Table 34 **DWDM Channel Numbers (Continued)**

C-Band					
100 GHz Grid			**50GHz Grid**		
nm	**THz**	**ITU Channel**	**nm**	**THz**	**ITU Channel**
1550.12	193.40	34	1550.52	193.35	335
1550.92	193.30	33	1551.32	193.25	325
1551.72	193.20	32	1552.12	193.15	315
1552.52	193.10	31	1552.93	193.05	305
1553.33	193.00	30	1553.73	192.95	295
1554.13	192.90	29	1554.54	192.85	285
1554.94	192.80	28	1555.34	192.75	275
1555.75	192.70	27	1556.15	192.65	265
1556.55	192.60	26	1556.96	192.55	255
1557.36	192.50	25	1557.77	192.45	245
1558.17	192.40	24	1558.58	192.35	235
1558.98	192.30	23	1559.39	192.25	225
1559.79	192.20	22	1560.20	192.15	215
1560.61	192.10	21	1561.01	192.05	205
1561.42	192.00	20	1561.83	191.95	195
1562.23	191.90	19	1562.64	191.85	185
1563.05	191.80	18	1563.45	191.75	175
1563.86	191.70	17	—	—	—

cpr-window-size

Syntax **cpr-window-size** *window-size*

Context config>port>dwdm>coherent

Description This command configure the window size used for carrier phase recovery.

Default 32

Parameters *window-size* — Indicates the number of symbols used for carrier phase recovery algorithm of the receiver. When this parameter is changed, the link will bounce because the receiver needs to be reconfigured.

Values [2, 4, 8, 16, 32, 64] symbols

wavetracker

Syntax **wavetracker**

Context config>port>dwdm

Description This command validates whether or not the port supports Wavetracker.

Default n/a

power-control

Syntax [**no**] **power-control**

Context config>port>dwdm>wavetracker>power-control

Description This command specifies whether the power control loop should be turned on to actively control the laser's launch power to the specified target power. When power-control is disabled, the launch power is set to the laser's maximum achievable power.

Default no power-control

Parameters **no power-control —** Laser output power is set to maximum.

power-control — Actively control the laser's output power to achieve the target power.

target-power

Syntax **target-power** *dBm*

Context config>port>dwdm>wavetracker>power-control

Description This command specifies launch power in dBm for the DWDM Wavetracker-enabled interface.

Default -20.00 dBm

Parameters *dBm* — Specifies the desired average output power in dBm.

Values -22.00 to 3.00

target-power

Syntax **target-power** *power*

Context config>port>dwdm>coherent

Description This command configures the target transmit optical power for the port.

Default 1.00 dBm

Parameters *power* — Specifies the desired average output power in dBm.

Values -20.00 to 1.00

report-alarm

Syntax [**no**] **report-alarm** [**encode-fail**] [**encode-degrade**] [**power-fail**] [**power-degrade**] [**power-high**] [**power-low**]

Context config>port>dwdm>wavetracker>

Description This command specifies the alarms which are enabled or outstanding against a Wave Tracker-enabled interface.

The **no** form of the command removes the alarm parameters.

Parameters **encode-fail —** Encoder failure

encode-degrade — Encoder degrade

encode-fail — Power control failure

power-degrade — Power control degrade

power-high — Power control high limit reached

power-low — Power control low limit reached

encode

Syntax **encode** *wave-key* **key2** *wave-key*
no encode

Context config>port>dwdm>wavetracker

Description This command specifies whether or not Wavetracker keys should be encoded on the transmitted optical signal.

Default no encode

Parameters *wave-key* — The *wave-key* values must be selected based on the currently configured DWDM ITU channel. Both keys must be odd or both keys must be even. One even key and one odd key cannot be configured. The ranges of values for each key are defined in Table 35:

Table 35 **Value Ranges for DWDM ITU Channel**

DWDM ITU Channel Number	Key 1 Minimum	Key 1 Maximum	Key 2 Minimum	Key 2 Maximum
17	**1276**	**1290**	**1760**	**1774**
18	**1259**	**1273**	**1743**	**1757**
19	1242	1256	1726	1740
20	1225	1239	1709	1723
21	528	542	1072	1086
22	511	525	1055	1069
23	494	508	1038	1052
24	477	491	1021	1035
25	1208	1222	1692	1706
26	460	474	1004	1018
27	443	457	987	1001
28	426	440	970	984
29	409	423	953	967
30	1191	1205	1675	1689
31	392	406	936	950
32	375	389	919	933
33	358	372	902	916
34	341	355	885	899
35	1174	1188	1658	1672
36	324	338	868	882
37	307	321	851	865
38	290	304	834	848
39	273	287	817	831

Table 35 **Value Ranges for DWDM ITU Channel (Continued)**

DWDM ITU Channel Number	Key 1 Minimum	Key 1 Maximum	Key 2 Minimum	Key 2 Maximum
17	**1276**	**1290**	**1760**	**1774**
18	**1259**	**1273**	**1743**	**1757**
40	1157	1171	1641	1655
41	256	270	800	814
42	239	253	783	797
43	222	236	766	780
44	205	219	749	763
45	1140	1154	1624	1638
46	188	202	732	746
47	171	185	715	729
48	154	168	698	712
49	137	151	681	698
50	1123	1137	1607	1621
51	120	134	664	678
52	103	117	647	661
53	86	100	630	644
54	69	83	613	627
55	1106	1120	1590	1604
56	52	66	596	610
57	35	49	579	593
58	18	32	562	576
59	1	15	545	559
60	1089	1103	1573	1587
61	1548	1548	2032	2032
175	3553	3567	4065	4079
185	3536	3550	4048	4062
195	3519	3533	4031	4045

Table 35 **Value Ranges for DWDM ITU Channel (Continued)**

DWDM ITU Channel Number	Key 1 Minimum	Key 1 Maximum	Key 2 Minimum	Key 2 Maximum
17	**1276**	**1290**	**1760**	**1774**
18	**1259**	**1273**	**1743**	**1757**
205	3502	3516	4014	4028
215	3840	3854	2304	2318
225	3823	3837	2287	2301
235	3806	3820	2270	2284
245	3789	3803	2253	2267
255	3485	3499	3997	4011
265	3772	3786	2236	2250
275	3755	3769	2219	2233
285	3738	3752	2202	2216
295	3721	3735	2185	2199
305	3468	3482	3980	3994
315	3704	3718	2168	2182
325	3687	3701	2151	2165
335	3670	3684	2134	2148
345	3653	3667	2117	2131
355	3451	3465	3963	3977
365	3636	3650	2100	2114
375	3619	3633	2083	2097
385	3602	3616	2066	2080
395	3585	3599	2049	2063
405	3434	3448	3946	3960
415	1548	1562	2032	2046
425	1531	1545	2015	2029
435	1514	1528	1998	2012
445	1497	1511	1981	1995

Table 35 **Value Ranges for DWDM ITU Channel (Continued)**

DWDM ITU Channel Number	Key 1 Minimum	Key 1 Maximum	Key 2 Minimum	Key 2 Maximum
17	**1276**	**1290**	**1760**	**1774**
18	**1259**	**1273**	**1743**	**1757**
455	3908	3922	2372	2386
465	1480	1494	1964	1978
475	1463	1477	1947	1961
485	1446	1460	1930	1944
495	1429	1443	1913	1927
505	3891	3905	2355	2369
515	1412	1426	1896	1910
525	1395	1409	1879	1893
535	1378	1392	1862	1876
545	1361	1375	1845	1859
555	3874	3888	2338	2352
565	1344	1358	1828	1842
575	1327	1341	1811	1825
585	1310	1324	1794	1808
595	1293	1307	1777	1791
605	3857	3871	2321	2335

dispersion

Syntax **dispersion** *dispersion*

Context config>port>dwdm>tdcm
config>port>dwdm>coherent

Description This command allows users to configure the dispersion compensation for the port when manual mode is selected.

Parameters *dispersion* — Specifies the dispersion compensation.

Values -1200 to 1200

dispersion

Syntax **dispersion** *dispersion*

Context config>port>dwdm>coherent

Description This command configures the residual chromatic dispersion to be compensated when the coherent receiver is operating in manual dispersion control mode.

Default 0

Parameters *dispersion* — Specifies the dispersion compensation.

Values -5000 to 5000

mode

Syntax **mode** {**automatic** | **manual**}

Context config>port>dwdm>tdcm

Description This command allows users to configure the dispersion algorithm mode used for the port. Manual mode is used when the user knows the residual dispersion on the link. Automatic mode is used to let the software determine the optimal dispersion compensation required. Automatic mode should be used during service commissioning and when the state if the TDCM control is converged, the user can change to manual mode and configure the dispersion compensation found by the software. Because automatic mode uses a search algorithm that will sweep the entire range of dispersion specified in the sweep command, it can take up to 10 minutes for the link to come up. In manual mode, the link can come up in 2 minutes or less.

Parameters **automatic —** Sets to automatic mode.

manual — Sets to manual mode.

mode

Syntax **mode** {**automatic** | **manual**}

Context config>port>dwdm>coherent

Description This command configures the mode used to compensate for chromatic dispersion.

Parameters **automatic —** Sets to automatic mode.

manual — Sets to manual mode.

report-alarms

Syntax [**no**] **report-alarms** [**nrdy**] [**mth**] [**mtl**] [**unlck**] [**tlim**] [**einv**] [**com**]

Context config>port>dwdm>tdcm

Description This command allows users to Enable/disable logging of tdcm alarms on the port.

Default All alarms are enabled

Parameters **nrdy —** Reports Tdcm not ready faults.

mth — Reports module case temperature high faults.

mtl — Reports module case temperature low faults.

unlck — Reports thermal control locked faults.

tlim — Reports thermal control temperature limit faults.

einv — Reports EEPROM invalid faults.

com — Reports Tdcm module communication failure faults.

report-alarms

Syntax [**no**] **report-alarms** [**modflt**] [**mod**] [**netrx**] [**nettx**] [**hosttx**]

Context config>port>dwdm>coherent

Description This command configures the alarms that will be reported for the coherent module.

Default modflt mod netrx nettx hosttx

Parameters **modflt —** Reports module fault alarm.

mod — Reports module alarm.

netrx — Reports network (optical side) receive alarm.

nettx — Reports network (optical side) transmit alarm.

hosttx — Reports host (electrical side) transmit alarm.

rx-los-thresh

Syntax **rx-los-thresh <***threshold***>**

Context config>port>dwdm>coherent

Description This command configures the average input power LOS (Loss of Signal) threshold.

Default -23

Parameters *threshold* — Specifies the port's rx los threshold.

Values -23.00 to -13.00

sweep

Syntax **sweep start** *dispersion-start* **end** *dispersion-end*

Context config>port>dwdm>tdcm

Description This command allows users to configure the dispersion sweep 'start' and 'end' values for the automatic mode of TDCM control. If the user knows the approximate or theoretical residual dispersion of the link, this command can be used to limit the range of sweeping for the automatic control mode and thus achieve faster link up.

Parameters *dispersion-start* — Specifies the lower range limit for the dispersion compensation.

Values -1200 to 1200

Default -1200

dispersion-end — Specifies the upper range limit for the dispersion compensation.

Values -1200 to 1200

Default 1200

sweep

Syntax **sweep start** *dispersion-start* **end** *dispersion-end*

Context config>port>dwdm>coherent

Description This command allows users to configure the dispersion sweep 'start' and 'end' values for the automatic mode of coherent control. If the user knows the approximate or theoretical residual dispersion of the link, this command can be used to limit the range of sweeping for the automatic control mode and thus achieve faster link up.

Parameters *dispersion-start* — Specifies the lower range limit for the dispersion compensation.

Values -50000 to 50000

Default -25500

dispersion-end — Specifies the upper range limit for the dispersion compensation.

Values -50000 to 50000

Default 2000

rxdtv-adjust

Syntax [**no**] **rxdtv-adjust**

Context config>port>dwdm

Description This command enables you to adjust the optical receive decision threshold voltage (RxDTV).

Default no rxdtv-adjust

queue-group

Syntax **queue-group** *queue-group-name* **instance** *instance-id*
no queue-group

Context config>port>ethernet>network>egress

Description This command is used to create a queue-group instance in the network egress context of a port.

Queue-groups containing queues only or policers and queues can be instantiated. When a port is a LAG, one instance of the queue-group is instantiated on each member link.

One or more instances of the same queue-group name and/or a different queue-group name can be created in the network egress context of a port.

The queue-group-name must be unique within all network egress and access egress queue groups in the system. The queue-group instance-id must be unique within the context of the port.

The **no** version of this command deletes the queue-group instance from the network egress context of the port.

Parameters *queue-group-name* — Specifies the name of the queue group template up to 32 characters in length.

instance *instance-id* **—** Specifies the identification of a specific instance of the queue-group.

Values 1 to 40960

xgig

Syntax **xgig** {**lan** |**wan**}

Context config>port>ethernet

Description This command configures a 10 Gb/s interface to be in Local or Wide Area Network (LAN or WAN) mode. When configuring the port to be in WAN mode, you can change certain SONET/SDH parameters to reflect the SONET/SDH requirements for this port. When you configure a port for LAN mode, all SONET/SDH parameters are pre-determined and not configurable.

Default lan

Parameters **lan —** Sets the port to operate in LAN mode.

wan — Sets the port to operate in WAN mode.

otu

Syntax [**no**] **otu**

Context config>port

Description This command specifies whether or not to enable the OTU encapsulation type (encapsulated 10GE-LAN/WAN or OC192). The port must be shut down before OTU is enabled.

Note that OTU cannot be disabled on OTU3 encapsulated OC768 or 40-Gigabit Ethernet.by the **no otu** command. Therefore, the default depends on the port type. The default for OTU3 encapsulated OC768 or 40-Gigabit Ethernet is **otu**.

The **no** form of this command disables OTU (clear channel 10GE-LAN/WAN or OC192).

Default no otu

fec

Syntax [**no**] **fec** {**enhanced** | **g709**}

Context config>port>otu>fec

Description This command enables the Forwarding Error Correction (FEC) encoder/decoder and specifies the FEC encoder/decoder mode to use when enabled.

The following rules must be followed:

- The port's OTU must be enabled to set or change the FEC mode.
- The port must be shut down before changing the FEC mode.
- The sf-sd-method must be changed to BIP8 before setting the FEC mode to disabled.

Note that FEC cannot be disabled on OTU3 encapsulated OC768 or 40-Gigabit Ethernet by the **no fec** command. Therefore, the default depends on the port type. The default for OTU3 encapsulated OC768 or 40-Gigabit Ethernet is **fec enhanced**.

The **no** form of the command disables FEC encoder and decoder.

Default no fec

Parameters **enhanced** — Enables the FEC encoder and decoder with a proprietary enhanced FEC algorithm.

g709 — Enables the FEC encoder and decoder with the standard G.709 FEC algorithm.

otu2-lan-data-rate

Syntax **otu2-lan-data-rate** {**11.049** | **11.0957**}

Context config>port>otu

Description This command specifies the data rate to use when configured for an OTU encapsulated 10GE-LAN signal. The port must be shut down before changing the 10GE LAN OTU2 data rate.

Default 11.049

Parameters **11.049** — Configures the port to transmit and receive an 11.049 Gb/s synchronous OTU encapsulated 10GE-LAN signal (No fixed stuffing bytes in the OTU2 frame).

11.0957 — Configures the port to transmit and receive an 11.0957 Gb/s synchronous OTU encapsulated 10GE-LAN signal (with fixed stuffing bytes in the OTU2 frame).

sf-sd-method

Syntax **sf-sd-method** {**bip8** | **fec**}

Context config>port>otu>sf-sd-method

Description This command specifies the method used to determine the signal fail and signal degrade alarms. When select the bip8 method is selected, the SM-BIP8 errors are used. When the FEC method is selected, the FEC corrected bits are used.

The following rules must be followed:

- The port's OTU must be enabled to set or change the sf-sd-method.
- The FEC mode must be enhanced or g709 before setting the sf-sd-method to fec.
- The SF threshold must be 5 or higher before setting the sf-sd-method to bip8.

Default fec

Parameters **bip8** — The SM-BIP8 errors are used to declare the presence of the Signal Fail and Signal Degrade condition.

fec — The FEC corrected bit errors are used to declare the presence of the Signal Fail and Signal Degrade condition.

sf-threshold

Syntax **sf-threshold** *threshold*

Context config>port>otu>sf-threshold

Description This command specifies the error rate at which to declare the signal fail condition for the signal fail (SF) threshold. The value represents an error rate of 10E-<value>.

The SF threshold must:

- Be less than the SD threshold
- Be 5 or higher before setting the sf-sd-method to bip8

Default 4

Parameters *threshold* — Specifies the signal fail (SF) threshold.

Values 3 to 7

sd-threshold

Syntax **sd-threshold** *threshold*

Context config>port>otu>sd-threshold

Description This command specifies the error rate at which to declare the signal fail condition for the signal degrade (SD). The value represents an error rate of 10E-*value*.

The SD threshold must be:

- greater than the SF threshold.
- 5 or higher before setting the sf-sd-method to bip8.

Default 7

Parameters *threshold* — Specifies the exponent of the error rate, thus an error rate from 10E-3 to 10E-7.

Values 5 to 9

signal-type

Syntax **signal-type** {**otu4** | **otu4x2**}

Context config>port>otu

Description This command sets the signal type to be used on the line port of the optical transponder. The signal type can be either single 100G mode (out4) or 200G mode (otu4x2).

This command only applies to the L1 port of the 260SCX2 muxponder card of the OES subsystem.

Default Signal-type otu4

Parameters **otu4|otu4x2 —** specifies the signal type

Values otu4 — configuration for single 100GE client port to DWDM
otu4x2 — configuration for two 100GE client ports to DWDM

sm-tti

Syntax **sm-tti**

Context config>port>otu

Description This command enables the context to configure section monitoring trail trace identifier parameters.

expected

Syntax **expected** {**string** *string* | **bytes** *byte-sequence* | **auto-generated** | **use-rx**}

Context config>port>otu>sm-tti

Description This command enables the user to configure the expected RX Trail Trace Identifier (TTI) for Section Monitoring (SM) in the OTU overhead. This identifier can be a string or a non-printable sequence of bytes. The length of the string or sequence of bytes cannot exceed 64 bytes. This trace should match the expected far-end port's SM trace. When this trace does not match the received SM trace, the OTU-TIM alarm will be reported if enabled.

Default Blank (all zeros)

Parameters **auto-generated —** Sets the default

string string — Sets the SM TTI to the string provided by the user. If the string is less than 64 bytes, the remaining bytes will be set to 0.

bytes — [byte1 byte2 to byte64]. Sets the SM TTI to the sequence of bytes provided by the user. If the user provides less than 64 bytes, the remaining bytes will be set to 0.

use-rx — Copies the received sm-tti to the expected either as a string or a sequence of bytes depending on the received sm-tti data.

mismatch-reaction

Syntax **mismatch-reaction** {**none** | **squelch-rx**}

Context config>port>otu>sm-tti

Description This command allows the user to configure the consequent action to a sm-tti mismatch.

Default n/a

Parameters **none** — The received traffic is passed through.

squelch-rx — The received traffic is blocked.

pm-tti

Syntax **pm-tti**

Context config>port>otu

Description This command enables the context to configure path monitoring trail trace identifier parameters.

tx

Syntax **tx auto-generated**
tx *bytes bytes* [*bytes* (**up to 64 max**)]
tx *string identifier*
tx auto-generated | **string** *identifier* | **bytes** *byte1* [*byte2* (**up to 64 bytes**)]}
no tx

Context config>port>otu>pm-tti>tx

Description This command enables the user to configure the transmit (tx) trail trace identifier (TTI) for path monitoring (PM) in the ODU overhead. This identifier can be a string or a non-printable sequence of bytes. The length of the string or sequence of bytes cannot exceed 64 bytes.

The **no** form of the command reverts to the default TTI.

Default Auto-generated in the format of *nodename:iomnum/mdanum/portnum/dwdmchan*

The auto-generated value has five sections:

- Nodename — The first section is the name of the node.
- iomnum — The second section contains the IOM slot number.
- mdanum — The third section contains the MDA slot number.
- portnum — The fourth section contains the port number.
- dwdmchan — The fifth section contains the DWDM channel number (see DWDM Channel Numbers).

Parameters **auto-generated —** Specifies to use the system generated (default) TTI.

string *identifier* **—** Sets the PM TTI to the string provided by the user. If the string is less than 64 bytes, the remaining bytes will be set to 0.

bytes byte1 [byte2 (up to 64 bytes)] — Sets the PM TTI to the sequence of bytes provided by the user. If the user provides less than 64 bytes, the remaining bytes will be set to 0. A 1 byte sequence of 0xFF will set the default strings.

Values 0 to FF, in hexadecimal byte notation

tx

Syntax **tx** {**auto-generated** | **string** *identifier* | **bytes** *byte1* [*byte2* (**up to 64 bytes**)]}
no tx

Context config>port>otu>sm-tti>tx

Description This command allows the user to configure the transmit (tx) trail trace identifier (TTI) for section monitoring (SM) in the OTU overhead. This identifier can be a string or a non-printable sequence of bytes. The length of the string or sequence of bytes cannot exceed 64 bytes.

The **no** form of the command reverts to the default TTI.

Default Auto-generated in the format of *nodename:iomnum/mdanum/portnum/dwdmchan*

The auto-generated value has five sections:

- Nodename — The first section is the name of the node.
- iomnum — The second section contains the IOM slot number.
- mdanum — The third section contains the MDA slot number.
- portnum — The fourth section contains the port number.
- dwdmchan — The fifth section contains the DWDM channel number (see the DWDM Channel Numbers section).

Parameters **auto-generated —** Specifies to use the system generated (default) TTI.

string *identifier* **—** Sets the SM TTI to the string provided by the user. If the string is less than 64 bytes, the remaining bytes will be set to 0.

bytes *byte1* **[byte2 (up to 64 bytes)] —** Sets the SM TTI to the sequence of bytes provided by the user. If the user provides less than 64 bytes, the remaining bytes will be set to 0. A 1 byte sequence of 0xFF will set the default strings.

Values 0 to FF, in hexadecimal byte notation

tx

Syntax **tx** {*value* | **auto**}

Context config>port>otu>psi-payload

Description This command allows the user to configure the transmit payload type value in byte 0 of the payload structure identifier (PSI) of the OPU overhead.

Default 3 for 10GE-LAN/WAN or OC192 with OTU encapsulation; 5 for GFP framed 10GE-LAN with OTU encapsulation.

Parameters **auto —** Transmits the standard value in the payload type field.

value **—** Non-standard payload type value to transmit in the payload type field.

expected

Syntax **expected auto-generated**
expected bytes *byte* [*byte*]
expected string *identifier*
expected use-rx

Context config>port>otu>pm-tti

Description This command allows the user to configure the expected RX trail trace identifier (TTI) for path monitoring (PM) in the ODU overhead. This identifier can be a string or a non-printable sequence of bytes. The length of the string or sequence of bytes cannot exceed 64 bytes. This trace should match the far-end port's PM trace. When this trace does not match the received PM trace, the ODU-TIM alarm will be reported if enabled.

Default Blank (all zeros)

Parameters **auto-generated —** Sets the default

identifier — Sets the PM TTI to the string provided by the user. If the string is less than 64 bytes, the remaining bytes will be set to 0.

byte — [byte1 byte2 to byte64]. Sets the PM TTI to the sequence of bytes provided by the user. If the user provides less than 64 bytes, the remaining bytes will be set to 0.

use-rx — Copies the received pm-tti to the expected either as a string or a sequence of bytes depending on the received pm-tti data.

mismatch-reaction

Syntax **mismatch-reaction** {**squelch-rx**}
no mismatch-reaction

Context config>port>otu>pm-tti

Description This command allows the user to configure the consequent action to a pm-tti mismatch.

The **no** form of the command reverts to the default.

Default n/a, the received traffic is passed through.

Parameters **squelch-rx —** The received traffic is blocked.

psi-tti

Syntax **psi-tti**

Context config>port>otu

Description This command enables the context to configure payload structure identifier trail trace identifier parameters.

tx

Syntax **tx** {**string** *identifier* | **bytes** *byte-sequence* | **auto-generated**}

Context config>port>otu>psi-trace

Description This command allows the user to configure the transmit trace in bytes 1 to 255 (skipping byte 0) of the payload structure identifier (PSI) of the OPU overhead. This identifier can be a string or a non-printable sequence of bytes. The length of the string or sequence of bytes cannot exceed 255 bytes.

Default Blank (all zeros)

Parameters **auto-generated —** Sets the default PSI trace

string *identifier* **—** Sets the PSI trace to the string provided by the user. If the string is less than 255 bytes, the remaining bytes will be set to 0.

byte-sequence — [byte1 byte2 to byte64] Sets the PSI trace o the sequence of bytes provided by the user. If the user provides less than 64 bytes, the remaining bytes will be set to 0. A 1 byt sequence of 0xFF will set the default strings.

Values 0 to FF, in hexadecimal byte notation

expected

Syntax **expected** {**string** *string* | **bytes** *byte-sequence* | **auto-generated** | **use-rx**}

Context config>port>otu>pm-tti

Description This command allows the user to configure the expected RX in bytes 1 to 255 (skipping byte 0) of the Payload structure identifier (PSI) of the OPU overhead. This identifier can be a string or a non-printable sequence of bytes. The length of the string or sequence of bytes cannot exceed 255 bytes. This trace should match the far-end port's PSI trace. When this trace does not match the received PSI trace, the OPU-TIM alarm will be reported if enabled.

Default Blank (all zeros)

Parameters **auto-generated —** Sets the default

string — Sets the PSI trace to the string provided by the user. If the string is less than 64 bytes, the remaining bytes will be set to 0.

byte-sequence — [byte1 byte2 to byte64]. Sets the PSI trace to the sequence of bytes provided by the user. If the user provides less than 64 bytes, the remaining bytes will be set to 0.

use-rx — Copies the received psi-tti to the expected either as a string or a sequence of bytes depending on the received psi-tti data.

mismatch-reaction

Syntax **mismatch-reaction** {**none** | **squelch-rx**}

Context config>port>otu>psi-tti

Description This command allows the user to configure the consequent action to a psi-tti mismatch.

Default n/a

Parameters **none —** The received traffic is passed through.

squelch-rx — The received traffic is blocked.

psi-payload

Syntax **psi-payload**

Context config>port>otu

Description This command enables the context to configure payload structure identifier payload parameters.

expected

Syntax **expected** {*value* | **auto**}

Context config>port>otu>psi-payload

Description This command allows the user to configure the expected received payload type value in byte 0 of the Payload structure identifier (PSI) of the OPU overhead. When this values does not match the received value, the OPU-PLM alarm will be reported if it is enabled.

Default 3 for 10GE-LAN/WAN or OC192 with OTU encapsulation; 5 for GFP framed 10GE-LAN with OTU encapsulation.

Parameters **auto —** Sets the expected value to the standard value in the payload type field.

value **—** Expect a non-standard payload type value in the rx payload type field.

mismatch-reaction

Syntax **mismatch-reaction** {**none** | **squelch-rx**}

Context config>port>otu>psi-payload

Description This command allows the user to configure the consequent action to a psi-payload type mismatch.

Default n/a

Parameters **none —** The received traffic is passed through.

squelch-rx — The received traffic is blocked.

async-mapping

Syntax [**no**] **async-mapping**

Context config>port>otu

Description This command allows the user to configure the port to support asynchronous mapping of the payload inside the OTU. If the port is configured for async-mapping and the payload clock is asynchronous to the OTU clock, there will be positive or negative pointer justification that will show up in the OTU statistics and the data will be received error free. If the port is configured for synchronous mapping and the received data is asynchronously mapped, there will be errors in the received data.

async-mapping is the only mode of operation that is supported on the OTU3 encapsulated 40-Gigabit Ethernet and therefore the 'no async-mapping' is not supported on that port type and the default on the is async-mapping.

The **no** form of this command configures the port to receive synchronously mapped data.

Default no async-mapping

report-alarms

Syntax [**no**] **no report-alarms** [**loc**] [**los**] [**lof**] [**lom**] [**otu-ais**] [**otu-ber-sf**] [**otu-ber-sd**] [**otu-bdi**] [**otu-tim**] [**otu-iae**] [**otu-biae**] [**fec-sf**] [**fec-sd**] [**fec-fail**] [**fec-uncorr**] [**odu-ais**] [**odu-oci**] [**odu-lck**] [**odu-bdi**] [**odu-tim**] [**opu-tim**] [**opu-plm**]

Context config>port>otu

Description This command enables OTU alarms. Specify specific alarms to add to the list of reported alarms.

The **no** form of the command disables OTU alarm reporting.

Default loc, los, lof, lom, otu-ais, otu-bdi, fec-sf, fec-sd, odu-ais, odu-oci, odu-lck, odu-bdi, opu-plm

Parameters **alarms —** Refer to Table 36 for alarm descriptions.

Table 36 **Alarm Descriptions**

Alarm	Description
loc	Loss of lock
los	Loss of signal transitions on the data
lof	Loss of OTU framing
lom	Loss of Multi-frame
otu-ais	OTU Alarm Indication Signal (all 1s, overwrites all OTU overhead, even framing bytes)
otu-ber-sf	SM Signal Fail (based on BPI8)
otu-ber-sd	SM Signal Degrade (based on BPI8)
otu-bdi	SM Backward defect indication
otu-tim	SM Trace Id Mismatch
otu-iae	SM Incoming Alignment Error
otu-biae	SM Backward Incoming Alignment Error
fec-sf	Signal Fail (based on FEC corrected bits)
fec-sd	Signal Degrade (based on FEC corrected bits)
fec-fail	FEC Mode mismatch (EFEC-GFEC) or High Uncorrectable rate (>10E-2)
fec-uncorr	One or More Uncorrectable FEC errors
odu-ais	ODU Alarm Indication Signal
odu-oci	ODU Open connection Indication
odu-lck	ODU Locked
odu-bdi	PM Backward Defect indication
odu-tim	PM Trace Id Mismatch
opu-tim	OPU PSI Trace Mismatch

Table 36 **Alarm Descriptions (Continued)**

Alarm	Description (Continued)
opu-plm	OPU PSI Payload Type Mismatch

hybrid-buffer-allocation

Syntax **hybrid-buffer-allocation**

Context config>port

Description This command enables the context for configuring hybrid port buffer allocation parameters.

ing-weight

Syntax **ing-weight access** *access-weight* **network** *network-weight*
no ing-weight

Context config>port>hybrid-buffer-allocation

Description This command configures the sharing of the ingress buffers allocated to a hybrid port among the access and network contexts. By default, it is split equally between network and access.

The **no** form of this command restores the default values for the ingress access and network weights.

Parameters *access-weight* — Specifies the access weight as an integer.

Values 0 to 100

Default 50

network-weight — Specifies the network weight as an integer.

Values 0 to 100

Default 50

egr-weight

Syntax **egr-weight access** *access-weight* **network** *network-weight*
no egr-weight

Context config>port>hybrid-buffer-allocation

Description This command configures the sharing of the egress buffers allocated to a hybrid port among the access and network contexts. By default, it is split equally between network and access.

The **no** form of this command restores the default values for the egress access and network weights.

Parameters *access-weight* — Specifies the access weight as an integer.

Values 0 to 100

Default 50

network-weight — Specifies the network weight as an integer.

Values 0 to 100

Default 50

monitor-agg-egress-queue-stats

Syntax [**no**] **monitor-agg-egress-queue-stats**

Context config>port

Description This command enables the monitoring of aggregate egress queue statistics on the port. All queues on the port are monitored, including SAP egress, network egress, subscriber egress, and egress queue group queues, as well as system queues that can be used, for example, to send port-related protocol packets (LACP, EFM, and so on). The aggregate in-profile, out-of-profile, and total statistics are provided for both forwarded and dropped packets and octets.

Monitoring of aggregate statistics is supported on **PXC** sub-ports but not on a **PXC** physical port. It is also not supported on satellite ports, ports on an HSMDA, or ports on FP1-based hardware.

The **no** form of the command disables aggregate egress queue statistics monitoring on the specified port.

modify-buffer-allocation-rate

Syntax **modify-buffer-allocation-rate**

Context config>port

Description This command enables the context to configure ingress and egress percentage of rate parameters. This command only applies to physical ports (for example, it will not work on APS or similar logical ports). The percentage of rate commands are used to define a percentage value that affects the amount of buffers used by ingress and egress port managed buffer space. Enter the modify-buffer-allocation-rate context when editing the port's percentage of rate commands.

ing-percentage-of-rate

Syntax **ing-percentage-of-rate** *rate-percentage*
no ing-percentage-of-rate

Context config>port>modify-buffer-allocation-rate

Description This command increases or decreases the active bandwidth associated with the ingress port that affects the amount of ingress buffer space managed by the port. Changing a port's active bandwidth using the ing-percentage-of-rate command is an effective means of artificially lowering the buffers managed by one ingress port and giving them to other ingress ports on the same MDA.

The ing-percentage-of-rate command accepts a percentage value that increases or decreases the active bandwidth based on the defined percentage. A value of 50% causes the active bandwidth to be reduced by 50%. A value of 150% causes the active bandwidth to be increased by 50%. Values from 1 to 1000 percent are supported.

A value of 100 (the default value) is equivalent to executing the no ing-percentage-of-rate command and restores the ingress active rate to the normal value.

The **no** ing-percentage-of-rate command is used to remove any artificial increase or decrease of the ingress active bandwidth used for ingress buffer space allocation to the port. The no ing-percentage-of-rate command sets rate-percentage to 100%.

Parameters *rate-percentage* — The rate-percentage parameter is required and defines the percentage value used to modify the current ingress active bandwidth of the port. This does not actually change the bandwidth available on the port in any way. The defined rate-percentage is multiplied by the ingress active bandwidth of the port. A value of 150 results in an increase of 50% (1.5 x Rate).

Values 1 to 1000

Default 100 (no change to active rate)

egr-percentage-of-rate

Syntax **egr-percentage-of-rate** *rate-percentage*
no egr-percentage-of-rate

Context config>port>modify-buffer-allocation-rate

Description The egr-percentage-of-rate command is used to increase or decrease the active bandwidth associated with the egress port that affects the amount of egress buffer space managed by the port. Changing a ports active bandwidth using the egr-percentage-of-rate command is an effective means of artificially lowering the buffers managed by one egress port and giving them to other egress ports on the same MDA.

The egr-percentage-of-rate command accepts a percentage value that increases or decreases the active bandwidth based on the defined percentage. A value of 50% causes the active bandwidth to be reduced by 50%. A value of 150% causes the active bandwidth to be increased by 50%. Values from 1 to 1000 percent are supported.

A value of 100 (the default value) is equivalent to executing the no egr-percentage-of-rate command and restores the egress active rate to the normal value.

The **no** egr-percentage-of-rate command is used to remove any artificial increase or decrease of the egress active bandwidth used for egress buffer space allocation to the port. The no egr-percentage-of-rate command sets rate-percentage to 100%.

Parameters *rate-percentage* — The rate-percentage parameter is required and defines the percentage value used to modify the current egress active bandwidth of the port. This does not actually change the bandwidth available on the port in any way. The defined rate-percentage is multiplied by the egress active bandwidth of the port. A value of 150 results in an increase of 50% (1.5 x Rate).

Values 1 to 1000

Default 100 (no change to active rate)

egress-scheduler-override

Syntax [**no**] **egress-scheduler-override**

Context config>port>sonet-sdh>path
config>port>ethernet
config>port>tdm>ds3
config>port>tdm>ds1>channel-group
config>port>tdm>e1>channel-group
config>port>tdm>e3

Description This command applies egress scheduler overrides. When a port scheduler is associated with an egress port, it is possible to override the following parameters:

- The **max-rate** allowed for the scheduler.
- The maximum **rate** for each priority level 8 through 1.
- The CIR associated with each priority level 8 through 1.

See the *Quality of Service Guide* for command syntax and usage for the **port-scheduler-policy** command.

The **no** form of this command removes all override parameters from the egress port or channel scheduler context. Once removed, the port scheduler reverts all rate parameters back to the parameters defined on the port-scheduler-policy associated with the port.

level

Syntax **level** *priority-level* **rate** *pir-rate* [**cir** *cir-rate*]
no level *priority-level*

Context config>port>ethernet>egress-scheduler-override
config>port>sonet-sdh>path>egress-scheduler-override
config>port>tdm>ds3>egress-scheduler-override
config>port>tdm>ds1>channel-group>egress-scheduler-override
config>port>tdm>e3

Description This command overrides the maximum and CIR rate parameters for a specific priority level on the port or channel's port scheduler instance. When the **level** command is executed for a priority level, the corresponding priority level command in the port-scheduler-policy associated with the port is ignored.
The override level command supports the keyword **max** for the **rate** and **cir** parameter. When executing the level override command, at least the **rate** or **cir** keywords and associated parameters must be specified for the command to succeed.

The **no** form of this command removes the local port priority level rate overrides. Once removed, the port priority level will use the port scheduler policies level command for that priority level.

Parameters *priority-level* — Identifies which of the eight port priority levels are being overridden.

Values 1 to 8

rate *pir-rate* **—** Overrides the port scheduler policy's maximum level rate and requires either the **max** keyword or a rate defined in kilobits-per-second to follow.

Values 1 to 40000000, max

cir *cir-rate* **—** Overrides the port scheduler policy's within-cir level rate and requires either the max keyword or a rate defined in kilobits-per-second to follow.

Values 0 to 40000000, max

max — removes any existing rate limit imposed by the port scheduler policy for the priority level allowing it to use as much total bandwidth as possible.

max-rate

Syntax **max-rate** *rate*
no max-rate

Context config>port>ethernet>egress-scheduler-override>level>rate
config>port>ethernet>egress-scheduler-override
config>port>sonet-sdh>path>egress-scheduler-override>level
config>port>sonet-sdh>path>egress-scheduler-override
config>port>tdm>ds1>channel-group>egress-scheduler-override>level
config>port>tdm>ds1>channel-group>egress-scheduler-override
config>port>tdm>ds3>egress-scheduler-override>level

config>port>tdm>ds3>egress-scheduler-override
config>port>tdm>e1>channel-group>egress-scheduler-override
config>port>tdm>e3>egress-scheduler-override

Description This command overrides the **max-rate** parameter found in the port-scheduler-policy associated with the port. When a max-rate is defined at the port or channel level, the port scheduler policies max-rate parameter is ignored.

The egress-scheduler-override **max-rate** command supports a parameter that allows the override command to restore the default of not having a rate limit on the port scheduler. This is helpful when the port scheduler policy has an explicit maximum rate defined and it is desirable to remove this limit at the port instance.

The **no** form of this command removes the maximum rate override from the egress port or channels port scheduler context. Once removed, the max-rate parameter from the port scheduler policy associated with the port or channel will be used by the local scheduler context.

Parameters *rate* — Specifies the explicit maximum frame based bandwidth limit. This value overrides the QoS scheduler policy rate.

Values 1 to 40000000, max

egress-scheduler-policy

Syntax **egress-scheduler-policy** *port-scheduler-policy-name*
no egress-scheduler-policy

Context config>port>ethernet
config>port>tdm>ds3
config>port>tdm>ds1>channel-group
config>port>tdm>e3
config>port>tdm>ds3>channel-group

Description This command enables the provisioning of an existing port-scheduler-policy to a port or channel.

The egress-scheduler-override node allows for the definition of the scheduler overrides for a specific port or channel.

When a port scheduler is active on a port or channel, all queues and intermediate service schedulers on the port are subject to receiving bandwidth from the scheduler. Any policers, queues, or schedulers with port-parent associations are mapped to the appropriate port priority levels based on the port-parent command parameters. Any policers, queues, or schedulers that do not have a port-parent or valid intermediate scheduler parent defined are treated as orphaned and are handled based on the port scheduler policies default or explicit orphan behavior.

The port scheduler maximum rate and priority level rate parameters may be overridden to allow unique values separate from the port-scheduler-policy-name attached to the port or channel. Use the **egress-scheduler-override** command to specify the port or channel specific scheduling parameters.

The command used to associate an egress scheduler policy on the port is also used for the HSMDA. HSMDA policies should be associated with HSMDA ports.

The **no** form of this command removes a port scheduler policy from an egress port or channel. Once the scheduler policy is removed, all orphaned policers, queues, and schedulers revert to a free running state governed only by the local queue or scheduler parameters. This includes any queues or schedulers with a port-parent association.

Parameters *port-scheduler-policy-name* — Specifies an existing port-scheduler-policy configured in the **config>qos** context.

elmi

Syntax **elmi**

Context config>port>ethernet

Description This command configures Ethernet Local Management Interface (E-LMI) parameters for the Ethernet port. E-LMI is only supported on Ethernet access ports with Dot1q encapsulation type.

mode

Syntax **mode** {**none** | **uni-n**}

Context config>port>ethernet>elmi

Description This command configures the Ethernet LMI mode.

Default n/a

Parameters **none —** Specifies that the E LMI mode is set to none.

uni-n — Specifies that the E LMI mode is set to uni-n.

n393

Syntax **n393**
no n393

Context config>port>ethernet>elmi

Description This command configures the monitored count of consecutive errors.

Parameters **2 to 10 —** Specifies the monitored count of consecutive errors.

t391

Syntax **t391**
no t391

Context config>port>ethernet>elmi

Description This command configures the polling timer for UNI-C.

Parameters **5 to 30 —** Specifies the polling timer for UNI-C.

t392

Syntax **t392**
no t392

Context config>port>ethernet>elmi

Description This command configures the polling verification timer for UNI-N.

Parameters **5 to 30 —** Specifies the polling verification timer for UNI-N.

mode

Syntax **mode** {**access** | **network** | **hybrid**}
no mode

Context config>port>ethernet
config>port>sonet-sdh>path
config>port>tdm>ds1>channel-group
config>port>tdm>ds3
config>port>tdm>e1>channel-group
config>port>tdm>e3

Description This command configures an Ethernet port, TDM channel, or SONET/SDH path (sub-port) for **access, network or hybrid** mode operation.

An **access** port or channel is used for customer facing traffic on which services are configured. A Service Access Point (SAP) can only be configured on an access port or channel. When a port is configured for access mode, the appropriate **encap-type** must be specified to distinguish the services on the port or SONET path. Once an Ethernet port, a TDM channel or a SONET path has been configured for access mode, multiple services can be configured on the Ethernet port, a TDM channel or SONET path. Note that ATM, Frame Relay, and cHDLC port parameters can only be configured in the access mode.

An access port or channel is used for customer facing traffic on which services are configured. A Service Access Point (SAP) can only be configured on an access port or channel. When a port is configured for access mode, the appropriate encap-type must be specified to distinguish the services on the port or SONET path. Once an Ethernet port, a TDM channel or a SONET path has been configured for access mode, multiple services can be configured on the Ethernet port, a TDM channel or SONET path. Note that ATM, Frame Relay, and cHDLC port parameters can only be configured in the access mode.

A network port or channel participates in the service provider transport or infrastructure network when a network mode is selected. When the network option is configured, the encap-type cannot be configured for the port/channel.

When network mode is selected on a SONET/SDH path, the appropriate control protocols are activated when the need arises. For example, configuring an IP interface on the SONET path activates IPCP while the removal of the IP interface causes the IPCP to be removed. The same applies for MPLS, MPLSCP, and OSICP. When configuring a SONET/SDH port, the mode command must be entered in the channel context or an error message is generated.

A hybrid Ethernet port allows the combination of network and access modes of operation on a per-VLAN basis and must be configured as either dot1q or QinQ encapsulation.

When the hybrid port is configured to the dot1q encapsulation, the user configures a SAP inside a service simply by providing the SAP ID which must include the port-id value of the hybrid mode port and an unused VLAN tag value. The format is <*port-id*>:*qtag1*. A SAP of format <*port-id*>:* also supported.

The user configures a network IP interface under **config>router>if>port** by providing the port name which consists of the port-id of the hybrid mode port and an unused VLAN tag value. The format is <*port-id*>:*qtag1*. The user must explicitly enter a valid value for qtag1. The <*port-id*>:* value is not supported on a network IP interface. The 4096 VLAN tag space on the port is shared among VLAN SAPs and VLAN network IP interfaces.

When the hybrid port is configured to QinQ encapsulation, the user configures a SAP inside a service simply by providing the SAP ID which must include the port-id value of the hybrid mode port and the outer and inner VLAN tag values. The format is <port-id>:qtag1.qtag2. A SAP of format <*port-id*>: *qtag1*.* is also supported. The outer VLAN tag value must not have been used to create an IP network interface on this port. In addition, the qtag1.qtag2 value combination must not have been used by another SAP on this port.

The user configures a network IP interface under **config>router>if>port** by providing the port name which consists of the port-id of the hybrid mode port and a VLAN tag value. The format is <*port-id*>:*qtag1*.*. An outer VLAN tag qtag2 of * is used to create an IP network interface. In addition, the qtag1.qtag2 value combination must not have been used on another SAP or IP network interface on this port.

The **no** form of this command restores the default.

Default **network** — Configures the Ethernet port, TDM channel or SONET path for transport network use.

access — Default channel/port mode for channelized, ASAP, and ATM MDAs.

Special Cases **SONET/SDH Path —** When network mode is selected, the appropriate control protocols are activated when the need arises. For example, configuring an IP interface on the SONET path activates IPCP while the removal of the IP interface causes the IPCP to be removed. The same applies for MPLS, MPLSCP, and OSICP.When configuring a SONET/SDH port, the **mode** command must be entered in the channel context or an error message is generated.

Parameters **network —** Configures the Ethernet port, TDM channel or SONET path as service access.

access — Configures the Ethernet port, TDM channel or SONET path for transport network use.

hybrid — Configures the Ethernet port for hybrid use.

mac

Syntax **mac** *ieee-address*
no mac

Context config>port>ethernet
config>port>sonet-sdh>path
config>port>tdm>ds1>channel-group
config>port>tdm>ds3
config>port>tdm>e1>channel-group
config>port>tdm>e3
config>lag
config>eth-tunnel

Description This command assigns a specific MAC address to an Ethernet port, Link Aggregation Group (LAG), Ethernet tunnel, or BCP-enabled port or sub-port.

Only one MAC address can be assigned to a port. When multiple **mac** commands are entered, the last command overwrites the previous command. When the command is issued while the port is operational, IP will issue an ARP, if appropriate, and BPDU's are sent with the new MAC address.

The **no** form of this command returns the MAC address to the default value.

Default A default MAC address is assigned by the system from the chassis MAC address pool.

Parameters *ieee-address* — Specifies the 48-bit MAC address in the form aa:bb:cc:dd:ee:ff or aa-bb-cc-dd-ee-ff where aa, bb, cc, dd, ee and ff are hexadecimal numbers. Allowed values are any non-broadcast, non-multicast MAC and non-IEEE reserved MAC addresses.

mtu

Syntax **mtu** *mtu-bytes*
no mtu

Context

config>port>ethernet
config>port>sonet-sdh>path
config>port>tdm>ds1>channel-group
config>port>tdm>ds3
config>port>tdm>e1>channel-group
config>port>tdm>e3

Description

This command configures the maximum payload MTU size for an Ethernet port, PPP-enabled port or sub-port and Frame Relay-enabled port or subport. The Ethernet port level MTU parameter indirectly defines the largest physical packet the port can transmit or the far-end Ethernet port can receive. Packets received larger than the MTU will be discarded. Packets that cannot be fragmented at egress and exceed the MTU are discarded.

The value specified for the MTU includes the destination MAC address, source MAC address, the Ethertype or Length field and the complete Ethernet payload. The MTU value does not include the preamble, start of frame delimiter or the trailing CRC.

PoS channels use the MTU to define the largest PPP payload a PoS frame may contain. A significant difference between SONET/SDH PoS channel and Ethernet physical MTU values the overhead considered part of the framing method and the overhead considered to be part of the application using the frame. In Ethernet, the preamble, start of frame delimiter and the CRC are considered part of the framing overhead and not part of the frame payload. For a PoS channel, the HDLC framing overhead is not included in the physical MTU; only the PPP and PPP payload are included. If the port mode or encapsulation type is changed, the MTU assumes the default values of the new mode or encapsulation type.

The **no** form of this command restores the default values.

Default

The default MTU value depends on the (sub-)port type, mode and encapsulation and are listed in Table 37:

Table 37 **Default MTU values**

Type	Mode	Encap Type	Default (Bytes)
10/100, Gig, or 10GigE	Access	null	1514
10/100, Gig, or 10GigE	Access	dot1q	1518
10/100, Gig, or 10GigE	Access	q-in-q	1522
SONET/SDH or TDM	Access	mpls	1506
SONET/SDH or TDM	Access	bcp-null	1518
SONET/SDH or TDM	Access	bcp-dot1q	1522
SONET/SDH or TDM	Access	ipcp	1502
SONET/SDH or TDM	Access	frame-relay	1578

Table 37 **Default MTU values (Continued)**

Type	Mode	Encap Type	Default (Bytes)
ATM, SONET/SDH or TDM	Access	atm	1524
10/100 or 100FX Ethernet	Network	null	1514
10/100 or 100FX Ethernet	Network	dot1q	1518
SONET/SDH	Network	ppp-auto	1524

Parameters *mtu-bytes* — Sets the maximum allowable size of the MTU, expressed as an integer.

Values

512 to 9212	config>port>sonet-sdh>path
512 to 9208	config>port>tdm>ds3
512 to 9208	config>port>tdm>ds1>channel-group
512 to 9208	config>port>tdm>e3
512 to 9208	config>port>tdm>e1>channel-group

network

Syntax **network**

Context config>port>tdm>ds1>channel-group
config>port>tdm>e1>channel-group

Description This command enables the context to configure network channel group parameters.

queue-policy

Syntax **queue-policy** *name*
no queue-policy

Context config>port>tdm>ds1>channel-group>network
config>port>tdm>e1>channel-group>network

Description This command specifies an existing network policy to apply to the channel group.

queue-policy

Syntax **queue-policy** *name*
no queue-policy

Context config>card>mda>network>ingress
config>port>sonet-sdh>path>network

Description This command specifies the network-queue policy which defines queue parameters such as CBS, high priority only burst size, MBS, CIR and PIR rates, as well as forwarding-class to queue mappings. The network-queue policy is defined in the **config>qos>network-queue** context.

Default default

Parameters *name* — Specifies an existing network-queue policy name.

ppp

Syntax **ppp**

Context config>port>sonet-sdh>path
config>port>tdm>ds1>channel-group
config>port>tdm>ds3
config>port>tdm>e1>channel-group
config>port>tdm>e3

Description This command enables access to the context to configure the LCP operational parameters for a SONET/SDH PoS link, a DS--3/E-3 port or channel, a DS-1/E-1 channel or a DS-0 channel.

Default no ppp

compress

Syntax **compress** {**acfc** [**pfc**] | **pfc** [**acfc**]}
no compress

Context config>port>tdm>ds1>channel-group>ppp
config>port>tdm>e1>channel-group>ppp

Description This command enables and disables Protocol Field Compression (PFC) per RFC 1661, *The Point-to-Point Protocol (PPP),* Section 6.5 and Address and Control Field Compression (ACFC) as per Section 6.6.

This command is only supported on DS-1 and E-1 channel groups on ASAP MDAs.

The **no** form of the command disables the header compression.

Default no compress

Parameters **acfc —** Specifies address and control field compression.

pfc — Specifies protocol field compression.

ber-sf-link-down

Syntax [**no**] **ber-sf-link-down**

Context config>port>tdm>ds1>channel-group>ppp
config>port>tdm>e1>channel-group>ppp

Description This command enables the port down on BER-SF alarm. When enabled, the link will be placed out of service once ber-sf is detected.

The **no** form of the command reverts to normal operation where the link remains in-service when ber-sf is encountered.

Default no ber-sf-link-down

report-alarm

Syntax [**no**] **report-alarm** [**ais**] [**los**] [**oof**] [**rai**] [**looped**]

Context config>port>tdm> ds3
config>port>tdm> e3

Description This command enables logging of DS-3 and E-3 alarms for a DS-3/E-3 port or channel.

The **no** form of this command disables logging of the specified alarms.

Parameters **ais —** Reports alarm indication signal errors. When configured, **ais** alarms are not raised and cleared.

Default **ais** alarms are issued

los — Reports loss of signal errors. When configured, **los** traps are not raised and cleared.

Default **los** traps are issued

oof — Reports out-of-frame errors. When configured, **oof** alarms are not raised and cleared.

Default **oof** alarms are not issued

rai — Reports resource availability indicator events. When configured, **rai** events are not raised and cleared.

Default **rai** alarms are not issued

looped — Reports looped packets errors.

Default **looped** alarms are not issued

scramble

Syntax [**no**] **scramble**

Context config>port>tdm>ds1>channel-group
config>port>tdm>ds3
config>port>tdm>e1>channel-group
config>port>tdm>e3

Description This command enables payload scrambling on channel groups.

Scrambling randomizes the pattern of 1s and 0s carried in a SONET frame. Rearranging or scrambling the pattern prevents continuous strings of all 1s or all 0s and meets the needs of physical layer protocols that rely on sufficient transitions between 1s and 0s to maintain clocking.

For ATM, this command enables or disables ATM cell-level payload scrambling/descrambling using x43+1 polynomial as defined in ITU-T I.432.1. Scrambling is enabled by default for the ATM path/channel. Note that this scrambling is done in addition to SONET/SDH frame scrambling/descrambling, which is always enabled in the framer.

The **no** form of this command disables scrambling.

Default **no scramble**

keepalive

Syntax **keepalive** *time-interval* [**dropcount** *drop-count*]
no keepalive

Context config>port>sonet-sdh>path>ppp
config>port>tdm>ds1>channel-group>cisco-hdlc
config>port>tdm>ds1>channel-group>ppp
config>port>tdm>ds3>ppp
config>port>tdm>e1>ppp
config>port>tdm>e3>ppp

Description This command sets the keepalive interval.

The **no** form of this command returns the interval to the default value.

Default 10

Parameters *time-interval* — Specifies the time in seconds between keepalive messages, expressed as a decimal integer.

Values 1 to 60 seconds

drop-count — Specifies the number of consecutive keepalive failed request attempts or remote replies that can be missed after which the port is operationally downed.

Values 1 to 255

2.25.2.10 Port XC Commands

The port xc commands are supported on the 7450 ESS only.

port-xc

Syntax **port-xc**

Context config

Description This command enables the context to configure port-cross connect functionality.

Default n/a

pxc

Syntax **pxc** *pxc-id* [**create**]
no pxc *pxc-id* [**create**]

Context config>port-xc

Description This command creates a port cross-connect (PXC) object. Referencing an Ethernet port within the PXC object will automatically configure this Ethernet port as a loopback port. The node will automatically create two PXC sub-ports under this Ethernet port. The configuration of PXC sub-ports can be accessed through the CLI.

Default n/a

Parameters *pxc-id* — Specifies the port cross-connect identifier.

Values 1 to 64

port

Syntax **port** *port-id*
no port

Context config>port-xc>pxc

Description This command configures the referenced Ethernet port as a loopback or a cross-connect port (PXC). Once this command is executed, the system automatically creates two PXC sub-ports under this Ethernet port. The two PXC sub-ports are logical configurations used by the node to transmit traffic bi-directionally through a single physical port that is internally cross-connected.

The physical PXC port does not require any external connectivity or optical transceivers to function properly. Consequently, all optic-related alarms are disabled on the port.

The physical PXC port is automatically configured as a hybrid port. The MTU is preset to 9212 bytes, The encapsulation type is set to dot1q and dot1x tunneling is turned on.

Since the PXC is using a single physical port to transmit traffic in both directions, the nominal port bandwidth is asymmetrically divided between the two directions. For example, a 10Gb/s Ethernet port in PXC mode can accommodate nine Gb/s of traffic in one direction and one Gb/s in the other. Any other ratio can be achieved as long as the sum of the bandwidth of the two PXC sub-ports does not exceed the bandwidth capacity of the physical port (10 Gb/s in this case).

The following apply to PXC ports:

- Only unused physical ports (not associated with an interface or SAP) can be referenced inside of a PXC ID configuration.
- Once inside of a PXC ID configuration, the physical port cannot be removed from that PXC ID configuration if the corresponding PXC sub-ports are currently in use.
- Once inside of a PXC ID configuration, the physical port cannot be used outside of the PXC context. For example, a regular IP interface cannot use this physical port, or a SAP on that port cannot be associated with a service.
- A physical port can be associated with only one PXC ID configuration.

Default n/a

Parameters *port-id* — Specifies the physical port in the *slot*/*mda*/*port* format.

pxc-pxc-id.sub-port-id

Syntax **pxc-***pxc-id.sub-port-id*

Context config>port

Description This command enables access to PXC sub-port level parameters. The PXC sub-ports are automatically created once the external Ethernet port is configured inside of an PXC object. The PXC sub-ports are by default administratively disabled (shutdown). In order for PXC sub-ports to became operational, both, the underlying external Ethernet port and the PXC object must be operationally up.

Default n/a

Parameters *pxc-id* — Specifies the unique identifier of this PXC.

sub-port-id — When this the *pxc-id* is configured, two logical sub-ports are automatically created. These logical sub-ports are used to create two paths within the loop; one upstream path, and one downstream path. These sub-ports are destroyed when either this PXC row is destroyed, this object is de-provisioned.

2.25.2.11 Forwarding Path Extention (FPE) Commands

fwd-path-ext

Syntax **fwd-path-ext**

Context config

Description This command provides context for configuring Forwarding Path Extensions (FPE). FPE is utilized by certain applications that rely on PXC functionality. Its purpose is to simplify configuration of such applications.

Default N/A

fpe

Syntax fpe *fpe-id* [**create**]

Context config>fwd-path-ext

Description This command configures an FPE object which is used to associate the application with a PXC (paired set of PXC sub-ports or a paired set of PXC based LAGs). Note that FPE requires chassis mode D or higher.

The **no** form of the command disables the FPE object association.

Default N/A

Parameters *fpe-id* — Specifies the FPE ID.

Values 1 to 64

create — Keyword used to associate the queue group. The create keyword requirement can be enabled or disabled in the **environment>create** context.

path

Syntax **path xc-a lag**-*id* **xc-b lag**-*id*
path pxc *pxc-id*
no path

Context config>fwd-path-ext>fpe

Description This command is used to reference a PXC (pair of PXC sub-ports) and consequently create an association between the PXC and the application which is referenced under the same FPE object. Each application will utilize the PXC in the form of an internal cross-connect. The exact use and internal provisioning of this cross-connect depends on the application itself.

The **no** form of the command removes the reference and association from the configuration.

Default N/A

Parameters **xc-a lag**-*id* — Specifies LAG identifier associated with one side of the cross-connect. The operator has the freedom to associate xc-a with LAG id containing either sub-ports .a or sub-ports .b. In other words, the system does not perform automatic check that will ensure a match between xc-a and the LAG id containing sub-ports .a.

Values 1 to 800

xc-b lag-*id* —

pxc *pxc-id* — Specifies the LAG identifier associated with one side of the cross-connect. The operator has the freedom to associate xc-b with LAG id containing either sub-ports .a or sub-ports .b. In other words, the system does not perform automatic check that will ensure a match between xc-b and the LAG id containing sub-ports .b.

Values 1 to 64

pw-port

Syntax [**no**] **pw-port**

Context config>fwd-path-ext>fpe

Description This command informs the system about the type of the cross-connect that is required in order to terminate a PW to an anchored PW-port (setup a tunnel from I/O ports to the PW-port which is tied to PXC).

The **no** form of the command removes the cross-connect type from the configuration.

Default N/A

vxlan-termination

Syntax [**no**] **vxlan-termination**

Context config>fwd-path-ext>fpe

Description This command informs the system about the type of the cross-connect that is required in order to terminate non-system IPv4 and IPv6 VXLAN. Internally, it will trigger the automatic creation of two internal IP interfaces in the PXC ports and will enable those internal interfaces to process and terminate VXLAN.

The **no** form of the command disables the cross-connect type from the configuration.

Default N/A

sdp-id-range

Syntax **sdp-id-range from** *start-id* **to** *stop-id*
no sdp-id-range

Context config>fwd-path-ext

Description This command is used to reserve SDP id range used by the FPE based PW-Port and VXLAN termination applications.

Each configured FPE based PW-Port is associated with two internal SDPs (one in each direction) whose id(s) are allocated from the configured sdp-id-range.

When the FPE is associated to VXLAN termination, an internal SDP is allocated from the configured sdp-id-range and is used for R-VPLS services that terminate VXLAN IPv6. A spoke-sdp per VXLAN IPv6 R-VPLS service is created on that SDP for egress processing of the packets. Sdp-id-range cannot be modified if any of its IDs are currently in use.

Default no sdp-id-range

Parameters **from** *start-id* **—** Specifies the start of the SDP ID range (inclusive)

Values 1 to 17407

to *stop-id* **—** Specifies the end of the SDP ID range

Values 1 to 17407

2.25.2.12 APS Commands

aps

Syntax **aps**

Context config>port

Description This command configures APS (Automatic Protection Switching). APS is used by SONET/SDH add/drop multiplexers (ADMs) or other SONET/SDH-capable equipment to protect against circuit or equipment failure.

An APS group contains a working and a protect circuit and can span a single node (SC-APS) or two nodes (MC-APS).

The working and protection configurations on the 7750 SRs must match the circuit configurations on the peer. This means that the working circuit on the 7750 SR must be connected to the peer's working circuit and the protect circuit must be connected to the peer's protection circuit.

The **aps** command is only available for APS groups and not physical ports.

Default n/a

advertise-interval

Syntax **advertise-interval** *advertise-interval*
no advertise-interval

Context config>port>aps

Description This command specifies the time interval, in 100s of milliseconds, between 'I am operational' messages sent by both protect and working circuits to their neighbor for multi-chassis APS.

The **advertise-interval** value is valid only for a multi-chassis APS as indicated by the value of the **neighbor** command value if it is not set to 0.0.0.0.

Default 10

Parameters *advertise-interval* — Specifies the time interval, in 100s of milliseconds, between 'I am operational' messages sent by both protect and working circuits to their neighbor for multi-chassis APS.

Values 10 to 650

hold-time

Syntax **hold-time** *hold-time*
no hold-time

Context config>port>aps

Description This command specifies how much time can pass, in 100s of milliseconds, without receiving an advertise packet from the neighbor before the multi-chassis signaling link is considered not operational.

The **hold-time** is usually 3 times the value of the **advertise-interval**. The value of the **advertise-interval** is valid only for a multi-chassis APS as indicated by the value of neighbor IP address if it is not set to 0.0.0.0.

Parameters *hold-time* — Specifies how long to wait for an APS advertisement packet before the peer in a Multi-Chassis APS group is considered operationally down.

Values 10 to 650

hold-time-aps

Syntax **hold-time-aps** [**lsignal-failure** *sf-time*] [**lsignal-degrade** *sd-time*]
no hold-time-aps

Context config>port>aps

Description This command configures hold-down timers to debounce signal failure conditions (lais, b2err-sf) and signal degrade conditions (b2err-sd) for Uni 1+1 Sig+Data APS switching mode (switching mode uni-1plus1).

The **no** version of this command resets hol a specified string expression from an app-filter definition.

Default 0 (disabled)

Parameters *sf-time* — Specifies an integer to define the signal failure hold-down time in milliseconds.

Values 1 to 100

sd-time — Specifies an integer to define the signal degrade hold-down time in milliseconds.

Values 1 to 100

mode-annexb

Syntax [**no**] **mode-annexb**

Context config>port>aps

Description This command configures the aps group for 1+1 Optimized operation as described in Annex B of ITU.T G.841. Note that Annex B operates in non-revertive bi-directional switching mode only as defined in G.841.

neighbor

Syntax **neighbor** *ip-address*
no neighbor

Context config>port>aps

Description This command specifies the neighbor's IP address only on a multi-chassis APS where the working and protect circuits are configured on different routers. When the value the neighbor IP address is set to 0.0.0.0, this implies that the APS group is configured as a single-chassis APS group.

The route to the neighbor must not traverse the multi-chassis APS member (working or protect) circuits. It is recommended that the neighbor IP address configured is on a shared network between the routers that own the working and protect circuits.

By default no neighbor address is configured and both the working and protect circuits should be configured on the same router (i.e., single-chassis APS). APS is assumed to be configured wholly on a single chassis.

Parameters *ip-address* — Specifies the neighbor's IP address only on a multi-chassis APS where the working and protect circuits are configured on different routers. The node should be connected with a direct interface to ensure optimum fail-over time.

Values

ipv4-address:	a.b.c.d
ipv6-address:	x:x:x:x:x:x:x:x (eight 16-bit pieces)
	x:x:x:x:x:x:d.d.d.d
	x:-[0 to FFFF]H
	d: [0 to 255]D

protect-circuit

Syntax **protect-circuit** *port-id*
no protect-circuit

Context config>port>aps

Description This command configures a physical port that will act as the protection circuit for this APS group. The protect circuit port must contain only the default configuration and cannot belong to another APS group. The protect circuit port must be of the same type as the working circuit for the APS group, for the port to be added to an APS group port. If that’s not the case, the command will return an error.

A protection circuit can only be added if the working circuit already exists; the protection circuit must be removed from the configuration before the working circuit is removed.

When a port is a protect-circuit of an APS group, the configuration options available in the **config>port** *port-id***>sonet-sdh** context is not allowed for that port unless it is part of the noted exceptions. The exception list includes these SONET/SDH commands:

- clock-source
- [no] loopback
- [no] report-alarm
- section-trace
- [no] threshold

When is port configured as a protection circuit of an APS group, the configurations described above and all service configurations related to APS port are operationally inherited by the protect circuit. If the protect circuit cannot inherit the configurations (due to resource limitations), the configuration attempt fails and an error is returned to the user.

The protect circuit must be shutdown before it can be removed from the APS group port. The inherited configuration for the circuit and APS operational commands for that circuit are not preserved when the circuit is removed from the APS group.

The **no** form of this command removes the protect-circuit.

Default n/a

Parameters *port-id* — Specifies the physical port that will act as the protection circuit for this APS group in the following format:

port-id	*slot*/*mda*/*port*		
	eth-sat-id	esat-*id*/*slot*/*port*	
		esat	keyword
		id	1 to 20
	pxc-id	pxc-*id*.*sub-port*	
		pxc	keyword
		id	1 to 64
		sub-port	a, b

Also see the Modifying Hold-Down Timer Values section for information about modifying the timer defaults in the event of communication delays between the APS controllers.

rdi-alarms

Syntax **rdi-alarms** [**suppress** | **circuit**]

Context config>port>aps

Description This command configures how RDI alarms (line, path, section) are generated on physical circuits of an APS ports. The command configuration changes are supported only for switching-mode set to uni_1plus1. The configuration can be changed only when no working and protecting circuit has been added. Options:

- circuit–RDI alarms are H/W-generated independently on each working and protect circuit based on RX failure of that circuit regardless of APS line status.
- suppress–RDI H/W generation on working and protect circuits is suppressed. No alarms are generated on RX failure of that circuit.

Default rdi-alarms circuit

revert-time

Syntax **revert-time** *minutes*
no revert-time

Context config>port>aps

Description This command configures the revert-time timer to determine how long to wait before switching back to the working circuit after that circuit has been restored into service.

A change in the *minutes* value takes effect upon the next initiation of the wait to restore (WTR) timer. It does not modify the length of a WTR timer that has already been started. The WTR timer of a non-revertive switch can be assumed to be infinite.

The **no** form of this command restores the default (non-revertive mode).

Default The default is to not revert back unless the protect circuit fails or operator intervention.

Parameters *minutes* — Specifies the time, in minutes, to wait before reverting back to the original working circuit after it has been restored into service.

Values 0 to 60 minutes

Default 5

switching-mode

Syntax **switching-mode** {**uni-1plus1** (**R8.0**)| **bi-directional** | **uni-directional**}

Context config>port>aps

Description This command configures the switching mode for the APS group.

Parameters **bi-directional —** Configures the group to operate in Bidirectional 1+1 Signaling APS mode.

uni-directional — Configures the group to operate in Unidirectional 1+1 Signaling APS mode.

uni-1plus1 — Configures the group to operate in Unidirectional 1+1 Signaling and Datapath APS mode (7750 SR-c4/c12 platforms only).

working-circuit

Syntax **working-circuit** *port-id* [**number** *number*]

Context config>port>aps

Description This command configures a physical port that will act as the working circuit for this APS group. The working circuit port must contain only the default configuration and cannot be part of another APS group. The working circuit must be created before the protection circuit.

When a port is a working circuit of an APS group, the configuration available under **config>port** *port-id* context (including submenus) is not allowed for that port unless it is a part of the noted exceptions.

When a port is being configured as a working circuit of an APS group, all common configuration as described above and all service configurations related to the APS port is operationally inherited by the working circuit from the aps-*group-id*. If the working circuit cannot inherit that configuration, for example, due to resource limitations, the configuration attempt fails and an error is returned to the user.

Before a working circuit can be removed from an APS group, the working circuit port must be shutdown. The inherited configuration for the circuit and APS operational commands for that circuit are not preserved when the circuit is removed from the APS group.

Note that all configurations for aps-*group-id* under the **config>port** context and its submenus and all configuration for services that use this aps-*group-id* is preserved as a non-activated configuration since the APS group no longer has any physical circuits assigned.

The **no** form of this command removes the working-circuit. The working circuit can only be removed from the configuration after the protect circuit has been removed.

Default n/a

Parameters *port-id* — Specifies the physical port that will act as the working circuit for this APS group in the following format:

port-id	*slot*/*mda*/*port*		
	eth-sat-id	esat-*id*/*slot*/*port*	
		esat	keyword
		id	1 to 20
	pxc-id	pxc-*id*.*sub-port*	
		pxc	keyword
		id	1 to 64

	sub-port	a, b

number — Specifies a number of 1 or 2.

Modifying Hold-Down Timer Values

Note that for APS configurations, the **hold-time down** and **hold-time up** default values are 100 ms and 500 ms respectively. But, if there is a large difference in the transmission delay between the APS working (**working-circuit**) and protect line (**protect-circuit**), it is highly recommended that you increase the default timer on the working line accordingly with the transmission delay present on the protect line.

The following output shows an example of the timers on POS interfaces.

```
A:NS044050253# show port aps-1
===============================================================================
SONET/SDH Interface
===============================================================================
Description        : APS Group
Interface          : aps-1                  Speed               : oc3
Admin Status       : up                     Oper Status         : up
Physical Link      : Yes                    Loopback Mode       : none
Single Fiber Mode  : No
Clock Source       : node                   Framing             : sonet
Last State Change  : 04/11/2007 13:53:01    Port IfIndex        : 1358987264
J0 String          : 2/1/5 7750-SR-7        Section Trace Mode  : string
Rx S1 Byte         : 0x00 (stu)             Rx K1/K2 Byte       : 0x00/0x00
Tx S1 Byte         : 0x0f (dnu)             Tx DUS/DNU          : disabled
Rx J0 String (Hex) : 81 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Cfg Alarm          : loc lais lrdi ss1f lb2er-sd lb2er-sf slof slos lrei
Alarm Status       :
Hold time up       : 500 milliseconds
Hold time down     : 100 milliseconds
===============================================================================
Port Statistics
===============================================================================
Input                 Output
-------------------------------------------------------------------------------
Packets                                        6670498                 3804661
Discards                                             0                       0
Unknown Proto Discards                               0
===============================================================================
A:NS044050253#


For unprotected port these timer are different:
A:NS044050253# show port 2/2/2
===============================================================================
SONET/SDH Interface
===============================================================================
Description        : OC-48 SONET/SDH
Interface          : 2/2/2                  Speed               : oc48
Admin Status       : up                     Oper Status         : up
Physical Link      : Yes                    Loopback Mode       : none
Single Fiber Mode  : No
APS Group          : none                   APS Role            : none
Clock Source       : loop                   Framing             : sonet
Last State Change  : 04/11/2007 14:53:53    Port IfIndex        : 37814272
J0 String          : 0x01                   Section Trace Mode  : byte
```

```
Rx S1 Byte         : 0x00 (stu)             Rx K1/K2 Byte        : 0x00/0x00
Tx S1 Byte         : 0x0f (dnu)             Tx DUS/DNU           : disabled
Rx J0 String (Hex) : af 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Cfg Alarm          : loc lrdi lb2er-sf slof slos
Alarm Status       :
Hold time up       : 500 milliseconds
Hold time down     : 0 milliseconds
Transceiver Data

Transceiver Type   : SFP
Model Number       : SFP-OC48-SR1
Transceiver Code   : OC48 SR
Laser Wavelength   : 1310                   Diag Capable         : yes
Connector Code     : LC                     Vendor OUI           : 00:01:9c
Manufacture date   : 2004/08/20 00:00:00    Media                : SONET/SDH
Serial Number      : 6331000705
Part Number        : CT2-MS1LBTD32Z2
Optical Compliance*: 00:01:00:00:00:00:00:00
Link Len 9u        : 2 kms                  Link Len Cu          : 0 m
Link Len 9u        : 20 * 100m              Link Len 62.5u       : 0 * 10m
Link Len 50u       : 0 * 10m
===============================================================================
Port Statistics
===============================================================================
                                                      Input                Output
-------------------------------------------------------------------------------
Packets                                            3870094               6656408
Discards                                                 0                     0
Unknown Proto Discards                                   0
===============================================================================
A:NS044050253#
```

wtr-annexb

Syntax **wtr-annexb** *minutes*

Context config>port>aps

Description This command waits to restore for Annex B mode operation. The delay after which the newly active section becomes the primary section after a switch-over from the primary section to the secondary section occurs and the switch request clears normally.

Parameters *minutes* — Specifies the time, in minutes, to wait to restore for Annex B mode operation

2.25.2.13 Ethernet Port Commands

ethernet

Syntax **ethernet**

Context config>port

Description This command enables access to configure Ethernet port attributes.

This context can only be used when configuring Fast Ethernet, gigabit, or 10Gig Ethernet LAN ports on an appropriate MDA.

mode

Syntax **mode** {**access** | **network** | **hybrid**}
no mode

Context config>port>ethernet
config>port>sonet-sdh>path
config>port>tdm>ds1>channel-group
config>port>tdm>ds3
config>port>tdm>e1>channel-group
config>port>tdm>e3

Description This command configures an Ethernet port for access, network, or hybrid mode of operation. It also configures a TDM channel or SONET/SDH path (sub-port) for access or network mode operation.

An access port or channel is used for customer facing traffic on which services are configured. A Service Access Point (SAP) can only be configured on an access port or channel. When a port is configured for access mode, the appropriate encap-type must be specified to distinguish the services on the port or SONET path. Once an Ethernet port, a TDM channel or a SONET path has been configured for access mode, multiple services can be configured on the Ethernet port, a TDM channel or SONET path. Note that ATM, Frame Relay, and cHDLC port parameters can only be configured in the access mode.

A network port or channel participates in the service provider transport or infrastructure network when a network mode is selected. When the network option is configured, the encap-type cannot be configured for the port/channel.

When network mode is selected on a SONET/SDH path, the appropriate control protocols are activated when the need arises. For example, configuring an IP interface on the SONET path activates IPCP while the removal of the IP interface causes the IPCP to be removed. The same applies for MPLS, MPLSCP, and OSICP. When configuring a SONET/SDH port, the mode command must be entered in the channel context or an error message is generated.

A hybrid Ethernet port allows the combination of network and access modes of operation on a per-VLAN basis and must be configured as either dot1q or QinQ encapsulation.

When the hybrid port is configured to the dot1q encapsulation, the user configures a SAP inside a service simply by providing the SAP ID which must include the port-id value of the hybrid mode port and an unused VLAN tag value. The format is <*port-id*>:*qtag1*. A SAP of format <*port-id*>:* also supported.

The user configures a network IP interface under config>router>if>port by providing the port name which consists of the port-id of the hybrid mode port and an unused VLAN tag value. The format is <*port-id*>:*qtag1*. The user must explicitly enter a valid value for qtag1. The <*port-id*>:* value is not supported on a network IP interface. The 4096 VLAN tag space on the port is shared among VLAN SAPs and VLAN network IP interfaces.

When the hybrid port is configured to QinQ encapsulation, the user configures a SAP inside a service simply by providing the SAP ID which must include the port-id value of the hybrid mode port and the outer and inner VLAN tag values. The format is <port-id>:qtag1.qtag2. A SAP of format <*port-id*>: *qtag1*.* is also supported. The outer VLAN tag value must not have been used to create an IP network interface on this port. In addition, the qtag1.qtag2 value combination must not have been used by another SAP on this port.

The user configures a network IP interface under config>router>if>port by providing the port name which consists of the port-id of the hybrid mode port and a VLAN tag value. The format is <*port-id*>:*qtag1*.*. An outer VLAN tag qtag2 of * is used to create an IP network interface. In addition, the qtag1.qtag2 value combination must not have been used on another SAP or IP network interface on this port.

The **no** form of this command restores the default.

Default network — for Ethernet ports

access — for TDM channel or SONET paths

Parameters **access —** Configures the Ethernet port, TDM channel or SONET path as service access.

network — Configures the Ethernet port, TDM channel or SONET path for transport network use.

hybrid — Configures the Ethernet port for hybrid use.

access

Syntax **access**

Context config>port>ethernet

Description This command configures Ethernet access port parameters.

egress

Syntax **egress**

Context config>port>ethernet>access
config>port>ethernet>network

Description This command configures Ethernet access egress port parameters.

queue-group

Syntax **queue-group** *queue-group-name* [**instance** *instance-id*] [**create**]
no queue-group *queue-group-name* [**instance** *instance-id*]

Context config>port>ethernet>access>egress
config>port>ethernet>access>ingress

Description This command creates an ingress or egress queue group on an Ethernet port. A queue group is a collection of queues identified by a group name. Queue groups created on access ports are used as an alternative queue destination for SAPs.

Within a SAP, a forwarding class may be redirected from the local SAP queue to a port queue group queue. The forwarding classes from multiple SAPs may be redirected to the same queue group which can be used to minimize the number of per-SAP queues.

Queue groups may be created on both access and network oriented ports. When the port is in access mode, the queue groups must be created within the port access node.

Within the access node, queue groups are also configured as ingress or egress. Access ingress queue groups can only be used by ingress SAP forwarding classes and only a single ingress queue group per port is supported. Multiple access egress queue groups may be created on a single port and are used by egress SAP forwarding classes. The instance-id parameter identifies different instances of the same queue group template. Creating multiple queue groups with a different instance ID but the same queue group name results in separate queue groups being created on the port. The instance-id parameter is only valid for egress queue groups on access ports.

When the queue group is created in an ingress port context, the group-name must be an existing ingress queue group template. Similarly, queue groups created in an egress port context must have a group-name of an existing egress queue group template. Two ingress queue groups with the same name cannot be created on the same port. Two egress queue groups can only be created on the same port with the same queue group template name if they have different instance-id values.

The queues defined in the template are created on the queue group. The queue parameters within the template are used as the default queue parameters for each queue in the queue group. The default queue parameters for each queue may be overridden on the queue group with specific queue parameters.

Each queue group supports the application of a scheduler-policy for the purpose of managing the queues within the group into an aggregate SLA. The queues defined within the template may be configured with parent scheduler defining the mapping of a queue to one of the schedulers within the scheduler policy. Egress queue groups also support the **agg-rate** parameter and the queues in the egress template support the port-parent command. Each command is used for configuring egress port virtual scheduling behavior.

Each queue group allows the application of an accounting policy and the ability to enable and disable collecting statistics. The statistics are derived from the queue counters on each queue within the queue group. The accounting policy defines which queue counters are collected and to which accounting file they will be written.

A queue group does not have an administrative shutdown or no shutdown command. A queue group is considered to be always on once created.

When creating a queue group, the system will attempt to allocate queue resources based on the queues defined in the queue group template. If the appropriate queue resources do not currently exist, the queue group will not be created. Ingress port queue groups do not support the shared-queuing or multipoint-shared queuing behavior.

When the queue group is created on a LAG (Link Aggregation Group), it must be created on the primary port member. The primary port member is the port with the lowest port ID based on the slot, MDA position and port number on the MDA. A queue group created on the primary LAG port will be automatically created on all other port members. If a new port is being added to a LAG with an existing queue group, the queue group must first be created on the port prior to adding the port to the LAG. If the LAG queue group has queue overrides, the queue overrides must also be defined on the port queue group prior to adding the port to the LAG.

A port queue group cannot be removed from the port when a forwarding class is currently redirected to the group. All forwarding class redirections must first be removed prior to removing the queue group.

Default n/a

Parameters *group-name* — The group-name parameter is required when executing the port queue-group command. The specified group-name must exist as an ingress or egress queue group template depending on the ingress or egress context of the port queue group. Only a single queue group may be created on an ingress port. Multiple queue groups may be created on an egress port.

instance-id — specifies the identification of a specific instance of the egress queue-group. This parameter is only valid for egress access port queue groups.

Values 1 to 40960

create — Keyword used to associate the queue group. The create keyword requirement can be enabled/ disabled in the environment>create context.

egress

Syntax **egress**

Context config>port>ethernet

Description This command configures Ethernet egress port parameters.

ingress

Syntax **ingress**

Context config>port>ethernet>access

Description This command configures Ethernet access ingress port parameters.

queue-group

Syntax **queue-group** *queue-group-name* [**instance** *instance-id*] [**create**]
no queue-group *queue-group-name*

Context config>port>ethernet>access>egr
config>port>ethernet>access>ing

Description This command creates an ingress or egress queue group on an Ethernet port. A queue group is a collection of queues identified by a group name. Queue groups created on access ports are used as an alternative queue destination for SAPs.

Within a SAP, a forwarding class may be redirected from the local SAP queue to a port queue group queue. The forwarding classes from multiple SAPs may be redirected to the same queue group which can be used to minimize the number of per-SAP queues.

Queue groups may be created on both access and network oriented ports. When the port is in access mode, the queue groups must be created within the port access node.

Within the access node, queue groups are also configured as ingress or egress. Access ingress queue groups can only be used by ingress SAP forwarding classes and only a single ingress queue group per port is supported. Multiple access egress queue groups may be created on a single port and are used by egress SAP forwarding classes. The instance-id parameter identifies different instances of the same queue group template. Creating multiple queue groups with a different instance ID but the same queue group name results in separate queue groups being created on the port. The instance-id parameter is only valid for egress queue groups on access ports.

When the queue group is created in an ingress port context, the group-name must be an existing ingress queue group template. Similarly, queue groups created in an egress port context must have a group-name of an existing egress queue group template. Two ingress queue groups with the same name cannot be created on the same port. Two egress queue groups can only be created on the same port with the same queue group template name if they have different instance-id values.

The queues defined in the template are created on the queue group. The queue parameters within the template are used as the default queue parameters for each queue in the queue group. The default queue parameters for each queue may be overridden on the queue group with specific queue parameters.

Each queue group supports the application of a scheduler-policy for the purpose of managing the queues within the group into an aggregate SLA. The queues defined within the template may be configured with parent scheduler defining the mapping of a queue to one of the schedulers within the scheduler policy. Egress queue groups also support the **agg-rate** parameter and the queues in the egress template support the port-parent command. Each command is used for configuring egress port virtual scheduling behavior.

Each queue group allows the application of an accounting policy and the ability to enable and disable collecting statistics. The statistics are derived from the queue counters on each queue within the queue group. The accounting policy defines which queue counters are collected and to which accounting file they will be written.

A queue group does not have an administrative shutdown or no shutdown command. A queue group is considered to be always on once created.

When creating a queue group, the system will attempt to allocate queue resources based on the queues defined in the queue group template. If the appropriate queue resources do not currently exist, the queue group will not be created. Ingress port queue groups do not support the shared-queuing or multipoint-shared queuing behavior.

When the queue group is created on a LAG (Link Aggregation Group), it must be created on the primary port member. The primary port member is the port with the lowest port ID based on the slot, MDA position and port number on the MDA. A queue group created on the primary LAG port will be automatically created on all other port members. If a new port is being added to a LAG with an existing queue group, the queue group must first be created on the port prior to adding the port to the LAG. If the LAG queue group has queue overrides, the queue overrides must also be defined on the port queue group prior to adding the port to the LAG.

A port queue group cannot be removed from the port when a forwarding class is currently redirected to the group. All forwarding class redirections must first be removed prior to removing the queue group.

Default n/a

Parameters *group-name* — The group-name parameter is required when executing the port queue-group command. The specified group-name must exist as an ingress or egress queue group template depending on the ingress or egress context of the port queue group. Only a single queue group may be created on an ingress port. Multiple queue groups may be created on an egress port.

instance-id — Specifies the identification of a specific instance of the queue-group.

Values 1 to 40960

create — Keyword used to associate the queue group. The **create** keyword requirement can be enabled/disabled in the **environment>create** context.

agg-rate

Syntax [**no**] **agg-rate**

Context config>port>ethernet>access>egr>qgrp
config>port>ethernet>access>egr>vport
config>port>ethernet>network>egr>qgrp

Description This command is used to control an HQoS aggregate rate limit. It is used in conjunction with the following parameter commands: **rate**, **limit-unused-bandwidth**, **and queue-frame-based-accounting**.

When specified under a VPORT, the agg-rate rate, port-scheduler-policy and scheduler-policy commands are mutually exclusive. Changing between the use of a scheduler policy and the use of an agg-rate/port-scheduler-policy involves removing the existing command and applying the new command.

rate

Syntax **rate** {**max** | **rate**}
no rate

Context config>port>ethernet>access>egr>qgrp>agg-rate
config>port>ethernet>access>egr>vport>agg-rate
config>port>ethernet>network>egr>qgrp>agg-rate

Description This command defines the enforced aggregate rate for all queues associated with the agg-rate context. A rate must be specified for the agg-rate context to be considered to be active on the context's object (SAP, subscriber, VPORT etc.).

Parameters *rate* — Specifies the rate limit for the VPORT.

Values **max**, 1 to 800000000, max

limit-unused-bandwidth

Syntax [**no**] **limit-unused-bandwidth**

Context config>port>ethernet>access>egr>qgrp>agg-rate
config>port>ethernet>access>egr>vport>agg-rate
config>port>ethernet>network>egr>qgrp>agg-rate
config>port>sonet-sdh>path>access>egress>vport

Description This command is used to enable (or disable) aggregate rate overrun protection on the agg-rate context.

queue-frame-based-accounting

Syntax [**no**] **queue-frame-based-accounting**

Context config>port>ethernet>access>egr>qgrp>agg-rate
config>port>ethernet>access>egr>vport>agg-rate
config>port>ethernet>network>egr>qgrp>agg-rate
config>port>sonet-sdh>path>access>egress>vport

Description This command is used to enabled (or disable) frame based accounting on all policers and queues associated with the agg-rate context. It is only supported on Ethernet ports but not on HSMDA Ethernet ports.

Packet byte offset settings are not included in the applied rate when queue frame-based accounting is configured, regardless of how offsets are applied to the statistics.

host-match

Syntax **host-match dest** *destination-string* [**create**]
no host-match dest *destination-string*

Context config>port>ethernet>access>egr>qgrp

Description This command configures host matching for the Ethernet port egress queue-group.

The no form of the command removes host matching for the Ethernet port egress queue-group.

Parameters **dest** *destination-string* **—** Specifies a host match destination string up to 32 characters in length.

create — Keyword used to create the host match. The **create** keyword requirement can be enabled/disabled in the **environment>create** context.

queue-overrides

Syntax **queue-overrides**

Context config>port>ethernet>access>egr>qgrp
config>port>ethernet>access>ing>qgrp
config>port>ethernet>network>egr>qgrp

Description This command enables the context to define optional queue parameter overrides for each queue within the queue group.

queue

Syntax **queue** *queue-id* [*queue-type*] [**create**]
no queue *queue-id*

Context config>port>ethernet>access>egr>qgrp>qover
config>port>ethernet>access>ing>qgrp>qover
config>port>eth>network>egr>qgrp>qover

Description This command associates a queue for use in a queue group template. The defined queue-id acts as a repository for the default parameters for the queue. The template queue is created on each queue-group object which is created with the queue group template name. Each queue is identified within the template by a queue-id number. The template ensures that all queue groups created with the template's name will have the same queue-ids providing a uniform structure for the forwarding class redirection commands in the SAP egress QoS policies. The parameters within the template queue will be used as the default settings for each queue in the actual queue group. The queue parameters may be individually changed for each queue in each queue group using per queue overrides.

The **no** form of the command removes the queue-id from the configuration.

Default n/a

parent

Syntax **parent** [[**weight** *weight*] [**cir-weight** *cir-weight*]]
no parent

Context config>port>ethernet>access>egr>qgrp>qover>q

Description This command, when used in the *queue-overrides* context for a queue group queue, defines an optional **weight** and **cir-weight** for the queue treatment by the parent scheduler that further governs the available bandwidth given the queue aside from the queue PIR setting. When multiple schedulers and/or queues share a child status with the parent scheduler, the weight or level parameters define how this queue contends with the other children for the parent bandwidth.

Default n/a

Parameters **weight** *weight* **—** Weight defines the relative weight of this queue in comparison to other child schedulers and queues while vying for bandwidth on the parent scheduler-name. Any queues or schedulers defined as weighted receive no parental bandwidth until all strict queues and schedulers on the parent have reached their maximum bandwidth or are idle. In this manner, weighted children are considered to be the lowest priority.

Values 0 to 100

Default 1

cir-weight *cir-weight* **—** Defines the weight the queue will use at the within-cir port priority level. The weight is specified as an integer value from 0 to 100 with 100 being the highest weight. When the cir-weight parameter is set to a value of 0 (the default value), the queue or scheduler does not receive bandwidth during the port schedulers within-cir pass and the cir-level parameter is ignored. If the cir-weight parameter is 1 or greater, the cir-level parameter comes into play.

Values 0 to 100

adaptation-rule

Syntax **adaptation-rule** [**pir** *adaptation-rule*] [**cir** {**max** | **min** | **closest**}]
no adaptation-rule

Context config>port>ethernet>access>egr>qgrp>qover>q
config>port>ethernet>access>ing>qgrp>qover>q
config>port>ethernet>network>egr>qover>q

Description This command specifies the method used by the system to derive the operational CIR and PIR settings when the queue is provisioned in hardware. For the CIR and PIR parameters individually, the system attempts to find the best operational rate depending on the defined constraint.

The **no** form of the command removes any explicitly defined constraints used to derive the operational CIR and PIR created by the application of the policy. When a specific **adaptation-rule** is removed, the default constraints for **rate** and **cir** apply.

Default adaptation-rule pir closest cir closest

Parameters **pir —** Defines the constraints enforced when adapting the PIR rate defined within the **queue** *queue-id* **rate** command. The **pir** parameter requires a qualifier that defines the constraint used when deriving the operational PIR for the queue. When the **rate** command is not specified, the default applies.

cir — Defines the constraints enforced when adapting the CIR rate defined within the **queue** *queue-id* **rate** command. The **cir** parameter requires a qualifier that defines the constraint used when deriving the operational CIR for the queue. When the **cir** parameter is not specified, the default constraint applies.

adaptation-rule — Specifies the adaptation rule to be used while computing the operational CIR or PIR value.

Values **max** — The **max** (maximum) option is mutually exclusive with the **min** and **closest** options. When **max** is defined, the operational PIR for the queue will be equal to or less than the administrative rate specified using the **rate** command.

min — The **min** (minimum) option is mutually exclusive with the **max** and **closest** options. When **min** is defined, the operational PIR for the queue will be equal to or greater than the administrative rate specified using the **rate** command.

closest — The **closest** parameter is mutually exclusive with the **min** and **max** parameter. When **closest** is defined, the operational PIR for the queue will be the rate closest to the rate specified using the **rate** command.

burst-limit

Syntax **burst-limit** {**default** | **size** [**byte** | **kilobyte**]}

no burst-limit

Context config>port>ethernet>access>egr>qgrp>qover>q
config>port>ethernet>access>ing>qgrp>qover>q
config>port>ethernet>network>egr>qover>q

Description The queue burst-limit command is used to define an explicit shaping burst size for a queue. The configured size defines the shaping leaky bucket threshold level that indicates the maximum burst over the queue's shaping rate.

The burst-limit command is supported under the sap-ingress and sap-egress QoS policy queues. The command is also supported under the ingress and egress queue-group-templates queues.

The **no** form of this command is used to restore the default burst limit to the specified queue. This is equivalent to specifying burst-limit default within the QoS policies or queue group templates. When specified within a queue-override queue context, any current burst limit override for the queue will be removed and the queue's burst limit will be controlled by its defining policy or template.

Parameters **default —** The default parameter is mutually exclusive to specifying an explicit size value. When burst-limit default is executed, the queue is returned to the system default value.

size — When a numeric value is specified (size), the system interprets the value as an explicit burst limit size. The value is expressed as an integer and by default is interpreted as the burst limit in Kilobytes. If the value is intended to be interpreted in bytes, the byte qualifier must be added following size.

Values 1 to 14,000 (14,000 or 14,000,000 depending on bytes or kilobytes)

Default No default for size, use the default keyword to specify default burst limit

byte — The **bytes** qualifier is used to specify that the value given for size must be interpreted as the burst limit in bytes. The byte qualifier is optional and mutually exclusive with the kilobytes qualifier.

kilobyte — The **kilobyte** qualifier is used to specify that the value given for size must be interpreted as the burst limit in Kilobytes. The kilobyte qualifier is optional and mutually exclusive with the bytes qualifier. If neither bytes nor kilobytes is specified, the default qualifier is kilobytes.

cbs

Syntax **cbs** *size-in-kbytes*
no cbs

Context config>port>ethernet>access>egr>qgrp>qover>q
config>port>ethernet>access>ing>qgrp>qover>q
config>port>ethernet>network>egr>qover>q

Description The cbs command is used to define the default committed buffer size for the template queue. Overall, the cbs command follows the same behavior and provisioning characteristics as the cbs command in the queue-group or network QoS policy. The exception is the addition of the cbs-value qualifier keywords bytes or kilobytes.

The **no** form of this command restores the default CBS size to the template queue.

Default default

Parameters *size-in-kbytes* — The size parameter is an integer expression of the number of kilobytes reserved for the queue. If a value of 10KBytes is desired, enter the value 10. A value of 0 specifies that no reserved buffers are required by the queue (a minimal reserved size can still be applied for scheduling purposes).

Values 0 to 131072 or default

high-prio-only

Syntax **high-prio-only** *percent*
no high-prio-only

Context config>port>ethernet>access>egr>qgrp>qover>q
config>port>ethernet>access>ing>qgrp>qover>q
config>port>ethernet>network>egr>qover>q

Description The **high-prio-only** command specifies the percentage of buffer space for the queue, used exclusively by high priority packets. The specified value overrides the default value for the context.

The priority of a packet can only be set in the SAP ingress QoS policy and is only applicable on the ingress queues for a SAP. The **high-prio-only** parameter is used to override the default value derived from the **network-queue** command.

The **no** form of this command restores the default high priority reserved size.

Parameters *percent* — The percentage reserved for high priority traffic on the queue. If a value of 10KBytes is desired, enter the value 10.

Values 0 to 100, default

mbs

Syntax **mbs** *size-in-kbytes*
no mbs

Context config>port>ethernet>access>egr>qgrp>qover>q
config>port>ethernet>access>ing>qgrp>qover>q
config>port>ethernet>network>egr>qgrp>qover>q

Description The Maximum Burst Size (MBS) command specifies the default maximum buffer size for the template queue. The value is given in kilobytes.

The MBS value is used by a queue to determine whether it has exhausted all of its buffers while enqueuing packets. Once the queue has exceeded the amount of buffers allowed by MBS, all packets are discarded until packets have been drained from the queue.

The **queue-group** or network egress QoS context for mbs provides a mechanism for overriding the default maximum size for the queue.

The sum of the MBS for all queues on an ingress access port can oversubscribe the total amount of buffering available. When congestion occurs and buffers become scarce, access to buffers is controlled by the RED slope a packet is associated with. A queue that has not exceeded its MBS size is not guaranteed that a buffer will be available when needed or that the packets RED slope will not force the discard of the packet. Setting proper CBS parameters and controlling CBS oversubscription is one major safeguard to queue starvation (when a queue does not receive its fair share of buffers). Another is properly setting the RED slope parameters for the needs of services on this port or channel.

This command applies to egress queue group queues as the queue-delay is only supported on egress queues. This command **the queue-delay** command are mutually exclusive.

The **no** form of this command returns the MBS size assigned to the queue to the value.

Default default

Parameters *size-in-kbytes* — The size parameter is an integer expression of the maximum number of kilobytes of buffering allowed for the queue. For a value of 100 kbps, enter the value 100. A value of 0 causes the queue to discard all packets.

Values 0 to 131072 or default

monitor-depth

Syntax [**no**] **monitor-depth**

Context config>port>eth>access>ing>qgrp>qover>q
config>port>eth>access>egr>qgrp>qover>q
config>port>ethernet>network>egr>qgrp>qover>q

Description This command enables queue depth monitoring for the specified queue. This command and the **dynamic-mbs** command are mutually exclusive on the related queue group queue.

The **no** form of the command removes queue depth monitoring for the specified queue.

rate

Syntax **rate** *pir-rate* [**cir** *cir-rate*]

no rate

Context config>port>ethernet>access>egr>qgrp>qover>q
config>port>ethernet>access>ing>qgrp>qover>q
config>port>ethernet>network>egr>qover>q

Description This command specifies the administrative Peak Information Rate (PIR) and the administrative Committed Information Rate (CIR) parameters for the queue. The PIR defines the maximum rate that the queue can transmit packets out an egress interface (for SAP egress queues). Defining a PIR does not necessarily guarantee that the queue can transmit at the intended rate. The actual rate sustained by the queue can be limited by oversubscription factors or available egress bandwidth.

The CIR defines the rate at which the system prioritizes the queue over other queues competing for the same bandwidth. In-profile then out-of-profile packets are preferentially queued by the system at egress and at subsequent next hop nodes where the packet can traverse. To be properly handled throughout the network, the packets must be marked accordingly for profiling at each hop.

The CIR can be used by the queue's parent commands *cir-level* and *cir-weight* parameters to define the amount of bandwidth considered to be committed for the child queue during bandwidth allocation by the parent scheduler.

The **rate** command can be executed at anytime, altering the PIR and CIR rates for all queues created through the association of the SAP egress QoS policy with the *queue-id*.

The **no** form of the command returns all queues created with the *queue-id* by association with the QoS policy to the default PIR and CIR parameters (**max**, 0).

Default rate max cir 0 - The **max** default specifies the amount of bandwidth in kilobits per second (thousand bits per second). The **max** value is mutually exclusive to the **pir-rate** value.

Parameters *pir-rate* — Defines the administrative PIR rate, in kilobits, for the queue. When the **rate** command is executed, a valid PIR setting must be explicitly defined. When the **rate** command has not been executed, the default PIR of **max** is assumed.
Fractional values are not allowed and must be given as a positive integer.

The actual PIR rate is dependent on the queue's **adaptation-rule** parameters and the actual hardware where the queue is provisioned.

Values 1 to 100000000, **max**

Default max

cir-rate — The **cir** parameter overrides the default administrative CIR used by the queue. When the **rate** command is executed, a CIR setting is optional. When the **rate** command has not been executed or the **cir** parameter is not explicitly specified, the default CIR (0) is assumed.
Fractional values are not allowed and must be given as a positive integer.

Values 0 to 100000000, **max**

Default 0

scheduler-policy

Syntax **scheduler-policy** *scheduler-policy-name*
no scheduler-policy

Context config>port>ethernet>access>egr>qgrp
config>port>ethernet>access>ing>qgrp
config>port>ethernet>network>egr>qgrp

Description This command associates a virtual scheduler policy with a port queue group. Scheduler policies are defined in the **config>qos>scheduler-policy** *scheduler-policy-name* context.

The **no** form of this command removes the configured ingress or egress scheduler policy from the queue-group.

Parameters *scheduler-policy-name* — The *scheduler-policy-name* parameter applies an existing scheduler policy that was created in the **config>qos>scheduler-policy** *scheduler-policy-name* context to create the hierarchy of ingress or egress virtual schedulers.

exp-secondary-shaper

Syntax **exp-secondary-shaper** {**default** | *secondary-shaper-name*} **create**
no exp-secondary-shaper *secondary-shaper-name*

Context config>port>ethernet>egress

Description This command configures the Ethernet egress expanded secondary shaper on this port.

Parameters *secondary-shaper-name* — Specifies the secondary shaper name to apply to this port.

default — Specifies the default secondary shaper to apply to this port.

create — Creates a new secondary shaper for this port.

rate

Syntax **rate** {**max** | *kilobits-per-second*}
no rate

Context config>port>ethernet>egress>exp-secondary-shaper

Description This command is used to configure the shaper's metering and optional profiling rates. The metering rate is used by the system to configure the shaper's PIR leaky bucket's decrement rat. The decrement function empties the bucket while packets applied to the bucket attempt to fill it based on the each packets size. If the bucket fills faster than how much is decremented per packet, the bucket's depth eventually reaches it's violate (PIR) threshold.

The **no** form of this command is used to restore the default metering and profiling rate to a policer.

Parameters *{max | kilobits-per-second}* — Specifying the keyword **max** or an explicit *kilobits-per-second* parameter directly following the rate command is required and identifies the policer's metering rate for the PIR leaky bucket. When the shaper is first created, the metering rate defaults to max. The *kilobits-per-second* value must be expressed as an integer and defines the rate in kilobits-per-second. The integer value is multiplied by 1,000 to derive the actual rate in bits-per-second.

Values 1 to 10000000 kbps

class

Syntax **class** *class-number* **rate** {*kilobits-per-second* | **max**} [**monitor-threshold** *size-in-kilobytes*]
no class

Context config>port>ethernet>egress>exp-secondary-shaper

Description This command assigns the low burst maximum class to associate with the Ethernet egress expanded secondary shaper.

The **no** form of the command returns the class id for the Ethernet egress expanded secondary shaper to the default value.

Parameters **class-id —** Specifies the class identifier of the low burst max class for the shaper.

Values 1 to 32

rate {*kilobits-per-second* | **max} —** Specifies the rate limit for the secondary shaper.

Values **max**, 1 to 10000000

monitor-threshold *size-in-kilobytes* **—** Specifies the monitor threshold for the secondary shaper.

Values 0 to 8190

low-burst-max-class

Syntax **low-burst-max-class class**
no low-burst-max-class

Context config>port>ethernet>egress>exp-secondary-shaper

Description This command specifies the class to associate with the Ethernet egress expanded secondary shaper.

The **no** form of the command returns the class number value for the Ethernet egress expanded secondary shaper to the default value.

Parameters **class —** Specifies the class number of the class for the secondary shaper.

Values 1 to 8

vport

Syntax **vport** *name* [**create**]
no vport *name*

Context config>port>ethernet>access>egress
config>port>sonet-sdh>path>access>egress

Description This command configures a scheduling node, referred to as virtual port, within the context of an egress Ethernet port. The Vport scheduler operates either like a port scheduler with the difference that multiple Vport objects can be configured on the egress context of an Ethernet port, or it can be an aggregate rate when an egress port-scheduler policy is applied to the port.

The Vport is always configured at the port level even when a port is a member of a LAG.

When a a port scheduler policy is applied to a Vport the following command is used:

config>port>ethernet>acess>egress>vport>port-scheduler-policy *port-scheduler-policy-name*

The CLI will not allow the user to apply a port scheduler policy to a Vport if one has been applied to the port. Conversely, the CLI will not allow the user to apply a port scheduler policy to the egress of an Ethernet port if one has been applied to any Vport defined on the access egress context of this port. The **agg-rate**, along with an egress port-scheduler, can be used to ensure that a given Vport does not oversubscribe the port's rate.

SAP and subscriber host queues can be port-parented to a Vport scheduler in a similar way they port-parent to a port scheduler or can be port-parented directly to the egress port-scheduler if the **agg-rate** is used.

Parameters *name* — Specifies the name of the Vport scheduling node and can be up to 32 ASCII characters in length. This does not need to be unique within the system but is unique within the port or a LAG.

agg-rate

Syntax [**no**] **agg-rate rate**

Context config>port>sonet-sdh>path>access>egress>vport
config>port>ethernet>access>egress>vport

Description This command configures an aggregate rate for the Vport. The agg-rate rate, port-scheduler-policy and scheduler-policy commands are mutually exclusive. Changing between the use of a scheduler policy and the use of an agg-rate/port-scheduler-policy involves removing the existing command and applying the new command.

Parameters **agg-rate —** Specifies the rate limit for the Vport.

Values 1 to 800000000, max

egress-rate-modify

Syntax [**no**] **egress-rate-modify**

Context config>port>ethernet>access>egress>vport
config>port>sonet-sdh>path>access>egress>vport

Description This command is used to apply HQoS Adjustment to a Vport. HQoS Adjustment refers to the dynamic adjustment of the rate limit at an QoS enforcement point within a Nokia router when the multicast traffic stream is disjointed from the unicast traffic stream. This QoS enforcement point within the router represents the physical point further down in the access part of the network where the two streams join each other and potentially can cause congestion.

An example would be a PON port which is shared amongst subscriber's multicast traffic (single copy of each channel) and subscriber's unicast traffic. The bandwidth control point for this PON port resides in the upstream Nokia BNG node in the form of a Vport. In the case where the multicast delivery method of the BNG utilizes redirection, the multicast traffic in the BNG will flow outside of the subscriber or the Vport context and thus will bypass any bandwidth enforcement in the Nokia router. To correct this, a Vport bandwidth adjustment is necessary in the router that will account for the multicast bandwidth consumption that is bypassing Vport in the router but is present in the PON port whose bandwidth is controlled by Vport.

An estimate of the multicast bandwidth consumption on the PON port can be made at the Vport level based on the IGMP messages sourced from the subscribers behind the PON port. This process is called HQoS Adjustment.

A multicast channel bandwidth is subtracted from or added to the Vport rate limit according to the received IGMP Join/Leave messages and the channel bandwidth definition policy associated with the Vport (indirectly through a group-interface). Since the multicast traffic on the PON port is shared amongst subscribers behind this PON port, only the first IGMP Join or the last IGMP Leave per multicast channel is tracked for the purpose of the Vport bandwidth modification.

The Vport rate that will be affected by this functionality depends on the configuration:

- In case the **agg-rate** within the Vport is configured, its value will be modified based on the IGMP activity associated with the subscriber under this Vport.
- In case the port-scheduler-policy within the Vport is referenced, the max-rate defined in the corresponding port-scheduler-policy will be modified based on the IGMP activity associated with the subscriber under this Vport.

The channel bandwidth definition policy is defined in the mcac policy in the **config>router>mcac>policy** context. The policy is applied under the group-interface or in case of redirection under the redirected-interface.

The rates in effect can be displayed with the following two commands:

show port 1/1/5 vport *name*

qos scheduler-hierarchy port *port-id* **vport** *vport-name*

The configuration of a scheduler policy under a VPORT, which is only applicable to Ethernet interfaces, is mutually exclusive with the configuration of the **egress-rate-modify** parameter.

Context: HQoS Adjustment for Vport is disabled.

host-match

Syntax **host-match dest** *description-string* [**create**]
no host-match dest *destination-string*

Context config>port>sonet-sdh>path>access>egress>vport
config>port>ethernet>access>egress>vport

Description This command specifies the destination and organization strings to be used for matching subscriber hosts with this Vport.

The parent Vport of a subscriber host queue, which has the port-parent option enabled, is determined by matching the destination string **dest** string associated with the subscriber and the organization string org string associated with the subscriber host with the strings defined under a Vport on the port associated with the subscriber.

If a given subscriber host queue does not have the port-parent option enabled, it will be foster-parented to the Vport used by this subscriber and which is based on matching the dest string and org string. If the subscriber could not be matched with a Vport on the egress port, the host queue will not be bandwidth controlled and will compete for bandwidth directly based on its own PIR and CIR parameters.

By default, a subscriber host queue with the port-parent option enabled is scheduled within the context of the port's port scheduler policy.

Parameters *description-string* — The destination character string. Allowed values are any string up to 80 characters long composed of printable, 7-bit ASCII characters. If the string contains special characters (#, $, spaces, etc.), the entire string must be enclosed within double quotes.

mon-port-sch

Syntax **mon-port-sch**
no mon-port-sch

Context config>port>ethernet
config>port>ethernet>access>egress>vport

Description This command enables congestion monitoring on an Egress Port Scheduler (EPS) that is applied to a physical port or to a Vport.

Congestion monitoring must be further configured under the port-scheduler CLI hierarchy. Once the congestion monitoring is in effect, the offered rate (incoming traffic) is compared to the configured port-scheduler congestion threshold. The results of these measurements are stored as the number of samples representing the number of times the offered rates exceeded the configured congestion threshold since the last clearing of the stats. Therefore, the results represent the number of times that the port-scheduler that is applied to a port/ Vport was congested since the last reset of the stats (via a **clear** command).

The **no** form of the command disables congestion monitoring.

Default no mon-port-sch

port-scheduler-policy

Syntax **port-scheduler-policy** *port-scheduler-policy-name*
no port-scheduler-policy

Context config>port>sonet-sdh>path>access>egress>vport
config>port>ethernet>access>egress>vport

Description This command specifies the destination and organization strings to be used for matching subscriber hosts with this Vport.

The parent Vport of a subscriber host queue, which has the port-parent option enabled, is determined by matching the destination string dest string associated with the subscriber and the organization string *org* string associated with the subscriber host with the strings defined under a Vport on the port associated with the subscriber.

If a given subscriber host queue does not have the port-parent option enabled, it will be foster-parented to the Vport used by this subscriber and which is based on matching the *dest* string and *org* string. If the subscriber could not be matched with a Vport on the egress port, the host queue will not be bandwidth controlled and will compete for bandwidth directly based on its own PIR and CIR parameters.

By default, a subscriber host queue with the port-parent option enabled is scheduled within the context of the port's port scheduler policy.

The no form of the command removes the port-scheduler-policy-name from the configuration. The **agg-rate** *rate*, **port-scheduler-policy** and **scheduler-policy** commands are mutually exclusive. Changing between the use of a scheduler policy and the use of an agg-rate/port-scheduler-policy involves removing the existing command and applying the new command.

Parameters *port-scheduler-policy-name* — Specifies an existing port-scheduler-policy configured in the config>qos context.

autonegotiate

Syntax **autonegotiate** [**limited**]

no autonegotiate

Context config>port>ethernet

Description This command enables speed and duplex autonegotiation on Fast Ethernet ports and enables far-end fault indicator support on Gb ports.

There are three possible settings for autonegotiation:

- “on” or enabled with full port capabilities advertised
- “off” or disabled where there are no autonegotiation advertisements
- “limited” where a single speed/duplex is advertised.

When autonegotiation is enabled on a port, the link attempts to automatically negotiate the link speed and duplex parameters. If autonegotiation is enabled, the configured duplex and speed parameters are ignored.

When autonegotiation is disabled on a port, the port does not attempt to autonegotiate and will only operate at the **speed** and **duplex** settings configured for the port. Note that disabling autonegotiation on Gb ports is not allowed as the IEEE 802.3 specification for Gb Ethernet requires autonegotiation be enabled for far end fault indication.

If the **autonegotiate limited** keyword option is specified the port will auto-negotiate but will only advertise a specific speed and duplex. The speed and duplex advertised are the **speed** and **duplex** settings configured for the port. One use for limited mode is for multi-speed Gb ports to force Gb operation while keeping autonegotiation enabled for compliance with IEEE 801.3.

Router requires that autonegotiation be disabled or limited for ports in a Link Aggregation Group to guarantee a specific port speed.

The **no** form of this command disables autonegotiation on this port.

Default autonegotiate

Parameters **limited —** The Ethernet interface will automatically negotiate link parameters with the far end, but will only advertise the speed and duplex mode specified by the Ethernet **speed** and **duplex** commands.

dot1q-etype

Syntax **dot1q-etype** *ethertype value*
no dot1q-etype

Context config>port>ethernet

Description This command specifies the Ethertype expected when the port's encapsulation type is dot1q. Dot1q encapsulation is supported only on Ethernet interfaces.

The **no** form of this command reverts the dot1q-etype value to the default.

Parameters *ethertype value* — Specifies the Ethertype to expect in the form 0x0600 to 0xfff.

Default If the encap-type is dot1p, then the default is 0x8100.
If the encap-type is qinq, then the default is 0x8100.

duplex

Syntax **duplex** {**full** | **half**}

Context config>port>ethernet

Description This command configures the duplex of a Fast Ethernet port when autonegotiation is disabled.

This configuration command allows for the configuration of the duplex mode of a Fast Ethernet port. If the port is configured to autonegotiate this parameter is ignored.

Default full

Parameters **full —** Sets the link to full duplex mode.

half — Sets the link to half duplex mode.

efm-oam

Syntax **efm-oam**

Context config>port>ethernet

Description This command configures EFM-OAM attributes.

accept-remote-loopback

Syntax [**no**] **accept-remote-loopback**

Context config>port>ethernet>efm-oam

Description This command enables reactions to loopback control OAM PDUs from peers.

The **no** form of this command disables reactions to loopback control OAM PDUs.

Default no accept-remote-loopback

dying-gasp-tx-on-reset

Syntax [**no**] **dying-gasp-tx-on-reset**

Context config>system>ethernet>efm-oam
config>port>ethernet>efm-oam

Description This command enables generation of the Information OAM PDU off-cycle when the soft reset notification is received by the EFM application. The local port state remains under the control of the Soft Reset application and does not change based on this EFM function. If the port is operationally up then the local node will continue to consider the port as available for service data and forwarding. If the upstream node requires notification to route around the local node undergoing the soft reset, notification must be sent to those nodes. This is a disruptive function.

This command is disabled by default at the system level and enabled by default at the port level. The combination of the system-level and port-level configuration determines if the dying gasp on soft reset function is active on individual ports. Both the system-level and port-level commands must be enabled in order to support generation of the Information OAM PDU for soft reset. If either is disabled, dying gasp is not active on those ports. This functionality must be enabled prior to the soft reset.

When both grace-tx-enable and **dying-gasp-tx-on-reset** are active on the same port, grace-tx-enable takes precedence when a soft reset is invoked if the Peer Vendor OUI being received is 00:16:4d (ALU) or the configured grace-vendor-oui value. The grace-tx-enable command should not be configured if the Nokia Vendor Specific Grace TLV is not supported on the remote peer, including Nokia 7750 SR equipment prior to release 11.0 R4.

Default config>system>ethernet>efm-oam>no dying-gasp-tx-on-reset

config>port>ethernet>efm-oam>dying-gasp-tx-on-reset

discovery

Syntax **discovery**

Context config>port>ethernet>efm-oam

Description This is the top level of the hierarchy containing various discovery parameters that allow the operator to control certain aspects of the negotiation process as well as what action to take when there is a mismatch in peer capabilities.

advertise-capabilities

Syntax **advertise-capabilities**

Context config>port<port-id>ethernet>efm-oam>discovery

Description This is the top level of the hierarchy which allows for the overriding of default advertising of capabilities to a remote peer.

link-monitoring

Syntax [**no**] **link-monitoring**

Context config>port<port-id>ethernet>efm-oam>discovery>advertise-capabilities

Description When the link monitoring function is in a no shutdown state, the Link Monitoring capability (EV) is advertised to the peer through the EFM OAM protocol. This may not be desired if the remote peer does not support the Link Monitoring functionality.

The **no** version of this command suppresses the advertisement of capabilities

Default link-monitoring

grace-tx-enable

Syntax [**no**] **grace-tx-enable**

Context config>system>ethernet>efm-oam
config>port>ethernet>efm-oam

Description Enables the sending of grace for all the enabled EFM-OAM sessions on the node. Disabled by default at the system level and enabled by default at the port level. The combination of the system level and port level configuration will determine if the grace function is enabled on the individual ports. Both the system level and the port level must be enabled in order to support grace on a specific port. If either level is disabled, grace is not enabled on those ports. Enabling grace during an active ISSU or soft reset does not invoke the grace function for the active event.

When both **grace-tx-enable** and dying-gasp-tx-on-reset are active on the same port, **grace-tx-enable** takes precedence when a soft reset is invoked if the Peer Vendor OUI being received is 00:16:4d (ALU) or the configured grace-vendor-oui value. The **grace-tx-enable** command should not be configured if the Nokia Vendor Specific Grace TLV is not supported on the remote peer, including Nokia 7750 SR equipment prior to release 11.0 R4.

The **no** form of the command disables the sending of the Nokia Vendor Specific Grace TLV.

Default config>system>ethernet>efm-oam>no grace-tx-enable

config>port>ethernet>efm-oam>grace-tx-enable

grace-vendor-oui

Syntax **grace-vendor-oui** *oui*
no grace-vendor-oui

Context config>port>ethernet>efm-oam

Description This optional command configures an additional peer vendor OUI which indicates support for the Vendor Specific EFM-OAM Grace functionality, allowing grace to be preferred over dying gasp when both are configured. This is in addition to the Nokia Vendor OUI 00:16:4d.

When both grace-tx-enable and dying-gasp-tx-on-reset are active on the same port, grace-tx-enable takes precedence when a soft reset is invoked if the Peer Vendor OUI being received is 00:16:4d (ALU) or the configured **grace-vendor-oui** value. The grace-tx-enable command should not be configured if the Nokia Vendor Specific Grace TLV is not supported on the remote peer, including Nokia 7750 SR equipment prior to release 11.0 R4.

The **no** form of the command removes the additional Vendor OUI but does not remove the Nokia 00:16:4d value.

Default no grace-vendor-oui

Parameters *oui* — Hex value in the range 00:00:00 to FF:FF:

hold-time

Syntax **hold-time** *time-value*
no hold-time

Context config>port>ethernet>efm-oam

Description This command configures efm-oam operational transition dampening timers which reduce the number of efm-oam state transitions reported to upper layers.

Default 0

Parameters *time-value* — Indicates the number of seconds that the efm-oam protocol will wait before going back to the operational state after leaving the operational state. Note that the hold-time does not apply if efm-oam moved from operational to link-fault.

A hold-time value of zero indicates that there should be no delay in transitioning to the operational state. A non-zero value will cause the efm-oam protocol to attempt to negotiate with a peer if possible, but it will remain in the send-local-remote-ok state until the hold time has expired if negotiation is successful.

If efm-oam is administratively shutdown while it was in the operational state and then re-enabled when a non-zero hold time is configured, efm-oam will attempt transition to the operational state immediately.

Values 0 to 50

ignore-efm-state

Syntax [**no**] **ignore-efm-state**

Context config>port>ethernet>efm-oam>

Description When the **ignore-efm-state** command is configured, ANY failure in the protocol state machine (discovery, configuration, timeout, loops, etc.) does not impact the state of the port. There is only be a protocol warning message on the port. If this optional command is not configured, the port state is affected by any existing EFM-OAM protocol fault condition.

Default no ignore-efm-state

link-monitoring

Syntax **link-monitoring**

Context config>port>ethernet>efm-oam

Description This context contains link monitoring specific options defining the various local thresholds, port interaction and peer notification methods. In order to activate Link monitoring function, this context must be configured with the no shutdown option. Shutting down link monitoring will clear all historical link monitoring counters. If the port was removed from service and placed in a non-operational down state and a port state of link up because a signal failure threshold was crossed and link monitoring is shutdown, the port will be returned to service assuming no underlying conditions prevent this return to service.

When the link monitoring function is in a **no shutdown** state, the Link Monitoring capability (EV) is advertised to the peer through the EFM OAM protocol. This may not be desired if the remote peer does not support the Link Monitoring functionality.

errored-frame

Syntax **errored-frame**

Context config>port>ethernet>efm-oam>link-monitoring

Description The context used to define errored frame parameters including thresholds, and windows of time to which the error count will be compared. An errored frame is counted when there is any frame error detected by the Ethernet physical layer. This excludes jumbo frames above 9192 bytes which are dropped prior to this function.

event-notification

Syntax [**no**] **event-notification**

Context config>port>ethernet>efm-oam>link-mon>errored-frame
config>port>ethernet>efm-oam>link-mon>errored-frame-period
config>port>ethernet>efm-oam>link-mon>errored-frame-seconds

Description Allows the frame error **sf-threshold** crossing events to transmit the Event Notification OAMPDU with the specific Link Event TLV information. The Event Notification OAM PDU will only be generated when the initial **sf-threshold** is reached. No subsequent notification will be sent until the event that triggered until the event is manually cleared. The burst parameter under the **local-sf-action** will determine the number of Event Notification OAMPDUs to generate when the event occurs. The reception of the event notification will be processed regardless of this parameter.

The **no** version of this command will disable the transmission of the Event Notification OAMPDU for this event type.

Default event-notification

sd-threshold

Syntax **sd-threshold** *errored-frames*
no sd-threshold

Context config>port>ethernet>efm-oam>link-mon>errored-frame

Description The option is used to define the number of errored frames within the configured window which indicates the port has gone beyond an acceptable error rate and should be considered degraded. This is a first level warning that a port may be suspect. This generates an information log event message only and will be recorded in the Port event index but has no port level actions when the error count is equal to or greater than the threshold. This value must be lower than or equal to the sf-threshold value.

The **no** value of this option disables the sd-threshold.

Default [no] sd-threshold

Parameters *errored-frames* — The number of errored frames within the configured window which indicates the port has become degraded.

Values 1 to 1,000,000

sf-threshold

Syntax **sf-threshold** *errored-frames*

Context config>port>ethernet>efm-oam>link-mon>errored-frame

Description The option is used to define the number of frame errors within the configured window which indicates the port has exceeded an acceptable error rate. A log event will be raised, and the port will be taken out of service by default. Configuration options exist to take additional actions when the error rate exceeds the threshold. These actions are defined using the **local-sf-action** configuration. This event can only be cleared through manual intervention that affects the state of the port.

Parameters *errored-frames* — The number of errored frames within the configured window which indicates the port has become unusable.

Values 1 to 1,000,000

Default 1

window

Syntax **window** *deciseconds*

Context config>port>ethernet>efm-oam>link-mon>errored-frame

Description This command defines the size of the window using a 100ms base *deciseconds*. Errors are accumulated until the end of the window. At the end of the window the actual errors are compared to the thresholds to determine if a threshold has been crossed. There is no mid-window threshold checking. The window represents a unique non-overlapping period of time.

Parameters *deciseconds* — The number of 100ms increments. Must be specified in increments of 10 (full seconds).

Values 10 to 600

Default 10

errored-frame-period

Syntax **errored-frame-period**

Context config>port>ethernet>efm-oam>link-monitoring

Description The context used to define errored frame parameters including thresholds, and windows of received packets to which the error count will be compared. An errored frame is counted when there is any frame error detected by the Ethernet physical layer. This excludes jumbo frames above 9192 bytes which are dropped prior to this function. The received packet count will be check every one second to see if the window has been reached.

sd-threshold

Syntax **sd-threshold** *errored-frames*

Context config>port>ethernet>efm-oam>link-mon>errored-frame-period

Description The option is used to define the number of errored frames within the configured window which indicates the port has gone beyond an acceptable error rate and should be considered degraded. This is a first level warning that a port may be suspect. This generates an information log event message only and will be recorded in the Port event index but has no port level actions when the error count is equal to or greater than the threshold. This value must be lower than or equal to the sf-threshold value.

The **no** value of this option disables the sd-threshold

Default [no] sd-threshold

Parameters *errored-frames* — The number of errored frames within the configured window which indicates the port has become degraded.

Values 1 to 1,000,000

sf-threshold

Syntax **sf-threshold errored-frames**

Context config>port>ethernet>efm-oam>link-mon>errored-frame-period

Description The option is used to define the number of frame errors within the configured window which indicates the port has exceeded an acceptable error rate. A log event will be raised, and the port will be taken out of service by default. Configuration options exist to take additional actions when the error rate exceeds the threshold. These actions are defined using the local-sf-action configuration. This event can only be cleared through manual intervention that affects the state of the port.

Parameters *errored-frames* — The number of errored frames within the configured window which indicates the port has become unusable.

Values 1 to 1,000,000

Default 1

window

Syntax **window** *packets*

Context config>port>ethernet>efm-oam>link-mon>errored-frame-period

Description Defines the size of the window based on a packet receive rate. The minimum serviceable rate is the number of minimum size packets that can be received in one second. The window receive count value will be polled at a minimum one second intervals to see if the window size has been reached. Errors are accumulated until the end of the window. At the end of the window the actual errors are compared to the thresholds to determine if a threshold has been crossed. There is no mid-window threshold checking. The window represents a unique non-overlapping period of time.

Parameters *packets* — The number of received packets.

Values 1 to 4,294,967,295

Default 1,488,095 (representing 1 Gb/s @ 1s)

errored-frame-seconds

Syntax **errored-frame-seconds**

Context config>port>ethernet>efm-oam>link-monitoring

Description The context used to define errored frame seconds parameters including thresholds, and windows of time to which the error count will be compared. An errored second is any second in which a single frame error occurred. An errored frame is counted when there is any frame error detected by the Ethernet physical layer. This excludes jumbo frames above 9192 bytes that are dropped prior to this function.

sd-threshold

Syntax **sd-threshold** *errored-frames*
[**no**] **sd-threshold**

Context config>port>ethernet>efm-oam>link-mon>errored-frame-seconds

Description The option is used to define the number of errored frame seconds within the configured window which indicates the port has gone beyond an acceptable error rate and should be considered degraded. This is a first level warning that a port may be suspect. This event is raised when the error count is equal to or greater than the configured threshold. This is an information log event message only and will be recorded in the Port event index but has no port level actions. This value must be lower than or equal to the sf-threshold value.

The **no** value of this option disables the sd-threshold

Default [no] sd-threshold

Parameters *errored-frames* — The number of errored seconds within the configured window which indicates the port has become degraded.

Values 1 to 900

sf-threshold

Syntax **sf-threshold** *errored-seconds*

Context config>port>ethernet>efm-oam>link-mon>errored-frame-seconds

Description The option is used to define the number of errors seconds within the configured window which indicates the port has exceeded an acceptable error rate. A log event will be raised, and the port will be taken out of service by default. Configuration options exist to take additional actions when the error rate exceeds the threshold. These actions are defined using the **local-sf-action** configuration. This event can only be cleared through manual intervention that affects the state of the port.

Parameters *errored-seconds* — The number of errored seconds within the configured window which indicates the port has become unusable.

Values 1 to 900

Default 1

window

Syntax **window** *deciseconds*

Context config>port>ethernet>efm-oam>link-mon>errored-frame-seconds

Description This command defines the size of the window using a 100ms base *deciseconds*. Errored seconds are accumulated until the end of the window. At the end of the window, the actual errors are compared to the thresholds to determine if a threshold has been crossed. There is no mid-window threshold checking. The window represents a unique non-overlapping period of time.

Parameters *deciseconds* — The number of 100 ms increments. Must be specified in increments of 10 (full seconds).

Values 1000 to 9000

Default 600

errored-symbols

Syntax **errored-symbols** *errored-symbols*

Context config>port>ethernet>efm-oam>link-monitoring

Description The context used to define symbol error parameters including thresholds, and windows of time (converted to symbols in that time) to which the error count will be compared. A symbol error occurs when any encoded symbol is in error and independent of frame counters.

event-notification

Syntax **event-notification**
[**no**] **event-notification**

Context config>port>ethernet>efm-oam>link-mon>errored-symbols

Description This command allows the symbol error event threshold crossing actions to transmit the Event Notification OAM PDU with the specific Link Event TLV information. The Event Notification OAM PDU will only be generated on the initial sf-threshold is reached. No subsequent notification will be sent until the event that triggered the notification clears, through manual intervention or a window where the configured sd-threshold is not reached. The burst parameter under the local-sf-action will determine the number of Event Notification OAM PDUs to generate when the event occurs. The reception of the event notification will be processed regardless of this parameter.

The **no** version of this command will disable the transmission of the Event Notification OAM PDU for this event type.

Default event-notification

sd-threshold

Syntax **sd-threshold e***rrored-symbols*
[**no**] **sd-threshold**

Context config>port>ethernet>efm-oam>link-mon>errored-symbols

Description This option is used to define the number of errored frames within the configured window which indicates the port has gone beyond an acceptable error rate and should be considered degraded. This is a first level warning that a port may be suspect. An event is raised when the error count is equal to or greater than this value. This is an information log event message only and will be recorded in the Port event index but has no port level actions. This value must be lower than or equal to the sf-threshold value. Specific to symbol errors, this value must be configured with the value that indicates anything less is acceptable and the port can be returned to service. If this value is not configured then manual operation is required to return the port to service.

The **no** value of this option means there is there is no automatic return to service.

Default [no] sd-threshold

Parameters *errored-symbols* — The number of errored symbols which indicates the port has become degraded.

Values 1 to1,000,000

sf-threshold

Syntax **sf-threshold** *errored-symbols*

Context config>port>ethernet>efm-oam>link-mon>errored-symbols

Description The option is used to define the number of symbol errors within the configured window which indicates the port has exceeded an acceptable error rate. A log event will be raised, and the port will be taken out of service by default. Configuration options exist to take additional actions when the error rate exceeds the threshold. These actions are defined using the local-sf-action configuration.

Parameters *errored-symbols* — The number of errored-symbols which indicates the port has become unusable.

Values 1 to 1,000,000

Default 1

window

Syntax **window** *deciseconds*

Context config>port>ethernet>efm-oam>link-mon>errored-symbols

Description Defines the size of the window using a 100ms base *deciseconds*. The time value is converted to a number of symbols for the underlying medium. Errors are accumulated until the end of the window. At the end of the window, the actual errors are compared to the thresholds to determine if a threshold has been crossed. There is no mid-window threshold checking. The window represents a unique non-overlapping period of time.

Parameters *deciseconds* — The number of 100ms increments. Must be specified in increments of 10 (full seconds).

Values 10 to 600

Default 10

shutdown

Syntax [**no**] **shutdown**

Context config>port>ethernet>efm-oam>link-monitoring

Description This command enables or disables the link monitoring function. Issuing a no shutdown will start the process. Issuing a shutdown will clear any previously established negative conditions that were a result of the link monitoring process on this port and all collected data. This also controls the advertising capabilities.

The **no** form of the command activates the link monitoring function.

Default shutdown

shutdown

Syntax [**no**] **shutdown**

Context config>port<port-id>ethernet> efm-oam>link-mon>errored-frame
config>port<port-id>ethernet>efm-oam>link-mon>errored-frame-period
config>port<port-id>ethernet>efm-oam>link-mon>errored-frame-seconds
config>port<port-id>ethernet>efm-oam>link-mon>errored-symbols

Description This command enables or disables the local counting, thresholding and actions associated with this type of local monitor. Peer received errors are not controlled by this command. Reaction to peer messaging is defined in the peer-rdi-rx hierarchy.

The **no** form of the command activates the local monitoring function and actions for the event.

Default shutdown

local-sf-action

Syntax **local-sf-action**

Context config>port>ethernet>efm-oam>link-monitoring

Description The configuration context used to define how crossing the local signal failure threshold (sf-threshold) will be handled. This includes local actions and if and how to notify the peer that the threshold has been crossed.

event-notification-burst

Syntax **event-notification-burst** *packets*

Context config>port>ethernet>efm-oam>link-mon>local-sf-action

Description The configuration parameters that define the number of the Event Notification OAM PDU to be send to the peer if the local signal failure threshold (sf-threshold) has been reached. The sending of the Event Notification OAMPDU is configured under the individual monitors.

Interactions: The **sf-thresh** threshold will trigger these actions.

Parameters *packets* — The number of Event Notification OAM PDUs to send to a peer when the signal failure threshold has been reached.

Values 1 to 5

Default 1

info-notification

Syntax **info-notification**

Context config>port>ethernet>efm-oam>link-mon>local-sf-action

Description The context allows the operator to set different flags in the Information OAM PDU. The flags can be used to notify the peer that a local signal failure threshold has been exceeded within the configured window. This is useful when the local node supports the link monitoring function, but the remote peer does not support this capability. Information OAM PDUs are sent on the interval where the Event Notification OAM PDU is typically only sent on the initial sf-threshold crossing event. It is strongly suggested one of the Information OAM PDU Flag fields used to continually communicate current monitor state to the peer.

Interactions: The signal failure threshold will trigger these actions.

dying-gasp

Syntax [**no**] **dying-gasp**

Context config>port>ethernet>efm-oam>link-mon>local-sf-action>info-notification

Description The configuration option will set the dying gasp Flag field in the Information OAM PDU when the local signal failure (sf-threshold) threshold is reached. This will be maintained in all subsequent Information OAM PDUs until the situation is cleared.

Interactions: The signal failure threshold will trigger these actions.

Default no dying-gasp

critical-event

Syntax [**no**] **critical-event**

Context config>port>ethernet>efm-oam>link-mon>local-sf-action>info-notification

Description The configuration option will set the critical event Flag field in the Information OAMPDU when the local signal failure (sf-threshold) threshold is reached. This will be maintained in all subsequent Information OAM PDUs until the situation is cleared.

Interactions: The signal failure threshold will trigger these actions.

Default no critical-event

local-port-action

Syntax **local-port-action** {**log-only** | **out-of-service**}

Context config>port>ethernet>efm-oam>link-mon>local-sf-action

Description The configuration parameters that define if and how the local port will be affected when the local signal failure threshold (**sf-threshold**) has been reached within the configured window.

Interactions: The signal failure threshold will trigger these actions.

Default local-port-action out-of-service

Parameters **log-only —** Keyword that prevents the port from being affected when the configured signal failure threshold is reach within the window. The event will be logged but the port will remain operational.

out-of-service — Keyword that causes the port to enter a non-operation down state with a port state of link up. The error will be logged when the configured signal failure threshold (**sf-threshold**) is reached within the window. The port will not be available to service data but will continue to carry Link OAM traffic to ensure the link is monitored.

mode

Syntax **mode** {**active** | **passive**}

Context config>port>ethernet>efm-oam

Description This command configures the mode of OAM operation for this Ethernet port. These two modes differ in that active mode causes the port to continually send out efm-oam info PDUs while passive mode waits for the peer to initiate the negotiation process. A passive mode port cannot initiate monitoring activities (such as loopback) with the peer.

Default active

Parameters **active —** Provides capability to initiate negotiation and monitoring activities.

passive — Relies on peer to initiate negotiation and monitoring activities.

peer-rdi-rx

Syntax **peer-rdi-rx**

Context config>port>ethernet>efm-oam

Description This container allows an action to be configured for the various event conditions that can be received from a peer under the context of the EFM OAM protocol.

critical-event

Syntax **critical-event local-port-action** {**log-only** | **out-of-service**}

Context config>port>ethernet>efm-oam>peer-rdi-rx

Description This command defines how to react to the reception of a critical event Flag field set in the informational OAMPDU.

Default critical-event local-port-action out-of-service

Parameters **local-port-action —** Defines whether or not the local port will be affected when a critical event is received from a peer.

log-only — Keyword that prevents the port from being affected when the local peer receives a critical event. The critical event will be logged but the port will remain operational.

out-of-service — Keyword that causes the port to enter a non-operation down state with a port state of link up. The error will be logged upon reception of critical event. The port will not be available to service data but will continue to carry Link OAM traffic to ensure the link is monitored.

dying-gasp

Syntax **dying-gasp local-port-action** {**log-only** | **out-of-service**}

Context config>port>ethernet>efm-oam>peer-rdi-rx

Description This command defines how to react to the reception of a dying gasp Flag field set in the informational OAMPDU.

Default dying-gasp local-port-action out-of-service

Parameters **local-port-action —** Defines whether or not the local port will be affected when a dying gasp event is received from a peer.

log-only — Keyword that prevents the port from being affected when the local peer receives a dying gasp. The dying gasp will be logged but the port will remain operational.

out-of-service — Keyword that causes the port to enter a non-operation down state with a port state of link up. The error will be logged upon reception of dying gasp. The port will not be available to service data but will continue to carry Link OAM traffic to ensure the link is monitored.

event-notification

Syntax **event-notification local-port-action** {**log-only** | **out-of-service**}

Context config>port>ethernet>efm-oam>peer-rdi-rx

Description This command defines how to react to the reception of event TLVs contained in the Event Notification OAMPDU. The event TLVs contained in the event notification OAMPDU will be analyzed to determine if the peer has crossed the error threshold for the window. The analysis does not consider any local signal degrades or signal failure threshold. The analysis is based solely on the information receive form the peer. The analysis is performed on all event TLVs contained in the Event Notification OAMPDU without regard for support of a specific error counters or local configuration of any thresholds. In the case of symbol errors only, a threshold below the error rate can be used to return the port to service.

Default event-notification local-port-action log-only

Parameters **local-port-action —** Defines whether or not the local port will be affected when the Event Notification OAM PDU is received from a peer based on the threshold computation for the included TLVs.

log-only — Keyword that prevents the port from being affected when the local peer receives a Event Notification OAM PDU. The event will be logged but the port will remain operational.

out-of-service — Keyword that causes the port to enter a non-operation down state with a port state of link up. The error will be logged upon reception of Event Notification. The port will not be available to service data but will continue to carry Link OAM traffic to ensure the link is monitored. All this assumes the error threshold exceeds the error rate in the TLV.

link-fault

Syntax **link-fault local-port-action** {**log-only** | **out-of-service**}

Context config>port>ethernet>efm-oam>peer-rdi-rx

Description This command defines how to react to the reception of a link fault flag set in the informational PDU from a peer.

Default link-fault local-port-action out-of-service

Parameters **local-port-action —** Defines whether or not the local port will be affected when a link fault is received from a peer.

log-only — Keyword that prevents the port from being affected when the local peer receives a link fault. The dying gasp will be logged but the port will remain operational.

out-of-service — Keyword that causes the port to enter a non-operation down state with a port state of link up. The error will be logged upon reception of link fault event. The port will not be available to service data but will continue to carry Link OAM traffic to ensure the link is monitored.

transmit-interval

Syntax [**no**] **transmit-interval** *interval* [**multiplier** *multiplier*]

Context config>port>ethernet>efm-oam

Description This command configures the transmit interval of OAM PDUs.

Default transmit-interval 10 multiplier 5

Parameters *interval* — Specifies the transmit interval.

Values 1 to 600 (in 100 milliseconds)

multiplier *multiplier* **—** Specifies the multiplier for transmit-interval to set local link down timer.

Values 2 to 5

trigger-fault

Syntax **trigger-fault** {**dying-gasp** | **critical-event**}
no trigger-fault

Context config>port>ethernet>efm-oam

Description This command configures the appropriate flag field in the Information OAM PDU, bursting three consecutive packets during the off cycle. If the local port state is operational, this command changes the local port state to “Link Up”. If the local port state is not operational, this configuration is installed as an EFM reason to prevent the port from returning to an Up operational state. This command can be used as a precursor to a port shutdown. This terminates the peering relationship without having to wait for protocol timeouts, assuming the peer supports the necessary action when receiving the dying gasp or critical event flag setting.

The **no** form of this command disables this functionality.

Default no trigger-fault

Parameters **dying-gasp —** Keyword to set the dying gasp flag

critical-event — Keyword to set the critical event flag

tunneling

Syntax [**no**] **tunneling**

Context config>port>ethernet>efm-oam

Description This command enables EFM OAM PDU tunneling. Enabling tunneling will allow a port mode Epipe SAP to pass OAM frames through the pipe to the far end.

The **no** form of the command disables tunneling.

Default no tunneling

egress-rate

Syntax **egress-rate** *sub-rate*
no egress-rate

Context config>port>ethernet

Description This command configures the rate of traffic leaving the network.

The **no** form of this command returns the value to the default.

Default no egress-rate

Parameters *sub-rate* — The egress rate in Kbps.

Values 1 to 10000000

encap-type

Syntax **encap-type** {**dot1q** | **null** | **qinq**}
no encap-type

Context config>port>ethernet

Description This command configures the encapsulation method used to distinguish customer traffic on an Ethernet access port, or different VLANs on a network port.

The **no** form of this command restores the default.

Default null

Parameters **dot1q —** Ingress frames carry 802.1Q tags where each tag signifies a different service.

null — Ingress frames will not use any tags to delineate a service. As a result, only one service can be configured on a port with a null encapsulation type.

qinq — Specifies QinQ encapsulation.

hold-time

Syntax **hold-time** {[**up** *hold-time up*] [**down** *hold-time down*] [**seconds** | **centiseconds**]}

no hold-time

Context config>port>ethernet

Description This command configures port link dampening timers which reduce the number of link transitions reported to upper layer protocols. The **hold-time** value is used to dampen interface transitions.

When an interface transitions from an up state to a down state, it is immediately advertised to the rest of the system if the hold-time down interval is zero, but if the hold-time down interval is greater than zero, interface down transitions are not advertised to upper layers until the hold-time down interval has expired. Likewise, an interface is immediately advertised as up to the rest of the system if the hold-time up interval is zero, but if the hold-time up interval is greater than zero, up transitions are not advertised until the hold-time up interval has expired.

For ESM SRRP setup, MCS is used to synchronizing subscriber information between the two chassis. After a chassis recovers from a power reset/down, MCS immediately synchronizes all subscriber information at once. The longer the host list, the longer it will take to synchronize the chassis. In a fully populated chassis, it is recommended to allow at least 45 minutes for MCS synchronization. It is also recommended to hold the port down, facing the subscriber, on the recovering chassis for 45 minutes before it is allowed to forward traffic again.

The **no** form of this command reverts to the default values.

Default **down 0** seconds — No port link down dampening is enabled; link down transitions are immediately reported to upper layer protocols.

up 0 seconds — No port link up dampening is enabled; link up transitions are immediately reported to upper layer protocols.

Parameters **up** *hold-time up* **—** The delay, in seconds or centiseconds, to notify the upper layers after an interface transitions from a down state to an up state.

Values 0 to 36000 seconds
0, 10 to 3600000 centiseconds in 5 centisecond increments

down *hold-time down* **—** The delay, in seconds or centiseconds, to notify the upper layers after an interface transitions from an up state to a down state.

Values 0 to 36000 seconds
0, 10 to 3600000 centiseconds in 5 centisecond increments

seconds | centiseconds — Specifies the units of your hold time in **seconds** or **centiseconds**.

hsmda-scheduler-overrides

Syntax [**no**] **hsmda-scheduler-overrides**

Context config>port>ethernet

Description This command enables the context to configure ingress and egress HSMDA scheduler override parameters. Executing hsmda-scheduler-override places the current CLI context into the egress scheduler override node either at the ingress MDA or egress port level.

Default values are listed in Table 38:

Table 38 **Default Values**

Command	Configuration
description	no description
max-rate	no max-rate
group	group 1 rate max group 2 rate max
scheduling-class	scheduling-class 1 rate max scheduling-class 2 rate max scheduling-class 3 rate max scheduling-class 4 rate max scheduling-class 5 rate max scheduling-class 6 rate max scheduling-class 7 rate max scheduling-class 8 rate max

The **no** form of the command removes the overridden parameters from the HSMDA egress port or ingress MDA scheduler. Once existing overrides are removed, the scheduler reverts all scheduling parameters back to the parameters defined on the hsmda-scheduler-policy associated with the egress port or ingress MDA.

group

Syntax **group** *group-id* **rate** *rate*
no group *group-id*

Context config>port>ethernet>hsmda

Description This command changes the maximum rate allowed for a weighted scheduling group on the local HSMDA scheduler. Scheduling classes within the group are managed with an aggregate rate limit when either an explicit group rate is defined on the HSMDA scheduling policy or a local override is defined based on the group override command.

The **no** form of the command removes the local overrides for the weighted scheduling group. Once removed, the defined behavior within the HSMDA scheduling policy for the weighted scheduling group is used.

Parameters *group-id* — Identifies the two weighted scheduling groups to be overridden.

Values 1, 2

rate — The *megabits-per-second* parameter specifies a local limit on the total bandwidth for the weighted scheduling group and overrides any rate defined in the HSMDA scheduler policy for the weighted scheduling group. The parameter is specified in Megabits per second in a base 10 context. A value of 1 equals a rate of 1000000 bits per second.

The **max** keyword removes any existing rate limit imposed by the HSMDA scheduler policy for the weighted scheduling group allowing it to use as much total bandwidth as possible.

Values 1 to 40000, max (Mbps)

max-rate

Syntax **max-rate** *rate*
no max-rate

Context config>port>ethernet>hsmda

Description This command overrides the **max-rate** parameters configured in the hsmda-scheduler-policy associated with the egress port or ingress MDA. When a **max-rate** is defined at the override level, the HSMDA scheduler policy's **max-rate** parameter is ignored.

The **hsmda-scheduler-override max-rate** command supports a **max** parameter that allows the override command to restore the default of not having a rate limit on the port scheduler. This is helpful when the HSMDA scheduler policy has an explicit maximum rate defined and it is desirable to remove this limit at the port instance.

The **no** form of the command removes the maximum rate override from the egress port or the ingress MDA scheduler context. Once removed, the max-rate parameter from the HSMDA scheduler policy associated with the port or MDA will be used by the local scheduler context.

Parameters *rate* — The **rate** parameter is mutually exclusive to specifying the **max** keyword. When executing the max-rate override command either the keyword **max** or a rate in megabits-per-second must be specified.

Values 1 to 40000000, max (Mbps)

max — The **max** keyword is mutually exclusive to specifying a **rate** in megabits-per-second. When executing the **max-rate** override command either the keyword **max** or a rate in megabits-per-second must be specified. The max keyword removes an existing rate limit from the HSMDA scheduler context.

scheduling-class

Syntax **scheduling-class** *class* **rate** *rate*

scheduling-class *class* **weight** *weight-in-group*
no scheduling-class *class*

Context config>port>ethernet>hsmda

Description This command overrides the maximum rate allowed for a scheduling class or the weight of the class within a weighted scheduling group. The scheduling-class override cannot be used to change scheduling class weighted group membership; weighted group membership may only be defined within the HSMDA scheduling policy.

Scheduling classes correspond directly to the queue-IDs used by every queue on an HSMDA. All queues with an ID of 1 associated with the scheduler are members of scheduling class 1 on the scheduler. Queues with an ID of 2 are members of scheduling class 2. This is true through scheduling class 8.

When the scheduling class is not a member of a weighted group, the scheduling-class command may be used to modify the maximum rate allowed for the scheduling class. This is done using the rate parameter followed by either the max keyword or an actual rate defined as megabits-per-second. Use the rate max combination to locally remove a rate limit defined for the class on the scheduling policy. When the rate megabits-per-second combination is used, the scheduling class defined as class-id is rate limited to the specified rate. Either the keyword max or a value for megabits-per-second must follow the rate keyword.

The rate keyword is mutually exclusive with the weight keyword. The weight keyword may only be specified when class-id is a member of a weighted scheduling group. When the weight keyword is specified, a weight value specified as weight must follow. The new weight locally overrides the weight defined for the scheduling class in the HSMDA scheduling policy.

When the scheduling-class command is executed, either the rate or weight keyword must follow.

When a scheduling class has a local rate override, the HSMDA policy associated with the override cannot move the scheduling class into a weighted scheduling group. Similarly, when a scheduling class has a local weight override, the HSMDA policy associated with the override cannot define a rate (neither max nor a megabit-per-second value) for the scheduling class. The local overrides of the scheduling class must be removed before these changes may be made.

The **no** form of the command removes the local overrides for the scheduling class. Once removed, the defined behavior for the scheduling class within the HSMDA scheduling policy will used.

Parameters *class* — Identifies the scheduling class to be being overridden.

Values 1 to 8

rate — Overrides the HSMDA scheduler policies maximum rate for the scheduling class and requires either the **max** keyword or a rate defined in megabits-per-second. In order for the **rate** keyword to be specified, the scheduling class cannot be a member of a weighted scheduling group as defined on the HSMDA scheduling policy. The **rate** keyword is mutually exclusive with the **weight** keyword. Also, either the **rate** or **weight** keyword must be specified.

The **max** keyword removes any existing rate limit imposed by the HSMDA scheduler policy for the scheduling class allowing it to use as much total bandwidth as possible.

Values 1 to 40000000, max (Mbps)

weight *weight-in-group* **—** Overrides the weighted scheduler group weight for the scheduling class as defined in the HSMDA scheduler policy. In order for the weight keyword to be specified, the scheduling class must be a member of a weighted scheduling group as defined on the HSMDA scheduling policy. A value represented by group-weight must follow the **weight** keyword. The new weight will be used to determine the bandwidth distribution for member scheduling classes within the group of which the scheduling class is a member.

Values 1 to 100

ingress-rate

Syntax **ingress-rate** *sub-rate*
no ingress-rate

Context config>port>ethernet

Description This command configures the maximum amount of ingress bandwidth that this port can receive.

The ingress-rate command is only valid for oversubscribed Ethernet MDAs. See the Oversubscribed Ethernet MDAs section for details.

The **no** form of this command returns the value to the default.

Default no ingress-rate

Parameters *sub-rate* — The egress rate in mbps.

Values 1 to 10000 mbps

lacp-tunnel

Syntax [**no**] **lacp-tunnel**

Context config>port>ethernet

Description This command enables LACP packet tunneling for the Ethernet port. When tunneling is enabled, the port will not process any LACP packets but will tunnel them instead. The port cannot be added as a member to a LAG group.

The **no** form of the command disables LACP packet tunneling for the Ethernet port.

Default no lacp-tunnel

load-balancing-algorithm

Syntax **load-balancing-algorithm** *option*
no load-balancing-algorithm

Context config>port>ethernet
config>port>sonet-sdh>path
config>port>tdm>ds1>channel-group
config>port>tdm>ds3
config>port>tdm>e1>channel-group
config>port>tdm>e3

Description This command specifies the load balancing algorithm to be used on this port.

In the default mode, **no load-balancing-algorithm**, the port inherits the global settings. The value is not applicable for ports that do not pass any traffic.

The configuration of load-balancing-algorithm at logical port level has three possible values:

- **include-l4** — Enables inherits system-wide settings including Layer 4 source and destination port value in hashing algorithm.
- **exclude-l4** — Layer 4 source and destination port value will not be included in hashing.
- **no load-balancing-algorithm** — Inherits system-wide settings.

The hashing algorithm addresses finer spraying granularity where many hosts are connected to the network. To address more efficient traffic distribution between network links (forming a LAG group), a hashing algorithm extension takes into account Layer 4 information (src/dst L4-protocol port).
The hashing index can be calculated according to the following algorithm:

If [(TCP or UDP traffic) & enabled]

hash (<TCP/UDP ports>, <IP addresses>)

else if (IP traffic)

hash (<IP addresses>)

else

hash (<MAC addresses>)

endif

This algorithm will be used in all cases where IP information in per-packet hashing is included (see LAG and ECMP Hashing). However the Layer 4 information (TCP/UDP ports) will not be used in the following cases:

- Fragmented packets

Default no load-balancing-algorithm

Parameters *option* — Specifies the load balancing algorithm to be used on this port.

Values **include-l4** — Specifies that the source and destination ports are used in the hashing algorithm.
exclude-l4 — Specifies that the source and destination ports are not used in the hashing algorithm.

pbb-etype

Syntax **pbb-etype** [*ethertype-value*]
no pbb-etype

Context config>port>ethernet

Description This command configures the Ethertype used for PBB encapsulation.

Default 0x88E7

Parameters *ethertype-value* — Specifies the Ethertype value in the form of 0x600 to 0xfff.

Values 1536 to 65535 (accepted in decimal or hex)

qinq-etype

Syntax **qinq-etype** *qinq-etype-value*
no qinq-etype

Context config>port>ethernet

Description This command configures the Ethertype used for Q-in-Q encapsulation.

The **no** form of this command reverts the qinq-etype value to the default.

Parameters *qinq-etype-value* — Specifies the qinq-etype to expect in the form of 0x600 to 0xfff.

Values 1536 to 65535 in decimal or hex formats

report-alarm

Syntax [**no**] **report-alarm** [**signal-fail**] [**remote**] [**local**] [**no-frame-lock**] [**lcd**]

Context config>port>ethernet

Description This command specifies when and if to generate alarms and alarm clear notifications for this port.

Parameters **signal-fail —** Reports an Ethernet signal lost alarm.

remote — Reports remote faults.

local — Reports local faults.

no-frame-lock — Reports a 'not locked on the Ethernet framing sequence' alarm.

lcd — Reports a codegroup delineation error.

sflow

Syntax [**no**] **sflow**

Context config>port>ethernet

Description This command enables sFlow data collection for a port and its SAPs that support sFlow data collection.

The **no** form of this of this command disables sFlow.

Default no sflow

single-fiber

Syntax [**no**] **single-fiber**

Context config>port>ethernet

Description This command enables packet gathering and redirection of IP packets from a single fiber (RX) port of the Ethernet or SONET/SDH interface and redistributes packets to other interfaces through either static routes or policy-based forwarding.

This parameter can be applied in conjunction with the strip-label command. If they are applied together, the port must have the single-fiber option configured before it can be associated with an interface that is configured with the strip-label option.

Once a port is configured with single-fiber, traffic will no longer be transmitted out of that port.

Default no single-fiber

speed

Syntax **speed** {**10** | **100** | **1000**}

Context config>port>ethernet

Description This command configures the port speed of a Fast Ethernet port when autonegotiation is disabled. If the port is configured to autonegotiate this parameter is ignored. Speed cannot be configured for ports that are part of a Link Aggregation Group (LAG).

Default 100

Parameters **10 —** Sets the link to 10 mbps speed.

100 — Sets the link to 100 mbps speed.

1000 — Sets the link to 1000 mbps speed.

ssm

Syntax **ssm**

Context config>port>ethernet

Description This command enables the Ethernet Synchronization Messaging Channel (ESMC) for the Ethernet port. ESMC carries the Synchronization Status Message (SSM) code representing the quality level of the source of frequency of the central clock of the node.

code-type

Syntax **code-type** [**sonet** | **sdh**]

Context config>port>ethernet>ssm

Description This command configures the encoding of synchronization status messages. For example, whether to use an SDH or SONET set of values. Configuring the network-type is only applicable to SyncE ports. It is not configurable on SONET/SDH ports. For the network-type, sdh refers to ITU-T G.781 Option I, while sonet refers to G.781 Option II (equivalent to Telcordia GR-253-CORE).

Default sdh

Parameters **sdh —** Specifies the values used on a G.781 Option 1 compliant network.

sonet — Specifies the values used on a G.781 Option 2 compliant network.

tx-dus

Syntax [**no**] **tx-dus**

Context config>port>ethernet>ssm
config>port>sonet-sdh

Description This command forces the QL value transmitted from the SSM channel of the SONET/SDH port or the Synchronous Ethernet port to be set to QL-DUS/QL-DNU. This capability is provided to block the use of the interface from the SR/ESS for timing purposes.

Default no tx-dus

symbol-monitor

Syntax **symbol-monitor**

Context config>port>ethernet

Description This command configures Ethernet Symbol Monitoring parameters. Support for symbol monitoring is hardware dependent. An error message indicating that the port setting cannot be modified will be presented when attempting to enable the feature or configure the individual parameters on unsupported hardware.

sd-threshold

Syntax **sd-threshold threshold** [**multiplier** *multiplier*]
no sd-threshold

Context config>port>ethernet>sym-mon

Description This command specifies the error rate at which to declare the Signal Degrade condition on an Ethernet interface. The value represents M*10E-N a ratio of symbol errors over total symbols received over W seconds of the sliding window. The symbol errors on the interface are sampled once per second. A default of 10 seconds is used when there is no additional window-size configured. The multiplier keyword is optional. If the multiplier keyword is omitted or no sd-threshold is specified the multiplier will return to the default value of 1.

Default no sd-threshold

Parameters **threshold —** Specifies the rate of symbol errors.

Values 1 to 9

multiplier *multiplier* **—** Specifies the multiplier used to scale the symbol error ratio.

Values 1 to 9

sf-threshold

Syntax **sf-threshold threshold** [**multiplier** *multiplier*]
no sf-threshold

Context config>port>ethernet>sym-mon

Description This command specifies the error rate at which to declare the Signal Fail condition on an Ethernet interface. The value represents M*10E-N symbol errors over total symbols received over W seconds of the sliding window. The symbol errors on the interface are sampled once per second. A default of 10 seconds is used when there is no additional window-size configured. The multiplier keyword is optional. If the multiplier keyword is omitted or no sf-threshold is specified the multiplier will return to the default value of 1.

Default no sf-threshold

Parameters **threshold —** Specifies the rate of symbol errors.

Values 1 to 9

multiplier *multiplier* **—** Specifies the multiplier used to scale the symbol error ratio.

Values 1 to 9

window-size

Syntax **window-size** *seconds*
no window-size

Context config>port>ethernet>sym-mon

Description This command specifies sliding window size over which the symbols are sampled to detect signal failure or signal degraded conditions.

Default 10

Parameters *seconds* — Specifies the size of the sliding window in seconds over which the errors are measured.

Values 5 to 60

xgig

Syntax **xgig** {**lan** | **wan**}

Context config>port>ethernet

Description This command configures a 10 Gb/s interface to be in Local or Wide Area Network (LAN or WAN) mode. When configuring the port to be in WAN mode certain SONET/SDH parameters can be changed to reflect the SONET/SDH requirements for this port.

When the port is configured for LAN mode, all SONET/SDH parameters are pre-determined and not configurable.

Default lan

Parameters **lan —** Sets the port to operate in LAN mode

wan — Sets the port to operate in WAN mode.

crc-monitor

Syntax **crc-monitor**

Context config>port>ethernet

Description This command configures Ethernet CRC Monitoring parameters.

Default n/a

sd-threshold

Syntax **sd-threshold** *threshold* [**multiplier** *multiplier*]
no sd-threshold

Context config>port>ethernet>crc-monitor

Description This command specifies the error rate at which to declare the Signal Degrade condition on an Ethernet interface. The value represents M*10E-N a ratio of errored frames over total frames received over W seconds of the sliding window. The CRC errors on the interface are sampled once per second. A default of 10 seconds is used when there is no additional window-size configured. The multiplier keyword is optional. If the multiplier keyword is omitted or **no sd-threshold** is specified the multiplier will return to the default value of 1.

Default no sd-threshold

Parameters **value** *threshold* **—** Specifies specifies the threshold value.

Values 1 to 9

value *multiplier* **—** Specifies specifies the multiplier value.

Values 1 to 9

sf-threshold

Syntax **sf-threshold** *threshold* [**multiplier** *multiplier*]
no sf-threshold

Context config>port>ethernet>crc-monitor

Description This command specifies the error rate at which to declare the Signal Fail condition on an Ethernet interface. The value represents M*10E-N errored frames over total frames received over W seconds of the sliding window. The CRC errors on the interface are sampled once per second. A default of 10 seconds is used when there is no additional window-size configured. The multiplier keyword is optional. If the multiplier keyword is omitted or **no sf-threshold** is specified the multiplier will return to the default value of 1.

Default no sf-threshold

Parameters **value** *threshold* **—** Specifies specifies the threshold value.

Values 1 to 9

value *multiplier* **—** Specifies specifies the multiplier value.

Values 1 to 9

window-size

Syntax **window-size** *seconds*
no window-size

Context config>port>ethernet>crc-monitor

Description This command specifies sliding window size over which the Ethernet frames are sampled to detect signal fail or signal degrade conditions. The command is used jointly with the sf-threshold and the sd-threshold to configure the sliding window size.

Default 10

Parameters *seconds* — The size of the sliding window in seconds over which the errors are measured.

Values 1 to 10

down-on-internal-error

Syntax **down-on-internal-error** [**tx-disable**]
no down-on-internal-error

Context config>port>ethernet

Description This command configures the system to bring a port operationally down in the event the system has detected internal MAC transmit errors (Int MAC Tx Errs).

Default no down-on-internal-error

Parameters **tx-disable —** Specifies that the laser should be disabled if an internal MAC transmit error is encountered. When used, this option requires that the operator explicitly cycle the admin state of the port to clear the error and re-enable the laser.

single-fiber

Syntax [**no**] **single-fiber**

Context config>port>ethernet
config>port>sonet-sdh

Description This command enables packet gathering and redirection of IP packets from a single fiber (RX) port of the Ethernet or SONET/SDH interface and redistributes packets to other interfaces through either static routes or policy-based forwarding.

This parameter can be applied in conjunction with the strip-label command. If they are applied together, the port must have the single-fiber option configured before it can be associated with an interface that is configured with the strip-label option.

Once a port is configured with single-fiber, traffic will no longer be transmitted out of that port. This command can be used in conjunction with strip-label.

Default no single-fiber

2.25.2.14 802.1x Port Commands

max-auth-req

Syntax **max-auth-req** *max-auth-request*

Context config>port>ethernet>dot1x

Description This command configures the maximum number of times that the router will send an access request RADIUS message to the RADIUS server. If a reply is not received from the RADIUS server after the specified number attempts, the 802.1x authentication procedure is considered to have failed.

The **no** form of this command returns the value to the default.

Default 2

Parameters *max-auth-request* — The maximum number of RADIUS retries.

Values 1 to 10

port-control

Syntax **port-control** [**auto** | **force-auth** | **force-unauth**]

Context config>port>ethernet>dot1x

Description This command configures the 802.1x authentication mode.

The **no** form of this command returns the value to the default.

Default force-auth

Parameters **force-auth —** Disables 802.1x authentication and causes the port to transition to the authorized state without requiring any authentication exchange. The port transmits and receives normal traffic without requiring 802.1x-based host authentication.

force-unauth — Causes the port to remain in the unauthorized state, ignoring all attempts by the hosts to authenticate. The switch cannot provide authentication services to the host through the interface.

auto — Enables 802.1x authentication. The port starts in the unauthorized state, allowing only EAPOL frames to be sent and received through the port. Both the router and the host can initiate an authentication procedure. The port will remain in un-authorized state (no traffic except EAPOL frames is allowed) until the first client is authenticated successfully. After this, traffic is allowed on the port for all connected hosts.

quiet-period

Syntax **quiet-period** *seconds*
no quiet-period

Context config>port>ethernet>dot1x

Description This command configures the period between two authentication sessions during which no EAPOL frames are sent by the router.

The **no** form of this command returns the value to the default.

Default 30

Parameters *seconds* — Specifies the quiet period in seconds.

Values 1 to 3600

radius-plcy

Syntax **radius-plcy** *name*
no radius-plcy

Context config>port>ethernet>dot1x

Description This command configures the RADIUS policy to be used for 802.1x authentication. An 802.1x RADIUS policy must be configured (under config>security>dot1x) before it can be associated to a port. If the RADIUS policy-id does not exist, an error is returned. Only one 802.1x RADIUS policy can be associated with a port at a time.

The **no** form of this command removes the RADIUS policy association.

Default no radius-plcy

Parameters *name* — Specifies an existing 802.1x RADIUS policy name.

re-auth-period

Syntax **re-auth-period** *seconds*
no re-auth-period

Context config>port>ethernet>dot1x

Description This command configures the period after which re-authentication is performed. This value is only relevant if re-authentication is enabled.

The **no** form of this command returns the value to the default.

Default 3600

Parameters *seconds* — Specifies the re-authentication delay period in seconds.

Values 1 to 9000

re-authentication

Syntax [**no**] **re-authentication**

Context config>port>ethernet>dot1x

Description This command enables/disables periodic 802.1x re-authentication.

When re-authentication is enabled, the router will re-authenticate clients on the port every re-auth-period seconds.

The **no** form of the command returns the value to the default.

Default re-authentication

server-timeout

Syntax **server-timeout** *seconds*
no server-timeout

Context config>port>ethernet>dot1x

Description This command configures the period during which the router waits for the RADIUS server to responds to its access request message. When this timer expires, the router will re-send the access request message, up to the specified number times.

The **no** form of this command returns the value to the default.

Default 30

Parameters *seconds* — Specifies the server timeout period in seconds.

Values 1 to 300

supplicant-timeout

Syntax **supplicant-timeout** *seconds*
no supplicant-timeout

Context config>port>ethernet>dot1x

Description This command configures the period during which the router waits for a client to respond to its EAPOL messages. When the supplicant-timeout expires, the 802.1x authentication session is considered to have failed.

The **no** form of this command returns the value to the default.

Default 30

Parameters *seconds* — Specifies the server timeout period in seconds.

Values 1 to 300

transmit-period

Syntax **transmit-period** *seconds*
no transmit-period

Context config>port>ethernet>dot1x

Description This command configures the period after which the router sends a new EAPOL request message.

The **no** form of this command returns the value to the default.

Default 30

Parameters *seconds* — Specifies the server transmit period in seconds.

Values 1 to 300

tunneling

Syntax **tunneling**
no tunneling

Context config>port>ethernet>dot1x

Description This command enables the tunneling of untagged 802.1x frames received on a port and is supported only when the dot1x port-control is set to force-auth. 802.1x tunneling is applicable to both Epipe and VPLS services using either a null SAP or a default SAP on a dot1q port. When configured, untagged 802.1x frames will be switched into the service with the corresponding supported SAP.

The **no** form of this command disables tunneling of untagged 802.1x frames.

Default no tunneling

down-when-looped

Syntax **down-when-looped**

Context config>port>ethernet

Description This command configures Ethernet loop detection attributes.

dot1x

Syntax **dot1x**

Context config>port>ethernet

Description This command enables access to the context to configure port-specific 802.1x authentication attributes. This context can only be used when configuring a Fast Ethernet, gigabit or 10Gig Ethernet LAN ports on an appropriate MDA.

keep-alive

Syntax **keep-alive** *timer*
no keep-alive

Context config>port>ethernet>dwl

Description This command configures the time interval between keep-alive PDUs.

Default no keep-alive

Parameters *timer* — Specifies the time interval, in seconds, between keep-alive PDUs.

Values 1 to 120

retry-timeout

Syntax **retry-timeout** *timer*
no retry-timeout

Context config>port>ethernet>dwl

Description This command configures the minimum wait time before re-enabling port after loop detection.

Default no retry-timeout

Parameters *timer* — Specifies the minimum wait time before re-enabling port after loop detection.

Values 0, 10 to 160

use-broadcast-address

Syntax [**no**] **use-broadcast-address**

Context config>port>ethernet>dwl

Description This command specifies whether or not the down when looped destination MAC address is the broadcast address, or the local port MAC address, as specified in the port's MAC address.

2.25.2.15 LLDP Port Commands

lldp

Syntax **lldp**

Context config>port>ethernet

Description This command enables the context to configure Link Layer Discovery Protocol (LLDP) parameters on the specified port.

dest-mac

Syntax **dest-mac** {*bridge-mac*}

Context config>port>ethernet>lldp

Description This command configures destination MAC address parameters.

Parameters **bridge-mac —** Specifies destination bridge MAC type to use by LLDP.

Values

nearest-bridge	Specifies to use the nearest bridge.
nearest-non-tpmr	Specifies to use the nearest non-Two-Port MAC Relay (TPMR).
earest-customer	Specifies to use the nearest customer.

admin-status

Syntax **admin-status** {**rx** | **tx** | **tx-rx** | **disabled**}

Context config>port>ethernet>lldp>dstmac

Description This command configures LLDP transmission/reception frame handling.

Parameters **rx —** Specifies the LLDP agent will receive, but will not transmit LLDP frames on this port.

tx — Specifies that the LLDP agent will transmit LLDP frames on this port and will not store any information about the remote systems connected.

tx-rx — Specifies that the LLDP agent transmits and receives LLDP frames on this port.

disabled — Specifies that the LLDP agent does not transmit or receive LLDP frames on this port. If there is remote systems information which is received on this port and stored in other tables, before the port's admin status becomes disabled, then the information will naturally age out.

notification

Syntax [**no**] **notification**

Context config>port>ethernet>lldp>dstmac

Description This command enables LLDP notifications.

The **no** form of the command disables LLDP notifications.

portid-subtype

Syntax **portid-subtype** {**tx-if-alias** | **tx-if-name** | **tx-local**}

Context config>port>ethernet>lldp>dstmac

Description This command specifies how to encode the PortID TLV transmit to the peer. Some releases of the 5620 SAM require the PortID value require the default if-Alias in order to properly build the Layer Two topology map using LLDP. Selecting a different option will impact the 5620 SAM's ability to build those Layer Two topologies.

Default portid-subtype tx-local

Parameters **tx-if-alias —** Transmits the ifAlias String (subtype 1) that describes the port as stored in the IF-MIB, either user configured or the default entry (i.e. 10/100/Gig Ethernet SFP)

tx-if-name — Transmits the ifName string (subtype 5) that describes the port as stored in the IF-MIB ifName info.

tx-local — The interface ifIndex value (subtype 7) as the PortID

tunnel-nearest-bridge

Syntax [**no**] **tunnel-nearest-bridge**

Context config>port>ethernet>lldp>dstmac

Description The command allows LLDP packets received on the port with the destination address of the nearest bridge to be tunneled without being intercepted on the local port. The dest-mac nearest-bridge must be disable for tunneling to occur. This is applicable to NULL SAP ePipe and VPLS services only.

tx-mgmt-address

Syntax **tx-mgmt-address** [**system**] [**system-ipv6**]
no tx-mgmt-address

Context config>port>ethernet>lldp>dstmac

Description This command specifies which management address to transmit. The operator can choose to send the system IPv4 IP Address, the system IPv6 address or both. Note the system address will only be sent once. When both options are configured both system addresses are sent. The system address must be configured for the specific version of the protocol in order to sent the management address.

Default no tx-mgmt-address

Parameters **system —** Specifies to use the system IPv4 address.

system-ipv6 — Specifies to use the system IPv6 address.

tx-tlvs

Syntax **tx-tlvs** [**port-desc**] [**sys-name**] [**sys-desc**] [**sys-cap**]
no tx-tlvs

Context config>port>ethernet>lldp>dstmac

Description This command specifies which LLDP TLVs to transmit. The TX TLVS, defined as a bitmap, includes the basic set of LLDP TLVs whose transmission is allowed on the local LLDP agent by the network management. Each bit in the bitmap corresponds to a TLV type associated with a specific optional TLV. Organizationally-specific TLVs are excluded from the this bitmap.

There is no bit reserved for the management address TLV type since transmission of management address TLVs are controlled by another object.

The **no** form of the command resets the value to the default.

Default no tx-tlvs

Parameters **port-desc —** Indicates that the LLDP agent should transmit port description TLVs.

sys-name — Indicates that the LLDP agent should transmit system name TLVs.

sys-desc — Indicates that the LLDP agent should transmit system description TLVs.

sys-cap — Indicates that the LLDP agent should transmit system capabilities TLVs.

2.25.2.16 Network Port Commands

network

Syntax **network**

Context config>port>ethernet
config>port>sonet-sdh>path
config>port>tdm>ds1
config>port>tdm>ds3
config>port>tdm>e1
config>port>tdm>e3

Description This command enables access to the context to configure network port parameters.

accounting-policy

Syntax **accounting-policy** *policy-id*
no accounting-policy

Context config>port>ethernet>access>egr>qgrp
config>port>ethernet>access>ing>qgrp
config>port>ethernet>network>egr>qgrp
config>port>ethernet>network
config>port>sonet-sdh>path>network
config>port>tdm>ds1>network
config>port>tdm>ds3>network
config>port>tdm>e1>network
config>port>tdm>e3>network

Description This command configures an accounting policy that can apply to an interface.

An accounting policy must be configured before it can be associated to an interface. If the accounting *policy-id* does not exist, an error is returned.

Accounting policies associated with service billing can only be applied to SAPs. Accounting policies associated with network ports can only be associated with interfaces. Only one accounting policy can be associated with an interface at a time.

The **no** form of this command removes the accounting policy association from the network interface, and the accounting policy reverts to the default.

Default No accounting policies are specified by default. You must explicitly specify a policy. If configured, the accounting policy configured as the default is used.

Parameters *policy-id* — The accounting *policy-id* of an existing policy. Accounting policies record either service (access) or network information. A network accounting policy can only be associated with the network port configurations. Accounting policies are configured in the **config>log>accounting-policy** context.

Values 1 to 99

collect-stats

Syntax [**no**] **collect-stats**

Context config>port>ethernet>access>egr>qgrp
config>port>ethernet>access>ing>qgrp
config>port>ethernet>network>egr>qgrp
config>port>ethernet>network
config>port>ethernet
config>port>sonet-sdh>path>network
config>port>tdm>ds3>network
config>port>tdm>e1>network
config>port>tdm>e3>network

Description This command enables the collection of accounting and statistical data for the network interface. When applying accounting policies, the data, by default, is collected in the appropriate records and written to the designated billing file.

When the **no collect-stats** command is issued, the statistics are still accumulated by the XCM/IOM cards, however, the CPU does not obtain the results and write them to the billing file.
If the **collect-stats** command is issued again (enabled), then the counters written to the billing file will include the traffic collected while the **no collect-stats** command was in effect.

Default no collect-stats

queue-policy

Syntax **queue-policy** *name*
no queue-policy

Context config>port>ethernet>network
config>port>sonet-sdh>path>network
config>port>tdm>ds1>network
config>port>tdm>ds1>network
config>port>tdm>ds3>network
config>port>tdm>e1>network
config>port>tdm>e3>network

Description This command specifies the existing network queue policy which defines queue parameters such as CBS, high priority only burst size, MBS, CIR and PIR rates, as well as forwarding-class to queue mappings. The network-queue policy is defined in the **config>qos>network-queue** context.

Default default

Parameters *name* — Specifies an existing network-queue policy name.

2.25.2.17 Interface Group Handler Commands

interface-group-handler

Syntax [**no**] **interface-group-handler** *group-id*

Context config

Description This command creates an interface group handler that can be associated with a number of independent IP links. The purpose of the group is to operationally disable all interfaces in a common group if the number of active links drops below the minimum interface threshold.

The **no** form of this command deletes the interface group handler. All members must be removed before the IGH can be deleted.

Default n/a

Parameters *group-id* — Identifies the specific Interface Group Handler.

Values 1 to 100

member

Syntax [**no**] **member** *portid*

Context config>interface-group-handler

Description This command binds the specified port with the associate Interface Group Handler. Up to eight **member** commands can be issued to add multiple ports to the associated IGH. The **member** must be a port or channel on a SONET or POS MDA. It must be a physical port or channel in network mode, and not bound to any router interfaces. A port or channel cannot be a member of more than one IGH at the same time. MLPPP bundles and their members cannot be IGH members.

The **no** form of this command removes the specified port ID from the associated IGH.

Default n/a

Parameters *portid* — Identifies the port to be associated with the interface group handler.

threshold

Syntax **threshold** *min*
no threshold

Context config>interface-group-handler

Description This command identifies the minimum number of active links that must be present for the interface group handler to be active. A threshold of 1 effectively disables the effect of the interface group handler.

The **no** form of this command resets the threshold to 1.

Note that for APS configurations, if the ber-sd or ber-sf threshold rates must be modified, the changes must be performed at the line level on both the working and protect APS port member.

Default n/a

Parameters *min* — Specifies the minimum number of active links that must be present for the interface group handler to be active.

Values 1 to 8

2.25.2.18 Multilink-Bundle Port Commands

The following Multilink-Bundle Port commands are supported on the 7750 SR only.

multilink-bundle

Syntax [**no**] **multilink-bundle**

Context config>port

Description This command creates the context to configure bundle properties for this bundle port.

Default n/a

fragment-threshold

Syntax **fragment-threshold** *fragment-threshold*
fragment-threshold unlimited
no fragment-threshold

Context config>port>multilink-bundle

Description This command sets the maximum length in bytes of a fragment transmitted across a multilink bundle.

The **no** form of this command resets the fragment threshold back to the default value.

Default 128

Parameters *fragment-threshold* — Specify the maximum fragment length, in bytes, to be transmitted across a multilink bundle. Note that the value range is dependent on the MDA type. For example: channelized MDAs, such as the m1-choc12-sfp, m4-choc3-sfp, m12-chds3, and m4-chds3, support values of 128, 256, 512; ASAP channelized MDAs support any value in the valid range.

Values 128 to 512 bytes inclusive for MLPPP and MLFR bundles
128 bytes for IMA bundles

unlimited — This keyword disables fragmentation (MLPPP and MLFR only).

interleave-fragments

Syntax [**no**] **interleave-fragments**

Context config>port>multilink-bundle

Description This command enables Link Fragmentation and Interleaving on the multilink bundle.

The **no** form of this command disables Link Fragmentation and Interleaving on the multilink bundle.

member

Syntax [**no**] **member** *port-id*

Context config>port>multilink-bundle

Description This command binds a channel group to a multilink bundle. For IMA and MLFR groups, this command binds a channel group filling up the entire DS-1 or E-1. For MLPPP groups, fractional (n x ds0) DS1 or E1 links are also allowed. However, fractional DS1 links and fractional E1 links may not be combined in the same multilink bundle. If a channel with a different number of timeslots than the primary-link member is added to the bundle, a warning will be provided.

The **no** form of this command removes the specified channel group from the multilink bundle.

Default n/a

Parameters *port-id* — Specifies the physical port ID in the following format:

port-id	*slot*/*mda*/*port*.*channel*		
	eth-sat-id	esat-*id*/*slot*/*port*	
		esat	keyword
		id	1 to 20
	pxc-id	pxc-*id*.*sub-port*	
		pxc	keyword
		id	1 to 64
		sub-port	a, b

minimum-links

Syntax **minimum-links** *minimum-links*
no minimum-links

Context config>port>multilink-bundle

Description This command sets the minimum number of links that must be active for the bundle to be active.

If the number of active links drops below the configured minimum then the multilink bundle will transition to an operationally down state.

The **no** form of this command removes the minimum link limit.

Default 1

Parameters *minimum-link* — Specifies the minimum link limit, expressed as an integer.

Values 1 to 8

mlfr

Syntax **mlfr**

Context config>port>multilink-bundle

Description This command enables the context to configure a Multi-link Frame Relay (MLFR) bundle.

identifier

Syntax [**no**] **identifier** *bundle-id-string*

Context config>port>ml-bundle>mlfr

Description This command defines the identifier for the MLFR bundle. The **no** form of this command resets the value to null.

Default null

Parameters *bundle-id string* — Specifies the bundle ID string.

identifier

Syntax [**no**] **identifier** *frf16-link-id-string*

Context config>port>tdm>channel-group>frame-relay

Description This command defines the identifier for a frame-relay link when used in an MLFR bundle. The **no** form of this command resets the value to null.

Default null

Parameters *frf16-link-id-string* — Specifies the bundle ID string.

ingress

Syntax **ingress**

Context config>port>ml-bundle>mlfr

Description This command enables the context to configure the ingress QoS profile for the MLFR bundle.

egress

Syntax **egress**

Context config>port>ml-bundle>mlfr
config>port>tdm>ds1>channel-group>frame-relay>frf-12
config>port>tdm>e1>channel-group>frame-relay>frf-12
config>port>tdm>ds3>frame-relay>frf-12

config>port>tdm>e3>frame-relay>frf-12
config>port>sonet-sdh>path>frame-relay>frf-12

Description This command enables the context to configure the egress QoS profile for an MLFR bundle or a Frame Relay port with FRF.12 UNI/NNI fragmentation enabled.

qos-profile

Syntax **qos-profile** *profile-id*
no qos-profile

Context config>port>ml-bundle>mlfr>ingress
config>port>ml-bundle>mlfr>egress
config>port>tdm>channel-group>frame-relay>egress
config>port>sonet-sdh>path>frame-relay>egress

Description This command specifies the ingress or egress QoS profile to be used for the configuration of the ingress or egress QoS parameters of an MLFR bundle or a Frame Relay port with FRF.12 UNI/NNI fragmentation enabled. Note that qos-profile on ingress is only applicable to MLFR.

The no form of the command removes the parameters from the configuration.

Parameters *profile-id* — Specifies the profile number. The value can only be modified if the MLFR bundle or FR port is shut down.

Values 1 to 128

frame-relay

Syntax **frame-relay**

Context config>port>ml-bundle>mlfr

Description This command configures the Frame Relay parameters.

lmi-type

Syntax **lmi-type** {**ansi** | **itu** | **none** | **rev1**}

Context config>port>multi-link-bundle>mlfr>frame-relay

Description This command configures the LMI type.

Parameters **ansi —** Use ANSI T1.617 Annex D.

itu — Use ITU-T Q933 Annex A.

none — Disable Frame Relay LMI on the given bundle.

rev1 — Use the Rev 1 version of ANSI T1.617 Annex D.

mode

Syntax **mode** {**dce** | **dte** | **bidir**}

Context config>port>ml-bundle>mlfr>frame-relay

Description This command configures the DCE/DTE mode of the Frame Relay interface.

Parameters **dce** — Enables the DCE mode.

dte — Enables the DTE mode.

bidir — Enables the bidirectional mode for LMI types ANSI and ITU.

n391dte

Syntax **n391dte** *intervals*
no n391dte

Context config>port>ml-bundle>mlfr>frame-relay

Description This command configures the number of DTE full status polling intervals for the LMI.

Parameters *intervals* — The number of exchanges to be done before requesting a full-status report. A value of 1 specifies to receive full-status messages only.

Values 1 to 255

n392dce

Syntax **n392dce** *threshold*
no n392dce

Context config>port>ml-bundle>mlfr>frame-relay

Description This command configures the DCE error threshold for the LMI.

Default 3

Parameters *threshold* — Specifies the number of errors that will place the bundle in an operationally down state.

Values 1 to 10

n392dte

Syntax **n392dte** *threshold*
no n392dte

Context config>port>ml-bundle>mlfr>frame-relay

Description This command configures the DTE error threshold for the LMI.

Parameters *count* — Specifies the number of errors that will place the bundle in an operationally down state.

Values 1 to 10

n393dce

Syntax **n393dce** *count*
no n393dce

Context config>port>ml-bundle>mlfr>frame-relay

Description This command configures the DCE monitored event count for the LMI.

Parameters *count* — Specifies the diagnostic window used to verify link integrity on the DCE interface.

Values 1 to 10

n393dte

Syntax **n393dte** *count*
no n393dte

Context config>port>ml-bundle>mlfr>frame-relay

Description This command configures the DTE monitored event count for the LMI.

Parameters *count* — Specifies the diagnostic window used to verify link integrity on the DTE interface.

Values 1 to 10

t391dte

Syntax **t391dte** *keepalive*
no t391dte

Context config>port>ml-bundle>mlfr>frame-relay

Description This command configures the DTE keepalive timer value for the LMI.

Parameters *keepalive* — Specifies the interval in seconds between status inquiries issued by the DTE.

Values 5 to 30

t392dce

Syntax **t392dce** *keepalive*
no t392dce

Context config>port>ml-bundle>mlfr>frame-relay

Description This command configures the DCE keepalive timer value for the LMI.

Parameters *keepalive* — Specifies the expected interval in seconds between status inquiries issued by the DTE equipment.

Values 5 to 30

hello-timeout

Syntax **hello-timeout** *seconds*
no hello-timeout

Context config>port>multilink-bundle<mlfr

Description This command specifies the value of the MLFR bundle T_HELLO timer. The timer controls the rate that hello messages are sent. Following a period of T_HELLO duration, a HELLO message is transmitted onto the bundle link.

Note that T_HELLO timer is also used during the bundle link add process as an additional delay before resending an ADD_LINK message to the peer bundle link when the peer bundle link does not answer as expected.

Default 10 seconds

Parameters *seconds* — Specifies the amount of time between HELLO messages in seconds.

Values 1 to 180

ack-timeout

Syntax **ack-timeout** *seconds*
no ack-timeout

Context config>port>ml-bundle>mlfr

Description This command specifies the value of the MLFR bundle T_ACK timer.

This timer defines the maximum period to wait for a response to any message sent onto the bundle link before attempting to retransmit a message onto the bundle link.

Default 4 seconds

Parameters *seconds* — Specifies the wait period in seconds.

Values 1 to 10

retry-limit

Syntax **retry-limit** *integer*
no retry-limit

Context config>port>ml-bundle>mlfr

Description This command specifies the value of the MLFR bundle N_RETRY counter.

The counter specifies the number of times a retransmission onto a bundle link will be attempted before an error is declared and the appropriate action taken.

Default 2

Parameters *integer* — Specifies the number of retransmission attempts.

Values 1 to 5

frf.12

Syntax **frf.12**

Context config>port>tdm>ds1>channel-group>frame-relay
config>port>tdm>e1>channel-group>frame-relay
config>port>tdm>ds3>frame-relay
config>port>tdm>e3>frame-relay
config>port>sonet-sdh>path>frame-relay

Description This command defines the context to configure the parameters of FRF.12 frame relay fragmentation.

fragment-threshold

Syntax **fragment-threshold** *fragment-threshold*
no fragment-threshold

Context config>port>tdm>ds1>channel-group>frame-relay>frf.12

config>port>tdm>e1>channel-group>frame-relay>frf.12
config>port>tdm>ds3>frame-relay>frf.12
config>port>tdm>e3>frame-relay>frf.12
config>port>sonet-sdh>path>frame-relay>frf.12

Description This command sets the maximum length in bytes of a fragment transmitted across a frame relay port with the FRF.12 UNI/NNI fragmentation enabled.

The **no** form of this command resets the fragment threshold back to the default value.

Default 128

Parameters *fragment-threshold* — Specifies the maximum fragment length, in bytes, to be transmitted across the FRF.12 port.

Values 128 to 512 bytes

mlppp

Syntax **mlppp**

Context config>port>ml-bundle

Description This command enables the context to configure multi-link PPP bundle attributes.

egress

Syntax **egress**

Context config>port>ml-bundle>mlppp

Description This command enables the context to configure egress MLPPP QoS profile parameters for the multilink bundle.

Default n/a

ingress

Syntax **ingress**

Context config>port>ml-bundle>mlppp

Description This command enables the context to configure ingress MLPPP QoS profile parameters for the multilink bundle.

Default n/a

qos-profile

Syntax **qos-profile** *profile-id*
no qos-profile

Context config>port>ml-bundle>mlppp>egress

Description This command specifies the egress QoS profile to be used for the outgoing traffic over this MLPPP bundle.

The **no** form of the command removes the parameters from the configuration.

Parameters *profile-id* — Specifies the egress QoS profile to be used for the outgoing traffic over this MLPPP bundle. The value can only be modified if the bundle is shutdown.

Values 1 to 128

endpoint-discriminator

Syntax **endpoint-discriminator class** {**ip-address** | **global-mac-address** | **null**} [**discriminator-id** *discriminator-id*]
no endpoint-discriminator

Context config>port>ml-bundle>mlppp

Description This command configures the endpoint-discriminator class and ID. The port must be shutdown to modify command parameters.

The **no** form of the command removes the parameters from the configuration.

Parameters **class —** Specifies the Link Control Protocol endpoint discriminator class field type.

Values ip-address, global-mac-address, null

Default Bundle type Default
Physical MLPPP bundle ieee802dot1GlobalMacAddress
MLPPP bundle protection group IP address

discriminator-id *discriminator-id* **—** Specifies the endpoint discriminator identifier value within the specified endpoint-discriminator class. The values below are only for the ip-address class.

Values Any valid IP address

qos-profile

Syntax **qos-profile** *profile-id*
no qos-profile

Context config>port>ml-bundle>mlppp>ingress

Description This command specifies the ingress QoS profile to be used for the incoming traffic over this MLPPP bundle.

Parameters *profile-id* — Specifies the ingress QoS profile to be used for the incoming traffic over this MLPPP bundle. The value can only be modified if the bundle is shutdown.

Values 1 to 128

magic-number

Syntax [**no**] **magic-number**

Context config>port>ml-bundle>mlppp

Description This command allows loopback detection to be enabled and disabled for MLPPP bundles. It is disabled by default. When the magic number option is disabled, the magic number option will not be requested when a member is trying to bring up the LCP layer on a member link; if the remote peer requests this option, it will be rejected. When transmitting echo-requests a magic number of 0 is used. When responding to echo-requests a magic number of 0 is sent.

The magic number option is sent to the remote peer during protocol negotiation. If this option is rejected by the remote peer, the router will bring the link up but will be unable to detect loopbacks since the router will always send a magic number of 0 in the echo messages. If this option is accepted by the remote peer, the router will send echo messages with randomly generated magic-numbers. If the SR receives a config-req with the same magic number that was sent out, the router will calculate a new magic number to use and send out another config-request. If the router is persistently seeing the randomly generated magic number in the received config-req, the router will declare a loopback.

The **no** form of the command disables the loopback detection.

Default no magic-number

multiclass

Syntax **multiclass** *count*
no multiclass

Context config>port>ml-bundle>multiclass

Description This command enables multi-class MLPPP as defined by RFC 2686*, The Multi-Class Extension to Multi-Link PPP*, on a MLPPP bundle (including MLPPP bundle protection groups) with 2, 3 or 4 classes. For multiclass MLPPP bundles with a non-zero count, the class index takes valid values from 0 to one less than the maximum number of classes inclusive. For example a 4-class MLPPP bundle has 4 classes with indexes 0, 1, 2, and 3. A bundle must be shutdown with no links for this value to be changed.

Entries are created and deleted by the system depending on the number of classes being used by a given MLPPP bundle.

The **no** form of the command disables multi-class MLPPP.

Default 4

Parameters *count* — Specifies the number of classes in a MLPPP bundle.

Values 2 to 4

stateless-aps-switchover

Syntax [**no**] **stateless-aps-switchover**

Context config>port>ml-bundle> mlppp

Description This command specifies whether the bundle will perform a stateful or a stateless APS switchover.

The value can be changed for APS bundle protection groups of type MLPPP.

A stateless switchover implies that PPP is re-negotiated on each member link after the switchover. PPP negotiations may take a few seconds to complete.

A stateful switchover implies that after an APS switchover the PPP state of the bundle will be restored based on the bpgrp bundle state before the switchover.

The state cannot be changed for normal MLPPP bundles (only applicable for bpgrps).

The **no** form of the command disables stateless APS switchover.

Default disabled

mrru

Syntax **mrru** *mrru*
no mrru

Context config>port>multilink-bundle

Description This command specifies the maximum received reconstructed unit (MRRU), similar to a maximum transmission unit (MTU), but applies only to MLPPP multilink bundles. The MRRU is the maximum frame size that can be reconstructed from multilink fragments. This command is only valid for MLPPP bundles.

The **no** form of this command resets the MRRU to the default.

Default 1524

Parameters *bytes* — Specifies the maximum received reconstructed unit size, expressed as an integer.

Values 1500 to 9206 bytes

protect-bundle

Syntax [**no**] **protect-bundle** *bundle-id*

Context config>port>multilink-bundle

Description This command configures a protect bundle that is part of this BPGrp.

Parameters *bundle-id* — Specifies the protection multilink bundle in the bundle protection group. The command syntax must be configured as follows:

Values bundle-*type-slot/mda.bundle-num*

bundle-**PPP or IMA**-*slot/mda.bundle-num*	Creates an MLPPP or IMA bundle.
where:	**bundle**: keyword *slot*: IOM/MDA slot numbers *bundle-num*: 1 to 256

For example:

router1>config>port>ml-bundle> protect-bundle bundle-ima-1/1.1

red-differential-delay

Syntax **red-differential-delay** *red-diff-delay* [**down**]
no red-differential-delay

Context config>port>multilink-bundle

Description This command sets the maximum acceptable differential delay for individual links within a multilink bundle. The differential delay is calculated as the round-trip differential delay for MLPPP bundles, and as uni-directional differential delay for IMA bundles.

The **no** form of this command restores the red-differential-delay defaults.

Default n/a

Parameters *red-diff-delay* — Specify the maximum red differential delay value.

Values 0 to 25 milliseconds for all other bundles
0 to 50 milliseconds for IMA bundles

down — Transition the link that exceeded the differential delay to a down state (for example, remove it from the multilink bundle from an operational perspective).

short-sequence

Syntax [**no**] **short-sequence**

Context config>port>multilink-bundle

Description This command specifies that the Multi-link Point to Point Protocol (MLPPP) bundle should use short (12 bit) sequence numbers instead of the default 24-bit sequence number. This command is only valid for MLPPP bundles.

The **no** form of this command disables the short-sequence feature.

Default no short-sequence

working-bundle

Syntax [**no**] **working-bundle** *bundle-id*

Context config>port>multilink-bundle

Description This command configures a working bundle that is part of this BPGrp.

Parameters *bundle-id* — Specifies the working multilink bundle in the bundle protection group. The command syntax must be configured as follows:

Values bundle-*type-slot/mda.bundle-num*

bundle-**PPP or IMA**-*slot/mda.bundle-num*	Creates an MLPPP or IMA bundle.
where:	**bundle**: keyword *slot*: IOM/MDA slot numbers *bundle-num*: 1 to 256

For example:
router1>config>port>ml-bundle> working-bundle bundle-ima-1/1.1

yellow-differential-delay

Syntax **yellow-differential-delay** *yellow-diff-delay*
no yellow-differential-delay

Context config>port>multilink-bundle

Description This command sets the yellow warning threshold for the differential delay for members within a multilink bundle. If circuit's delay exceeds the yellow-differential delay value, a log message and SNMP trap is sent. This command is only valid for MLPPP bundles. The differential delay is calculated as the round-trip differential delay for MLPPP bundles.

The **no** form of this command removes the yellow-differential-delay.

Default n/a

Parameters *yellow-diff-delay* — Specifies the maximum yellow differential delay threshold value.

Values 1 to 25 milliseconds

ima

Syntax **ima**

Context config>port>multilink-bundle

Description This command enables the context to configure parameters for an Inverse Multiplexing over ATM (IMA) group. An IMA group is a collection of physical links bundled together and assigned to an ATM interface. IMA enables a high-speed channel that is composed of ATM cells to be transported as a number of lower-speed circuits. Then they are reassembled as the original high-speed ATM channel. This command is only valid for IMA bundles.

link-delay

Syntax **link-delay** {**activate** | **deactivate**} *milli-seconds*
no link-delay {**activate** | **deactivate**}

Context config>port>ml-bundle>ima

Description This command specifies the time to delay between detection of a link activation/deactivation condition and acting upon it (going in/out of the RX failure state on a link).

Parameters **activate** *milli-seconds* **—** Specifies the time, in milli-seconds, used to clear an existing LIF or LODS alarm. The time specified determines how long is needed for member links to stabilize before being activated.

Values 1 to 30000 milli-seconds

Default 10000

deactivate *milli-seconds* **—** Specifies the time, in milli-seconds, used to raise an LIF or LODS alarm. The time specified determines how long before a member link is declared in error and is deactivated.

Values 1 to 30000 milli-seconds

Default 2000

max-bandwidth

Syntax **max-bandwidth** *number-links*
no max-bandwidth

Context config>port>ml-bundle>ima

Description This command specifies the number of links that is used to determine the maximum configurable bandwidth that is allowed to be used for this IMA group.

The maximum bandwidth is computed as:

Maximum Configurable ATM Bandwidth (MCAB) =

(number-links) * (M-1)/M * (2048/2049) * primary member link speed

Where: M is the IMA frame size (128)
Primary member link speed is either E-1 — 1920kbps or DS-1 — 1539kbps. E-1 speed is used for a group with no members.

The total ATM bandwidth of services over shaped VCs cannot exceed the MCAB value as result of adding more services or removing member links.

The **no** form of the command resets the max-bandwidth to its default value

Default 8

Parameters *number-links* — Specifies the number of links that is used to determine the maximum configurable bandwidth that is allowed to be used for this IMA group.

Values 1 to 8

test-pattern-procedure

Syntax **test-pattern-procedure**

Context config>port>ml-bundle>ima

Description This command enables the context to configure IMA test pattern procedures. Note that this command and sub-commands are not saved in the router configuration between reboots.

test-link

Syntax **test-link** *port-id*
no test-link

Context config>port>ml-bundle>ima>test-pattern-procedure

Description This command specifies IMA members on which an IMA test pattern procedure is to be performed.

The **no** form of this command deletes the link from test-pattern procedure. The test-pattern procedure must be shutdown first.

Default no test-link

Parameters *port-id* — The port ID to be used to verify link connectivity within an IMA group.

Values			
port-id	*slot*/*mda*/*port* [.*channel*]		
	eth-sat-id	esat-*id*/*slot*/*port*	
		esat	keyword
		id	1 to 20
	pxc-id	pxc-*id*.*sub-port*	
		pxc	keyword
		id	1 to 64
		sub-port	a, b
	aps-id	aps-*group-id*[.*channel*]	
		aps	keyword
		group-id	1 to 64

test-pattern

Syntax **test-pattern** *pattern*
no test-pattern

Context config>port>ml-bundle>ima>test-pattern-procedure

Description This command specifies the transmit test pattern in an IMA group loopback operation. This value can only be changed when the **test-pattern-procedure** command is shut down

The **no** form of this command restores the test-pattern to the default.

Default 0

Parameters *pattern* — Specifies an integer taking the following values:

Values 0 to 255

shutdown

Syntax [**no**] **shutdown**

Context config>port>ml-bundle>ima>test-pattern-procedure

Description This command enables a configured IMA test pattern procedure.

The **no** form of this command disables the IMA test pattern procedure.

version

Syntax **version** *IMA-version*
no version

Context config>port>ml-bundle>ima>

Description This command configures the IMA version for the multilink bundle group. If there is a version mismatch between this IMA group and the far end IMA group, the IMA group will become operationally down. Automatic version changing is not supported. To change the IMA version, all member links must be removed from the group first.

Default 1-1

Parameters *IMA-version* — Specifies the IMA version for this group.

Values 1-0 to IMA version 1-0
1-1 to IMA version 1-1

2.25.2.19 SONET/SDH Port Commands

sonet-sdh

Syntax **sonet-sdh**

Context config>port

Description This command enables access to the context to configure SONET/SDH ports. This context can only be used when configuring an OC-3, OC-12, OC-48, OC-192, and OC-768 SONET/SDH ports on an appropriate MDA.

This command also enables access to the context to configure SONET/SDH parameters for an Ethernet port in WAN PHY (xgig wan) mode.

The 10 Gigabit Ethernet LAN port also has SONET/SDH characteristics. However, these characteristics are predetermined and not configurable.

clock-source

Syntax **clock-source** {**loop-timed** | **node-timed**}

Context config>port>sonet-sdh

Description This command configures the clock to be used for transmission of data out towards the line. The options are to use the locally recovered clock from the line's receive data stream or the node central reference.

When changing the clock source for a port on an OC-48 MDA, a brief transmit interruption can occur on all ports of that MDA. Note that all SONET/SDH MDAs/CMAs support loop timing. The following table show MDAs that support loop timing:

Parameters **loop-timed —** The link recovers the clock from the received data stream.

node-timed — The link uses the internal clock when transmitting data.

framing

Syntax **framing** {**sonet** | **sdh**}

Context config>port>sonet-sdh

Description This command specifies SONET/SDH framing to be either SONET or SDH.

Default sonet

Parameters **sonet —** Configures the port for SONET framing.

sdh — Configures the port for SDH framing.

group

Syntax **group** *sonet-sdh-index* **payload** {**tu3** | **vt2** | **vt15**}

Context config>port>sonet-sdh

Description This command configures payload of the SONET/SDH group.

For example:

config>port>sonet-sdh#

group tug3-1.1 payload tu3
group tug3-1.2 payload vt2
group tug3-1.3 payload vt2
group tug3-2.1 payload vt15
group tug3-2.2 payload vt15
group tug3-2.3 payload tu3
group tug3-3.1 payload tu3
group tug3-3.2 payload tu3
group tug3-3.3 payload tu3

Default n/a

Parameters *sonet-sdh-index* — Specifies the components making up the specified SONET/SDH path. Depending on the type of SONET/SDH port the *sonet-sdh-index* must specify more path indexes to specify the payload location of the path.

tu3 — Specifies the Tributary Unit Group (TUG3) on a path. Configures the port or channel for transport network use.

vt2 — Configures the path as a virtual tributary group of type vt2.

vt15 — Configures the path as a virtual tributary group of type vt15.

hold-time

Syntax **hold-time** *hold-time* {[**up** *hold-time up*] [**down** *hold-time down*]}
no hold-time

Context config>port>sonet-sdh

Description This command configures SONET link dampening timers in 100s of milliseconds. This guards against reporting excessive interface transitions. This is implemented by not advertising subsequent transitions of the interface to upper layer protocols until the configured timer has expired.

Note: For APS configurations, the **hold-time down** and **up** default values are 100 ms and 500 ms respectively. But, if there is a large communication delay (time to exchange K1/K2 bytes) between the APS Controllers of the two endpoints of an APS link, it is highly suggested to increase the default hold-time down timer on the APS group port accordingly with the communication delay. See the aps command for more information.

Default no hold-time

Parameters **up** *hold-time up* — Configures the hold-timer for link up event dampening. A value of zero (0) indicates that an up transition is reported immediately.

Values 0 to 100 in 100s of milliseconds

down *hold-time down* **—** The hold-timer for link down event dampening. A value of zero (0) indicates that a down transition is reported immediately.

Values 0 to 100 in 100s of milliseconds

loopback

Syntax **loopback** {**line** | **internal**}
no loopback

Context config>port>sonet-sdh

Description This command activates a loopback on the SONET/SDH port.

The SONET port must be in a shut down state to activate any type of loopback. The loopback setting is never saved to the generated/saved configuration file.

Note that loopback mode changes on a SONET/SDH port can affect traffic on the remaining ports.

Default no loopback

Parameters **line —** Set the port into line loopback state.

internal — Set the port into internal loopback state.

report-alarm

Syntax [**no**] **report-alarm** [**loc**] [**lais**] [**lrdi**] [**ss1f**] [**lb2er-sd**] [**lb2er-sf**] [**slof**] [**slos**] [**lrei**]

Context config>port>sonet-sdh

Description This command enables logging of SONET (SDH) line and section alarms for a SONET-SDH port. Only line and section alarms can be configured in the SONET/SDH context, for path alarms see the **sonet-sdh**>**path** context.

The **no** form of this command disables logging of the specified alarms

Parameters *loc* — Reports a loss of clock which causes the operational state of the port to be shut down.

Default **loc** alarms are issued

lais — Reports line alarm indication signal errors. When configured, **lais** alarms are raised and cleared.

Default **lais** alarms are not issued

lrdi — Reports line remote defect indication errors. LRDI's are caused by remote LOF, LOC, LOS. When configured, **lrdi** alarms are raised and cleared.

Default **lrdi** alarms are issued

ss1f — Reports section synchronization failure which is detected when the S1 byte is not consistent for 8 consecutive frames. When configured, **ss1f** alarms are raised and cleared.

Default **ss1f** alarms are not issued

lb2er-sd — Reports line signal degradation BER (bit interleaved parity) errors. Use the threshold command to set the error rate(s) that when crossed determine signal degradation and signal failure. When configured, **lb2er-sd** alarms are raised and cleared.

Default **lb2er-sd** alarms are not issued

lb2er-sf — Reports line signal failure BER errors. Use the threshold command to set the error rate(s) that when crossed determine signal degradation and signal failure.When configured, **lb2er-sf** alarms are raised and cleared.

Default **lb2er-sf** alarms are issued

slof — Reports section loss of frame errors. When configured, **slof** alarms are raised and cleared.

Default **slof** alarms are issued

slos — Reports a section loss of signal error on the transmit side. When configured, **slos** alarms are raised and cleared.

Default **slos** alarms are issued

lrei — Reports a line error condition raised by the remote as a result of b1 errors received from this node. When configured, **lrei** traps are raised but not cleared

Default **lrei** traps are not issued

reset-port-on-path-down

Syntax [**no**] **reset-port-on-path-down**

Context config>port>sonet-sdh

Description This command configures whether the SONET/SDH port will reset when the path transitions to an operationally down state. This command only affects SONET/SDH ports on 7750 4-port OC48 SFP “-B” MDAs.

Default no reset-port-on-path-down

section-trace

Syntax **section-trace** {**increment-z0** | **byte** *value* | **string** *string*}

Context config>port>sonet-sdh

Description This command configures the section trace bytes in the SONET section header to interoperate with some older versions of ADMs or regenerators that require an incrementing STM ID. You can explicitly configure an incrementing STM value rather than a static one in the SDH overhead by specifying the z0-increment.

Default byte *0x1*

Parameters *increment-z0* — Configures an incrementing STM ID instead of a static value.

byte value — Sets values in SONET header bytes.

Default 0x1

Values 0 to 255 or 0x00 to 0xFF

string string — Specifies a text string that identifies the section.

Values A string up to 16 bytes

speed

Syntax **speed** {**oc3** | **oc12**}
no speed

Context config>port>sonet-sdh

Description This command configures the speed of a SONET/SDH port as either OC3 or OC12. The framer for this MDA operates in groups of four. Changing the port speed for a port requires resetting the framer and causes a slight disruption on all four ports. The first framer controls ports 1,2,3,4, the second framer controls ports 5,6,7,8 etc.

To change the port speed on a SONET/SDH port, the port must be administratively shut down and all channels must be removed. When the port speed is changed, the default channel configuration is recreated.

The **no** form of this command reverts back to default.

Default oc12

Parameters **oc3 —** Sets the speed of the port to OC-3.

oc12 — Sets the speed of the port to OC-12.

suppress-lo-alarm

Syntax [**no**] **suppress-lo-alarm**

Context config>port>sonet-sdh

Description This command enables the suppression of lower order alarms on SONET/SDH port such as MLPPP bundle alarms, DS1/E1 links alarms and 336 APS channel groups alarms.

The **no** form of the command disables the suppression of lower order alarms on SONET/SDH port.

tx-dus

Syntax [**no**] **tx-dus**

Context config>port>ethernet>ssm
config>port>sonet-sdh

Description This command forces the QL value transmitted from the SSM channel of the SONET/SDH port or the Synchronous Ethernet port to be set to QL-DUS/QL-DNU. This capability is provided to block the use of the interface from the SR/ESS for timing purposes.

Default no tx-dus

threshold

Syntax **threshold** {**ber-sd** | **ber-sf**} **rate** *threshold-rate*
no threshold {**ber-sd** | **ber-sf**}

Context config>port>sonet-sdh

Description This command configures the line signal degradation bit error rate (BER) and line signal failure thresholds.

Line signal (b2) bit interleaved parity error rates are measured and when they cross either the degradation or failure thresholds alarms are raised (see the report-alarm line & section command), furthermore if the failure threshold is crossed the link will be set to operationally down.

For APS configurations, if the **ber-sd** or **ber-sf** threshold rates must be modified, the changes must be performed at the line level on both the working and protect APS port member.

The **no** form of this command reverts to the default value.

Default **threshold ber-sf 6** — Signal degrade BER threshold of 10-6

threshold ber-sf 3 — Signal failure BER threshold of 10-3

Parameters **ber-sd —** Specifies the BER that specifies signal degradation

ber-sf — Specifies the BER that specifies signal failure

threshold-rate — The BER negative exponent (n in 10-n), expressed as a decimal integer.

Values 3 to 9 (10-3 to 10-9)

2.25.2.20 SONET/SDH Path Commands

path

Syntax [**no**] **path** [*sonet-sdh-index*]

Context config>port>sonet-sdh

Description This command defines the SONET/SDH path.

The **no** form of this command removes the specified SONET/SDH path.

Default full channel (or clear channel)

Parameters *sonet-sdh-index* — Specifies the components making up the specified SONET/SDH path. Depending on the type of SONET/SDH port the *sonet-sdh-index* must specify more path indexes to specify the payload location of the path. The *sonet-sdh-index* differs for SONET and SDH ports.

Values sts192 (for the 7950 XRS only)
sts1-*x.x* (for the 7450 ESS and 7750 SR)

SONET		SDH	
OC-192	STS-48-index	STM-64	AUG-16-index
	STS-12-index		AUG-4-index
	STS-3-index		AUG-1-index
	STS-1-index		AU-3-index
OC-48	STS-12-index	STM-16	AUG-4-index
	STS-3-index		AUG-1-index
	STS-1-index		AU-3-index
OC-12	STS-3-index	STM-4	AUG-1-index
	STS-1-index		AU-3-index
OC-3	STS-1-index	STM-1	AU-3-index

In addition the support of virtual tributary circuits adds an additional level of complexity and several addition levels of indexes.

payload

Syntax **payload** {**sts3** | **tug3** | **ds3** | **e3**}

Context config>port>sonet-sdh>path

Description This command specifies if the associated SONET/SDH path is an asynchronous circuit or a virtual tributary group (VT). This command is only applicable to channelized MDAs.

Default n/a

Parameters **sts3 —** Configures STS3/STM1 payload as clear channel.

tu3 — Configures STS3/STM1 payload as Tributary Unit Group 3 (TUG3).

ds3 — Configures the port or channel as DS-3 STS1/VC3 payload as DS-3.

e3 — Configures the port or channel as E-3 STS1/VC3 payload as E-3.

vt2 — Configures the path STS1 payload as vt2 as a virtual tributary group. Only allowed on STS-1 nodes. (SONET VT container)

vt15 — Configures the path as a virtual tributary group. Only allowed on STS-1 nodes. (SONET VT container)

ds1 — Configures the port or channel as DS1.vt15 or vt2 payload as DS-1

e1 — Configures VT2 payload as E-1.

report-alarm

Syntax [**no**] **report-alarm** [**pais**] [**plop**] [**prdi**] [**pplm**] [**prei**] [**puneq**] [**plcd**]

Context config>port>sonet-sdh>path

Description This command enables logging of SONET (SDH) path alarms for a SONET-SDH port. Only path alarms can be configured in the channel context.

The **no** form of this command disables logging of the specified alarms.

Parameters **pais —** Reports path alarm indication signal errors. When configured, **pais** alarms are raised and cleared.

Default **pais** alarms are not issued

plop — Reports path loss of pointer (per tributary) errors. When configured, **plop** traps are raised but not cleared.

Default **plop** traps are issued

prdi — Reports path remote defect indication errors. When configured, **prdi** alarms are raised and cleared.

Default **prdi** alarms are not issued

pplm — Reports a path payload mismatch, as a result the channel will be operationally downed. When configured, **pplm** traps are raised but not cleared.

Default **pplm** traps are issued

prei — Reports a path error condition raised by the remote as a result of b3 errors received from this node. When configured, **prei** traps are raised but not cleared.

Default **prei** traps are not issued

puneq — Reports path unequipped errors. Reports path unequipped signal errors.

Default puneq traps are issued

plcd — Reports path loss of codegroup delineation errors. It is applicable only when the value of xgig is set to WAN.

Default **plcd** traps are not issued

crc

Syntax **crc** {**16** | **32**}

Context config>port>sonet-sdh>path

Description A 16 bit CRC can only be configured on an OC-3 channel, all other channel speeds must use a 32 bit CRC except for the paths configured with encap-type atm at OC3 speed.

Default 16 for OC-3, DS-1, DS-3
32 for OC-12, OC-48, ATM-OC12/3, ATMOC-3, etc.

Note: The CRC default is 32 when the encap-type is set to ATM and also, the default cannot be changed when the encap-type is set to ATM.

Parameters **16** — Use 16 bit checksum for the associated port/channel.

32 — Use 32 bit checksum for the associated port/channel.

encap-type

Syntax **encap-type** {**atm** | **bcp-null** | **bcp-dot1q** | **ipcp** | **ppp-auto** | **frame-relay** | **wan-mirror** | **cisco-hdlc**}{**bcp-null** | **bcp-dot1q** | **ipcp** | **ppp-auto** | **frame-relay** | **wan-mirror**}

Context config>port>sonet-sdh>path

Description This command configures the encapsulation method used to distinguish customer traffic on an access SONET/SDH channel sub-port.

When the **encap-type** is set to ATM the CRC default cannot be changed.

When the **encap-type** is ATM, ATM sub-layer verification (GR-1248-CORE, *Generic Requirements for Operations of ATM Network Elements (NEs)*) is automatically enabled. The result of the verification includes:

- Out of Cell Delineation (OCD) event count. The OCD event count is described in RFC 2515, *Definitions of Managed Objects for ATM Management*. Note that multiple events occurring within a second will be counted as 1 event for ATM and ASAP MDAs as a result of a hardware limit.
- Loss of Cell Delineation defect/alarm. The LCD defect/alarm is defined in RFC 2515, *Definitions of Managed Objects for ATM Management*. When a path is in an LCD defect state, the path's operational status will be down. When a path exits the LCD state, the path's operational status will change to up (assuming nothing else causes the path to stay down). A trap is raised to indicate the LCD status change. Also a P-RDI is sent to indicate the defect to the remote end.

The **encap-type** is only required when configuring a SONET/SDH path for access mode.

The **no** form of this command restores the default.

Default bcp-null

Parameters **atm —** Specifies that the encapsulation on the port is ATM.

bcp-null — Only a single service is configured on this channel and IEEE 802.1Q tags are not used as a service delimiter. Any IEEE 802.1Q tags encountered are regarded as part of the customer payload and transparently forwarded. When **bcp-null** encapsulation is specified, the PPP Bridge Control Protocol (BCP) is activated and all packets on this access port will be encapsulated in accordance with the BCP protocol.

Note that null ports will accept q-tagged frames.

bcp-dot1q — Ingress frames carry IEEE 802.1Q tags and the tags are used as service delimiter. Any untagged packets are silently discarded with exception of protocol specific packets. When **bcp-dot1q** encapsulation is specified, the PPP Bridge Control Protocol (BCP) is activated and all packets on this access port will be encapsulated in accordance with the BCP protocol.

ipcp — Ingress frames are encapsulated according to the IP Control Protocol. When **ipcp** encapsulation is specified, the PPP IP Control Protocol will be activated and only packets that comply with IPCP encapsulation are processed; others are silently discarded.

ppp-auto — Enables PPP on the associated port/channel. The activation of ipcp and mplscp is automatically enabled depending on the protocol configuration. This encap type is only valid on ports/channels in network mode.

frame-relay — Enables frame relay on the associated port/channel.

wan-mirror — The port is used for mirroring of frame-relay and POS ports. On these ports, no link management protocol would run.

cisco-hdlc — Monitors line status on a serial interface by exchanging keepalive request messages with peer network devices.

ppp

Syntax **ppp**

Context config>port>sonet-sdh>path

Description This command enables access to the context to configure the LCP operational parameters for a SONET/SDH Point-to-Point Protocol (PPP) link.

keepalive

Syntax **keepalive** *time-interval* [**dropcount** *count*]
no keepalive

Context config>port>sonet-sdh>path>ppp

Description This command enables the sending of keepalive messages and configures the time between messages and how many reports can be missed before bringing the link down.

The **no** form of this command disables the sending of echo requests.

Default keepalive 10 dropcount 3

Parameters *time-interval* — The time interval, in seconds, that echo requests are issued.

Values 1 to 60

Default 10

dropcount *count* **—** The number of keepalive messages that can be missed before the line is brought down.

Values 1 to 255

Default 3

report-alarm

Syntax [**no**] **report-alarm** {**pais** | **plop** | **prdi** | **pplm** | **prei**}

Context config>port>sonet-sdh>path

Description This command enables logging of SONET (SDH) path alarms for a SONET-SDH port. Only path alarms can be configured in the channel context.

The **no** form of this command disables logging of the specified alarms.

Parameters **pais —** Reports path alarm indication signal errors. When configured, **pais** alarms are raised and cleared.

Default pais alarms are not issued

plop — Reports path loss of pointer (per tributary) errors. When configured, **plop** traps are raised but not cleared.

Default plop traps are issued

prdi — Reports path remote defect indication errors. When configured, **prdi** alarms are raised and cleared.

Default prdi alarms are not issued

pplm — Reports a path payload mismatch, as a result the channel will be brought down. When configured, **pplm** traps are raised but not cleared.

Default pplm traps are issued

prei — Reports a path error condition raised by the remote as a result of b3 errors received from this node. When configured, **prei** traps are raised but not cleared

Default prei traps are not issued

scramble

Syntax [**no**] **scramble**

Context config>port>sonet-sdh>path

Description This command enables SONET/SDH payload scrambling. Scrambling randomizes the pattern of 1s and 0s carried in a SONET frame. Rearranging or scrambling the pattern prevents continuous strings of all 1s or all 0s and meets the needs of physical layer protocols that rely on sufficient transitions between 1s and 0s to maintain clocking.

For ATM, this command enables or disables ATM cell-level payload scrambling/descrambling using x43+1 polynomial as defined in ITU-T I.432.1. Scrambling is enabled by default for the ATM path/channel. Note that this scrambling is done in addition to SONET/SDH frame scrambling/descrambling, which is always enabled in the framer.

The **no** form of this command disables scrambling.

Default no scramble

signal-label

Syntax **signal-label** *value*

Context config>port>sonet-sdh>path

Description This command sets the C2 byte value. The purpose of this byte is to communicate the payload type being encapsulated by SONET framing.

Default 0xcf

Parameters *value* — Specifies the C2 byte value, expressed as a decimal integer or a value in hex format.

Values 1 to 254 or 0x01 to 0xfe

trace-string

Syntax **trace-string** [*trace-string*]
no trace-string

Context config>port> sonet-sdh>path

Description This command specifies that a J1-path-trace that identifies the circuit is inserted continuously at source. This can be checked against the expected value by the receiver. If no trace string is entered then a null string is used.

The **no** form of this command resets the string to its default.

Default The default J1 value is *Alcatel-Lucent XXX YYY* where XXX is the platform number, such as "7750" or "7450", and YYY is the platform acronym, such as "SR" or "ESS". The value does not change when the encap-type changes. The J1 string contains all zeros for a non-provisioned path.

Parameters *trace-string* — Specifies either a string up to 62 bytes for SONET or 15 bytes for SDH. If the string contains spaces, enclose it in quotation marks.

keepalive

Syntax **keepalive** *time-interval*
no keepalive

Context config>port>sonet-sdh>path>cisco-hdlc
config>port>tdm>ds1>channel-group>cisco-hdlc
config>port>tdm>ds3>cisco-hdlc
config>port>tdm>e1>channel-group>cisco-hdlc
config>port>tdm>e3>cisco-hdlc

Description This command specifies the interval, in seconds, used to send periodic keepalive packets. The receiver process expects to receive a keepalive packet every "keepalive interval". The link is declared down if the receiver process does not receive a keepalive within the "timeout interval". The link is declared up once the number of continual keepalive packets received equals to the up-count. The nodes at the two endpoints of the cHDLC link should be provisioned with the same values.

Default 10

Parameters *time-interval* — Specifies the interval used to send periodic keepalive packets.

Values 0 to 300 seconds. A value of 0 means no keepalive packets are sent.

up-count

Syntax **up-count** *up-count*
no up-count

Context config>port>sonet-sdh>path>cisco-hdlc
config>port>tdm>ds1>channel-group>cisco-hdlc
config>port>tdm>ds3>cisco-hdlc
config>port>tdm>e1>channel-group>cisco-hdlc
config>port>tdm>e3>cisco-hdlc

Description This command configures the number of continual keepalive packets that have to be received in order to declare the link up. It is expected that the nodes at the two endpoints of the cHDLC link are provisioned with the same values.

Default 1

Parameters *up-count* — Specifies the number of continual keepalive packets that must be received in order to declare the link up.

Values 1 to 3

2.25.2.21 ATM Interface Commands

ATM Interface commands are supported on the 7750 SR only.

atm

Syntax **atm**

Context config>port>sonet-sdh>path
config>port>tdm>ds1>channel-group
config>port>tdm>ds3
config>port>tdm>e3
config>port>tdm>e1>channel-group
config>port>ml-bundle>ima

Description This command enables the context to configure ATM interface properties.

cell-format

Syntax **cell-format** *cell-format*

Context config>port>tdm>ds1>channel-group>atm
config>port>tdm>ds3>atm
config>port>tdm>e3>atm
config>port>tdm>e1>channel-group>atm
config>port>ml-bundle>ima>atm

Description This command configures the ATM cell format.

Parameters **uni —** Specifies the user-to-network interface (UNI) cell format.

nni — Specifies the network-to-network interface (NNI) cell format.

mapping

Syntax **mapping** *mapping*

Context config>port>tdm>ds3>atm

Description This command configures the ATM cell mapping for DS-3 channels. The mapping value specifies the cell mapping that is to be used on this ATM interface.

Default direct cell mapping

Parameters *mapping* — The mapping value specifies the cell mapping that is to be used on this ATM interface.

Values direct — Specifies direct cell mapping.
plcp — Specifies PLCP cell mapping.

min-vp-vpi

Syntax **min-vp-vpi** *value*

Context config>port>sonet-sdh>path>atm
config>port>ml-bundle>ima>atm
config>port>tdm>ds1>channel-group>atm
config>port>tdm>ds3>atm
config>port>tdm>e1>channel-group>atm
config>port>tdm>e3>atm

Description This command sets the minimum allowable virtual path identifier (VPI) value that can be used on the ATM interface for a VPC.

Parameters *value* — Specifies the minimum allowable VPI value that can be used on the ATM interface for a VPC.

Values 0 to 4095 (NNI)
0 to 255 (UNI)

Default 0

ilmi

Syntax **ilmi** [*vpi/vci*]
no ilmi

Context config>port>sonet-sdh>path>atm

Description This command creates an ILMI link PVCC by default on VPI/VCI 0/16. Deleting an ILMI link deletes the PVCC. ILMI is supported only on ATM interfaces on SONET/SDH paths.

Parameters *vpi/vci* — Specifies the PVC identifier (vpi/vci).

Values

vpi	0 to 4095 (NNI) 0 to 255 (UNI)
vci	1, 2, 5 to 65535

egress

Syntax **egress**

Context config>port>sonet-sdh>path>atm>ilmi

Description This command enables the context to configure egress traffic attributes for the ILMI link.

ingress

Syntax **ingress**

Context config>port>sonet-sdh>path>atm>ilmi

Description This command enables the context to configure ingress traffic attributes for the ILMI link.

traffic-desc

Syntax **traffic-desc** *traffic-desc-profile-id*
no traffic-desc

Context config>port>sonet-sdh>path>atm>ilmi>egress
config>port>sonet-sdh>path>atm>ilmi>ingress

Description This command associates an ATM traffic descriptor profile to an ILMI link. It is recommended to change this to the traffic profile as defined in the ILMI specification.

Default atm-td-profile 1

Parameters *traffic-desc-profile-id* — Specifies an existing ATM traffic descriptor profile. Traffic descriptor profiles are configured in the **config>qos>atm-td-profile** context.

Values 1 to 1000

keep-alive

Syntax **keep-alive** [**poll-frequency** *seconds*] [**poll-count** *value*] [**test-frequency** *seconds*]
no keep-alive

Context config>port>sonet-sdh>path>atm>ilmi

Description This command configures keepalive parameters to monitor ILMI link connectivity.

The **no** form of this command resets the default values on an ILMI link.

Last Config Change: 03/29/2007 20:35:19 Poll Count:4

Poll Freq: 5 Test Freq: 1

Parameters **poll-frequency** *seconds* **—** Specifies the amount of time, in seconds, between successive transmissions of ILMI messages on this interface for the purpose of detecting the establishment of ILMI connectivity.

Values 1 to 255

poll-count *value* **—** Specifies the number of consecutive polls on this interface for which no ILMI response message is received before ILMI connectivity is declared lost.

Values 1 to 255

test-frequency *seconds* **—** Specifies the frequency for testing for connectivity when the link is establishing before polling begins.

Values 0 to 255

protocol

Syntax **protocol** *protocol-type*
no protocol

Context config>port>sonet-sdh>path>atm>ilmi

Description This command configures the protocol.

Parameters *protocol-type* — The *protocol-type* is an enumerated integer whose value indicates the ILMI version of either 3.1 or 4.0 that is advertised by IME and also indicates the ILMI IME type of either user-side or network-side.

Values 4_0-user, 4_0-network. 3_1-user, 3_1-network

2.25.2.22 Frame Relay Commands

Frame Relay commands are supported on the 7750 SR only.

frame-relay

Syntax **frame-relay**

Context config>port>sonet-sdh>path
config>port>tdm>ds1>channel-group
config>port>tdm>ds3
config>port>tdm>e1>channel-group
config>port>tdm>e3

Description This command allows access to the context to configure the Frame Relay Local Management Interface (LMI) operational parameters for a SONET/SDH PoS link, a DS-0 channel group, or a DS-3/E-3 port or channel.

The port's **mode** must be set to **access** in **config>port>sonet-sdh>path>mode access** context.

The port's encapsulation type must be set to **frame-relay** in the **config>port>sonet-sdh>path>encap-type frame-relay** context.

The **no** form of this command removes the Frame Relay LMI operational parameters.

frf-12

Syntax [**no**] **frf-12**

Context config>port>tdm>ds1>channel-group>frame-relay
config>port>tdm>e1>channel-group>frame-relay
config>port>tdm>ds3>frame-relay
config>port>tdm>e3>frame-relay
config>port>sonet-sdh>path>frame-relay

Description This command defines the context to configure the parameters of FRF.12 Frame Relay fragmentation.

egress

Syntax **egress**

Context config>port>ml-bundle>mlfr
config>port>tdm>ds1>channel-group>frame-relay
config>port>tdm>e1>channel-group>frame-relay>frf-12
config>port>tdm>ds3>frame-relay>frf-12
config>port>tdm>e3>frame-relay>frf-12
config>port>sonet-sdh>path>frame-relay>frf-12

Description This command enables the context to configure the egress QoS profile for an MLFR bundle or a Frame Relay port with FRF.12 UNI/NNI fragmentation enabled.

qos-profile

Syntax **qos-profile** *profile-id*
no qos-profile

Context config>port>tdm>channel-group>frame-relay>egress
config>port>sonet-sdh>path>frame-relay>egress

Description This command specifies the ingress or egress QoS profile to be used for the configuration of the egress QoS parameters of a Frame Relay port with FRF.12 UNI/NNI fragmentation enabled.

The no form of the command removes the parameters from the configuration.

Parameters *profile-id* — Specifies the profile number. The value can only be modified if the FR port is shut down.

Values 1 to 128

fragment-threshold

Syntax **fragment-threshold** *fragment-threshold*
no fragment-threshold

Context config>port>tdm>channel-group>frame-relay>frf.12
config>port>sonet-sdh>path>frame-relay>frf.12

Description This command sets the maximum length in bytes of a fragment transmitted across a frame relay port with the FRF.12 UNI/NNI fragmentation enabled.

The no form of this command resets the fragment threshold back to the default value.

Default 128

Parameters *fragment-threshold* — Specifies the maximum fragment length, in bytes, to be transmitted across the FRF.12 port.

Values 128 to 512 bytes

identifier

Syntax [**no**] **identifier** *frf16-link-id-string*

Context config>port>tdm>ds1>channel-group>frame-relay

Description This command defines the identifier for the FR bundle when used in an MLFR bundle. The **no** form of this command resets the value to null.

Default null

Parameters *frf16-link--id-string* — Specifies the bundle ID string.

Values 50 chars maximum

lmi-type

Syntax **lmi-type** {**ansi** | **itu** | **none** | **rev1**}
no lmi-type

Context config>port>sonet-sdh>path>frame-relay
config>port>tdm>ds1>channel-group>frame-relay
config>port>tdm>ds3>frame-relay
config>port>tdm>e1>channel-group>frame-relay
config>port>tdm>e3>frame-relay

Description This command configures the Local Management Interface (LMI) type for Frame Relay interfaces. LMIs are sets of enhancements to the basic Frame Relay specification.

The **no** form of this command changes the LMI type back to the default value.

Default itu

Parameters **ansi** — Use ANSI T1.617 Annex D.

itu — Use ITU-T Q933 Annex A.

none — Disable Frame Relay LMI on the given port/channel.

rev1 — Use the Rev 1 version of ANSI T1.617 Annex D.

mode

Syntax **mode** {**dce** | **dte** | **bidir**}

Context config>port>sonet-sdh>path>frame-relay
config>port>tdm>ds1>channel-group>frame-relay
config>port>tdm>ds3>frame-relay
config>port>tdm>e1>channel-group>frame-relay
config>port>tdm>e3>frame-relay

Description This command sets the Frame Relay interface into the DCE, DTE, or Bidirectional mode of LMI operation. The DTE mode causes the router to send status inquiries over the interface. The DCE mode causes the router to respond to status inquiries. In bidirectional mode, the router performs both DTE and DCE operation over the FR interface. The bidirectional mode applies to the ANSI and ITU LMI types only.

This feature is used when two routers are connected back-to-back, running frame relay encapsulation.

Default dte

Parameters **dce —** Enables the DCE mode.

dte — Enables the DTE mode.

bidir — Enables the bidirectional mode for LMI types ANSI and ITU.

n391dte

Syntax **n391dte** *intervals*
no n391dte

Context config>port>sonet-sdh>path>frame-relay
config>port>tdm>ds1>channel-group>frame-relay
config>port>tdm>ds3>frame-relay
config>port>tdm>e1>channel-group>frame-relay
config>port>tdm>e3>frame-relay

Description This command sets the DTE full status polling interval for the Frame Relay Local Management Interface (LMI). The number specifies the frequency at which inquiries expect a full status report.

The **no** form of this command returns the **n391dte** counter to the default value.

Default 6

Parameters *intervals* — The number of exchanges to be done before requesting a full-status report. A value of 1 specifies to receive full-status messages only.

Values 1 to 255

n392dce

Syntax **n392dce** *threshold*
no n392dce

Context config>port>sonet-sdh>path>frame-relay
config>port>tdm>ds1>channel-group>frame-relay
config>port>tdm>ds3>frame-relay
config>port>tdm>e1>channel-group>frame-relay
config>port>tdm>e3>frame-relay

Description This command sets the DCE error threshold for the Frame Relay Local Management Interface (LMI).

The threshold specifies the number of errors needed to bring down a link.

The **no** form of this command returns the **n392dce** counter to the default value.

Default 3

Parameters *threshold* — Specifies the number of errors that will place the channel in an operationally down state.

Values 1 to 10

n392dte

Syntax **n392dte** *count*
no n392dte

Context config>port>sonet-sdh>path>frame-relay
config>port>tdm>ds1>channel-group>frame-relay
config>port>tdm>ds3>frame-relay
config>port>tdm>e1>channel-group>frame-relay
config>port>tdm>e3>frame-relay

Description This command sets the DTE error threshold for the Frame Relay Local Management Interface (LMI).

The count specifies the number of errors needed to bring down a link.

The **no** form of this command returns the **n392dte** counter to the default value.

Default 3

Parameters *count* — Specifies the number of errors that will place the path or channel in an operationally down state.

Values 1 to 10

n393dce

Syntax **n393dce** *count*
no n393dce

Context config>port>sonet-sdh>path>frame-relay
config>port>tdm>ds1>channel-group>frame-relay
config>port>tdm>ds3>frame-relay
config>port>tdm>e1>channel-group>frame-relay
config>port>tdm>e3>frame-relay

Description This command sets the DCE monitored event count for the Frame Relay Local Management Interface (LMI).

The **no** form of this command returns the **n393dce** counter to the default value.

Default 4

Parameters *count* — Specifies the diagnostic window used to verify link integrity on the DCE interface.

Values 1 to 10

n393dte

Syntax **n393dte** *number*
no n393dte

Context config>port>sonet-sdh>path>frame-relay
config>port>tdm>ds1>channel-group>frame-relay
config>port>tdm>ds3>frame-relay
config>port>tdm>e1>channel-group>frame-relay
config>port>tdm>e3>frame-relay

Description This command sets the DTE monitored event count for the Frame Relay Local Management Interface (LMI).

The **no** form of this command returns the **n393dte** counter to the default value.

Default 4

Parameters *number* — Specifies the diagnostic window used to verify link integrity on the DTE interface.

Values 1 to 10

t391dte

Syntax **t391dte** *seconds*

no t391dte

Context config>port>sonet-sdh>path>frame-relay
config>port>tdm>ds1>channel-group>frame-relay
config>port>tdm>ds3>frame-relay
config>port>tdm>e1>channel-group>frame-relay
config>port>tdm>e3>frame-relay

Description This command sets the DTE keepalive timer for the Frame Relay Local Management Interface (LMI).

This number specifies the period at which the DTE sends out a keepalive response request to the DCE and updates status depending on the DTE error threshold value.

The **no** form of this command returns the **t391dte** keepalive timer to the default value.

Default 10

Parameters *seconds* — Specifies the interval in seconds between status inquiries issued by the DTE.

Values 5 to 30

t392dce

Syntax **t392dce** *seconds*
no t392dce

Context config>port>sonet-sdh>path>frame-relay
config>port>tdm>ds1>channel-group>frame-relay
config>port>tdm>ds3>frame-relay
config>port>tdm>e1>channel-group>frame-relay
config>port>tdm>e3>frame-relay

Description This command sets the DCE keepalive timer for the Frame Relay Local Management Interface (LMI).

This number specifies the period at which the DCE checks for keepalive responses from the DTE and updates status depending on the DCE error threshold value.

The **no** form of this command returns the **t392dce** keepalive timer to the default value.

Default 15

Parameters *seconds* — Specifies the expected interval in seconds between status inquiries issued by the DTE equipment.

Values 5 to 30

2.25.2.23 TDM Commands

TDM commands are only supported on the 7750 SR.

tdm

Syntax **tdm**

Context config>port

Description This command enables the context to configure DS-1/E-1 and DS-3/E-3 parameters for a port on a channelized MDA T1/E1. This context cannot be accessed on non-channelized MDAs.

TDM is a mechanism to divide the bandwidth of a stream into separate channels or time slots by assigning each stream a different time slot in a set. TDM repeatedly transmits a fixed sequence of time slots over a single transmission channel. Each individual data stream is reassembled at the receiving end based on the timing.

Default n/a

ds1

Syntax [**no**] **ds1** *ds1-id*

Context config>port>tdm

Description This command enables the context to configure digital signal level 1 (DS-1) frame parameters. The T-Carrier system was the first successful system that supported digitized voice transmission. The original transmission rate (1.544 Mbps) in the T-1 (DS-1) line is commonly used by Internet service providers (ISPs) to connect to the Internet.

North America uses the T-Carrier system while Europe uses the E-Carrier system of transmission, using multiples of the DS- system. Digital signals are carried inside the carrier systems.

T-1 transmits DS-1-formatted data at 1.544 Mbps through the network. The corresponding European carrier is E-1 with a data rate of 2.048 Mbps. E-1 and T-1 (DS-1) can be interconnected for international use.

The **no** form of this command disables DS-1 capabilities.

Default n/a

Parameters *ds1-id* — Identifies the DS-1 channel being created.

Values DS1: 1 to 28

ds3

Syntax [**no**] **ds3** [*sonet-sdh-index*]

Context config>port>tdm

Description This command enables the context to configure DS-3 parameters. DS-3 lines provide a speed of 44.736 Mbps and is also frequently used by service providers. DS-3 lines carry 28 DS-1 signals and a 44.736 Mbps data rate.

A DS-3 connection typically supports data rates of about 43 Mbps. A T-3 line actually consists of 672 individual channels, each supporting 64 Kbps. T-3 lines are used mainly by Service Providers to connect to the Internet backbone and for the backbone itself.

Depending on the MDA type, the DS-3 parameters must be disabled if clear channel is enabled by default (for example, on the m12-ds3 MDA). Clear channel is a channel that uses out-of-band signaling, not in-band signaling, so the channel's entire bit rate is available. Channelization must be explicitly specified. Note that if DS-3 nodes are provisioned on a channelized SONET/SDH MDA you must provision the parent STS-1 SONET/STM0 SDH path first.

North America uses the T-Carrier system while Europe uses the E-Carrier system of transmission, using multiples of the DS system. Digital signals are carried inside the carrier systems.

The **no** form of this command disables DS-3 capabilities.

Default n/a

Parameters *sonet-sdh-index* — Specifies the components making up the specified SONET/SDH Path. Depending on the type of SONET/SDH port the *sonet-sdh-index* must specify more path indexes to specify the payload location of the path. The *sonet-sdh-index* differs for SONET and SDH ports.

e1

Syntax **e1** [*e1-id*]

Context config>port>tdm

Description This command enables the context to configure E-1 parameters. E-1 is a basic time division multiplexing scheme used to carry digital circuits. It is also a standard WAN digital communication format designed to operate over copper facilities at a rate of 2.048 Mbps.

North America uses the T-Carrier system while Europe uses the E-Carrier system of transmission, using multiples of the DS system. Digital signals are carried inside the carrier systems.

The **no** form of this command disables E-1 capabilities.

Default n/a

Parameters *e1-id* — Specifies the E-1 channel being created.

Values E1: 1 to 21

e3

Syntax **e3** *sonet-sdh-index*

Context config>port>tdm

Description This command enables the context to configure E-3 parameters. E-3 lines provide a speed of 44.736 Mbps and is also frequently used by service providers. E-3 lines carry 16 E-1 signals with a data rate of 34.368 Mbps.

An E-3 connection typically supports data rates of about 43 Mbps. An E-3 line actually consists of 672 individual channels, each supporting 64 Kbps. E-3 lines are used mainly by Service Providers to connect to the Internet backbone and for the backbone itself.

Depending on the MDA type, the E-3 parameters must be disabled if clear channel is enabled by default (for example, on the m12-ds3e3 MDA). Clear channel is a channel that uses out-of-band signaling, not in-band signaling, so the channel's entire bit rate is available. Channelization must be explicitly specified. Note that if E-3 nodes are provisioned on the channelized SONET/SDH MDA you must provision the parent STS-1 SONET/STM0 SDH path first.

North America uses the T-Carrier system while Europe uses the E-Carrier system of transmission, using multiples of the DS system. Digital signals are carried inside the carrier systems.

The **no** form of this command disables E-3 capabilities.

bert

Syntax **bert** {**2e3** | **2e9** | **2e11** | **2e15** | **2e20** | **2e20q** | **2e23** | **ones** | **zeros** | **alternating**} **duration** *duration*
no bert

Context config>port>tdm>ds1
config>port>tdm>ds3
config>port>tdm>e1
config>port>tdm>e3

Description This command initiates or restarts a Bit Error Rate Test (BERT) on the associated DS-1/E-1 or DS-3/E-3 circuit.

The associated DS-1, E-1, DS-3, or E-3 must be in a shutdown (admin down) state to initiate this test.

The **no** form of the command terminates the BERT test if it has not yet completed.

Notes:

- This command is not saved in the router configuration between boots.
- The 4-port OC-3/STM-1 and the 1-port OC-12/STM-4 ASAP MDA supports up to 28 concurrent BERT tests per MDA. The 4-port and 12-port DS-3/E-3 ASAP MDAs support a single BERT test per MDA. An attempt to configure more BERT tests can result in an error indicating an operation failure due to resource exhaustion.
- If the ASAP MDA BERT error insertion **rate** command is executed when tests are running, it will not take effect until test is restarted.

Default 2e3

Parameters *duration* — Sets the duration for the BERT test.

Values Up to 24 hours, in seconds or hh:mm:ss format

ones — Sends an all ones pattern.

zeros — Sends an all zeros pattern.

alternating — Sends an alternating ones and zeros pattern.

2e3 — Sends a pseudo-random 2^3 -1 pattern

2e9 — Sends a pseudo-random 2^9 -1 pattern

2e15 — Sends a pseudo-random 2^15 -1 pattern.

2e20 — Sends a pseudo-random 2^20 -1 pattern. Not available on channelized ASAP MDAs.

2e23 — Sends a pseudo-random 2^23 -1 pattern.

bit-error-insertion

Syntax **bit-error-insertion** *rate*
no bit-error-insertion

Context config>port>tdm>ds1
config>port>tdm>ds3
config>port>tdm>e1
config>port>tdm>e3

Description This command inserts bit errors into a running BERT test. The number of errors inserted corresponds to 10^(-rate). A rate of 0 will cause 1 error in every bit transmitted. A rate of 7 will cause an error rate of 10^(-7), or 1 error in every one billion bits transmitted.

The no command disables the insertion of bit errors into the bit error rate test stream.

Note that this command is not saved in the router configuration between boots.

Default no bit-error-insertion

Parameters *rate* — Specifies the bit error rate, expressed as an integer.

Values 2 to 7

buildout

Syntax **buildout** {**long** | **short**}

Context config>port>tdm

Description This command specifies line buildout (cable length) for physical DS-1/DS-3 ports.

Default short

Parameters **long** — Sets the line buildout for length runs up to 450 feet.

short — Sets the line buildout for length runs up to 225 feet.

hold-time

Syntax **hold-time hold-time** {[**up hold-time up**] [**down** *hold-time* **down**]}
no hold-time

Context config>port>tdm

Description This command configures link dampening timers in 100s of milliseconds. This guards against reporting excessive interface transitions. This is implemented by not advertising subsequent transitions of the interface to upper layer protocols until the configured timer has expired.

This command is only supported on the m4-chds3-as, m12-chds3-as, and c4-ds3 MDAs.

Default no hold-time

Parameters **up** *hold-time* **up** — Configures the hold-timer for link up event dampening. A value of zero (0) indicates that an up transition is reported immediately.

Values 0 to 100 in 100s of milliseconds (default 0)

down *hold-time* **down** — The hold-timer for link down event dampening. A value of zero (0) indicates that a down transition is reported immediately.

Values 0 to 100 in 100s of milliseconds (default 5)

lbo

Syntax **lbo** [**0dB** | **-7.5dB** | **-15.0dB** | **-22.5dB**]

Context config>port>tdm

Description This command applies only to a DS-1 port configured with a 'long' buildout (see the **buildout** command). Specify the number of decibels the transmission signal decreases over the line.

For 'short' buildout the following values are valid:

lboNotApplicable — Not applicable

For 'long' buildout the following values are valid:

lbo0dB	For 0 dB
lboNeg7p5dB	For -7.5 dB
lboNeg15p0dB	For -15.0 dB
lboNeg22p5dB	For -22.5 dB

The default for 'short' build out is 'NotApplicable' while the default for 'long' buildout is 'lbo0dB'.

length

Syntax **length** {**133** | **266** | **399** | **533** | **655**}

Context config>port>tdm

Description This command applies only to a DS-1 port configured with a 'short' buildout. The **length** command configures the length of the line (in feet). For line lengths longer than 655 feet, configure the DS-1 port buildout as 'long'.

For 'long' buildout the following values are valid:

NotApplicable — Not applicable

For 'short' buildout the following values are valid:

- 0 to 133 For line length from 0 to 133 feet
- 134 to 266 For line length from 134 to 266 feet
- 267 to 399 For line length from 267 to 399 feet
- 400 to 533 For line length from 400 to 533 feet
- 534 to 655 For line length from 534 to 655 feet

The default for 'long' buildout is 'NotApplicable' while the default for 'short' buildout is '0 to 133'.

channel-group

Syntax [**no**] **channel-group** *channel-group-id*

Context config>port>tdm>ds1>channel-group
config>port>tdm>e1>channel-group

Description This command creates DS0 channel groups in a channelized DS1 or E1 circuit. Channel groups cannot be further subdivided.

The **no** form of this command deletes the specified DS1 or E1 channel.

Default n/a

Parameters *channel-group-id* — Identifies the channel-group ID number.

Values DS1: 1 to 24
E1: 1 to 32

channelized

Syntax **channelized** {**ds1** | **e1**}
no channelized

Context config>port>tdm>ds3

Description This command specifies that the associated DS-3 is a channelized DS-3 with DS-1/E-1 sub-channels.
Depending on the MDA type, the DS-3 parameters must be disabled if clear channel is the default (for example, on m12-ds3 MDAs). Clear channel is a channel that uses out-of-band signaling, not in-band signaling, so the channel's entire bit rate is available. Channelization must be explicitly specified. The no form specifies the associated DS-3 is a clear channel circuit and cannot contain sub-channel DS-1s/E-1s. The sub-channels must be deleted first before the **no** command is executed.

Default no channelized.

Parameters **ds1 —** Specifies that the channel is DS-1.

e1 — Specifies that the channel is E-1.

cisco-hdlc

Syntax **cisco-hdlc**

Context config>port>tdm>ds1>channel-group
config>port>tdm>ds3
config>port>tdm>e1>channel-group
config>port>tdm>e3

Description This command enables the context to configure Cisco HDLC parameters. Cisco HDLC is an encapsulation protocol that governs information transfer. It specifies a data encapsulation method on synchronous serial links using frame characters and checksums.

Cisco HDLC monitors line status on a serial interface by exchanging keepalive request messages with peer network devices. It also allows routers to discover IP addresses of neighbors by exchanging Serial Link Address Resolution Protocol (SLARP) address-request and address-response messages with peer network.

Only IES SAPs (including SAPs in VPRN service) can provision a Cisco-HDLC-capable configuration.

clock-source

Syntax **clock-source** {**loop-timed** | **node-timed** | **adaptive** | **differential**}

Context config>port>tdm>ds1
config>port>tdm>ds3
config>port>tdm>e1
config>port>tdm>e3

Description This command configures the clock to be used for transmission of data out towards the line. The options are to use the locally recovered clock from the line's receive data stream, the node central reference, or an adaptively recovered clock using the received packets.

The following tables show MDAs that support loop timing at DS3/E3 and DS1/E1 channelization options.

TDM DS3/E3	LoopTimed	Default
Channelized OC-12	No	node-timed
Channelized OC-3	No	node-timed
Channelized DS3/E3	No	node-timed
Channelized ASAP OC-12	Yes	node-timed
Channelized ASAP OC-3	Yes	node-timed
Channelized ASAP DS3/E3	Yes	node-timed
CES OC-3	Yes	node-timed

TDM DS1/E1	LoopTimed	Default
Channelized OC-12	Yes	loop-timed
Channelized OC-3	Yes	loop-timed
Channelized DS3/E3	Yes	loop-timed
Channelized ASAP OC-12	Yes	loop-timed
Channelized ASAP OC-3	Yes	loop-timed
Channelized ASAP DS3/E3	Yes	loop-timed
CES OC-3	Yes	loop-timed

Parameters **loop-timed —** The link recovers the clock from the received data stream.

node-timed — The link uses the internal clock when transmitting data.

adaptive — The clock is adaptively recovered from the rate at which data is received and not from the physical layer. Adaptive timing is only supported on ds1 and e1 channels.

differential — The clock is recovered from differential RTP timestamp header.

crc

Syntax **crc** {**16** | **32**}

Context config>port>tdm>ds1>channel-group
config>port>tdm>ds3
config>port>tdm>e1>channel-group
config>port>tdm>e3

Description This command configures the precision of the cyclic redundancy check (CRC).

Default 16 for non-ATM channel groups configured under DS-1, E-1 and for non-ATM E-3 and DS-3 channel/ports.

32 for ATM channel-groups configured under DS-1 and E-1, and for ATM E-3 and DS-3 channels/ports. The default cannot be changed.

Parameters **16 —** Uses 16 bit checksum for the associated port/channel.

32 — Uses 32 bit checksum for the associated port/channel.

down-count

Syntax **down-count** *down-count*
no down-count

Context config>port>sonet-sdh>path>cisco-hdlc
config>port>tdm>ds1>channel-group>cisco-hdlc
config>port>tdm>ds3>cisco-hdlc
config>port>tdm>e1>channel-group>cisco-hdlc
config>port>tdm>e3>cisco-hdlc

Description This command configures the number of keepalive intervals that must pass without receiving a keepalive packet before the link is declared down. It is expected that the nodes at the two endpoints of the cHDLC link are provisioned with the same values.

Default 3

Parameters *down-count* — Specifies the number of keep alive intervals that must pass without receiving a keep alive packet before the link is declared down.

Values 3 to 16

encap-type

Syntax **encap-type** {**atm** | **bcp-null** | **bcp-dot1q** | **ipcp** | **ppp-auto** | **frame-relay** | **wan-mirror** |**cisco-hdlc**}

Context config>port>tdm>ds1>channel-group
config>port>tdm>ds3
config>port>tdm>e1>channel-group
config>port>tdm>e3

Description This command configures the encapsulation method used to on the specified port, path, or channel. This parameter can be set on both access and network ports.

When the **encap-type** is set to ATM the CRC, timeslots, scrambling (if applicable), and idle-cycle-flags are set to ATM defaults respectively. When the encap-type is changed from ATM, those parameters are set to their non-ATM defaults.

When the **encap-type** is ATM, ATM sub-layer verification (GR-1248-CORE, *Generic Requirements for Operations of ATM Network Elements (NEs)*) is automatically enabled. When ATM PLCP cell mapping is used, the results of this verification include:

- PLCP Severely Errored Framing Seconds
- PLCP Alarm State
- PLCP Unavailable Seconds Counter

When ATM direct cell mapping is used, the result of the verification includes:

- Out of Cell Delineation (OCD) event count. The OCD event count is described in RFC 2515, *Definitions of Managed Objects for ATM Management*. Note that multiple events occurring within a second will be counted as 1 event for ASAP MDAs as a result of a hardware limit.
- Loss of Cell Delineation defect/alarm. The LCD defect/alarm is defined in RFC 2515, *Definitions of Managed Objects for ATM Management*. When a path is in an LCD defect state, the path's operational status will be down. When a path exits the LCD state, the path's operational status will change to up (assuming nothing else causes the path to stay down). A trap is raised to indicate the LCD status change. Also, a P-RDI is sent to indicate the defect to the remote end.

The **no** form of this command restores the default.

Default bcp-null

Parameters **atm —** Specifies the encapsulation on the port is ATM.

bcp-null — When selected, this keyword specifies that only a single service is configured on this channel and IEEE 802.1Q tags are not used as a service delimiter. Any IEEE 802.1Q tags encountered are regarded as part of the customer payload and transparently forwarded. When bcp-null encapsulation is specified, the PPP Bridge Control Protocol (BCP) is activated and all packets on this access port will be encapsulated in accordance with the BCP protocol.

bcp-dot1q — When selected, this keyword specifies that ingress frames carry IEEE 802.1Q tags and the tags are used as service delimiter. Any untagged packets are silently discarded with exception of protocol specific packets. When bcp-dot1q encapsulation is specified, the PPP Bridge Control Protocol (BCP) is activated and all packets on this access port will be encapsulated in accordance with the BCP protocol.

ipcp — Ingress frames are encapsulated according to the IP Control Protocol. When ipcp encapsulation is specified, the PPP IP Control Protocol will be activated and only packets that comply with IPCP encapsulation are processed; others are silently discarded.

ppp-auto — (Network mode) Enables PPP on the associated port/channel. The activation of ipcp and mplscp is automatically enabled depending on the protocol configuration. This encap type is only valid on ports/channels in network mode.

frame-relay — Enables frame relay on the associated port/channel.

wan-mirror — The port is used for mirroring of frame-relay and POS ports. On these ports, no link management protocol will run.

cisco-hdlc — Monitors line status on a serial interface by exchanging keepalive request messages with peer network devices.

cem — On circuit emulation CMAs and MDAs, only the **cem** encap-type is supported. All other values are blocked with an appropriate warning. The **cem** encap-type is not supported on other CMAs and MDAs and are blocked with an appropriate warning.

feac-loop-respond

Syntax [**no**] **feac-loop-respond**

Context config>port>tdm>ds3
config>port>tdm>e3

Description This command enables the associated DS-3 interface to respond to remote loop signals.

The DS-3 far-end alarm and control (FEAC) signal is used to send alarm or status information from the far-end terminal back to the local terminal. DS-3 loopbacks at the far-end terminal from the local terminal are initiated.

The **no** form of this command prevents the associated DS-3/E-3 interface from responding to remote loop signals.

Default no feac-loop-respond

framing (DS-1)

Syntax **framing** {**esf** | **sf** | **unframed-ds1**}

Context config>port>tdm>ds1

Description This command specifies the DS-1 framing to be used with the associated channel.

Default DS1: esf

Parameters **esf —** Configures the DS-1 port for extended super frame framing.

sf — Configures the DS-1 port for super frame framing.

unframed-ds1 — Specifies ds-1 unframed (G.703) mode for DS-1 interfaces. This parameter allows the configuration of an unstructured DS-1 channel on a CES MDA. In G.704, timeslot 0 is used to carry timing information by a service provider, thus, only 31 slots are made available to the end user. In G.703, all 32 time slots are available to the end user. Timing is provided by the end user. When an e1-unframed channel is shutdown, it sends the AIS pattern to the far-end DS-1 which does not react. The operational status remains up and no alarms are generated while the near-end (shutdown) is operationally down. This is normal behavior since the G.703 option does not have framing. G.703 framing is only applicable for FR, PPP, and C-HDLC encapsulations.

framing (E-1)

Syntax **framing** {**no-crc-g704** | **g704** | **e1-unframed**}

Context config>port>tdm>e1

Description This command specifies the E-1 framing to be used with the associated channel.

Default g704

Parameters **g704 —** Configures the E-1 port for G.704 framing.

no-crc-g70 — Configures the E-1 for G.704 with no CRC4.

e1-unframed — Specifies E-1 unframed (G.703) mode for E-1 interfaces. This parameter also allows the configuration of an unstructured E-1 channel on an ASAP or CES MDA. In G.704, timeslot 0 is used to carry timing information by a service provider, thus, only 31 slots are made available to the end user. In G.703, all 32 time slots are available to the end user. Timing is provided by the end user. When an e1-unframed channel is shutdown, it sends the AIS pattern to the far-end E-1 which does not react. The operational status remains up and no alarms are generated while the near-end (shutdown) is operationally down. This is normal behavior since the G.703 option does not have framing. G.703 framing is only applicable for FR, PPP, and CHDLC and CEM encapsulations.

framing (DS3)

Syntax **framing** {**c-bit** | **m23** | **unframed-ds3**}

Context config>port>tdm>ds3

Description This command specifies DS-3 framing for the associated DS-3 port or channel.

Default **c-bit**

Parameters **c-bit —** Configures the DS-3 port/channels for C-Bit framing.

m23 — Configures the DS-3 port/channel for M23 framing.

unframed-ds1 — Specifies ds-3 unframed mode for DS-3 interfaces. This parameter allows the configuration of an unstructured DS-3 channel on a CES MDA.

framing (E-3)

Syntax **framing** {**g751** | **g832** | **unframed-e3**}

Context config>port>tdm>e3

Description This command specifies E-3 framing for the associated E-3 port or channel.

Default E-3 non-ATM:g751 and cannot be changed.
E-3 ATM: g832 and cannot be changed.

Parameters **g751 —** Configures the E-3 port/channel for g751 framing.

g832 — Configures the E-3 port/channel for g832 framing.

unframed-e3 — Specifies e-3 unframed mode for E-3 interfaces. This parameter allows the configuration of an unstructured E-3 channel on a CES MDA.

idle-cycle-flag

Syntax **idle-cycle-flag** {**flags** | **ones**}

Context config>port>tdm>ds1>channel-group
config>port>tdm>ds3
config>port>tdm>e1
config>port>tdm>e1>channel-group
config>port>tdm>e3

Description This command configures the value that the HDLC TDM DS-0, E-1, E-3, DS-1, or DS-3 interface transmits during idle cycles. For ATM ports/channels/channel-groups, the configuration does not apply and only the no form is accepted.

The **no** form of this command reverts the idle cycle flag to the default value.

Default flags (0x7E)

no flags (ATM)

Parameters **flags —** Specifies that 0x7E is used as the idle cycle flag.

ones — Specifies that 0xFF is used as the idle cycle flag.

idle-payload-fill

Syntax **idle-payload-fill pattern** *pattern*
no idle-payload-fill
idle-payload-fill {**all-ones**}

Context config>port>tdm>ds1>channel-group
config>port>tdm>e1>channel-group

Description This command defines the data pattern to be transmitted when the circuit emulation service is not operational or temporarily experiences under-run conditions. This command is only valid for cesopsn and cesopsn-cas circuit emulation services. It is blocked with a warning for unstructured (satop) circuit emulation services.

Default all-ones

Parameters **all-ones —** Defines the 8 bit value to be transmitted as 11111111.

pattern — Transmits a user-defined pattern.

idle-signal-fill

Syntax **idle-signal-fill** {**all-ones**}
idle-signal-fill pattern *pattern*
no idle-signal-fill

Context config>port>tdm>ds1>channel-group
config>port>tdm>e1>channel-group

Description This command defines the signaling pattern to be transmitted when the circuit emulation service is not operational or temporarily experiences under-run conditions. This command is only valid for cesopsn-cas circuit emulation services. It is blocked with a warning for unstructured (satop) and basic cesopsn circuit emulation services.

Default all-ones

Parameters **all-ones —** Defines the 8 bit value to be transmitted as 11111111.

pattern — Transmits a user-defined pattern.

insert-single-bit-error

Syntax **insert-single-bit-error**

Context config>port>tdm>ds1
config>port>tdm>e1

Description This command inserts a single bit error for the BERT test.

Default no bit-error-insertion

invert-data

Syntax [**no**] **invert-data**

Context config>port>tdm>ds1
config>port>tdm>e1

Description This command causes all data bits to be inverted, to guarantee ones density. Typically used with AMI line encoding.

Default no invert-data

loopback

Syntax **loopback** {**line** | **internal** | **fdl-ansi** | **fdl-bellcore** | **payload-ansi** | **inband-ansi** | **inband-bellcore**}
no loopback

Context config>port>tdm>ds1
config>port>tdm>e1

Description This command puts the specified port or channel into a loopback mode.

The corresponding port or channel must be in a shutdown state in order for the loopback mode to be enabled. The upper level port or channel or parallel channels should not be affected by the loopback mode

Note that this command is not saved in the router configuration between boots.

The **no** form of this command disables the specified type of loopback.

Default no loopback

Parameters **line —** Places the associated port or channel into a line loopback mode. A line loopback loops frames received on the corresponding port or channels back to the remote router.

internal — Places the associated port or channel into a internal loopback mode. A internal loopback loops the frames from the local router back at the framer.

fdl-ansi — Requests FDL line loopback according to ANSI T1.403.

fdl-bellcore — Requests FDL line loopback according to Bellcore TR-TSY-000312.

payload-ansi — Requests payload loopback using ANSI signaling.

inband-ansi — Requests inband line loopback according to ANSI T1.403.

inband-bellcore — Requests inband line loopback according to Bellcore signaling.

loopback

Syntax **loopback** {**line** | **internal** | **remote**}
no loopback

Context config>port>tdm>e3
config>port>tdm>ds3

Description This command puts the specified port or channel into a loopback mode.

The corresponding port or channel must be in a shutdown state in order for the loopback mode to be enabled. The upper level port or channel or parallel channels should not be affected by the loopback mode.

Note that this command is not saved in the router configuration between boots.

The **no** form of this command disables the specified type of loopback.

Default no loopback

Parameters **line —** Places the associated port or channel into a line loopback mode. A line loopback loops frames received on the corresponding port or channels back to the remote router.

internal — Places the associated port or channel into a internal loopback mode. A internal loopback loops the frames from the local router back at the framer.

remote — Sends a signal to the remote device to provide a line loopback.

mdl

Syntax **mdl** {**eic** | **lic** | **fic** | **unit** | **pfi** | **port** | **gen**} *mdl-string*
no mdl

Context config>port>tdm>ds3

Description This command configures the maintenance data link (MDL) message for a DS-3/E-3.

This command is only applicable if the DS-3/E-3 is using C-bit framing (see the framing (DS3) command).

The **no** form of this command removes the MDL string association and stops the transmission of any IDs.

Default no mdl

Parameters *mdl-string* — Specifies an MDL message up to 38 characters long on a DS-3.

eic — Specifies the equipment ID code up to 10 characters long.

lic — Specifies the equipment ID code up to 11 characters long.

fic — Specifies the ID code up to 10 characters long.

unit — Specifies the unit ID code up to 6 characters long.

pfi — Specifies the facility ID code up to 38 characters long.

port — Specifies the port ID code up to 38 characters long.

gen — Specifies the generator number to send in the MDL test signal message up to 38 characters long.

mdl-transmit

Syntax **mdl-transmit** {**path** | **idle-signal** | **test-signal**}
no mdl-transmit [**path** | **idle-signal** | **test-signal**]

Context config>port>tdm>ds3
config>port>tdm>e3

Description This command enables the transmission of an MDL message on a DS-3/E-3 over channelized interface.

The **no** form of this command disables transmission of the specified message or all messages.

Default no mdl-transmit

Parameters **path —** Specifies the MDL path message.

idle-signal — Specifies the MDL idle signal message.

test-signal — Specifies the MDL test signal message.

remote-loop-respond

Syntax [**no**] **remote-loop-respond**

Context config>port>tdm>ds1

Description When enabled, the channel responds to requests for remote loopbacks.

Default no remote-loop-respond — The port will not respond.

report-alarm

Syntax [**no**] **report-alarm** [**ais**] [**los**] [**oof**] [**rai**] [**looped**] [**ber-sd**] [**ber-sf**]

Context config>port>tdm>ds1
config>port>tdm>e1

Description This command enables logging of DS-1/DS-3 or E-1/E-3 alarms for DS-1/DS-3 or E-1/E-3 ports or channels.

The **no** form of this command disables logging of the specified alarms.

Parameters **ais —** Reports alarm indication signal errors. When configured, **ais** alarms are not raised and cleared.

Default **ais** alarms are issued

los — Reports loss of signal errors. When configured, **los** traps are not raised and cleared.

Default **los** traps are issued.

oof — Reports out-of-frame errors. When configured, **oof** alarms are not raised and cleared.

Default **oof** alarms are not issued.

rai — Reports resource availability indicator events. When configured, **rai** events are not raised and cleared.

Default **rai** alarms are not issued

looped — Reports looped packets errors.

looped alarms are not issuedlof — Reports loss of frame errors. When configured, **lof** traps are not raised and cleared.

Default **lof** traps are issued

signal-mode

Syntax **signal-mode** {**cas**}
no signal-mode

Context config>port>tdm>ds1
config>port>tdm>e1

Description This command activates the signal mode on the channel. When enabled, it uses routing information to direct the payload of voice or data to its destination.

The **no** form of the command reverts to the default value.

Default no signal-mode

Parameters **cas —** Specifies channel associated signaling.

speed

Syntax **speed** {**56** | **64**}

Context config>port>tdm>ds1>channel-group
config>port>tdm>e1>channel-group

Description This command sets the speed of the DS-0 channels used in the associated channel-group.

Default 64

Parameters **56 —** Specifies that 56k byte (7-bits per byte) encoding will be used for the associated DS-0 channels.

64 — Specifies that 64k byte (8-bits per byte) encoding will be used for the associated DS-0 channels.

subrate

Syntax **subrate** {**digital-link** | **larscom**} *rate-step*
no subrate

Context config>port>tdm>ds3

Description This command configures the channel service unit (CSU) compatibility mode to interoperate with existing DS-3 subrate standards.

This configuration applies only for non-channelized DS-3s on ASAP TDM MDAs.

The **no** form of this command remove the subrate functionality.

Default no subrate

Parameters **digital-link —** Enables the Digital-Link (Quick Eagle) CSU compatibility mode.

larscom — Enables the Larscom CSU compatibility mode.

rate-step — Specifies the subrate value for the associated DS-3.

Values 1 to 147 (digital-link)
1 to 14 (larscom)

threshold

Syntax **threshold** {**ber-sd** | **ber-sf**} **rate** {**1** | **5** | **10** | **50** | **100**}
no threshold {**ber-sd** | **ber-sf**}

Context config>port>tdm>ds1
config>port>tdm>e1

Description This command configures the line signal degradation bit error rate (BER) and line signal failure thresholds.

Line signal (b2) bit interleaved parity error rates are measured and when they cross either the degradation or failure thresholds alarms are raised (see the report-alarm line & section command), furthermore if the failure threshold is crossed the link will be set to operationally down.

The **no** form of this command reverts to the default value.

Default threshold ber-sd rate 5
threshold ber-sf rate 50

Parameters **ber-sd —** Specifies the BER that specifies signal degradation.

ber-sf — Specifies the BER that specifies signal failure.

rate — Specifies the number of errors, in millions.

timeslots

Syntax **timeslots** *timeslots*
no timeslots

Context config>port>tdm>ds1>channel-group
config>port>tdm>e1>channel-group

Description This command defines the list of DS-0 timeslots to be used in the DS-1 or E-1 channel-group. The timeslots are defaulted as defined below when encap-type is set **to/from atm**. ATM channel groups do not allow timeslots to change.

The **no** form of this command removes DS-0 timeslots from a channel group.

Default n/a

Parameters *timeslots* — Specifies the timeslot(s) to be associated with the channel group. The value can consist of a list of timeslots. Each member of the list can either be a single timeslot or a range of timeslots.

Values 1 to 24 for DS-1 interfaces (the full range is auto-configured for ATM channel groups and cannot be changed)

2 to 32 for E-1 interfaces (the 2 to 16,18 to 32 ranges are auto-configured for ATM channel groups and cannot be changed)

2.25.2.24 LAG Commands

lag

Syntax [**no**] **lag** [*lag-id*]

Context config

Description This command creates the context for configuring Link Aggregation Group (LAG) attributes.

A LAG can be used to group multiple ports into one logical link. The aggregation of multiple physical links allows for load sharing and offers seamless redundancy. If one of the links fails, traffic will be redistributed over the remaining links.

Note that all ports in a LAG group must have autonegotiation set to Limited or Disabled.

There are three possible settings for autonegotiation:

- “on” or enabled with full port capabilities advertised
- “off” or disabled where there is no autonegotiation advertisements
- “limited” where a single speed/duplex is advertised.

When autonegotiation is enabled on a port, the link attempts to automatically negotiate the link speed and duplex parameters. If autonegotiation is enabled, the configured duplex and speed parameters are ignored.

When autonegotiation is disabled on a port, the port does not attempt to autonegotiate and will only operate at the **speed** and **duplex** settings configured for the port. Note that disabling autonegotiation on gigabit ports is not allowed as the IEEE 802.3 specification for gigabit Ethernet requires autonegotiation be enabled for far end fault indication.

If the **autonegotiate** **limited** keyword option is specified the port will autonegotiate but will only advertise a specific speed and duplex. The speed and duplex advertised are the **speed** and **duplex** settings configured for the port. One use for limited mode is for multispeed gigabit ports to force gigabit operation while keeping autonegotiation is enabled for compliance with IEEE 801.3.

The system requires that autonegotiation be disabled or limited for ports in a LAG to guarantee a specific port speed.

The **no** form of this command deletes the LAG from the configuration. Deleting a LAG can only be performed while the LAG is administratively shut down. Any dependencies such as IP-Interfaces configurations must be removed from the configuration before issuing the **no lag** command.

Default No LAGs are defined.

Parameters *lag-id* — The LAG identifier, expressed as an integer.

access

Syntax **access**

Context config>lag

Description This command enables the context to configure access parameters.

adapt-qos

Syntax **adapt-qos** {**link** | **port-fair** | **distribute** [**include-egr-hash-cfg**]}

Context config>lag>access

Description This command specifies how the LAG SAP queue and virtual scheduler buffering and rate parameters are adapted over multiple active XMAs/MDAs. This command applies only to access LAGs.

Default distribute

Parameters **link —** Specifies that the LAG will create the SAP queues and virtual schedulers with the actual parameters on each LAG member port.

port-fair — Places the LAG instance into a mode that enforces QoS bandwidth constraints in the following manner:

- all egress QoS objects associated with the LAG instance are created on a per port basis
- bandwidth is distributed over these per port objects based on the proportion of the port's bandwidth relative to the total of all active ports bandwidth within the LAG
- the **include-egr-hash-cfg** behavior is automatically enabled allowing the system to detect objects that hash to a single egress link in the lag and enabling full bandwidth for that object on the appropriate port

distribute — Creates an additional internal virtual scheduler per IOM/XCM as parent of the configured SAP queues and virtual schedulers per LAG member port on that IOM/XCM. This internal virtual scheduler limits the total amount of egress bandwidth for all member ports on the IOM/XCM to the bandwidth specified in the egress qos policy.

include-egr-hash-cfg — Specifies whether explicitly configured hashing should factor into the egress buffering and rate distribution.

When this parameter is configured, all SAPs on this LAG which have explicit hashing configured, the egress HQos and HPol (including queues, policers, schedulers and arbiters) will receive 100% of the configured bandwidth (essentially operating in adapt-qos link mode). For any Multi-Service-Sites assigned to such a LAG, bandwidth will continue to be divided according to adapt-qos distribute mode.

A LAG instance that is currently in adapt-qos link mode may be placed at any time in port-fair mode. Similarly, a LAG instance that is currently in adapt-qos port-fair mode may be placed at any time in link mode. However, a LAG instance in adapt-qos distribute mode may not be placed into port-fair (or link) mode while QoS objects are associated with the LAG instance. To move from distribute to port-fair mode it is necessary to remove all QoS objects from the LAG instance.

bandwidth

Syntax **bandwidth** *bandwidth*
no bandwidth

Context config>lag>access
config>port>ethernet>access
config>service>apipe>sap
config>service>cpipe>sap
config>service>epipe>sap
config>service>fpipe>sap
config>service>ipipe>sap
config>service>vpls>sap
config>service>ies>if>sap
config>service>vprn>if>sap

Description This command specifies the admin bandwidth assigned to SAPs, ports and LAGs which is used by SAP bandwidth CAC. The admin bandwidth on a port or LAG can be over or under booked using the **booking-factor** command.

SAP: Attempts to increase the SAP admin bandwidth will fail if there is insufficient available admin bandwidth on its port or LAG, otherwise the port or LAG available admin bandwidth will be reduced by the incremental SAP admin bandwidth. Reducing the SAP admin bandwidth will increase the available admin bandwidth on its port or LAG. This is not supported for PW-SAPs, Ethernet tunnels or subscriber group interface SAPs.

Port or LAG: Increasing the port or LAG admin bandwidth will increase the available admin bandwidth on that port or LAG. Reducing the port or LAG admin bandwidth will reduce the available admin bandwidth on that port or LAG, however, if the reduction of available admin bandwidth would cause it to be insufficient to cover the sum of the current SAP admin bandwidth on the port or LAG then the command will fail.

The no form of the command reverts to the default value.

Default **no bandwidth**

Parameters *bandwidth* — Specifies the admin bandwidth assigned to the SAP, port or LAG.

Values 1 to 3200000000 kbps

booking-factor

Syntax **booking-factor** *percentage*
no booking-factor

Context config>lag>access
config>port>ethernet>access

Description This command specifies the booking factor applied against the port or LAG admin bandwidth by SAP admin bandwidth CAC.

The service manager keeps track of the available admin bandwidth for each port or LAG configured with an admin bandwidth. The port or LAG available admin bandwidth is adjusted by the user configured booking factor, allowing the port or LAG bandwidth to be over or under booked.

If the booking factor is increased then available admin bandwidth on the port or LAG increases. If the booking factor is decreased then available admin bandwidth on the port or LAG decreases, however, if the reduction of available admin bandwidth would cause it to be insufficient to cover the sum of the current SAP admin bandwidth on the port or LAG then the command fails.

The no form of the command reverts to the default value.

Default 100

Parameters *percentage* — Specifies the percentage of the port or LAG admin bandwidth for SAP bandwidth CAC.

Values 1 to 1000%

per-fp-egr-queuing

Syntax [**no**] **per-fp-egr-queuing**

Context config>lag>access

Description This command specifies whether a more efficient method of queue allocation for LAG SAPs should be utilized.

The **no** form of the command disables the method of queue allocation for LAG SAPs.

per-fp-ing-queuing

Syntax [**no**] **per-fp-ing-queuing**

Context config>lag>access

Description This command specifies whether a more efficient method of queue allocation for LAG SAPs should be utilized.

The **no** form of the command disables the method of queue allocation for LAG SAPs.

per-fp-sap-instance

Syntax [**no**] **per-fp-sap-instance**

Context config>lag>access

Description This command enables optimized SAP instance allocation on a LAG. When enabled, SAP instance is allocated per each FP the LAG links exits on instead of per each LAG port.

The **no** form of this command disables optimized SAP instance allocation.

Default **no per-fp-sap-instance**

bfd

Syntax **bfd**

Context config>lag

Description This command creates the bfd context and enables BFD over the associated LAG links.

disable-soft-reset-extension

Syntax [**no**] **disable-soft-reset-extension**

Context config>lag>bfd

Description This command enables the BFD context and enables BFD over LAG links. Additional parameter configuration is required to make BFD over LAG links operational. Normally, BFD session timers are automatically extended during soft-reset operation on the IOMs and IMMs to avoid BFD sessions timing out and causing protocol events. However, in some cases this behavior is not desired as it could delay fast re-route transitions if they are in place. The optional disable-soft-reset-extension keyword allows this behavior to be disabled so that the BFD timers are not automatically extended.

Parameters **disable-soft-reset-extension —** Disables the automatic extension of BFD timers during an IOM/IMM soft-reset.

family

Syntax **family** [**ipv4** | **ipv6**]
no family

Context config>lag>bfd

Description This command is used to specify which address family should be used for the micro-BFD session over the associated LAG links.

Default n/a

Parameters **ipv4 —** Specifies that IPv4 encapsulation be used for the micro-BFD session.

ipv6 — Specifies that IPv6 encapsulation be used for the micro-BFD session.

bfd-on-distributing-only

Syntax [**no**] **bfd-on-distributing-only**

Context config>lag>bfd>family

Description This command enables restricting micro-BFD sessions to links in LACP state distributing.

The **no** form of the command disables restricting micro-BFD sessions

Default no bfd-on-distributing-only

local-ip-address

Syntax **local-ip-address** *ip-address*
no local-ip-address

Context config>lag>bfd>family

Description This command is used to specify the IPv4 or IPv6 address of the BFD source.

The **no** form of the command removes this address from the configuration.

Default no local-ip-address

Parameters *ip-address* — Specifies the IP address.

Values

ipv4-address:	a.b.c.d
ipv6-address:	x:x:x:x:x:x:x:x (eight 16-bit pieces)
	x:x:x:x:x:x:d.d.d.d
	x:-[0 to FFFF]H
	d: [0 to 255]D

max-admin-down-time

Syntax **max-admin-down-time** [*down-interval* | **infinite**]
no max-admin-down-time

Context config>lag>bfd>family

Description This command specifies the maximum amount of time the router will continue to forward traffic over a link after the micro-BFD sessions has transitioned to a Down state because it received an ADMIN-DOWN state from the far-end. This timer provide the administrator the configured amount of time to disable or de-provision the micro-BFD session on the local node before forwarding is halted over the associated link(s).

The **no** form of the command removes the time interval from the configuration.

Default no max-admin-down-time

Parameters *down-interval* — Specifies the amount of time, in seconds.

Values -1 to 3600

infinite — Specifies no end time to forward traffic.

max-setup-time

Syntax **max-setup-time** [*up-interval* | **infinite**]
no max-setup-time

Context config>lag>bfd>family

Description This command specifies the maximum amount of time the router will forward traffic over a link that has transitioned from Standby to Active, before the micro-BFD session must be fully established (Up state).

The **no** form of the command returns the timer value to the default (0) which indicates that forwarding will not start until the BFD session is established.

Default no max-setup-time

Parameters *up-interval* — Specifies the amount of time, in milliseconds.

Values -1 to 60000

infinite — Specifies no end time to forward traffic.

multiplier

Syntax **multiplier** *multiplier*
no multiplier

Context config>lag>bfd>family

Description This command specifies the detect multiplier used for a micro-BFD session over the associated LAG links. If a BFD control packet is not received for a period of multiplier X receive-interval then the session is declared down.

The **no** form of the command removes multiplier from the configuration.

Default no multiplier

Parameters *multiplier* — Specifies the multiplier value.

Values 3 to 20

receive-interval

Syntax **receive-interval** *receive-interval*
no receive-interval

Context config>lag>bfd>family

Description This command specifies the receive timer used for micro-BFD session over the associated LAG links.

The **no** form of the command removes the receive timer from the configuration.

Default no receive-interval

Parameters *receive-interval* — Specifies the interval value, in milliseconds.

Values 10 to 100000

Default 100 ms for CPM3 or later, 1 sec for all other

remote-ip-address

Syntax **remote-ip-address** *ip-address*
no remote-ip-address

Context config>lag>bfd>family

Description This command is used to specify the IPv4 or IPv6 address of the BFD destination.

The **no** form of the command removes this address from the configuration.

Default no remote-ip-address

Parameters *ip-address* — Specifies the IP address.

Values
ipv4-address: a.b.c.d

ipv6-address: x:x:x:x:x:x:x:x (eight 16-bit pieces)
x:x:x:x:x:x:d.d.d.d
x:-[0 toFFFF]H
d: [0 to 255]D

transmit-interval

Syntax **transmit-interval** *transmit-interval*
no transmit-interval

Context config>lag>bfd>family

Description This command specifies the transmit timer used for micro-BFD session over the associated LAG links.

The **no** form of the command removes the transmit timer from the configuration.

Default no transmit-interval

Parameters *transmit-interval* — Specifies the interval value, in milliseconds.

Values 10 to 100000

Default 100 ms for CPM3 or later, 1 sec for all other

shutdown

Syntax **shutdown**
no shutdown

Context config>lag>bfd>family

Description This command disables micro BFD sessions for this address family.

The **no** form of the command re-enables micro BFD sessions for this address family.

Default no transmit-interval

dynamic-cost

Syntax [**no**] **dynamic-cost**

Context config>lag

Description This command enables OSPF or ISIS costing of a Link Aggregation Group (LAG) based on the available aggregated, operational bandwidth.

The path cost is dynamically calculated based on the interface bandwidth. OSPF path cost can be changed through the interface metric or the reference bandwidth.

If dynamic cost is configured, then costing is applied based on the total number of links configured and the cost advertised is inversely proportional to the number of links available at the time. This is provided that the number of links that are up exceeds the configured LAG threshold value at which time the configured threshold action determines if, and at what cost, this LAG will be advertised.

For example: Assume a physical link in OSPF has a cost associated with it of 100, and the LAG consists of four physical links. The cost associated with the logical link is 25. If one link fails then the cost would automatically be adjusted to 33.

If dynamic cost is not configured and OSPF autocost is configured, then costing is applied based on the total number of links configured. This cost will remain static provided the number of links that are up exceeds the configured LAG threshold value at which time the configured threshold action determines if and at what cost this LAG will be advertised.

If dynamic-cost is configured and OSPF autocost is not configured, the cost is determined by the cost configured on the OSPF metric provided the number of links available exceeds the configured LAG threshold value at which time the configured threshold action determines if this LAG will be advertised.

If neither dynamic-cost nor OSPF autocost are configured, the cost advertised is determined by the cost configured on the OSPF metric provided the number of links available exceeds the configured LAG threshold value at which time the configured threshold action determines if this LAG will be advertised.

The **no** form of this command removes dynamic costing from the LAG.

Default no dynamic-cost

encap-type

Syntax **encap-type** {**dot1q** | **null** | **qinq**}
no encap-type

Context config>lag

Description This command configures the encapsulation method used to distinguish customer traffic on a LAG. The encapsulation type is configurable on a LAG port. The LAG port and the port member encapsulation types must match when adding a port member.

If the encapsulation type of the LAG port is changed, the encapsulation type on all the port members will also change. The encapsulation type can be changed on the LAG port only if there is no interface associated with it. If the MTU is set to a non default value, it will be reset to the default value when the encap type is changed.

The **no** form of this command restores the default.

Default **null** — All traffic on the port belongs to a single service or VLAN.

Parameters **dot1q —** Ingress frames carry 802.1Q tags where each tag signifies a different service.

null — Ingress frames will not use any tags to delineate a service. As a result, only one service can be configured on a port with a null encapsulation type.

qinq — Specifies QinQ encapsulation.

hold-time

Syntax **hold-time down** *hold-down-time*
no hold-time

Context config>lag

Description This command specifies the timer, in tenths of seconds, which controls the delay between detecting that a LAG is down (all active ports are down) and reporting it to the higher levels.

A non-zero value can be configured, for example, when active/standby signaling is used in a 1:1 fashion to avoid informing higher levels during the small time interval between detecting that the LAG is down and the time needed to activate the standby link.

Default 0

Parameters **down** *hold-down-time* **—** Specifies the hold-time for event reporting

Values 0 to 2000

lacp

Syntax **lacp** [*mode*] [**administrative-key** *admin-key*] [**system-id** *system-id*] [**system-priority** *priority*]

Context config>lag

Description This command specifies the LACP mode for aggregated Ethernet interfaces only. This command enables the LACP protocol. Per the IEEE 802.1ax standard, the Link Aggregation Control Protocol (LACP) provides a standardized means for exchanging information between Partner Systems on a link to allow their Link Aggregation Control instances to reach agreement on the identity of the Link Aggregation Group to which the link belongs, move the link to that Link Aggregation Group, and enable its transmission and reception functions in an orderly manner.

Note that if any of the parameters are omitted, the existing configuration is preserved. The default parameter values are used if a parameter is never explicitly configured.

Default no lacp

Parameters *mode* — Specifies the mode in which LACP will operate.

Values **passive** — Starts transmitting LACP packets only after receiving packets.
active — Initiates the transmission of LACP packets.

administrative-key *admin-key* **—** Specifies an administrative key value to identify the channel group on each port configured to use LACP. This value should be configured only in exceptional cases. A random key is assigned by default if a value is not specified.

Values 1 to 65535

system-priority *priority* **—** Specifies the system priority.

Values 1 to 65535

Default 32768

lacp-mux-control

Syntax **lacp-mux-control** {**coupled** | **independent**}
no lacp-mux-control

Context config>lag

Description This command configures the type of multiplexing machine control to be used in a LAG with LACP in active/passive modes.

The **no** form of the command disables multiplexing machine control.

Default coupled

Parameters **coupled —** TX and RX activate together.

independent — RX activates independent of TX.

lacp-xmit-interval

Syntax **lacp-xmit-interval** {**slow** | **fast**}

Context config>lag

Description This command specifies the interval signaled to the peer and tells the peer at which rate it should transmit.

Default fast

Parameters **slow —** Transmits packets every 30 seconds.

fast — Transmits packets every second.

lacp-xmit-stdby

Syntax [**no**] **lacp-xmit-stdby**

Context config>lag

Description This command enables LACP message transmission on standby links.

The **no** form of this command disables LACP message transmission. This command should be disabled for compatibility when using active/standby groups. This forces a timeout of the standby links by the peer. Use the **no** form if the peer does not implement the correct behavior regarding the lacp sync bit.

Default lacp-xmit-stdby

link-map-profile

Syntax **link-map-profile** *link-map-profile-id* [**create**]
no link-map-profile *link-map-profile-id*

Context config>lag

Description This command creates the link map profile that can to control which LAG ports are to be used on egress or enables the configuration context for previously created link map profile.

The **no** form of this command, deletes the specified link map profile.

Default Link-map-profiles are not created by default.

Parameters *link-map-profile-id* **—** An integer from 1 to 64 that defines a unique lag link map profile on this LAG.

link

Syntax **link** *port-id* {**primary** | **secondary**}
no primary-link

Context config>lag>link>map>profile

Description This command designates one of the configured ports of the LAG to be used on egress as either a primary or secondary link (based on the option selected) by all SAPs/network interfaces that use this LAG link map profile.

The **no** form of this command deletes the link from this LAG link mapping profile. A port must be deleted from all lag link profiles if it is to be deleted from the LAG.

Default Links are part of a profile.

When a link gets added/deleted, all SAPs/network interfaces that use this link-map-profile may be re-hashed if required.

Parameters *port-id* **—** A physical port ID that is an existing member of this LAG:

port-id	*slot*/*mda*/*port*[.*channel*]		
	eth-sat-id	esat-*id*/*slot*/*port*	
		esat	keyword
		id	1 to 20
	pxc-id	pxc-*id*.*sub-port*	
		pxc	keyword
		id	1 to 64
		sub-port	a, b

primary — Designates one of the configured ports of the LAG to be used on egress as a primary link by SAPs/network interfaces that use this LAG link map profile.

secondary — Designates one of the configured ports of the LAG to be used on egress as a secondary link by SAPs/network interfaces that use this LAG link map profile.

failure-mode

Syntax **failure-mode** [**discard** | **per-link-hash**]
no failure-mode

Context config>lag>link>map>profile

Description This command defines the failure mode for egress traffic of SAPs/network interfaces that use this link-map-profile when neither primary nor secondary links of this profile are available.

Default failure-mode per-link-hash

Parameters **discard —** Specifies egress traffic for SAPs/network interfaces using this link-map-profile is discarded to protect SAP/network interface traffic on other LAG links from impact of re-hashing the affected SAPs/network interfaces

per-link-hash — Specifies egress traffic for SAPs/network interfaces using this link-map-profile is rehashed on remaining, available LAG links using per-link-hash algorithm. SAP/network interface QoS configurations dictate what traffic is discarded on any link that may become oversubscribed as result of the re-hash.

port

Syntax **port** *port-id* | **pxc**-*pxc-id.sub-port-id* [*port-id* | pxc-*pxc-id.sub-port-id* [up to 16 at once and 8 total] [**priority** *priority*] [**subgroup** *sub-group-id*]
no port *port-id* | **pxc**-*pxc-id*.*sub-port-id*

Context config>lag>port

Description This command adds ports to a Link Aggregation Group (LAG).

The port configuration of the first port added to the LAG is used as a basis to compare to subsequently added ports. If a discrepancy is found with a newly added port, that port will not be added to the LAG.

Multiple (space separated) ports can be added or removed from the LAG link assuming the maximum of number of ports is not exceeded.

Ports that are part of a LAG must be configured with auto-negotiate limited or disabled.

The **no** form of this command removes ports from the LAG.

Default No ports are defined as members of a LAG.

Parameters *port-id* — The port ID configured or displayed.

Note that the maximum number of ports in a LAG depends on platform-type, hardware deployed, and SR OS software release. Adding a port over the maximum allowed per given router/switch is blocked. Some platforms support double port scale for some port types on LAGs with lag-id in the range of 1 to 64 inclusive.

Values slot/mda/port

priority *priority* **—** Port priority used by LACP. The port priority is also used to determine the primary port. The port with the lowest priority is the primary port. In the event of a tie, the smallest port ID becomes the primary port.

Values 1 to 65535

subgroup *sub-group-id* **—** This parameter identifies a LAG subgroup. When using subgroups in a LAG, they should only be configured on one side of the LAG, not both. Only having one side perform the active/standby selection will guarantee a consistent selection and fast convergence. The active/standby selection will be signaled through LACP to the other side. The hold time should be configured when using subgroups to prevent the LAG going down when switching between active and standby subgroup since momentarily all ports are down in a LAG (break-before-make).

Values 1 to 8 identifies a LAG subgroup
The **auto-iom** subgroup is defined based on the IOM (all ports of the same IOM are assigned to the same subgroup).
The **auto-mda** subgroup is defined based on the MDA. (all ports of the same MDA are assigned to the same subgroup).

pxc-id — Specifies the PXC object ID.

Values 1 to 64

sub-port-id — When this the *pxc-id* is configured, two logical sub-ports are automatically created. These logical sub-ports are used to create two paths within the loop; one upstream path, and one downstream path. These sub-ports are destroyed when either this PXC row is destroyed, this object is de-provisioned.

per-link-hash

Syntax **per-link-hash**
per-link-hash weighted [**auto-rebalance**]
no per-link-hash

Context config>lag

Description This command configures per-link-hashing on a LAG. When enabled, SAPs/subscribers/ interfaces are hashed on LAG egress to a single LAG link.

The **no** form of this command disables per-link-hashing on a LAG.

Default no per-link-hash

Parameters **weighted —** SAPs/subscribers/interfaces are distributed amongst LAG links based on their preconfigured class and weight. As new links are added to a LAG, existing SAPs/subscribers/interfaces are not impacted.

weighted auto-rebalance — SAPs/subscribers/interfaces are distributed amongst LAG links based on their preconfigured class and weight. As new links are added to a LAG, existing SAPs/subscribers/interfaces are rebalanced automatically.

port-threshold

Syntax **port-threshold** *value* [**action** {**dynamic-cost** | **down**}]
no port-threshold

Context config>lag

Description This command configures the behavior for the Link Aggregation Group (LAG) if the number of operational links is equal to or below a threshold level.

The **no** form of this command reverts to the default values.

Default 0 action down

Parameters *value* — The decimal integer threshold number of operational links for the LAG at or below which the configured action will be invoked. If the number of operational links exceeds the port-threshold value, any action taken for being below the threshold value will cease.

Values 0 to 63

action — Specifies the action to take if the number of active links in the LAG is at or below the threshold value.

dynamic-cost — Specifies that dynamic costing will be activated. As a result the LAG will remain operationally up with a cost relative to the number of operational links. The link will only be regarded as operationally down when all links in the LAG are down.

down — Specifies the LAG will be brought operationally down if the number of operational links is equal to or less than the configured threshold value. The LAG will only be regarded as up once the number of operational links exceeds the configured threshold value.

port-type

Syntax **port-type** {**standard** | **hsmda**}
no port-type

Context config>lag

Description This command specifies the type of ports allowed in this LAG.

Parameters **standard —** Allows all non-HSMDA type ports to be added to this LAG.

hsmda — Limits the LAG members to be high-speed MDA (HSMDA) ports only.

port-weight-speed

Syntax **port-weight-speed** {**1** | **10**}
no port-weight-speed

Context config>lag

Description This command enables mixed port-speed LAG operation.

Parameter specified with the command defines what type of ports are allowed in a LAG, and what is the weight of each port for total LAG weight calculation.

The **no** form specifies that all LAG links must be of the same speed. Each link weight is 1. The **no** form disables mixed port-speed LAG operation if there are no mixed-speed links. Issuing this command automatically checks that all links are the same speed and re-calibrates the link weights. If all links are not the same speed, **no-port-weight-speed** is rejected.

Default no port-weight-speed

Parameters **port-weight-speed 1 —** LAG supports any mix of 1GE, 10GE ports up to a total weight of 64 (for 64 link LAGs) or 32 (for 32 link LAGs). Each 1 GE port has a weight of 1; each 10GE port has a weight of 10.

port-weight-speed 10 — LAG supports any mix of 10GE, 40GE, 100GE ports up to a total weight of 64 (for 64 link LAGs) or 32 (for 32 link LAGs). Each 10 GE port has a weight of 1; each 40GE port has a weight of 4; each 100GE port has a weight of 10.

For existing LAGs:

no port-weight-speed can be changed to **port-weight-speed 1** when the LAG consists of only 1GE links. **no port-weight-speed** can be changed to **port-weight-speed 10** when the LAG consists of only 10GE links.

port-weight-speed 1 or **port-weight-speed 10** can be changed to **no port-weight-speed** in service, when all links of the LAG are 1GE, 10GE, 40GE, or 100GE.

All other configuration changes require shutdown of the LAG and removal of all ports first.

selection-criteria

Syntax **selection-criteria** {**highest-count** | **highest-weight** | **best-port**} [**slave-to-partner**] [**subgroup-hold-time** *hold-time*]
no selection-criteria

Context config>lag

Description This command specifies which selection criteria should be used to select the active sub-group. If there is a tie for highest-count or highest-weight, the LAG will prefer the port with the lowest priority. If that does not break the tie, the currently active sub group will stay active (that is, non-revertive behavior).

Default highest-count

Parameters **highest-count —** Selects a sub-group with the highest number of eligible members as an active sub-group (not applicable to “power-off” mode of operations).

highest-weight — Selects a sub-group with the highest aggregate weight as an active subgroup (not applicable to “power-off” mode of operations). Aggregate weight is calculated as the sum of (65535 - port priority) all ports within a sub-group.

best-port — Selects a sub-group containing the port with highest priority port as an active subgroup. In case of equal port priorities, the sub-group containing the port with the lowest port-id is chosen.

slave-to-partner — The **slave-to-partner** keyword specifies that it, together with the selection criteria, should be used to select the active sub-group. An eligible member is a lag-member link which can potentially become active. This means it is operationally up (not disabled) for use by the remote side. The **slave-to-partner** parameter can be used to control whether or not this latter condition is taken into account.

subgroup-hold-time *hold-time* **—** Applicable with LACP enabled. Specifies the optional delay timer for switching to a newly selected active sub-group from the existing active sub-group. The timer delay applies only if the existing sub-group remains operationally up.

Values

not specified	Equivalent to specifying a value of 0. Specifies no delay and to switchover immediately to a new candidate active sub-group.
0 to 2000	Integer specifying the timer value in 10ths of a second.

infinite	Do not switchover from existing active sub-group if the subgroup remains UP. Manual switchover possible using tools perform lag force command.

standby-signaling

Syntax **standby-signaling** {**lacp** | **power-off**}
no standby-signaling

Context config>lag

Description This command specifies how the state of a member port is signaled to the remote side when the status corresponding to this member port has the **standby** value.

weight-threshold

Syntax **weight-threshold** *value* **action** [{**dynamic-cost** | **down**}]
no weight-threshold

Context config>lag

Description This command configures the behavior for the Link Aggregation Group (LAG) if the total weight of operational links is equal to or below the configured threshold level. The command can be used for mixed port-speed LAGs and for LAGs with all ports of equal speed.

The **no** form of this command disabled weight-threshold operation in LAG.

Default no weight-threshold

Parameters *value* — The decimal integer threshold number of operational links for the LAG at or below which the configured action will be invoked. If the number of operational links exceeds the port-threshold value, any action taken for being below the threshold value will cease.

Values 0 to 63

action — Specifies the action to take if the number of active links in the LAG is at or below the threshold value.

dynamic-cost — Specifies that dynamic costing will be activated. As a result the LAG will remain operationally up with a cost relative to the number of operational links. The link will only be regarded as operationally down when all links in the LAG are down.

down — Specifies the LAG will be brought operationally down if the number of operational links is equal to or less than the configured threshold value. The LAG will only be regarded as up once the number of operational links exceeds the configured threshold value.

2.25.2.25 Eth Tunnel Commands

eth-tunnel

Syntax **eth-tunnel** *tunnel-id*
no eth-tunnel

Context config

Description This command configures a G.8031 protected Ethernet tunnel.

The **no** form of this command deletes the Ethernet tunnel specified by the tunnel-id.

Default no eth-tunnel

Parameters *tunnel-id* — Specifies the tunnel ID.

Values 1 to 64

ccm-hold-time

Syntax **ccm-hold-time** {**down** *down-timeout* | **up** *up-timeout*}
no ccm-hold-time

Context config>eth-tunnel

Description This command configures eth-tunnel CCM dampening timers.

The no form of the command reverts to the default.

Default no ccm-hold-time

Parameters **down** *down-timeout* **—** Specifies the eth-tunnel CCM down timers.

Values 0 to 1000 in 100ths of seconds

Default 0

up *up-timeout* **—** Specifies the eth-tunnel CCM up timers.

Values 0 to 5000 in 10ths of seconds

Default 20

description

Syntax **description** *long-description-string*
no description

Context config>eth-tunnel

Description This command adds a text description for the eth-tunnel.

The **no** form of this command removes the text description.

Default Eth-tunnel

Parameters *long-description-string* — Specifies the text description up to 160 characters in length.

ethernet

Syntax **ethernet**

Context config>eth-tunnel

Description This command is the node where Ethernet parameters can be configured.

encap-type

Syntax **encap-type** {**dot1q** | **qinq**}
no encap-type

Context config>eth-tunnel>ethernet

Description This command configures the encapsulation method.

Parameters **dot1q —** Specifies dot1q encapsulation.

qinq — Specifies qinq encapsulation.

mac

Syntax [**no**] **mac** *ieee-address*

Context config>eth-tunnel>ethernet

Description This command assigns a specific MAC address to an Ethernet port, Link Aggregation Group (LAG), Ethernet tunnel or BCP-enabled port or sub-port. Only one MAC address can be assigned to a port. When multiple mac commands are entered, the last command overwrites the previous command. When the command is issued while the port is operational, IP will issue an ARP, if appropriate, and BPDUs are sent with the new MAC address.

The **no** form of this command returns the MAC address to the default value.

Default A default MAC address is assigned by the system from the chassis MAC address pool.

Parameters *ieee-address* — Specifies the source MAC address.

lag-emulation

Syntax **lag-emulation**

Context config>eth-tunnel

Description This command configures eth-tunnel load sharing parameters.

access

Syntax **access**

Context config>eth-tunnel>lag-emulation

Description This command configures eth-tunnel load sharing access parameters

adapt-qos

Syntax **adapt-qos** {**distribute** | **link** | **port-fair**}
no adapt-qos

Context config>eth-tunnel>lag-emulation>access

Description This command configures how the Ethernet Tunnel group SAP queue and virtual scheduler buffering and rate parameters are adapted over multiple active MDAs.

The **no** form of the command reverts the default.

Default no adapt-qos

Parameters **distribute —** Each MDA will receive a fraction of the SAP and scheduler parameters.

link — The Ethernet Tunnel group will create the SAP queues and virtual schedulers with the actual parameters on each MDA.

port-fair — Places the LAG instance into a mode that enforces QoS bandwidth constraints in the following manner:

- All egress QoS objects associated with the LAG instance are created on a per port basis
- Bandwidth is distributed over these per port objects based on the proportion of the port's bandwidth relative to the total of all active ports bandwidth within the LAG
- The inc-egr-hash-cfg behavior is automatically enabled allowing the system to detect objects that hash to a single egress link in the lag and enabling full bandwidth for that object on the appropriate port

A LAG instance that is currently in adapt-qos link mode may be placed at any time in port-fair mode. Similarly, a LAG instance currently in adapt-qos port-fair mode may be placed at any time in link mode. However, a LAG instance in adapt-qos distribute mode may not be placed into port-fair (or link) mode while QoS objects are associated with the LAG instance. To move from distribute to port-fair mode either remove all QoS objects from the LAG instance or remove all member ports from the LAG instance.

per-fp-ing-queuing

Syntax [**no**] **per-fp-ing-queuing**

Context config>eth-tunnel>lag-emulation>access

Description This command configures whether a more efficient method of queue allocation for Ethernet Tunnel Group SAPs should be utilized.

The **no** form of the command reverts the default.

Default no per-fp-ing-queuing

path-threshold

Syntax **path-threshold** *num-paths*
no path-threshold

Context config>eth-tunnel>lag-emulation

Description This command configures the behavior for the eth-tunnel if the number of operational members is equal to or below a threshold level

Parameters *num-paths* — Specifies the threshold for the Ethernet Tunnel group.

Values 0 to 15

protection-type

Syntax **protection-type** {**g8031-1to1** | **loadsharing**}

Context config>eth-tunnel

Description This command configures the model used for determining which members are actively receiving and transmitting data.

The **no** form of the command reverts the default.

Default no path-threshold

Parameters **g8031-1to1 —** As per G.8031 spec, only two members are allowed, and only one of them can be active at one point in time.

loadsharing — Multiple members can be active at one point in time.

revert-time

Syntax **revert-time** *time*
no revert-time

Context config>eth-tunnel

Description This command configure how long to wait before switching back to the primary path after it has been restored to Ethernet tunnel.

The **no** form of this command sets the revert-time to the default value.

Default no revert-time – indicates non-revertive behavior

Parameters *time* — Specifies the re-activation delay in seconds for the primary path.

Values 1 to 720 seconds

path

Syntax [**no**] **path** *path-index*

Context config>eth-tunnel

Description This command configures one of the two paths supported under the Ethernet tunnel. Although the values indicate 1 to 8, only two paths, 1 and 2, are currently supported.

The **no** form of this command removes the path from under the Ethernet tunnel. If this is the last path, the associated SAP needs to be un-configured before the path can be deleted.

Default no path

Parameters *path-index* — Specifies the identifier for the path.

Values 1 to 8

description

Syntax **description** *description-string*
no description

Context config>eth-tunnel>path

Description This command configures a text description for the path.

The **no** form of this command removes the text description.

Default no description

Parameters *description-string* — Specifies a text description.

Values Maximum 80 characters

member

Syntax **member** *port-id*
no member

Context config>eth-tunnel>path

Description This command associates a port with the path defined under the Ethernet tunnel. If the operator wants to replace an existing member port or control tag, the whole path needs to be shutdown first. The alternate path will be activated as a result keeping traffic interruption to a minimum. Then the whole path must be deleted, the alternate path precedence modified to primary before re-creating the new path.

The following port-level configuration needs to be the same across the two member ports of an Ethernet tunnel:

- port>ethernet>access>{ingress|egress}>queue-group
- port>ethernet>egress-scheduler-policy
- port>access>egress>pool
- port>ethernet>dot1q-etype
- port>ethernet>qinq-etype
- port>ethernet>pbb-etype
- port>ethernet>mtu

The Ethernet tunnel will inherit the configuration from the first member port for these parameters. Additional member port that is added must have the same configuration.

The operator is allowed to update these port parameters only if the port is the sole member of an Ethernet tunnel. This means that in the example below, the operator needs to remove port 1/1/4 and port 1/1/5 before being allowed to modify 1/1/1 for the above parameters.

```
eth-tunnel 1
  path 1
    member 1/1/1
  path 2
    member 1/1/4
eth-tunnel 2
  path 1
    member 1/1/1
  path 2
    member 1/1/5
```

The **no** form of this command is used just to indicate that a member is not configured. The procedure described above, based on the **no path** command must be used to un-configure/ change the member port assigned to the path.

Default no member

Parameters *port-id* — Specifies the port-id associated with the path in the format x/y/z where x represents the IOM, y the MDA and z the port numbers.

control-tag

Syntax **control-tag** *vlan-id*
no control-tag

Context config>eth-tunnel>path

Description This command specifies the VLAN-ID to be used for Ethernet CFM and G.8031 control plane exchanges. If the operator wants to replace an existing control-tag, the parent path needs to be in shutdown state, then deleted and recreated before a new control-tag can be specified.

The **no** form of this command is used just to indicate that a control-tag is not configured. The procedure described above, based on 'no path' command must be used to un-configure/ change the control-tag assigned to the path.

Default no control tag specified

Parameters *vlan-id* — Specifies the value of the VLAN ID to be used for the control tag.

Values 1 to 4094, untagged option is not supported

precedence

Syntax **precedence** {**primary** | **secondary**}
no precedence

Context config>eth-tunnel>path

Description This command specifies the precedence to be used for the path. Only two precedence options are supported: **primary** and **secondary**.

The **no** form of this command sets the precedence to the default value.

Default secondary

Parameters **primary | secondary —** Specifies the path precedence as either primary or secondary.

eth-cfm

Syntax **eth-cfm**

Context config>eth-tunnel>path

Description This command enables the context to configure ETH-CFM parameters.

mep

Syntax [**no**] **mep** *mep-id* **domain** *md-index* **association** *ma-index*

Context config>eth-tunnel>path>eth-cfm

Description This command provisions an 802.1ag maintenance endpoint (MEP).

The **no** form of the command reverts to the default values.

Parameters *mep-id* — Specifies the maintenance association end point identifier.

Values 1 to 81921

md-index — Specifies the maintenance domain (MD) index value.

Values 1 to 4294967295

ma-index — Specifies the MA index value.

Values 1 to 4294967295

control-mep

Syntax [**no**] **control-mep**

Context config>eth-tunnel>path>eth-cfm>mep

Description This command enables the Ethernet ring control on the MEP. The use of control-mep command is mandatory for a ring. MEP detection of failure using CCM may be enabled or disabled independently of the control mep.

The **no** form of this command disables Ethernet ring control.

ccm-enable

Syntax [**no**] **ccm-enable**

Context config>eth-tunnel>path>eth-cfm>mep

Description This command enables the generation of CCM messages.

The **no** form of the command disables the generation of CCM messages.

ccm-ltm-priority

Syntax **ccm-ltm-priority** *priority*
no ccm-ltm-priority

Context config>eth-tunnel>path>eth-cfm>mep

Description This command specifies the priority value for CCMs and LTMs transmitted by the MEP.

The **no** form of the command removes the priority value from the configuration.

Default The highest priority on the bridge-port.

Parameters *priority* — Specifies the priority of CCM and LTM messages.

Values 0 to 7

eth-test-enable

Syntax [**no**] **eth-test-enable**

Context config>eth-tunnel>path>eth-cfm>mep

Description This command enables eth-test functionality on MEP. For this test to work, operators need to configure ETH-test parameters on both sender and receiver nodes. The ETH-test then can be done using the following OAM commands:

oam eth-cfm eth-test *mac-address* mep *mep-id* domain *md-index* association *ma-index* [priority *priority*] [data-length *data-length*]

A check is done for both the provisioning and test to ensure the MEP is an Y.1731 MEP (MEP provisioned with domain format none, association format icc-based). If not, the operation fails. An error message in the CLI and SNMP will indicate the problem.

test-pattern

Syntax **test-pattern** {**all-zeros** | **all-ones**} [**crc-enable**]
no test-pattern

Context config>eth-tunnel>path>eth-cfm>mep>eth-test-enable

Description This command configures the test pattern for eth-test frames.

The **no** form of the command removes the values from the configuration.

Parameters **all-zeros —** Specifies to use all zeros in the test pattern.

all-ones — Specifies to use all ones in the test pattern.

crc-enable — Generates a CRC checksum.

Default all-zeros

low-priority-defect

Syntax **low-priority-defect** {**allDef** | **macRemErrXcon** | **remErrXcon** | **errXcon** | **xcon** | **noXcon**}

Context config>eth-tunnel>path>eth-cfm>mep

Description This command specifies the lowest priority defect that is allowed to generate a fault alarm.

Default remErrXcon

Parameters **allDef** | **macRemErrXcon** | **remErrXcon** | **errXcon** | **xcon** | **noXcon —** Specifies the lowest priority defect.

Values

allDef	DefRDICCM, DefMACstatus, DefRemoteCCM, DefErrorCCM
macRemErrXcon	Only DefMACstatus, DefRemoteCCM, DefErrorCCM, and DefXconCCM
remErrXcon	Only DefRemoteCCM, DefErrorCCM, and DefXconCCM
errXcon	Only DefErrorCCM and DefXconCCM
xcon	Only DefXconCCM; or
noXcon	No defects DefXcon or lower are to be reported

mac-address

Syntax **mac-address** *mac-address*
no mac-address

Context config>eth-tunnel>path>eth-cfm>mep

Description This command specifies the MAC address of the MEP.

The **no** form of this command reverts the MAC address of the MEP back to that of the port (if the MEP is on a SAP) or the bridge (if the MEP is on a spoke SDP).

Parameters *mac-address* — Specifies the MAC address of the MEP.

Values 6-byte unicast mac-address (xx:xx:xx:xx:xx:xx or xx-xx-xx-xx-xx-xx) of the MEP. Using the all zeros address is equivalent to the no form of this command.

control-mep

Syntax [**no**] **control-mep**

Context config>eth-tunnel>path>eth-cfm>mep

Description This command enables the usage of the CC state by the Ethernet tunnel manager for consideration in the protection algorithm. The use of control-mep command is recommended if fast failure detection is required, especially when Link Layer OAM does not provide the required detection time.

The **no** form of this command disables the use of the CC state by the Ethernet tunnel manager.

Default no control-mep

shutdown

Syntax [**no**] **shutdown**

Context config>eth-tunnel>path>eth-cfm>mep

Description This command administratively enables/disables the MEP.

The **no** form of this command enables the MEP.

Default shutdown

shutdown

Syntax [**no**] **shutdown**

Context config>eth-tunnel>path
config>eth-tunnel

Description This command administratively enables/disables the path.

The **no** form of this command enables the path.

2.25.2.26 ETH-CFM Configuration Commands

eth-cfm

Syntax **eth-cfm**

Context config>port>ethernet
config>lag

Description This command enables the context to configure 802.1ag CFM parameters.

mep

Syntax **mep** *mep-id* **domain** *md-index* **association** *ma-index* [**vlan** *vlan-id*]
no mep *mep-id* **domain** *md-index* **association** *ma-index* [**vlan** *vlan-id*]

Context config>port>ethernet>eth-cfm
config>lag>eth-cfm
config>router>if>eth-cfm

Description This command provisions the maintenance endpoint (MEP).

The **no** form of the command reverts to the default values.

Parameters *mep-id* — Specifies the maintenance association end point identifier.

Values 1 to 81921

md-index — Specifies the maintenance domain (MD) index value.

Values 1 to 4294967295

ma-index — Specifies the MA index value.

Values 1 to 4294967295

vlan-id — Specific to tunnel facility MEPs which means this option is only applicable to the lag>eth-cfm> context. Used to specify the outer vlan id of the tunnel.

Values 1 to 4094

ais-enable

Syntax [**no**] **ais-enable**

Context config>port>ethernet>eth-cfm>mep
config>lag>eth-cfm>mep

Description This command enables the reception of AIS messages.

The **no** form of the command reverts to the default values.

client-meg-level

Syntax **client-meg-level** [[*level* [*level*]]
no client-meg-level

Context config>port>ethernet>eth-cfm>mep>ais-enable
config>lag>eth-cfm> mep>ais-enable

Description This command configures the client maintenance entity group (MEG) level(s) to use for AIS message generation. Up to 7 levels can be provisioned with the restriction that the client MEG level must be higher than the local MEG level. Only the lowest client MEG level will be used for facility MEPs.

The **no** form of the command reverts to the default values.

Parameters *level* — Specifies the client MEG level.

Values 1 to 7

Default 1

interval

Syntax **interval**
no interval

Context config>port>ethernet>eth-cfm>mep>ais-enable
config>lag>eth-cfm> mep>ais-enable

Description This command specifies the transmission interval of AIS messages in seconds.

The **no** form of the command reverts to the default values.

Parameters **1 | 60 —** The transmission interval of AIS messages in seconds.

Default 1

priority

Syntax **priority** *priority-value*
no priority

Context config>port>ethernet>eth-cfm>mep>ais-enable
config>lag>eth-cfm> mep>ais-enable

Description This command specifies the priority of the AIS messages generated by the node.

The **no** form of the command reverts to the default values.

Parameters *priority-value* — Specifies the priority value of the AIS messages originated by the node.

Values 0 to 7

Default 7

ccm-enable

Syntax [**no**] **ccm-enable**

Context config>port>ethernet>eth-cfm>mep
config>lag>eth-cfm>mep

Description This command enables the generation of CCM messages.

The **no** form of the command disables the generation of CCM messages.

ccm-ltm-priority

Syntax **ccm-ltm-priority** *priority*
no ccm-ltm-priority

Context config>port>ethernet>eth-cfm>mep>
config>lag>eth-cfm>mep>
config>router>if>eth-cfm>mep

Description This command specifies the priority of the CCM and LTM messages transmitted by the MEP. Since CCM does not apply to the Router Facility MEP only the LTM priority is of value under that context.

The **no** form of the command reverts to the default values.

Default no ccm-ltm-priority

Parameters *priority* — Specifies the priority value.

Values 0 to 7

Default 7

ccm-padding-size

Syntax **ccm-padding-size** *ccm-padding*
no ccm-padding-size

Context config>eth-tunnel>path>eth-cfm>mep

Description This command inserts additional padding in the CCM packets.

The **no** form of the command reverts to the default.

Parameters *ccm-padding* — Specifies the additional padding in the CCM packets.

Values 3 to 1500 octets

ccm-tlv-ignore

Syntax **ccm-tlv-ignore** [**port-status**] [**interface-status**]
no ccm-tlv-ignore

Context config>port>ethernet>eth-cfm>mep
config>lag>eth-cfm>mep

Description This command allows the receiving MEP to ignore the specified TLVs in CCM PDU. Ignored TLVs will be reported as absent and will have no impact on the MEP state machine.

The **no** form of the command causes the receiving MEP will process all recognized TLVs in the CCM PDU.

Parameters **port-status —** Ignores the port status TLV on reception.

interface-status — Ignores the interface status TLV on reception.

collect-lmm-stats

Syntax **collect-lmm-stats**
[**no**] **collect-lmm-stats**

Context config>port>ethernet>eth-cfm>mep
config>router>if>eth-cfm>mep
config>lag>eth-cfm>mep

Description This command enables the collection of statistics on the facility MEPs. This command is an object under the Facility MEP. This is at a different level of the hierarchy than collection of lmm statistics for service SAPs and MPLS SDP Bindings. The show mep command can be used to determine is the Facility MEP is collecting stats.

The **no** form of the command disables and deletes the counters for this SAP, Binding or facility.

Default no collect-lmm-stats

eth-test-enable

Syntax [**no**] **eth-test-enable**

Context config>port>ethernet>eth-cfm>mep
config>lag>eth-cfm>mep
config>router>if>eth-cfm>mep

Description For this test to work, operators need to configure ETH-test parameters on both sender and receiver nodes. The ETH-test then can be done using the following OAM commands:

oam eth-cfm eth-test *mac-address* mep *mep-id* domain *md-index* association *ma-index* [priority *priority*] [data-length *data-length*]

The **no** form of the command disables eth-test capabilities.

bit-error-threshold

Syntax **bit-error-threshold** *bit-errors*

Context config>eth-ring>path>eth-cfm>mep

Description This command specifies the lowest priority defect that is allowed to generate a fault alarm.

Default 1

Parameters *bit-errors* — Specifies the lowest priority defect.

Values 0 to 11840

test-pattern

Syntax **test-pattern** {**all-zeros** | **all-ones**} [**crc-enable**]
no test-pattern

Context config>port>ethernet>eth-cfm>mep>eth-test
config>lag>eth-cfm>mep>eth-test
config>router>if>eth-cfm>mep>eth-test

Description This command specifies the test pattern of the ETH-TEST frames. This does not have to be configured the same on the sender and the receiver.

The **no** form of the command reverts to the default values.

Default all-zeros

Parameters **all-zeros —** Specifies to use all zeros in the test pattern.

all-ones — Specifies to use all ones in the test pattern.

crc-enable — Generates a CRC checksum.

low-priority-defect

Syntax **low-priority-defect** {**allDef** | **macRemErrXcon** | **remErrXcon** | **errXcon** | **xcon** | **noXcon**}

Context config>port>ethernet>eth-cfm>mep>eth-test
config>lag>eth-cfm>mep>eth-test

Description This command specifies the lowest priority defect that is allowed to generate a fault alarm. This setting is also used to determine the fault state of the MEP which, well enabled to do so, causes a network reaction.

Default macRemErrXcon

Parameters **allDef** | **macRemErrXcon** | **remErrXcon** | **errXcon** | **xcon** | **noXcon —** Specifies the lowest priority defect.

Values
allDefDefRDICCM, DefMACstatus, DefRemoteCCM, DefErrorCCM, and DefXconCCM
macRemErrXcon
Only DefMACstatus, DefRemoteCCM, DefErrorCCM, and DefXconCCM
remErrXconOnly DefRemoteCCM, DefErrorCCM, and DefXconCCM
errXconOnly DefErrorCCM and DefXconCCM
xconOnly DefXconCCM; or
noXconNo defects DefXcon or lower are to be reported

mac-address

Syntax **mac-address** *mac-address*
no mac-address

Context config>port>ethernet>eth-cfm>mep
config>lag>eth-cfm>mep
config>router>if>eth-cfm>mep

Description This command specifies the MAC address of the MEP.

The **no** form of the command reverts to the MAC address of the MEP back to the default, that of the port, since this is SAP based.

Default no mac-address

Parameters *mac-address* — Specifies the MAC address of the MEP.

Values 6-byte unicast mac-address (xx:xx:xx:xx:xx:xx or xx-xx-xx-xx-xx-xx) of the MEP. Using the all zeros address is equivalent to the no form of this command.

one-way-delay-threshold

Syntax **one-way-delay-threshold** *seconds*

Context config>eth-tunnel>path>eth-cfm>mep

Description This command enables one way delay threshold time limit.

Default 3 seconds

Parameters *seconds* — Specifies the value, in seconds, for the threshold.

Values 0 to 600

facility-fault

Syntax [**no**] **facility-fault**

Context config>lag>eth-cfm>mep
config>port>ethernet>eth-cfm>mep

Description Allows the facility MEP to move from alarming only to network actionable function. This means a facility MEP will not merely report the defect conditions but will be able to action based on the transition of the MEP state. Without this command the facility MEP will only monitor and report and conditions of the MEP do not affect related services.

Default no facility-fault

tunnel-fault

Syntax **tunnel-fault** {**accept** | **ignore**}

Context config>service>vpls>eth-cfm
config>service>vpls>sap>eth-cfm
config>service>epipe>eth-cfm
config>service>epipe>sap>eth-cfm
config>service>ipipe>eth-cfm
config>service>ipipe>sap>eth-cfm
config>service>ies>eth-cfm
config>service>ies>if>sap>eth-cfm
config>service>ies>sub-if>grp-if>sap>eth-cfm
config>service>vprn>eth-cfm
config>service>vprn>if>sap>eth-cfm
config>service>vprn>sub-if>grp-if>sap>eth-cfm

Description Allows the individual service SAPs to react to changes in the tunnel MEP state. When tunnel-fault accept is configured at the service level, the SAP will react according to the service type, Epipe will set the operational flag and VPLS, IES and VPRN SAP operational state will become down on failure or up on clear. This command triggers the OAM mapping functions to mate SAPs and bindings in an Epipe service as well as setting the operational flag. If AIS generation is the requirement for the Epipe services this command is not required. See the **ais-enable** command under the **config>service>epipe>sap>eth-cfm>ais-enable** context

for more details. This works in conjunction with the tunnel-fault accept on the individual SAPs. Both must be set to accept to react to the tunnel MEP state. By default the service level command is “ignore” and the SAP level command is “accept”. This means simply changing the service level command to “accept” will enable the feature for all SAPs. This is not required for Epipe services that only wish to generate AIS on failure.

Default **ignore** (Service Level)

accept (SAP Level for Epipe and VPLS)

Parameters **accept —** Shares fate with the facility tunnel MEP.

ignore — Does not share fate with the facility tunnel MEP.

2.25.2.27 Multi-Chassis Redundancy Commands

redundancy

Syntax **redundancy**

Context config

Description This command allows the user to perform redundancy operations.

Associated commands include the following in the **admin>redundancy** context:

- **force-switchover** - Forces a switchover to the standby CPM/CFM card.
- **now** - Switch to standby CPM/CFM.

  Switching to the standby displays the following message.

  ```
  WARNING: Configuration and/or Boot options may have changed since
  the last save.
  Are you sure you want to switchover (y/n)?
  ```
- **synchronize** - Synchronizes the secondary CPM/CFM.

synchronize

Syntax **synchronize** {**boot-env** | **config**}

Context config>redundancy

Description This command performs a synchronization of the standby CPM/CFM’s images and/or config files to the active CPM/CFM. Either the **boot-env** or **config** parameter must be specified.

In the **config>redundancy** context, this command performs an automatically triggered standby CPM/CFM synchronization.

When the standby CPM/CFM takes over operation following a failure or reset of the active CPM/CFM, it is important to ensure that the active and standby CPM/CFMs have identical operational parameters. This includes the saved configuration, CPM and IOM images.This includes the saved configuration, CPM and IOM images.This includes the saved configuration and CFM images.
The active CPM/CFM ensures that the active configuration is maintained on the standby CPM/CFM. However, to ensure smooth operation under all circumstances, runtime images and system initialization configurations must also be automatically synchronized between the active and standby CPM/CFM.

If synchronization fails, alarms and log messages that indicate the type of error that caused the failure of the synchronization operation are generated. When the error condition ceases to exist, the alarm is cleared.

Only files stored on the router are synchronized. If a configuration file or image is stored in a location other than on a local compact flash, the file is not synchronized (for example, storing a configuration file on an FTP server).

Default config

Parameters **boot-env —** Synchronizes all files required for the boot process (loader, BOF, images, and configuration files.

config — Synchronize only the primary, secondary, and tertiary configuration files.

bgp-multi-homing

Syntax **bgp-multi-homing**

Context config>redundancy

Description This command configures BGP multi-homing parameters.

boot-timer

Syntax **boot-timer** *seconds*
no boot-timer

Context config>redundancy>bgp-mh

Description This command specifies how long the service manager waits after a node reboot before running the MH procedures. The boot-timer value should be configured to allow for the BGP sessions to come up and for the NLRI information to be refreshed/exchanged. The boot-timer is activated after the no shutdown command for a MH site executed from configuration. Upon activation, the boot-timer is compared with the system up-time for the node. If the boot timer is higher than the up-time, then the service manager waits for the boot-timer-sys-up-time, then starts the site-activation-timer.

The no form of this command sets the value to 10.

Default 10 sec

Parameters *seconds* — Specifies the timer, in seconds.

Values 1 to 100

site-activation-timer

Syntax **site-activation-timer** *seconds*
no site-activation-timer

Context config>redundancy>bgp-mh

Description This command defines the amount of time the service manager will keep the local sites in standby status, waiting for BGP updates from remote PEs before running the DF election algorithm to decide whether the site should be unblocked. The timer is started when one of the following event occurs only if the site is operationally up:

- Manual site activation using “no shutdown” at site-id level or at member object(s) level (for example, SAP(s) or PW(s)
- Site activation after a failure

The **no** form of this command sets the value to 2.

Default 2 seconds

Parameters *seconds* — Specifies the timer, in seconds.

Values 1 to 100

site-min-down-timer

Syntax **site-min-down-timer** *min-down-time*
no site-min-down-timer

Context config>redundancy>bgp-multi-homing

Description This command configures the BGP multi-homing site minimum down time. When set to a non-zero value, if the site goes operationally down it will remain operationally down for at least the length of time configured for the **site-min-down-timer**, regardless of whether other state changes would have caused it to go operationally up. This timer is restarted every time that the site transitions from up to down.

The above operation is optimized in the following circumstances:

- If the site goes down on the designated forwarder but there are no BGP multi-homing peers with the same site in an UP state, then the **site-min-down-timer** is not started and is not used.

- If the site goes down on the designated forwarder but there are no active BGP multi-homing peers, then the **site-min-down-timer** is not started and is not used.
- If the **site-min-down-timer** is active and a BGP multi-homing update is received from the designated forwarder indicating its site has gone down, the **site-min-down-timer** is immediately terminated and this PE becomes the designated forwarder if the BGP multi-homing algorithm determines it should be the designated forwarder.

The **no** form of the command reverts to default value.

Default no site-min-down-timer

Parameters *min-down-time* — Specifies the time, in seconds, that a BGP multi-homing site remains operationally down after a transition from up to down.

Values 1 to 100 seconds

Default 0 seconds

multi-chassis

Syntax **multi-chassis**

Context config>redundancy

Description This command enables the context to configure multi-chassis parameters.

peer

Syntax [**no**] **peer** *ip-address* **create**

Context config>redundancy>multi-chassis

Description Use this command to configure up to 20 multi-chassis redundancy peers. Note that it is only for mc-lag (20) not for mc-sync (4).

Parameters *ip-address* — Specifies the IP address.

Values

ipv4-address:	a.b.c.d
ipv6-address:	x:x:x:x:x:x:x:x (eight 16-bit pieces)
	x:x:x:x:x:x:d.d.d.d
	x:-[0 to FFFF]H
	d: [0 to 255]D

create — Specifies to create the peer.

authentication-key

Syntax **authentication-key** [*authentication-key* | *hash-key*] [**hash** | **hash2**]
no authentication-key

Context config>redundancy>multi-chassis>peer

Description This command configures the authentication key used between this node and the multi-chassis peer. The authentication key can be any combination of letters or numbers.

Parameters *authentication-key* — Specifies the authentication key. Allowed values are any string up to 20 characters long composed of printable, 7-bit ASCII characters. If the string contains special characters (#, $, spaces, etc.), the entire string must be enclosed within double quotes.

hash-key — The hash key. The key can be any combination of ASCII characters up to 33 (hash1-key) or 55 (hash2-key) characters in length (encrypted). If spaces are used in the string, enclose the entire string in quotation marks (“ ”).

hash — Specifies the key is entered in an encrypted form. If the **hash** or **hash2** parameter is not used, the key is assumed to be in an unencrypted, clear text form. For security, all keys are stored in encrypted form in the configuration file with the **hash** or **hash2** parameter specified

hash2 — Specifies the key is entered in a more complex encrypted form that involves more variables than the key value alone, meaning that the **hash2** encrypted variable cannot be copied and pasted. If the **hash** or **hash2** parameter is not used, the key is assumed to be in an unencrypted, clear text form. For security, all keys are stored in encrypted form in the configuration file with the **hash** or **hash2** parameter specified.

2.25.2.27.1 MC Endpoint Commands

mc-endpoint

Syntax [**no**] **mc-endpoint**

Context config>redundancy>multi-chassis>peer

Description This command specifies that the endpoint is multi-chassis. This value should be the same on both MC-EP peers for the pseudowires that must be part of the same group.

The **no** form of this command removes the endpoint from the MC-EP. Single chassis behavior applies.

bfd-enable

Syntax [**no**] **bfd-enable**

Context config>redundancy>multi-chassis>peer>mc-ep
config>router>rsvp
config>router>bgp
config>router>bgp>group
config>router>bgp>group>neighbor
config>redundancy>multi-chassis>peer>mc-ep

Description This command enables the use of bi-directional forwarding (BFD) to control the state of the associated protocol interface. By enabling BFD on a given protocol interface, the state of the protocol interface is tied to the state of the BFD session between the local node and the remote node. The parameters used for the BFD are set via the BFD command under the IP interface.

The **no** form of this command disables BFD.

Default no bfd-enable

boot-timer

Syntax **boot-timer** *interval*
no boot-timer

Context config>redundancy>multi-chassis>peer>mc-ep

Description This command configures the boot timer interval. This command applies only when the node reboots. It specifies the time the MC-EP protocol keeps trying to establish a connection before assuming a failure of the remote peer. This is different from the keep-alives mechanism which is used just after the peer-peer communication was established. After this time interval passed all the mc-endpoints configured under services will revert to single chassis behavior, activating the best local PW.

The **no** form of this command sets the interval to default.

Default 300

Parameters *interval* — Specifies the boot timer interval.

Values 1 to 600

hold-on-neighbor-failure

Syntax **hold-on-neighbor-failure** *multiplier*
no hold-on-neighbor-failure

Context config>redundancy>multi-chassis>peer>mc-ep

Description This command specifies the number of keep-alive intervals that the local node will wait for packets from the MC-EP peer before assuming failure. After this time interval passed the all the mc-endpoints configured under services will revert to single chassis behavior, activating the best local pseudowire.

The **no** form of this command sets the multiplier to default value

Default 3

Parameters *multiplier* — Specifies the hold time applied on neighbor failure.

Values 2 to 25

keep-alive-interval

Syntax **keep-alive-interval** *interval*
no keep-alive-interval

Context config>redundancy>multi-chassis>peer>mc-ep

Description This command sets the interval at which keep-alive messages are exchanged between two systems participating in MC-EP when bfd is not enabled or is down. These fast keep-alive messages are used to determine remote-node failure and the interval is set in deci-seconds.

The **no** form of this command sets the interval to default value

Default 5 (0.5s)

Parameters *interval* — The time interval expressed in deci-seconds.

Values 5 to 500 (tenths of a second)

passive-mode

Syntax [**no**] **passive-mode**

Context config>redundancy>multi-chassis>peer>mc-ep

Description This command configures the passive mode behavior for the MC-EP protocol. When in passive mode the MC-EP pair will be dormant until two of the pseudowires in a MC-EP will be signaled as active by the remote PEs, being assumed that the remote pair is configured with regular MC-EP. As soon as more than one pseudowire is active, dormant MC-EP pair will activate. It will use the regular exchange to select the best pseudowire between the active ones and it will block the Rx and Tx directions of the other pseudowires.

The **no** form of this command will disable the passive mode behavior.

Default no passive-mode

system-priority

Syntax **system-priority** *value*
no system-priority

Context config>redundancy>multi-chassis>peer>mc-ep

Description This command allows the operator to set the system priority. The peer configured with the lowest value is chosen to be the Master. If more than one peer has the same lowest system-priority value, then the one with the lowest system-id (chassis MAC address) is chosen as the Master.

The **no** form of this command sets the system priority to default

Default 0

Parameters *value* — Specifies the priority assigned to the local MC-EP peer.

Values 1 to 255

2.25.2.27.2 MC LAG Commands

mc-lag

Syntax [**no**] **mc-lag**

Context config>redundancy>multi-chassis>peer

Description This command enables the context to configure multi-chassis LAG operations and related parameters.

The **no** form of this command administratively disables multi-chassis LAG. MC-LAG can be issued only when mc-lag is shutdown.

hold-on-neighbor-failure

Syntax **hold-on-neighbor-failure** *multiplier*
no hold-on-neighbor-failure

Context config>redundancy>multi-chassis>peer>mc-lag

Description This command specifies the interval that the standby node will wait for packets from the active node before assuming a redundant-neighbor node failure. This delay in switch-over operation is required to accommodate different factors influencing node failure detection rate, such as IGP convergence, or HA switch-over times and to prevent the standby node to take action prematurely.

The **no** form of this command sets this parameter to default value.

Default 3

Parameters *multiplier* — The time interval that the standby node will wait for packets from the active node before assuming a redundant-neighbor node failure.

Values 2 to 25

keep-alive-interval

Syntax **keep-alive-interval** *interval*
no keep-alive-interval

Context config>redundancy>multi-chassis>peer>mc-lag

Description This command sets the interval at which keep-alive messages are exchanged between two systems participating in MC-LAG. These keep-alive messages are used to determine remote-node failure and the interval is set in deci-seconds.

The **no** form of this command sets the interval to default value.

Default 1s (10 hundreds of milliseconds means interval value of 10)

Parameters *interval* — The time interval expressed in deci-seconds

Values 5 to 500

lag

Syntax **lag** *lag-id* **lacp-key** *admin-key* **system-id** *system-id* [**remote-lag** *remote-lag-id*] **system-priority** *system-priority* **source-bmac-lsb** *use-lacp-key*
lag *lag-id* **lacp-key** *admin-key* **system-id** *system-id* [**remote-lag** *remote-lag-id*] **system-priority** *system-priority* **source-bmac-lsb** *MAC-Lsb*
lag *lag-id* **lacp-key** *admin-key* **system-id** *system-id* [**remote-lag** *remote-lag-id*] **system-priority** *system-priority*
lag *lag-id* [**remote-lag** *remote-lag-id*]
no lag *lag-id*

Context config>redundancy>multi-chassis>peer>mc-lag

Description This command defines a LAG which is forming a redundant-pair for MC-LAG with a LAG configured on the given peer. The same LAG group can be defined only in the scope of 1 peer. In order MC-LAG to become operational, all parameters (**lacp-key**, **system-id**, **system-priority**) must be configured the same on both nodes of the same redundant pair.

The partner system (the system connected to all links forming MC-LAG) will consider all ports using the same **lacp-key**, **system-id**, **system-priority** as the part of the same LAG. In order to achieve this in MC operation, both redundant-pair nodes have to be configured with the same values. In case of the mismatch, MC-LAG is kept in oper-down status.

Note that the correct CLI command to enable MC LAG for a LAG in **standby-signaling power-off mode** is **lag** *lag-id* [**remote-lag** *remote-lag-id*]. In the CLI help output, the first three forms are used to enable MC LAG for a LAG in LACP mode. MC LAG is disabled (regardless of the mode) for a given LAG with **no lag** *lag-id.*

Default n/a

Parameters *lag-id* — The LAG identifier, expressed as an integer. Specifying the *lag-id* allows the mismatch between lag-id on redundant-pair. If no **lag-id** is specified it is assumed that neighbor system uses the same *lag-id* as a part of the given MC-LAG. If no matching MC-LAG group can be found between neighbor systems, the individual LAGs will operate as usual (no MC-LAG operation is established).

lacp-key *admin-key* **—** Specifies a 16 bit key that needs to be configured in the same manner on both sides of the MC-LAG in order for the MC-LAG to come up.

Values 1 to 65535

system-id *system-id* **—** Specifies a 6 byte value expressed in the same notation as MAC address

Values xx:xx:xx:xx:xx:xx - xx [00 to FF]

remote-lag *lag-id* **—** Specifies the LAG ID on the remote system.

system-priority *system-priority* **—** Specifies the system priority to be used in the context of the MC-LAG. The partner system will consider all ports using the same **lacp-key**, **system-id**, and **system-priority** as part of the same LAG.

Values 1 to 65535

source-bmac-lsb *MAC-Lsb* **—** Configures the last 16 bit of the MAC address to be used for all traffic ingressing the MC-LAG link(s) or if use-lacp-key option is used, it will only copy the value of lacp-key (redundancy multi-chassis mc-lag lag lacp-key admin-key). The command will fail if the *value* is the same with any of the following configured attributes:

- source-bmac-lsb assigned to other MC-LAG ports
- lsb 16 bits value for the source-bmac configured at chassis or BVPLS level

  The first 32 bits will be copied from the source BMAC of the BVPLS associated with the IVPLS for a specific IVPLS SAP mapped to the MC-LAG. The BVPLS source BMAC can be provisioned for each BVPLS or can be inherited from the chassis PBB configuration.

Values 1 to 65535 or xx-xx or xx:xx

source-address

Syntax **source-address** *ip-address*
no source-address

Context config>redundancy>multi-chassis>peer

Description This command specifies the source address used to communicate with the multi-chassis peer.

Parameters *ip-address* — Specifies the source address used to communicate with the multi-chassis peer.

sync

Syntax [**no**] **sync**

Context config>redundancy>multi-chassis>peer

Description This command enables the context to configure synchronization parameters.

igmp

Syntax [**no**] **igmp**

Context config>redundancy>multi-chassis>peer>sync

Description This command specifies whether IGMP protocol information should be synchronized with the multi-chassis peer.

Default no igmp

igmp-snooping

Syntax [**no**] **igmp-snooping**

Context config>redundancy>multi-chassis>peer>sync

Description This command specifies whether IGMP snooping information should be synchronized with the multi-chassis peer.

Default no igmp-snooping

mld

Syntax [**no**] **mld**

Context config>redundancy>multi-chassis>peer>sync

Description This command specifies whether MLD protocol information should be synchronized with the multi-chassis peer.

Default no mld

mld-snooping

Syntax [**no**] **mld-snooping**

Context config>redundancy>multi-chassis>peer>sync

Description This command is not supported. It is not blocked for backwards-compatibility reasons but has no effect on the system if configured.

pim-snooping

Syntax **pim-snooping** [**saps**]
no pim-snooping

Context config>redundancy>multi-chassis>peer>sync

Description This command specifies whether PIM snooping for IPv4 information should be synchronized with the multi-chassis peer. Entering only **pim-snooping** (without any parameter) results in the synchronization being applicable only to SAPs.

Default no pim-snooping

Parameters *saps* — Specifies that SAPs are to be synchronized with the multi-chassis peer relating to *sync-tags* configured on ports. This is the default when no parameters are included.

port

Syntax **port** [*port-id* | *lag-id*] [**sync-tag** *sync-tag*] [**create**]
no port [*port-id* | *lag-id*]

Context config>redundancy>multi-chassis>peer>sync

Description This command specifies the port to be synchronized with the multi-chassis peer and a synchronization tag to be used while synchronizing this port with the multi-chassis peer.

Parameters *port-id* — Specifies the port to be synchronized with the multi-chassis peer.

lag-id — Specifies the LAG ID to be synchronized with the multi-chassis peer.

sync-tag *sync-tag* **—** Specifies a synchronization tag to be used while synchronizing this port with the multi-chassis peer.

range

Syntax **range** *encap-range* **sync-tag** *sync-tag*
no range *encap-range*

Context config>redundancy>multi-chassis>peer>sync>port

Description This command configures a range of encapsulation values.

Parameters *encap-range* — Specifies a range of encapsulation values on a port to be synchronized with a multi-chassis peer.

Values

Dot1Q	*start-vlan-end-vlan*
QinQ	Q1.*start-vlan*-Q1.*end-vlan*

sync-tag *sync-tag* **—** Specifies a synchronization tag up to 32 characters in length to be used while synchronizing this encapsulation value range with the multi-chassis peer.

srrp

Syntax [**no**] **srrp**

Context config>redundancy>multi-chassis>peer>sync

Description This command specifies whether subscriber routed redundancy protocol (SRRP) information should be synchronized with the multi-chassis peer.

Default no srrp

sub-mgmt

Syntax [**no**] **sub-mgmt**

Context config>redundancy>multi-chassis>peer>sync

Description This command specifies whether subscriber management information should be synchronized with the multi-chassis peer.

Default no sub-mgmt

2.25.2.27.3 Multi-Chassis Ring Commands

mc-ring

Syntax [**no**] **mc-ring**

Context config>redundancy>mc>peer
config>redundancy>multi-chassis>peer>sync

Description This command enables the context to configure the multi-chassis ring parameters.

ring

Syntax **ring** *sync-tag* [**create**]
no ring *sync-tag*

Context config>redundancy>mc>peer>mcr

Description This command configures a multi-chassis ring.

Parameters *sync-tag* — Specifies a synchronization tag to be used while synchronizing this port with the multi-chassis peer.

create — Keyword used to create the multi-chassis peer ring instance. The **create** keyword requirement can be enabled/disabled in the **environment>create** context.

in-band-control-path

Syntax **in-band-control-path**

Context config>redundancy>mc>peer>mcr>ring

Description This command enables the context to configure multi-chassis ring inband control path parameters.

dst-ip

Syntax **dst-ip** *ip-address*
no dst-ip

Context config>redundancy>mc>peer>mcr>ring>in-band-control-path
config>redundancy>mc>peer>mcr>node>cv

Description This command specifies the destination IP address used in the inband control connection. If the address is not configured, the ring cannot become operational.

Parameters *ip-address* — Specifies the destination IP address.

interface

Syntax **interface** *ip-int-name*
no interface

Context config>redundancy>mc>peer>mcr>ring>in-band-control-path

Description This command specifies the name of the IP interface used for the inband control connection. If the name is not configured, the ring cannot become operational.

service-id

Syntax **service-id** *service-id*
no service-id

Context config>redundancy>mc>peer>mcr>ring>ibc
config>redundancy>mc>peer>mcr>node>cv

Description This command specifies the service ID if the interface used for the inband control connection belongs to a VPRN service. If not specified, the *service-id* is zero and the interface must belong to the Base router.

The **no** form of the command removes the service-id from the IBC configuration.

Parameters *service-id* — Specifies the service ID if the interface.

Values 1 to 2147483647

path-b

Syntax [**no**] **path-b**

Context config>redundancy>mc>peer>mcr>ring

Description This command specifies the set of upper-VLAN IDs associated with the SAPs that belong to path B with respect to load-sharing. All other SAPs belong to path A.

Default If not specified, the default is an empty set.

range

Syntax [**no**] **range** *vlan-range*

Context config>redundancy>mc>peer>mcr>ring>path-b

config>redundancy>mc>peer>mcr>ring>path-excl

Description This command configures a MCR b-path VLAN range.

Parameters *vlan-range* — Specifies the VLAN range.

Values [0 to 4094] to [0 to 4094]

path-excl

Syntax [**no**] **path-excl**

Context config>redundancy>mc>peer>mcr>ring

Description This command specifies the set of upper-VLAN IDs associated with the SAPs that are to be excluded from control by the multi-chassis ring.

Default If not specified, the default is an empty set.

ring-node

Syntax **ring-node** *ring-node-name* [**create**]
no ring-node *ring-node-name*

Context config>redundancy>mc>peer>mcr>ring

Description This command specifies the unique name of a multi-chassis ring access node.

Parameters *ring-node-name* — Specifies the unique name of a multi-chassis ring access node.

create — Keyword used to create the ring node instance. The **create** keyword requirement can be enabled/disabled in the **environment>create** context.

connectivity-verify

Syntax **connectivity-verify**

Context config>redundancy>mc>peer>mcr>ring>ring-node

Description This command enables the context to configure node connectivity check parameters.

interval

Syntax **interval** *interval*
no interval

Context config>redundancy>mc>peer>mcr>node>cv

Description This command specifies the polling interval of the ring-node connectivity verification of this ring node.

Default 5

Parameters *interval* — Specifies the polling interval, in minutes.

Values 1 to 6000

service-id

Syntax **service-id** *service-id*
no service-id

Context config>redundancy>mc>peer>mcr>node>cv

Description This command specifies the service ID of the SAP used for the ring-node connectivity verification of this ring node.

Default no service-id

Parameters *service-id* — Specifies the service ID of the SAP.

Values 1 to 2147483647

src-ip

Syntax **src-ip** *ip-address*
no src-ip

Context config>redundancy>mc>peer>mcr>node>cv

Description This command specifies the source IP address used in the ring-node connectivity verification of this ring node.

Default no src-ip

Parameters *ip-address* — Specifies the source IP address.

src-mac

Syntax **src-mac** *ieee-address*
no src-mac

Context config>redundancy>mc>peer>mcr>node>cv

Description This command specifies the source MAC address used for the Ring-Node Connectivity Verification of this ring node.

A value of all zeros (000000000000 H (0:0:0:0:0:0)) specifies that the MAC address of the system management processor (CPM) is used.

Default no src-mac

Parameters *ieee-address* — Specifies the source MAC address.

vlan

Syntax **vlan** [*vlan-encap*]
no vlan

Context config>redundancy>mc>peer>mcr>node>cv

Description This command specifies the VLAN tag used for the Ring-node Connectivity Verification of this ring node. It is only meaningful if the value of service ID is not zero. A zero value means that no VLAN tag is configured.

Default no vlan

Parameters *vlan-encap* — Specifies the VLAN tag.

Values

vlan-encap:	dot1q	qtag
	qinq	qtag1.qtag2
	qtag	0 to 4094
	qtag1	1 to 4094
	qtag2	0 to 4094

2.25.2.28 Forwarding Plane Tools Commands

cpm

Syntax **cpm**

Context tools>dump>mcast-path-mgr

Description This command dumps multicast path manager CPM information.

Output

Sample Output

```
*A:Dut-C# tools dump mcast-path-mgr cpm
McPathMgr[10][0]: 0x763a52c0 blkHoleEval 0
     pPath     swPlaneID     pathType      availBw    pathLimit
inUseBw    maxUsedBw numSGs
0x763a54c8              2    secondary      1800000
1800000            0            0      0
0x763a56c0              1      primary      1039959      2000000
960041       960041      6
0x763a58b8             15      primary       879910      2000000
1120090      1120090      7
0x763a5ab0             14      primary       879908      2000000
1120092      1120092      7
0x763a5ca8             13      primary       880007      2000000
1119993      1119993      7
0x763a5ea0             12      primary       880172      2000000
...
0x763a7448              0         none            0
0            0            0      0
0x763a7640              0    blackhole            0
0            0            0      0
McPathMgr[8][0]: 0x7639a9d8 blkHoleEval 0
     pPath     swPlaneID     pathType      availBw    pathLimit
inUseBw    maxUsedBw numSGs
0x7639abe0              1    secondary      1800000
1800000            0            0      0
0x7639add8             15      primary      2000000
2000000            0            0      0
0x7639afd0             14      primary      2000000
...0x7639cd58              0    blackhole           0
0            0            0      0
McPathMgr[9][0]: 0x76398420 blkHoleEval 0
     pPath     swPlaneID     pathType      availBw    pathLimit
inUseBw    maxUsedBw numSGs
0x76398628             15    secondary      1800000
1800000            0            0      0
0x76398820             14      primary      2000000
2000000            0            0      0
0x76398a18             13      primary      2000000
2000000            0            0      0
...
```

```
0x7639a7a0             0    blackhole            0
0           0            0      0
SwPlane[0]
  pSwPlane      totalBw        priBw   priInUseBw   priAvailBw
secBw   secInUseBw   secAvailBw
0x98ba320      2000000      2000000            0      2000000
1800000            0      1800000
SwPlane[1]
  pSwPlane      totalBw        priBw   priInUseBw   priAvailBw
secBw   secInUseBw   secAvailBw
0x98ba390      2000000      2000000       960041      1039959
1800000            0      1039959
####################################

stype inst             src             grp currBw pathBw pref repl path exp
    0    1      10.10.6.33      227.0.0.23 159891 159891    0    0    P   N
    0    1      10.10.4.10       225.0.0.0 159990 159990    0    0    P   N
    0    1      10.10.4.27      225.0.0.17 159990 159990    0    0    P   N
    0    1      10.10.4.43      225.0.0.33 159993 159993    0    0    P   N
    0    1      10.10.6.47      227.0.0.37 160049 160049    0    0    P   N
    0    1      10.10.4.59      225.0.0.49 160128 160128    0    0    P   N
SwPlane[2]
  pSwPlane      totalBw        priBw   priInUseBw   priAvailBw
secBw   secInUseBw   secAvailBw
0x98ba400      2000000      2000000      1119789       880211
1800000            0       880211
####################################
...
####################################

stype inst             src             grp currBw pathBw pref repl path exp
    0    1      10.10.6.29      227.0.0.19 159891 159891    0    0    P   N
    0    1      10.10.4.28      225.0.0.18 159989 159989    0    0    P   N
    0    1      10.10.4.11       225.0.0.1 159990 159990    0    0    P   N
    0    1      10.10.4.41      225.0.0.31 159992 159992    0    0    P   N
    0    1      10.10.6.43      227.0.0.33 160049 160049    0    0    P   N
    0    1      10.10.6.58      227.0.0.48 160052 160052    0    0    P   N
    0    1      10.10.4.55      225.0.0.45 160127 160127    0    0    P   N
SwPlane[16]
  pSwPlane      totalBw        priBw   priInUseBw   priAvailBw
secBw   secInUseBw   secAvailBw
0x98baa20      2000000      2000000            0      2000000
1800000            0      1800000
SwPlane[17]
  pSwPlane      totalBw        priBw   priInUseBw   priAvailBw
secBw   secInUseBw   secAvailBw
0x98baa90      2000000      2000000            0      2000000
1800000            0      1800000
SwPlane[18]
  pSwPlane      totalBw        priBw   priInUseBw   priAvailBw
secBw   secInUseBw   secAvailBw
0x98bab00      2000000      2000000            0      2000000
1800000            0      1800000
SwPlane[19]
  pSwPlane      totalBw        priBw   priInUseBw   priAvailBw
secBw   secInUseBw   secAvailBw
0x98bab70      2000000      2000000            0      2000000
1800000            0      1800000
SwPlane[20]
```

```
  pSwPlane      totalBw        priBw   priInUseBw   priAvailBw
secBw   secInUseBw   secAvailBw
0x98babe0      2000000      2000000            0      2000000
1800000            0      1800000
SwPlane[21]
  pSwPlane      totalBw        priBw   priInUseBw   priAvailBw
secBw   secInUseBw   secAvailBw
```

2.25.2.29 Forward Path Extension Commands

vxlan-termination

Syntax **vxlan-termination**
no vxlan-termination

Context config>fwd-path-ext>fpe

Description This command informs the system about the type of cross-connect required to terminate non-system IPv4 and IPv6 VXLAN. Internally, it will trigger the automatic creation of two internal IP interfaces in the PXC ports and will enable those internal interfaces to process and terminate the VXLAN.

Default no vxlan-termination

2.26 Show, Monitor, Clear, Debug, and Tools Command Reference

2.26.1 Command Hierarchies

- Show Commands
- Monitor Commands
- Clear Commands
- Debug Commands
- Tools Commands

2.26.1.1 Show Commands

show
- — **aps** [**group** *aps-id*] [**detail**]
- — **chassis** *chassis-id* [**environment**] [**power-management**] [**ccm**]
- — **chassis** [**detail**] [**class** *chassis-class*]
- — **chassis** [**environment**] [**power-supply**] [**ccm**] [**class** *chassis-class*]
  - — **power-management** [**requirements** | **utilization**] [**detail**]
- — **card state**
- — **card** [*slot-number*] [**detail**]
  - — **fp** *fp-value*
    - — **fwd-engine drop-reason statistics**
    - — **ingress**
      - — **queue-group mode** {**access** | **network**}
      - — **queue-group** *queue-group-name* **instance** *instance*-id **mode** {**access** | **network**} [**statistics**]
- — **cflowd**
- — **elmi**
  - — **evc** [*port-id* [**vlan** *vlan-id*]]
  - — **uni** [*port-id*]
- — **eth-tunnel**
- — **fwd-path-ext-ext** [**fpe** *fpe-id*]
- — **fwd-path-ext fpe** *fpe-id* **associations**
- — **interface-group-handler** [*igh-id*]
- — **interface-group-handler** *slot* [*Imcm*] [**detail**]
- — **mda** *slot* [*Imda*] [**detail**]
- — **pools** *mda-id*[*/port*] [*access-app* [*pool-name* | **service** *service-id* | **queue-group** *queue-group-name*]]
- — **pools** *mda-id*[*/port*] [**network-app** [*pool-name* | **queue-group** *queue-group-name*]]
- — **pools** *mda-id*[*/port*] [**direction** [*pool-name*|**service** *service-id* | **queue-group** *queue-group-name*]]
- — **lag** [*lag-id*] [**detail**] [**statistics**]
- — **lag** [*lag-id*] **description**
- — **lag** [*lag-id*] **port**
- — **lag** *lag-id* **associations**
- — **lag** *lag-id* **bfd**
- — **lag** *lag-id* [**detail**] **eth-cfm** [**tunnel** *tunnel-id*]
- — **lag** *lag-id* **associations per-link-hash interface** [**class** {**1** | **2** | **3**}]
- — **lag** *lag-id* **associations link-map-profile** [*link-map-profile*] **interface**
- — **lag** *lag-id* **lacp-partner**
- — **lag** *lag-id* **detail lacp-partner**
- — **lag** *lag-id* **link-map-profile** *link-map-profile*
- — **lag** *lag-id* **associations per-link-hash sap**
- — **lag** *lag-id* **associations link-map-profile** [*link-map-profile*] **sap**
- — **lag** [*lag-id*] [**detail**] [**statistics**] [eth-cfm tunnel tunnel-id]
- — **lag** *lag-id* **associations**
- — **lag** *lag-id* **per-link-hash** [**class** {**1** | **2** | **3**}] [**class** {**1** | **2** | **3**}]
- — **lag** *lag-id* **per-link-hash port** *port-id*
- — **megapools** *slot-number*
- — **megapools** *slot-number* **fp** *forwarding-plane* [**service-id** *service-id*] [**queue-group** *queue-group-name*] [**ingress** | **egress**]
- — **multilink-bundle** [*bundle-id* | *bpgrp-id* | *slot/mda* | **type** {**mlppp** | **ima-grp** | **mlfr** }][**detail**]
- — **multilink-bundle** [*bundle-id* | *bpgrp-id* | *slot/mda*] [**ppp** | **ima** | **mlfr**]

- **multilink-bundle** [*bundle-id* | *bpgrp-id*] **relations**
- **multilink-bundle** *bundle-id* **mlfr** [**frame-relay** [**detail**]]
  - **ima**
    - **ppp** [**detail**]
      - **connections**
      - **port-connection** [**detail**]
      - **pvc** [**detail**]
      - **pvp** [*vpi*] [**detail**]
      - **pvt** [*vpi.vci*] [**detail**]
  - **ppp** [**multiclass**]
  - **relations**
- **peq** [*peq-slot*] [**detail**]
- **port** *port-id* **description**
- **port** *port-id* **associations**
- **port** *port-id* **atm**
- **port** *port-id* **atm connections**
- **port** *port-id* **atm cp**
- **port** *port-id* **atm ilmi**
- **port** *port-id* **atm interface-connections**
- **port** *port-id* **atm pvc** [*vpi*[/*vci*]] [**detail**]
- **port** *port-id* **atm pvp** [*vpi*] [**detail**]
- **port** *port-id* **atm pvt** [*vpi-range*] [**detail**]
- **port** *port-id* **cisco-hdlc** [**detail**]
- **port** *port-id* **mlfr-link** [**detail**]
- **port** *port-id* **frame-relay** [**detail**]
- **port** *port-id* **otu** [**detail**]
- **port** *port-id* **ppp** [**detail**]
- **port** *port-id* **queue-group** [**ingress** | **egress**] [**queue-group-name**] [**access** | **network**] [{**statistic** | **associations**}]
- **port** **port-id queue-group** *qgrp-id* [**instance** *instance-id*] **queue-depth** [**queue** *queue-id*] [**ingress** | **egress**] [**access** | **network**]
- **port** *port-id*
  - **ethernet** [**detail**]
    - **efm-oam**
      - **event-logs** [{**failure** | **degraded**}] [{**active** | **cleared**}]
  - **dot1x** [**detail**]
  - **lldp** [**nearest-bridge** | **nearest-non-tpmr** | **nearest-customer**] [**remote-info**] [**detail**]
  - **port aps** [**detail**]
- **port** *port-id* [**statistics** [**egress-aggregate**]] [**detail**]
- **port cem**
- **port-tree** *port-id*
- **port** *port-id* **ima-link**
- **port** *port-id* **monitor-threshold**
- **port** *port-id* **vport** *vport-name* **monitor-threshold**
- **redundancy**
  - **multi-chassis all**
  - **multi-chassis mc-lag**
  - **multi-chassis sync**
    - **multi-chassis peer ip-address** [**lag lag-id**]
    - **multi-chassis** [**peer ip-address** [**lag lag-id**]] **statistics**

— **mc-ring peer** *ip-address* **statistics**
— **mc-ring peer** *ip-address* [**ring** *sync-tag* [**detail** | **statistics**]]
— **mc-ring peer** *ip-address* **ring** *sync-tag* **ring-node** [*ring-node-name* [**detail** | **statistics**]]
— **mc-ring global-statistics**

— **system**
— **ethernet**
— **efm-oam**
— **lldp** [**neighbor**] *neighbor*
— **switch-fabric** [**exclude-sfm** *sfm-list*]
— **switch-fabric high-bandwidth-multicast**

2.26.1.2 Monitor Commands

For more information about monitor commands, refer to the *Basic System Configuration Guide* for command usage and CLI syntax.

monitor
— **card** *slot-number* **fp** *fp-number* **ingress** {**access** | **network**} **queue-group** *queue-group-name* **instance** *instance-id* [**absolute**] [**interval** *seconds*] [**repeat** *repeat*] **policer** *policer-id*
— **port** *port-id* [*port-id*] [**interval** *seconds*] [**repeat** *repeat*] [**absolute** | **rate**] [**multiclass**]
— **port all-ethernet-rates** [**interval** *seconds*] [**repeat** *repeat*]
— **port atm** [**interval** *seconds*] [**repeat** *repeat*] [**absolute** | **rate**]
— **queue-group** *queue-group-name* **egress** *access* **egress-queue** *egress-queue-id* [**interval** *seconds*] [**repeat** *repeat*] [**absolute** | **rate**]
— **queue-group** *queue-group-name* **ingress** *access* **ingress-queue** *ingress-queue-id* [**interval** *seconds*] [**repeat** *repeat*] [**absolute** | **rate**]
— **queue-group** *queue-group-name* **egress** *network* **instance** *instance-id* [**policer** *policer-id*] [**egress-queue** *egress-queue-id*] [**interval** *seconds*] [**repeat** *repeat*] [**absolute** | **rate**]
— **queue-group atm** [**interval** *seconds*] [**repeat** *repeat*] [**absolute** | **rate**]

2.26.1.3 Clear Commands

clear
— **card** *slot-number* **soft** [**hard-reset-unsupported-mdas**]
— **card** *slot-number* **fp** [*fp-value*] **ingress mode** {**access** | **network**} **queue-group** *group-name* **instance** *instance* **statistics**
— **card** *slot-number* [**soft**]
— **card** *lag-id* **statistics**
— **mda** *mda-id* [**statistics**]
— **port** *port-id* **statistics**
— **port** *port-id* **statistics**
— **port** *port-id* **atm pvc** [*vpi*[*/vci*]] **statistics**
— **port** *port-id* **atm pvp** [*vpi*] **statistics**
— **port** *port-id* **atm pvt** [*vpi1.vpi2*] **statistics**
— **port** *port-id* **atm ilmi statistics**

- **port** *port-id* **atm interface-connection statistics**
- **port** *port-id* **ethernet efm-oam events** *local* | *remote*
- **port** *port-id* **queue-group** *qgrp-id* [**instance** *instance-id*] **queue-depth** [**queue** *queue-id*] {**ingress** | **egress**} [**access** | **network**]
- **port** *port-id* **queue-group** *queue-group-name* [**access** | **network**] {**ingress** | **egress**} [**access** | **network**] [{**statistics**|**associations**}]
- **port** *queue-group-name* **egress** *access* **egress-queue** *egress-queue-id* [**interval** *seconds*] [**repeat** *repeat*] [**absolute** | **rate**]
- **queue-group** *queue-group-name* **ingress** *access* **ingress-queue** *ingress-queue-id* [**interval** *seconds*] [**repeat** *repeat*] [**absolute** | **rate**]
- **queue-group** *queue-group-name* **egress** *network* **instance** *instance-id* [**policer** *policer-id*] [**egress-queue** *egress-queue-id*] [**interval** *seconds*] [**repeat** *repeat*] [**absolute** | **rate**]

2.26.1.4 Debug Commands

debug

- **atm**
- **cisco-hdlc** *port-id*
- **frame-relay**
  - **lag** [*port-id*]
  - [**no**] **frf16** *port-id*
-
- **lag** [**lag-id** *lag-id* **port** *port-id*] [**all**]
- **lag** [**lag-id** *lag-id* **port** *port-id*] [**sm**] [**pkt**] [**cfg**] [**red**] [**iom-upd**] [**port-state**] [**timers**] [**sel-logic**] [**mc**] [**mc-pkt**]
- **no lag** [**lag-id** *lag-id*]
- [**no**] **ppp** *port-id*

2.26.1.5 Tools Commands

tools

- **dump**
  - **aps** *aps-id* [**clear**]
  - **aps mc-aps-signaling** [**clear**]
  - **aps mc-aps-ppp** [**clear**]
  - **eth-tunnel** *tunnel-index* [**clear**]
  - **lag lag-id lag-id**
  - **map-to-phy-port** {**ccag** *ccag-id* | **lag** *lag-id* | **eth-tunnel** *tunnel-index*} {**isid** *isid* [**end-isid** *isid*] | **service** *service-id* | *svc-name* [**end-service** *service-id* | *svc-name*]} [**summary**]
  - **redundancy**
    - **multi-chassis**
      - **mc-ring**
      - **srrp-sync-data** [**instance** *instance-id*] [**peer** *ip-address*]

— **sync-database** [**peer** *ip-address*] [**port** *port-id* | *lag-id*] [**sync-tag** *sync-tag*] [**application** {**dhcps** | **igmp**| **igmp-snooping** | **mc-ring** | **srrp** | **sub-mgmt** | **mld-snooping**}] [**detail**] [**type** {**alarm-deleted** | **local-deleted**}]

tools
— **perform**
— **aps**
— **clear** *aps-id* {**protect** | **working**}
— **force** *aps-id* {**protect** | **working**}
— **lockout** *aps-id*
— **request** *aps-id* {**protect** | **working**}
— **eth-ring**
— **clear** *ring-id*
— **force ring-id path** {**a** | **b**}
— **ima**
— **reset** *bundle-id*
— **lag**
— **clear-force all-mc**
— **clear-force lag-id** *lag-id* [**sub-group** *sub-group-id*]
— **clear-force peer-mc** *ip-address*
— **force all-mc** {**active** | **standby**}
— **force lag-id** *lag-id* [**sub-group** *sub-group-id*] {**active** | **standby**}
— **force peer-mc** *peer-ip-address* {**active** | **standby**}
— **load-balance lag-id** *lag-id* [**class** {**1** | **2** | **3**}]

2.26.2 Command Descriptions

- Hardware Show Commands
- PEQ Show Commands
- APS Show Commands
- Port Show Commands
- Multilink Bundle Show Commands
- LAG Show Commands
- Monitor Commands
- Clear Commands
- Tools Commands

Note: The command outputs in this chapter are examples only; actual displays may differ depending on supported functionality and user configuration.

2.26.2.1 Hardware Show Commands

chassis

Syntax **chassis** *chassis-id* [**environment**] [**power-supply**] [**ccm**]
chassis [**detail**] [**class** *chassis-class*]
chassis [**environment**] [**power-management**] [**ccm**] [**class** *chassis-class*]

Context show

Description This command displays general chassis status information.

Parameters *chassis-id* — specifies chassis 1, 2, oes-1, etc for the router chassis

chassis-class — shows information related to chassis of the specified class

Values router, oes, or esat

environment — shows chassis environmental status information

Default shows all chassis information

power-supply — shows chassis power supply status information

Default shows all chassis information

ccm — Shows chassis control module information.

Output See the following sections:

• Output Fields: show chassis
• Sample Output: show chassis (showing 7450 ESS and 7750 SR)
• Sample Output: show chassis environment
• Sample Output: show chassis power-supply
• Sample Output: show chassis ccm
• Sample Output: show chassis (showing 7950 XRS)
• Sample Output: show chassis detail (showing 7950 XRS)

Output Fields: show chassis

Table 39 describes the output fields for the **show chassis** command.

Table 39 **Output Fields: show chassis**

Label	Description
Name	The system name for the router.
Type	Displays the router model number.
Chassis Topology	Indicates the inter-chassis topology mode in which the system is operating. Standalone indicates that the system is comprised of a single physical router chassis. Extended (XRS-40) on a 7950 XRS based system indicates that two router chassis are connected together in a “back-to-back” topology with no additional switch fabric chassis. An extended chassis topology is comprised of two XRS-20 chassis and is also known as an XRS-40 system.
Chassis role	Chassis Roles are: • Standalone: the value for all non-7950 XRS SR OS systems and for 7950 XRS-20 standalone systems • 7950 XRS-40 Maste • 7950 XRS-40 Extension • OES Master
Location	The system location for the device.
Coordinates	A user-configurable string that indicates the Global Positioning System (GPS) coordinates for the location of the chassis. For example: • N 45 58 23, W 34 56 12 • N37 37' 00 latitude, W122 22' 00 longitude • N36*39.246' W121*40.121'
CLLI Code	The Common Language Location Identifier (CLLI) that uniquely identifies the geographic location of places and certain functional categories of equipment unique to the telecommunications industry.

Table 39 **Output Fields: show chassis (Continued)**

Label	Description (Continued)
Number of slots	The number of slots in the 7450 ESS and 7750 SR chassis that are available for plug-in cards. The total number includes the IOM/CCM slot(s) and the CPM/CFM slots.
Number of ports	The total number of ports currently installed in this chassis. This count does not include the Ethernet ports on the CPMs/CFMs/CCMs that are used for management access.
Oper Number of Slots	The number of slots in the 7950 XRS chassis that are available for XCM cards and CPM cards operating as the active or standby CPM. Oper Number of Slots goes to 24 when Chassis Topology is Extended.
Critical LED state	The current state of the Critical LED in this chassis.
Major LED state	The current state of the Major LED in this chassis.
Minor LED state	The current state of the Minor LED in this chassis.
Base MAC address	The base chassis Ethernet MAC address.
Over Temperature state	Indicates if there is currently an over temperature condition (OK = not currently over temp)
Admin chassis mode	The configured chassis mode.
Oper chassis mode	The current chassis mode.
Part number	The part number of the particular hardware assembly. In the show chassis output, the first set of Hardware Data output is for the chassis midplane.
CLEI code	The Common Language Equipment Code of the particular hardware assembly.
Serial number	The serial number of the particular hardware assembly.
Manufacture date	The manufacture date of the particular hardware assembly.
Manufacturing string	The factory inputted manufacturing text string for the particular hardware assembly.
Manufacturing deviations	Additional manufacturing data.
Manufacturing assembly number	Additional manufacturing data.
Time of last boot	The date and time the most recent boot occurred.
Current alarm state	Displays the alarm conditions for the specific board.
Number of fan trays	The total number of fan trays installed in this chassis.
Number of fans	The total number of fans installed in this chassis.
Fan tray number	The ID for each fan tray installed in the chassis

Table 39 **Output Fields: show chassis (Continued)**

Label	Description (Continued)
Operational status	Current status of the fan tray.
Speed	Indicates the speed of the fans.
Status	Current status of the particular hardware assembly.
Number of power supplies	The number of power supplies installed in the chassis.
Power supply number	The ID for each power supply installed in the chassis.
Power supply type	The basic type of the power supply.
Power supply model	The model of the power supply.
CCM Slot	The identifier of the CCM (A or B).
Equipped	Indicates if the CCM is detected as physically present.
Temperature	The current temperature detected by the particular hardware assembly.
Temperature threshold	The temperature at which the particular hardware assembly considers an over temperature condition to exist.
CCM	Number of Chassis Control Modules on this unit (for the 7750 SR-c12 and 7750 SR-c4 only)
Part number	The CCM part number.
CLEI code	The code used to identify the router.
Serial number	The CCM serial number. Not user modifiable.
Manufacture date	The chassis manufacture date. Not user modifiable.
Manufacturing string	Factory-inputted manufacturing text string. Not user modifiable.
Administrative state	Up — The card is administratively up. Down — The card is administratively down.
Operational state	Up — The card is operationally up. Down — The card is operationally down.
Temperature	The internal chassis temperature.
Temperature threshold	The value above which the internal temperature must rise in order to indicate that the temperature is critical.
Time of last boot	The date and time the most recent boot occurred.
Current alarm state	Displays the alarm conditions for the CCM.

Sample Output: show chassis (showing 7450 ESS and 7750 SR)

```
ALA-1# show chassis
===============================================================================
Chassis Information
===============================================================================
    Name                          : Dut-D
    Type                          : 7750 SR-7
    Location                      :
    Coordinates                   :
    CLLI code                     :
    Number of slots               : 7
    Number of ports               : 19
    Critical LED state            : Off
    Major LED state               : Off
    Minor LED state               : Off
    Base MAC address              : 00:03:fa:14:cf:a7
    Admin chassis mode            : a
    Oper chassis mode             : a

Hardware Data
    Part number                   : 3HE00186AAAA01
    CLEI code                     :
    Serial number                 : NS042450133
    Manufacture date              : 06172004
    Manufacturing string          :
    Manufacturing deviations      :
    Time of last boot             : 2007/04/11 09:37:51
    Current alarm state           : alarm cleared

Environment Information
    Number of fan trays           : 2
    Number of fans                : 4

    Fan tray number               : 1
    Status                        : up
    Speed                         : half speed

    Fan tray number               : 2
    Status                        : up
    Speed                         : half speed

Power Supply Information
    Number of power supplies      : 2

    Power supply number           : 1
    Defaulted power supply type   : none
    Status                        : not equipped

    Power supply number           : 2
    Defaulted power supply type   : dc
    Status                        : up
===============================================================================
Chassis Summary
===============================================================================
Chassis   Role                Status
-------------------------------------------------------------------------------
1         Standalone          up
===============================================================================
```

```
ALA-1#
```

Sample Output: show chassis class oes detail

```
*A:Dut-A# show chassis detail class oes
===============================================================================
System Information
===============================================================================
  Name                              : Dut-A
  Type                              : 7750 SR-7
  Chassis Topology                  : Standalone
  Location                          : (Not Specified)
  Coordinates                       : (Not Specified)
  CLLI code                         :
  Number of slots                   : 7
  Oper number of slots              : 7
  Number of ports                   : 16
  Critical LED state                : Off
  Major LED state                   : Off
  Minor LED state                   : Off
  Over Temperature state            : OK
  Base MAC address                  : 00:1a:f0:b2:fe:ad
  Admin chassis mode                : a
  Oper chassis mode                 : a
  Mixed mode                        : Disabled
  Fabric Speed                      : 10 Gig
===============================================================================
Chassis oes-1 Detail
===============================================================================
  Chassis Status                    : up
  Chassis Role                      : OES Master
  Description                       : (Not Specified)
  Type                              : pss32
-------------------------------------------------------------------------------
Environment Information
  Number of fan trays               : 1
  Number of fans                    : 3

  Fan tray slot                     : oes-1/37
    Fan speed setting               : normal
    Status                          : up
    Hardware Data
      Part number                   : 8DG59243ABAA01
      CLEI code                     : WOCUASZUAA
      Serial number                 : EZ1515A3036
      Manufacture date              : 150410
      Temperature                   : N/A
-------------------------------------------------------------------------------
USRPNL Information
  Status                            : up

  Hardware Data
    Part number                     : 8DG59240AAAA01
    CLEI code                       : WOCUAKCUAA
    Serial number                   : EZ1440A0700
    Manufacture date                : 140930
    Temperature                     : N/A
  USRPNL E1 Port
```

```
    Oper State                     : Down
-------------------------------------------------------------------------------
Power Filter Information
  Number of power filters          : 2

  Power filter slot                : oes-1/19
    Status                         : up
    Amp Rating                     : 70.0 A
    Input Voltage                  : 53.7 V
    Input Current                  : 9.0 A
    Input Power                    : 486 W
    Clock A(ref local)             : 4.5 ppm
    Clock B(ref local)             : 4.8 ppm
    Clock Delta                    : -0.1 ppm
    Hardware Data
      Part number                  : 8DG59242BAAB03
      CLEI code                    : WOPUAD4MAB
      Serial number                : EZ1449A2691
      Manufacture date             : 141205
      Temperature                  : 30C

  Power filter slot                : oes-1/36
    Status                         : up
    Amp Rating                     : 70.0 A
    Input Voltage                  : 53.7 V
    Input Current                  : 9.9 A
    Input Power                    : 530 W
    Clock A(ref local)             : 3.6 ppm
    Clock B(ref local)             : 3.6 ppm
    Clock Delta                    : 0.1 ppm
    Hardware Data
      Part number                  : 8DG59242BAAB03
      CLEI code                    : WOPUAD4MAB
      Serial number                : EZ1449A2689
      Manufacture date             : 141205
      Temperature                  : 30C
===============================================================================
```

Sample Output: show chassis environment

```
A:ALA-4# show chassis environment
===============================================================================
Chassis Information
Environment Information
    Number of fan trays          : 1
    Number of fans               : 2

    Fan tray number              : 1
    Status                       : up
    Speed                        : half speed
===============================================================================
A:ALA-4#
```

Sample Output: show chassis power-supply

```
A:ALA-4# show chassis power-supply
===============================================================================
```

```
Chassis Information
===============================================================================
Power Supply Information
    Number of power supplies      : 2

    Power supply number           : 1
    Defaulted power supply type   : dc
    Status                        : up

    Power supply number           : 2
    Defaulted power supply type   : dc
    Status                        : up
===============================================================================
A:ALA-4#
```

Sample Output: show chassis ccm

```
A:7750-3# show chassis ccm
===============================================================================
Chassis Information
===============================================================================
Chassis Control Module (CCM) Information
    CCM number                    : 1
    Equipped                      : yes
    Type                          : ccm-xp

Hardware Data
    Part number                   : Sim Part#
    CLEI code                     : Sim CLEI
    Serial number                 : ccm-0
    Manufacture date              : 01012003
    Manufacturing string          : Sim MfgString ccm-0
    Manufacturing deviations      : Sim MfgDeviation ccm-0
    Administrative state          : up
    Operational state             : up
    Temperature                   : 32C
    Temperature threshold         : 75C
    Time of last boot             : N/A
    Current alarm state           : alarm cleared
===============================================================================
A:7750-3>
```

Sample Output: show chassis (showing 7950 XRS)

```
*A:myNode# show chassis
===============================================================================
System Information
===============================================================================
Name : myNode
Type : 7950 XRS-20
Chassis Topology : Extended (XRS-40)
...

Number of slots : 24
Oper number of slots : 24

...
```

```
Base MAC address : ac:9f:ff:00:00:00
===============================================================================
Chassis Summary
===============================================================================
Chassis Role Status
-------------------------------------------------------------------------------
1 XRS-40 Master Up
2 XRS-40 Extension Up
-------------------------------------------------------------------------------
Total: 34
===============================================================================
```

Sample Output: show chassis detail (showing 7950 XRS)

```
A:7950 XRS-20# show chassis detail
===============================================================================
System Information
===============================================================================
Name : 7950 XRS-20
Type : 7950 XRS-20
Chassis Topology : Standalone
Location : (Not Specified)
Coordinates : (Not Specified)
CLLI code :
Number of slots : 24
Oper number of slots : 12
Number of ports : 22
Critical LED state : Off
Major LED state : Red
Minor LED state : Off
Over Temperature state : OK
Base MAC address : ac:9f:ff:00:00:00
===============================================================================
Chassis 1 detail
===============================================================================
Chassis status : up
Chassis role : XRS-40 Master
Hardware Data
Part number : Sim Part#
CLEI code : Sim CLEI
Serial number : bksim3106
Manufacture date : 01012003
Manufacturing deviations : Sim MfgDeviation bksim3106
Manufacturing assembly number : 01-2345-67
Time of last boot : 2013/12/18 15:16:54
Current alarm state : alarm active
-------------------------------------------------------------------------------
Environment Information

Number of fan trays : 2
Number of fans : 2
Fan tray number : 1
Speed : half speed
Status : up
Hardware Data
Part number : Sim Part#
CLEI code : Sim CLEI
```

```
Serial number : fan-1
Manufacture date : 01012003
Manufacturing deviations : Sim MfgDeviation fan-1
Manufacturing assembly number : 01-2345-67
Administrative state : up
Operational state : up
Time of last boot : 2013/12/18 14:16:58
Current alarm state : alarm cleared
Hardware Resources (Power-Zone 1)
Voltage
Minimum : 51.00 Volts (12/18/2013 15:17:00)
Current : 51.00 Volts
Peak : 51.00 Volts (12/18/2013 15:17:00)
Wattage
Minimum : 561.00 Watts (12/18/2013 15:17:00)
Current : 561.00 Watts
Peak : 561.00 Watts (12/18/2013 15:17:00)
Max Required : 900.00 Watts
Amperage
Minimum : 11.00 Amps (12/18/2013 15:17:00)
Current : 11.00 Amps
Peak : 11.00 Amps (12/18/2013 15:17:00)

Fan tray number : 2
Speed : half speed
Status : up
Hardware Data
Part number : Sim Part#
CLEI code : Sim CLEI
Serial number : fan-2
Manufacture date : 01012003
Manufacturing deviations : Sim MfgDeviation fan-2
Manufacturing assembly number : 01-2345-67
Administrative state : up
Operational state : up
Time of last boot : 2013/12/18 14:16:56
Current alarm state : alarm cleared
Hardware Resources (Power-Zone 1)
Voltage
Minimum : 52.00 Volts (12/18/2013 15:16:59)
Current : 52.00 Volts
Peak : 52.00 Volts (12/18/2013 15:16:59)
Wattage
Minimum : 624.00 Watts (12/18/2013 15:16:59)
Current : 624.00 Watts
Peak : 624.00 Watts (12/18/2013 15:16:59)
Max Required : 900.00 Watts
Amperage
Minimum : 12.00 Amps (12/18/2013 15:16:59)
Current : 12.00 Amps
Peak : 12.00 Amps (12/18/2013 15:16:59)
-------------------------------------------------------------------------------
Power Management Information

Power Management Mode : basic
Power Safety Level : 100%
Power Safety Alert : 0 watts
Number of PEQs : 12
```

```
PEQ number : 1
PEQ Equipped Type : apeq-dc-2000
PEQ Provisioned Type : (Not Specified)
Power-Zone : 1
Status : up
Input Feed Status : power to all inputs
Hardware Data
Part number : Sim Part#
CLEI code : Sim CLEI
Serial number : peq-1
Manufacture date : 01012003
Manufacturing deviations : Sim MfgDeviation peq-1
Manufacturing assembly number : 01-2345-67
Administrative state : up
Operational state : unprovisioned
Time of last boot : 2013/12/18 14:16:53
Current alarm state : alarm cleared

PEQ number : 2
PEQ Equipped Type : apeq-dc-2000
PEQ Provisioned Type : (Not Specified)
Power-Zone : 1
Status : up
Input Feed Status : power to all inputs
Hardware Data
Part number : Sim Part#
CLEI code : Sim CLEI
Serial number : peq-2
Manufacture date : 01012003
Manufacturing deviations : Sim MfgDeviation peq-2
Manufacturing assembly number : 01-2345-67
Administrative state : up
Operational state : unprovisioned
Time of last boot : 2013/12/18 14:16:52
Current alarm state : alarm cleared
…
PEQ number : 12
PEQ Equipped Type : apeq-dc-2000
PEQ Provisioned Type : (Not Specified)
Power-Zone : 1
Status : up
Input Feed Status : power to all inputs
Hardware Data
Part number : Sim Part#
CLEI code : Sim CLEI
Serial number : peq-12
Manufacture date : 01012003
Manufacturing deviations : Sim MfgDeviation peq-12
Manufacturing assembly number : 01-2345-67
Administrative state : up
Operational state : unprovisioned
Time of last boot : 2013/12/18 14:16:42
Current alarm state : alarm cleared
------------------------------------------------------------------------------
Chassis Control Module (CCM) Information

CCM Slot : A
Equipped : yes
Hardware Data
```

```
Part number : Sim Part#
CLEI code : Sim CLEI
Serial number : ccm-1
Manufacture date : 01012003
Manufacturing deviations : Sim MfgDeviation ccm-1
Manufacturing assembly number : 01-2345-67
Administrative state : up
Operational state : up
Temperature : -128C
Temperature threshold : 75C
Time of last boot : N/A
Current alarm state : alarm cleared
Hardware Resources (Power-Zone 1)
Voltage
Minimum : 52.80 Volts (12/18/2013 15:16:54)
Current : 52.80 Volts
Peak : 52.80 Volts (12/18/2013 15:16:54)
Wattage
Minimum : 20.00 Watts (12/18/2013 15:16:54)
Current : 20.00 Watts
Peak : 20.00 Watts (12/18/2013 15:16:54)
Max Required : 22.00 Watts
Amperage
Minimum : 0.38 Amps (12/18/2013 15:16:54)
Current : 0.38 Amps
Peak : 0.38 Amps (12/18/2013 15:16:54)

CCM Slot : B
Equipped : yes
Hardware Data
Part number :
CLEI code :
Serial number :
Manufacture date :
Manufacturing deviations : (Not Specified)
Manufacturing assembly number :
Administrative state : up
Operational state : up
Temperature : 0C
Temperature threshold : 75C
Time of last boot : N/A
Current alarm state : alarm cleared
Hardware Resources (Power-Zone 1)
Voltage
Minimum : 0.00 Volts (N/A)
Current : 0.00 Volts
Peak : 0.00 Volts (N/A)
Wattage
Minimum : 0.00 Watts (N/A)
Current : 0.00 Watts
Peak : 0.00 Watts (N/A)
Max Required : 0.00 Watts
Amperage
Minimum : 0.00 Amps (N/A)
Current : 0.00 Amps
Peak : 0.00 Amps (N/A)


================================================================================
```

```
Chassis 2 detail
================================================================================
Chassis status : up
Chassis role : XRS-40 Extension
Hardware Data
Part number : Sim Part#
CLEI code : Sim CLEI
Serial number : bksim3106
Manufacture date : 01012003
Manufacturing deviations : Sim MfgDeviation bksim3106
Manufacturing assembly number : 01-2345-67
Time of last boot : 2013/12/18 15:16:54
Current alarm state : alarm active
--------------------------------------------------------------------------------
Environment Information

Number of fan trays : 2
Number of fans : 2

Fan tray number : 3
Speed : unknown
Status : not equipped
Hardware Data
Part number :
CLEI code :
Serial number :
Manufacture date :
Manufacturing deviations : (Not Specified)
Manufacturing assembly number :
Administrative state : up
Operational state : down
Time of last boot : N/A
Current alarm state : alarm cleared
Hardware Resources (Power-Zone 2)
Voltage
Minimum : 0.00 Volts (N/A)
Current : 0.00 Volts
Peak : 0.00 Volts (N/A)
Wattage
Minimum : 0.00 Watts (N/A)
Current : 0.00 Watts
Peak : 0.00 Watts (N/A)
Max Required : 0.00 Watts
Amperage
Minimum : 0.00 Amps (N/A)
Current : 0.00 Amps
Peak : 0.00 Amps (N/A)

Fan tray number : 4
Speed : unknown
Status : not equipped
Hardware Data
Part number :
CLEI code :
Serial number :
Manufacture date :
Manufacturing deviations : (Not Specified)
Manufacturing assembly number :
Administrative state : up
```

```
Operational state : down
Time of last boot : N/A
Current alarm state : alarm cleared
Hardware Resources (Power-Zone 2)
Voltage
Minimum : 0.00 Volts (N/A)
Current : 0.00 Volts
Peak : 0.00 Volts (N/A)
Wattage
Minimum : 0.00 Watts (N/A)
Current : 0.00 Watts
Peak : 0.00 Watts (N/A)
Max Required : 0.00 Watts
Amperage
Minimum : 0.00 Amps (N/A)
Current : 0.00 Amps
Peak : 0.00 Amps (N/A)
-------------------------------------------------------------------------------
Power Management Information

Power Management Mode : basic
Power Safety Level : 100%
Power Safety Alert : 0 watts
Number of PEQs : 12

PEQ number : 13
PEQ Equipped Type : (Empty Slot)
PEQ Provisioned Type : (Not Specified)
Power-Zone : 2
Status : not equipped
Input Feed Status : not equipped
Hardware Data
Part number :
CLEI code :
Serial number :
Manufacture date :
Manufacturing deviations : (Not Specified)
Manufacturing assembly number :
Administrative state : up
Operational state : unprovisioned
Time of last boot : N/A
Current alarm state : alarm cleared

PEQ number : 14
PEQ Equipped Type : (Empty Slot)
PEQ Provisioned Type : (Not Specified)
Power-Zone : 2
Status : not equipped
Input Feed Status : not equipped
Hardware Data
Part number :
CLEI code :
Serial number :
Manufacture date :
Manufacturing deviations : (Not Specified)
Manufacturing assembly number :
Administrative state : up
Operational state : unprovisioned
Time of last boot : N/A
```

```
Current alarm state : alarm cleared
…
PEQ number : 24
PEQ Equipped Type : (Empty Slot)
PEQ Provisioned Type : (Not Specified)
Power-Zone : 2
Status : not equipped
Input Feed Status : not equipped
Hardware Data
Part number :
CLEI code :
Serial number :
Manufacture date :
Manufacturing deviations : (Not Specified)
Manufacturing assembly number :
Administrative state : up
Operational state : unprovisioned
Time of last boot : N/A
Current alarm state : alarm cleared
--------------------------------------------------------------------------------
Chassis Control Module (CCM) Information

CCM Slot : C
Equipped : yes
Hardware Data
Part number :
CLEI code :
Serial number :
Manufacture date :
Manufacturing deviations : (Not Specified)
Manufacturing assembly number :
Administrative state : up
Operational state : up
Temperature : 0C
Temperature threshold : 75C
Time of last boot : N/A
Current alarm state : alarm cleared
Hardware Resources (Power-Zone 2)
Voltage
Minimum : 0.00 Volts (N/A)
Current : 0.00 Volts
Peak : 0.00 Volts (N/A)
Wattage
Minimum : 0.00 Watts (N/A)
Current : 0.00 Watts
Peak : 0.00 Watts (N/A)
Max Required : 0.00 Watts
Amperage
Minimum : 0.00 Amps (N/A)
Current : 0.00 Amps
Peak : 0.00 Amps (N/A)

CCM Slot : D
Equipped : yes
Hardware Data
Part number :
CLEI code :
Serial number :
Manufacture date :
```

```
Manufacturing deviations : (Not Specified)
Manufacturing assembly number :
Administrative state : up
Operational state : up
Temperature : 0C
Temperature threshold : 75C
Time of last boot : N/A
Current alarm state : alarm cleared
Hardware Resources (Power-Zone 2)
Voltage
Minimum : 0.00 Volts (N/A)
Current : 0.00 Volts
Peak : 0.00 Volts (N/A)
Wattage
Minimum : 0.00 Watts (N/A)
Current : 0.00 Watts
Peak : 0.00 Watts (N/A)
Max Required : 0.00 Watts
Amperage
Minimum : 0.00 Amps (N/A)
Current : 0.00 Amps
Peak : 0.00 Amps (N/A)
===============================================================================
```

Sample Output: show chassis (showing 7750 SR with Ethernet satellites configured)

```
A:Dut-A# show chassis
===============================================================================
System Information
===============================================================================
  Name                              : Dut-A
  Type                              : 7750 SR-7
  Chassis Topology                  : Standalone
  Location                          : (Not Specified)
  Coordinates                       : (Not Specified)
  CLLI code                         :
  Number of slots                   : 7
  Oper number of slots              : 7
  Number of ports                   : 112
  Critical LED state                : Off
  Major LED state                   : Off
  Minor LED state                   : Off
  Over Temperature state            : OK
  Base MAC address                  : 10:e8:78:64:cf:51
  Admin chassis mode                : d
  Oper chassis mode                 : d
  Mixed mode                        : Disabled
  Fabric Speed                      : 10 Gig

===============================================================================
Chassis Summary
===============================================================================
Chassis   Role                Status
-------------------------------------------------------------------------------
1         Standalone          up
esat-1    Ethernet Satellite  not equipped
esat-20   Ethernet Satellite  up
```

==========

power-management

Syntax **power-management** [**zone**] [**requirements** | **utilization**] [**detail**]

Context show>chassis

Description This command shows the power management requirement and utilization information for the 7950 XRS.

Output See the following sections:

- Output Fields: show chassis power-management
- Sample Output: show chassis power-management
- Output Fields: show chassis power-management requirements
- Sample Output: show chassis power-management requirements
- Output Fields: show chassis power-management utilization
- Sample Output: show chassis power-management utilization
- Sample Output: show chassis power-management utilization detail
- Output Fields: show chassis power-management utilization

Output Fields: show chassis power-management

Table 40 describes the output fields for the **show chassis power-management** command.

Table 40 **Output Fields: show chassis power-management**

Label	Description
Power Management Mode	Specifies the configured power management mode: None, Basic, or Advanced.
Power Safety Level	Specifies the configured Power Safety Level, which is a percentage of the worst case power consumption level.
Power Safety Alert	Specifies the configured power level in watts, which causes the system to raise an alarm if the available power level drops below a set level.
Power-Zone	Specifies the chassis power zone.
Number of PEQs	Specifies the total number of APEQs installed.
PEQ number:	Specifies the APEQ to which the information is associated
PEQ Equipped Type	Specifies the APEQ type installed.
PEQ Provisioned Type	Specifies the APEQ type provisioned.
Status	Specifies the APEQ status.

Table 40 **Output Fields: show chassis power-management (Continued)**

Label	Description
Input Feed Status	Specifies the feed status.
Hardware Data:	
Part number	The APEQ part number.
CLEI code	The APEQ CLEI code.
Serial number	The APEQ serial number.
Manufacture date	The date the APEQ was manufactured
Manufacturing deviations	Specifies any manufacturing deviations.
Manufacturing assembly number	The APEQ assembly number.
Administrative state	Specifies the administrative state of the APEQ.
Operational state	Specifies the operational state of the APEQ.
Time of last boot	Indicates the time stamp of the last system restart.
Current alarm state	Indicates the current alarm state.

Sample Output: show chassis power-management

```
*A:Dut-A#  show chassis power-management

===============================================================================
Chassis Information
===============================================================================
Power Management Information

  Power Management Mode             : basic
  Power Safety Level                : 100%
  Power Safety Alert                : 0 watts
  Power-Zone                        : 1
  Number of PEQs                    : 12

  PEQ number                        : 1
    PEQ Equipped Type               : apeq-dc-2000
    PEQ Provisioned Type            : apeq-dc-2000
    Status                          : shutdown
    Input Feed Status               : input B down
    Hardware Data
      Part number                   : 3HE07114AARA01
      CLEI code                     : IPUPAJHUAA
      Serial number                 : NS1250G0116
      Manufacture date              : 12202012
      Manufacturing deviations      : (Not Specified)
     Manufacturing assembly number : 8205320107
      Administrative state          : down
```

```
    Operational state             : down
    Time of last boot             : 2014/01/07 11:01:44
    Current alarm state           : alarm active

PEQ number                        : 2
  PEQ Equipped Type               : apeq-dc-2000
  PEQ Provisioned Type            : (Not Specified)
  Status                          : up
  Input Feed Status               : input B down
  Hardware Data
    Part number                   : 3HE07114AARA01
    CLEI code                     : IPUPAJHUAA
    Serial number                 : NS1249G0022
    Manufacture date              : 12202012
    Manufacturing deviations      : (Not Specified)
    Manufacturing assembly number : 8205320107
    Administrative state          : up
    Operational state             : unprovisioned
    Time of last boot             : 2014/01/07 11:01:44
    Current alarm state           : alarm active

PEQ number                        : 3
  PEQ Equipped Type               : apeq-dc-2000
  PEQ Provisioned Type            : apeq-dc-2000
  Status                          : up
  Input Feed Status               : input B down
  Hardware Data
    Part number                   : 3HE07114AARA01
    CLEI code                     : IPUPAJHUAA
    Serial number                 : NS1250G0141
    Manufacture date              : 12202012
    Manufacturing deviations      : (Not Specified)
    Manufacturing assembly number : 8205320107
    Administrative state          : up
    Operational state             : up
    Time of last boot             : 2014/01/07 11:01:44
    Current alarm state           : alarm active

PEQ number                        : 4
  PEQ Equipped Type               : apeq-dc-2000
  PEQ Provisioned Type            : apeq-dc-2000
  Status                          : up
  Input Feed Status               : input B down
  Hardware Data
    Part number                   : 3HE07114AARA01
    CLEI code                     : IPUPAJHUAA
    Serial number                 : NS1249G0201
    Manufacture date              : 12202012
    Manufacturing deviations      : (Not Specified)
    Manufacturing assembly number : 8205320107
    Administrative state          : up
    Operational state             : up
    Time of last boot             : 2014/01/07 11:01:44
    Current alarm state           : alarm active

PEQ number                        : 5
  PEQ Equipped Type               : apeq-dc-2000
  PEQ Provisioned Type            : apeq-dc-2000
  Status                          : up
```

```
  Input Feed Status               : input B down
  Hardware Data
    Part number                   : 3HE07114AARA01
    CLEI code                     : IPUPAJHUAA
    Serial number                 : NS1250G0123
    Manufacture date              : 12202012
    Manufacturing deviations      : (Not Specified)
    Manufacturing assembly number : 8205320107
    Administrative state          : up
    Operational state             : up
    Time of last boot             : 2014/01/07 11:01:44
    Current alarm state           : alarm active

PEQ number                        : 6
  PEQ Equipped Type               : apeq-dc-2000
  PEQ Provisioned Type            : apeq-dc-2000
  Status                          : up
  Input Feed Status               : input B down
  Hardware Data
    Part number                   : 3HE07114AARA01
    CLEI code                     : IPUPAJHUAA
    Serial number                 : NS1250G0061
    Manufacture date              : 12182012
    Manufacturing deviations      : (Not Specified)
    Manufacturing assembly number : 8205320107
    Administrative state          : up
    Operational state             : up
    Time of last boot             : 2014/01/07 11:01:44
    Current alarm state           : alarm active

PEQ number                        : 7
  PEQ Equipped Type               : apeq-dc-2000
  PEQ Provisioned Type            : apeq-dc-2000
  Status                          : up
  Input Feed Status               : input B down
  Hardware Data
    Part number                   : 3HE07114AARB01
    CLEI code                     : IPUPAJHUAA
    Serial number                 : NS13226A310
    Manufacture date              : 06042013
    Manufacturing deviations      : (Not Specified)
    Manufacturing assembly number : 82-0532-02
    Administrative state          : up
    Operational state             : up
    Time of last boot             : 2014/01/07 11:01:44
    Current alarm state           : alarm active

PEQ number                        : 8
  PEQ Equipped Type               : apeq-dc-2000
  PEQ Provisioned Type            : apeq-dc-2000
  Status                          : up
  Input Feed Status               : input B down
  Hardware Data
    Part number                   : 3HE07114AARA01
    CLEI code                     : IPUPAJHUAA
    Serial number                 : NS1250G0152
    Manufacture date              : 12202012
    Manufacturing deviations      : (Not Specified)
    Manufacturing assembly number : 8205320107
```

```
    Administrative state          : up
    Operational state             : up
    Time of last boot             : 2014/01/07 11:01:44
    Current alarm state           : alarm active

PEQ number                        : 9
  PEQ Equipped Type               : apeq-dc-2000
  PEQ Provisioned Type            : apeq-dc-2000
  Status                          : up
  Input Feed Status               : input B down
  Hardware Data
    Part number                   : 3HE07114AARA01
    CLEI code                     : IPUPAJHUAA
    Serial number                 : NS1250G0122
    Manufacture date              : 12202012
    Manufacturing deviations      : (Not Specified)
    Manufacturing assembly number : 8205320107
    Administrative state          : up
    Operational state             : up
    Time of last boot             : 2014/01/07 11:01:44
    Current alarm state           : alarm active

PEQ number                        : 10
  PEQ Equipped Type               : apeq-dc-2000
  PEQ Provisioned Type            : apeq-dc-2000
  Status                          : up
  Input Feed Status               : input B down
  Hardware Data
    Part number                   : 3HE07114AARA01
    CLEI code                     : IPUPAJHUAA
    Serial number                 : NS1250G0146
    Manufacture date              : 12202012
    Manufacturing deviations      : (Not Specified)
    Manufacturing assembly number : 8205320107
    Administrative state          : up
    Operational state             : up
    Time of last boot             : 2014/01/07 11:01:44
    Current alarm state           : alarm active

PEQ number                        : 11
  PEQ Equipped Type               : apeq-dc-2000
  PEQ Provisioned Type            : apeq-dc-2000
  Status                          : up
  Input Feed Status               : input B down
  Hardware Data
    Part number                   : 3HE07114AARA01
    CLEI code                     : IPUPAJHUAA
    Serial number                 : NS1249G0202
    Manufacture date              : 12202012
    Manufacturing deviations      : (Not Specified)
    Manufacturing assembly number : 8205320107
    Administrative state          : up
    Operational state             : up
    Time of last boot             : 2014/01/07 11:01:44
    Current alarm state           : alarm active

PEQ number                        : 12
  PEQ Equipped Type               : apeq-dc-2000
  PEQ Provisioned Type            : apeq-dc-2000
```

```
    Status                          : up
    Input Feed Status               : input B down
    Hardware Data
      Part number                   : 3HE07114AARA01
      CLEI code                     : IPUPAJHUAA
      Serial number                 : NS1250G0115
      Manufacture date              : 12202012
      Manufacturing deviations      : (Not Specified)
      Manufacturing assembly number : 8205320107
      Administrative state          : up
      Operational state             : up
      Time of last boot             : 2014/01/07 11:01:44
      Current alarm state           : alarm active
===============================================================================
```

Output Fields: show chassis power-management requirements

Table 41 describes the output fields for the **show power-management requirements** command.

Table 41 **Output Fields: show chassis power-management requirements**

Label	Description
SUPPLY	
Power Capacity	Indicates the total amount of power available to the chassis.
Safety Level	Specifies the configured Power Safety Level, which is a percentage of the worst case power consumption level.
Alert Level	Specifies the configured power level in watts, which causes the system to raise an alarm if the available power level drops below a set level.
REQUIREMENTS	
Fan	Specifies the amount of power required for each fan tray.
IO Module	Specifies the amount of power required for each IO Module.
CPM Module	Specifies the amount of power required for each CPM.
Fabric Module	Specifies the amount of power required for each SFM.
MDA Module	Specifies the amount of power required for each line card.
Total Required	Specifies the total amount of power required for all system elements.

Sample Output: show chassis power-management requirements

```
*A:Dut-A#   show chassis power-management requirements
```

```
================================================================================
Chassis Power Requirements
================================================================================
             SUPPLY                                  REQUIREMENTS
Power Capacity   : 22000.00 Watts        Fan           :  1800.00 Watts (  8%)
Safety Level     : 13203.00 Watts (100%) IO Module     :  1395.00 Watts (  6%)
Alert Level      :     0.00 Watts        CPM Module    :   408.00 Watts (  2%)
                                         Fabric Module :  1600.00 Watts (  7%)
                                         MDA Module    :  7956.00 Watts ( 36%)
                                         CCM Module    :    44.00 Watts (  0%)
                                         Total Required: 13203.00 Watts ( 60%)
================================================================================
```

Output Fields: show chassis power-management utilization

Table 42 describes the output fields for the **show chassis power-management utilization** command.

Table 42 **Output Fields: show chassis power-management utilization**

Label	Description
SUPPLY	
Power Capacity	Indicates the total amount of power available to the chassis.
Safety Level	Specifies the configured Power Safety Level, which is a percentage of the worst case power consumption level.
Alert Level	Specifies the configured power level in watts, which causes the system to raise an alarm if the available power level drops below a set level.
DEMAND	
Fan	Specifies the amount of power utilized for the fan tray indicated.
IO Module	Specifies the amount of power utilized for the IO Module indicated.
CPM Module	Specifies the amount of power utilized for the CPM indicated.
Fabric Module	Specifies the amount of power utilized for the SFM indicated.
MDA Module	Specifies the amount of power utilized for the line card indicated.
Current Util.	Specifies the total amount of power utilized for all system elements.
Peak Util.	Specifies peak utilization starting from boot up.

Sample Output: show chassis power-management utilization

```
*A:Dut-A# show chassis power-management utilization

===============================================================================
Chassis Power Utilization
===============================================================================
             SUPPLY                                PEAK DEMAND
Power Capacity   : 22000.00 Watts        Fan           :   695.00 Watts (  3%)
Safety Level     : 13203.00 Watts (100%) IO Module     :  7163.09 Watts ( 33%)
Alert Level      :     0.00 Watts        CPM Module    :   392.86 Watts (  2%)
                                         Fabric Module :  1622.25 Watts (  7%)
                                         MDA Module    :  6023.07 Watts ( 27%)+
                                         CCM Module    :    50.82 Watts (  0%)
                                         Peak Util.    :  9924.02 Watts ( 45%)
                                                  CURRENT DEMAND
                                         Current Util. :  9623.01 Watts ( 44%)
===============================================================================
+  Power utilization of device already included in IO Module value
===============================================================================
```

Sample Output: show chassis power-management utilization detail

```
*A:Dut-A# show chassis power-management utilization detail

===============================================================================
Chassis Power Utilization (detail)
===============================================================================
             SUPPLY                                PEAK DEMAND
Power Capacity   : 22000.00 Watts        Fan
  Power Supply 1 :     0.00 Watts          Fan 1       :   324.00 Watts (  1%)
  Power Supply 2 :  2000.00 Watts          Fan 2       :   371.00 Watts (  2%)
  Power Supply 3 :  2000.00 Watts        IO Module
  Power Supply 4 :  2000.00 Watts          Slot 1      :   812.19 Watts (  4%)
  Power Supply 5 :  2000.00 Watts          Slot 2      :   784.18 Watts (  4%)
  Power Supply 6 :  2000.00 Watts          Slot 3      :   799.01 Watts (  4%)
  Power Supply 7 :  2000.00 Watts          Slot 5      :   797.36 Watts (  4%)
  Power Supply 8 :  2000.00 Watts          Slot 6      :   797.36 Watts (  4%)
  Power Supply 9 :  2000.00 Watts          Slot 7      :   794.07 Watts (  4%)
  Power Supply 10:  2000.00 Watts          Slot 8      :   792.42 Watts (  4%)
  Power Supply 11:  2000.00 Watts          Slot 9      :   795.72 Watts (  4%)
  Power Supply 12:  2000.00 Watts          Slot 10     :   790.77 Watts (  4%)
Safety Level     : 13203.00 Watts (100%) CPM Module
Alert Level      :     0.00 Watts          Slot A      :   197.12 Watts (  1%)
                                           Slot B      :   195.74 Watts (  1%)
                                         Fabric Module
                                           Sfm 1       :   201.92 Watts (  1%)
                                           Sfm 2       :   203.30 Watts (  1%)
                                           Sfm 3       :   205.36 Watts (  1%)
                                           Sfm 4       :   201.92 Watts (  1%)
                                           Sfm 5       :   201.24 Watts (  1%)
                                           Sfm 6       :   203.98 Watts (  1%)
                                           Sfm 7       :   202.61 Watts (  1%)
                                           Sfm 8       :   201.92 Watts (  1%)
                                         MDA Module
                                           MDA 1/1     :   342.86 Watts (  2%)+
                                           MDA 1/2     :   334.06 Watts (  2%)+
                                           MDA 2/1     :   330.77 Watts (  2%)+
                                           MDA 2/2     :   331.87 Watts (  2%)+
                                           MDA 3/1     :   335.16 Watts (  2%)+
```

```
                                                  MDA 3/2      :   343.96 Watts (  2%)+
                                                  MDA 5/1      :   331.87 Watts (  2%)+
                                                  MDA 5/2      :   326.37 Watts (  1%)+
                                                  MDA 6/1      :   336.26 Watts (  2%)+
                                                  MDA 6/2      :   332.97 Watts (  2%)+
                                                  MDA 7/1      :   339.56 Watts (  2%)+
                                                  MDA 7/2      :   332.97 Watts (  2%)+
                                                  MDA 8/1      :   339.56 Watts (  2%)+
                                                  MDA 8/2      :   328.57 Watts (  1%)+
                                                  MDA 9/1      :   336.26 Watts (  2%)+
                                                  MDA 9/2      :   331.87 Watts (  2%)+
                                                  MDA 10/1     :   336.26 Watts (  2%)+
                                                  MDA 10/2     :   332.97 Watts (  2%)+
                                                CCM Module
                                                  CCM 1        :    24.73 Watts (  0%)
                                                  CCM 2        :    26.10 Watts (  0%)
                                                Peak Util.     :  9924.02 Watts ( 45%)
                                                          CURRENT DEMAND
                                                Current Util. :  9613.68 Watts ( 44%)
===============================================================================
+  Power utilization of device already included in IO Module value
===============================================================================
```

card

Syntax **card** [*slot-number*] [**detail**]
card state

Context show

Description This command shows card information.

If no command line parameters are specified, a card summary for all cards is displayed.

Parameters *slot-number* — Displays information for the specified card slot.

Values Depending on the chassis model, IOM/XCM slots are numbered from 1 to 10.
SF/CPM slots are A, B. The 7950 XRS has additional slots C, D (upper or lowercase)
SFM slots are not addressed as cards. See the show sfm command.

Default Displays all cards.

state — Displays provisioned and equipped card and MDA information.

detail — Displays detailed card information.

Default Displays summary information only.

Output See the following sections:

- Output Fields: show card
- Sample Output: show card (showing the 7750 SR-12)

• Sample Output: show card (showing the 7950 XRS)
• Sample Output: show card (showing the 7750 SR-12 with OES)
• Output Fields: show card state
• Sample Output: show card state (showing 7750 SR-12 Chassis)
• Sample Output: show card state (showing 7750 SR-c12 Chassis)
• Sample Output: show card state (showing 7750 SR-12 with OES)
• Sample Output: show card state (showing 7450 ESS-12 Chassis)
• Sample Output: show card state (showing a 7950 XRS Chassis)
• Output Fields: show card <slot-number> detail (for an IOM or XCM Card)
• Sample Output: show card <slot-number> detail (showing IOM2-20G Card)
• Sample Output: show card <slot-number> detail (showing IOM3-XP Card)
• Sample Output: show card <slot-number> detail (showing XCM-20 Card)
• Output Fields: show card <slot-number> detail (for a SF/CPM)
• Sample Output: show card <slot-number> detail (showing SFM and SFM3-12 Cards)
• Sample Output: show card <slot-number> detail (showing CPM-x20 Cards)
• Sample Output: show card <slot-number> detail (showing OES EC Card)

Output Fields: show card

Table 43 describes the output fields for the **show card** command.

Table 43 **Output Field: show card**

Label	Description
Slot	The slot number of the card in the chassis.
Provisioned Card-type	The card type that is configured for the slot. Note: CPMs C and D do not appear in the summary unless the Chassis Topology is Extended (for the 7950 XRS-40).
Equipped Card-type	The card type that is actually populated in the slot. Note: CPMs C and D do not appear in the summary unless the Chassis Topology is Extended (for the7950 XRS-40).
Admin State	Up — The card is administratively up. Down — The card is administratively down.

Table 43 **Output Field: show card (Continued)**

Label	Description (Continued)
Operational State	Up — The card is operationally up.
	Down — The card is operationally down.
	active — The CPM is the Active CPM for the system (actively managing the system components, processing various protocols, etc)
	standby — The CPM is the Standby CPM. The standby is hot synchronized with the Active CPM
	ext-actv — The CPM is operating in an Extension role in a 7950 XRS-40 system and is the active extension CPM for the chassis in which it sits
	ext-stby — The CPM is operating in an Extension role in a 7950 XRS-40 system and is the standby extension CPM for the chassis in which it sits

Sample Output: show card (showing the 7750 SR-12)

```
A:ALU-48# show card
===============================================================================
Card Summary
===============================================================================
Slot      Provisioned         Equipped            Admin      Operational
          Card-type           Card-type           State      State
-------------------------------------------------------------------------------
1         iom3-xp             iom3-xp             up         up
2         iom3-xp             iom3-xp             up         up
3         iom3-xp             iom3-xp             up         up
4         iom3-xp                                 up         provisioned
5         iom3-xp                                 up         provisioned
6         iom3-xp                                 up         provisioned
7         iom3-xp                                 up         provisioned
8         iom3-xp                                 up         provisioned
9         iom3-xp                                 up         provisioned
10        iom3-xp                                 up         provisioned
A         sfm3-12             sfm3-12             up         up/standby
B         sfm3-12             sfm3-12             up         up/active
===============================================================================
A:ALU-48#


A:ALA-48# show card 1
===============================================================================
Card Summary
===============================================================================
Slot      Provisioned         Equipped            Admin      Operational
          Card-type           Card-type           State      State
-------------------------------------------------------------------------------
1         iom-xp             iom-xp               up         up
A         cfm-xp             cfm-xp               up         up/active
B         cfm-xp                                  up         down/standby
===============================================================================
A:ALA-48#
```

Sample Output: show card (showing the 7950 XRS)

```
A:Dut-A#   show card
===============================================================================
Card Summary
===============================================================================
Slot   Provisioned Type                              Admin Operational   Comments
           Equipped Type (if different)              State State
-------------------------------------------------------------------------------
1      xcm-x20                                       up    up
2      xcm-x20                                       up    up
A      cpm-x20                                       up    up/active
B      cpm-x20                                       up    up/standby
C      cpm-x20                                       up    down/ext-stby
D      cpm-x20                                       up    up/ext-actv
===============================================================================
```

Sample Output: show card (showing the 7750 SR-12 with OES)

```
B:ExitLeaf-35# show card
===============================================================================
Card Summary
===============================================================================
Slot      Provisioned Type                           Admin Operational   Comments
              Equipped Type (if different)           State State
-------------------------------------------------------------------------------
1         iom3-xp                                    up    up
2         iom3-xp                                    up    up
3         imm12-10gb-sf+                             up    up
4         imm-2pac-fp3                               up    up
5         imm12-10gb-sf+                             up    up
A         cpm5                                       up    down/standby
              (not equipped)
B         cpm5                                       up    up/active
oes-1/1   ec                                         up    up/standby
oes-1/2   (not provisioned)                          down  failed
              unknown
oes-1/8   130scx10                                   up    up
oes-1/12  260scx2                                    up    up
oes-1/16  (not provisioned)                          down  unprovisioned
              260scx2
oes-1/18  ec                                         up    up/ active
===============================================================================
```

Sample Output: show card

```
A:Dut-A# show card

===============================================================================
Card Summary
===============================================================================
Slot      Provisioned Type                           Admin Operational   Comments
              Equipped Type (if different)           State State
-------------------------------------------------------------------------------
1         iom3-xp-c                                  up    up
2         iom3-xp-c                                  up    up
A         cpm5                                       up    up/active
```

```
B         cpm5                                      up     up/standby
===============================================================================
```

Output Fields: show card state

Table 44 describes the output fields for the **show card state** command.

Table 44 **Output Fields: show card state**

Label	Description
Slot/MDA	The slot number of the card in the chassis.
Provisioned Type	The card type that is configured for the slot.
Equipped Type	The card type that is actually populated in the slot.
Admin State	Up The card is administratively up.
	Down — The card is administratively down.
Operational State	Up — The card is operationally up.
	provisioned — There is no card in the slot but it has been pre-configured.
Num Ports	The number of ports available on the MDA.
Num MDA	The number of MDAs installed.
Comments	Indicates whether the SF/CPM is the active or standby.

Sample Output: show card state (showing 7750 SR-12 Chassis)

```
A:ALA-48# show card state
===============================================================================
Card State
===============================================================================
Slot/  Provisioned      Equipped         Admin Operational   Num   Num Comments
MDA    Type             Type             State State         Ports MDA
-------------------------------------------------------------------------------
1      iom-20g          iom-20g          up    up                    2
1/1    m60-10/100eth-tx m60-10/100eth-tx up    up            60
1/2    m60-10/100eth-tx m60-10/100eth-tx up    up            60
2      iom-20g                           up    provisioned           2
2/1    m10-1gb-sfp                       up    provisioned   10
2/2    m8-oc12/3-sfp                     up    provisioned   8
3      iom-20g                           up    provisioned           2
3/1    m12-chds3                         down  provisioned   12
3/2    m4-atmoc12/3-sfp                  up    provisioned   4
4      iom-20g                           up    provisioned           2
4/1    m12-chds3                         up    provisioned   12
4/2    m1-choc12-sfp                     up    provisioned   1
5      iom-20g                           up    provisioned           2
5/1    m1-oc192                          down  provisioned   1
```

```
5/2    m12-chds3                        down  provisioned   12
6      iom-20g                          up    provisioned         2
6/1    m12-chds3                        up    provisioned   12
6/2    m1-choc12-sfp                    up    provisioned   1
7      iom-20g                          up    provisioned         2
7/1    m12-chds3                        up    provisioned   12
7/2    m1-choc12-sfp                    up    provisioned   1
8      iom-20g                          up    provisioned         2
8/1    m8-oc12/3-sfp                    up    provisioned   8
8/2    m1-choc12-sfp                    up    provisioned   1
9      iom-20g                          up    provisioned         2
9/1    m20-1gb-sfp                      up    provisioned   20
9/2    m4-atmoc12/3-sfp                 up    provisioned   4
10     iom-20g                          up    provisioned         2
10/1   vsm-cca                          up    provisioned   6
10/2   vsm-cca                          up    provisioned   6
1/1    vsm-cca          vsm-cca-xp      up    up            6
A      sfm3-12          sfm-400g        up    up                      Active
B      sfm3-12                          up    provisioned             Standby
===============================================================================
A:ALA-48#
```

Sample Output: show card state (showing 7750 SR-c12 Chassis)

```
A:7750-3>config>card# show card state
===============================================================================
Card State
===============================================================================
Slot/  Provisioned      Equipped         Admin Operational   Num   Num Comments
Id     Type             Type             State State         Ports MDA
-------------------------------------------------------------------------------
1      iom-xp          iom-xp            up    up                12
1/1    mcm-xp           mcm-xp           up    up
1/3                     mcm-xp           up    unprovisioned
1/1    m60-10/100eth-tx m60-10/100eth-tx up    up                60
1/5    c8-10/100eth-tx  c8-10/100eth-tx  up    up                8
1/6                     c1-1gb-sfp       up    unprovisioned
1/7                     c8-chds1         up    unprovisioned
1/8                     c4-ds3           up    unprovisioned
1/9                     c8-10/100eth-tx  up    unprovisioned
1/10                    c1-1gb-sfp       up    unprovisioned
1/11                    c8-chds1         up    unprovisioned
1/12                    c4-ds3           up    unprovisioned
A      cfm-xp           cfm-xp           up    up                      Active
B      cfm-xp                            up    down                    Standby
===============================================================================
A:7750-3>
```

Sample Output: show card state (showing 7750 SR-12 with OES)

```
B:ExitLeaf-35# show card state
===============================================================================
Card State
===============================================================================
Slot/  Provisioned Type                  Admin Operational   Num   Num Comments
Id         Equipped Type (if different)  State State         Ports MDA
-------------------------------------------------------------------------------
```

```
1       iom3-xp                             up    up                  2
1/1     m2-10gb-xp-xfp                      up    up             2
1/2     (not provisioned)                   up    unprovisioned
            m4-choc3-as-sfp
2       iom3-xp                             up    up                  2
2/1     m20-1gb-sfp                         up    up             20
2/2     m20-1gb-xp-sfp                      up    up             20
3       imm12-10gb-sf+                      up    up                  1
3/1     imm12-10gb-xp-sf+                   up    up             12
4       imm-2pac-fp3                        up    up                  2
4/1     p10-10g-sfp                         up    up             10
4/2     p10-10g-sfp                         up    up             10
5       imm12-10gb-sf+                      up    up                  1
5/1     imm12-10gb-xp-sf+                   up    up             12
A       cpm5                                up    down                    Standby
            (not equipped)
B       cpm5                                up    up                      Active
-------------------------------------------------------------------------------
oes-1
  1     ec                                  up    up
  6     260scx2                             up    up
  12    130scx10                            up    provisioned
            (not equipped)
  18    ec                                  up    provisioned
===============================================================================
*
```

Sample Output: show card state (showing 7450 ESS-12 Chassis)

```
A:ALA-42# show card state
===============================================================================
Card State
===============================================================================
Slot/  Provisioned      Equipped         Admin Operational   Num   Num Comments
MDA    Type             Type             State State         Ports MDA
-------------------------------------------------------------------------------
1      iom-20g          iom-20g          up    up                  2
1/1    m60-10/100eth-tx m60-10/100eth-tx up    up            60
1/2    m60-10/100eth-tx m60-10/100eth-tx up    up            60
2      iom-20g                           up    provisioned         2
2/1    m60-10/100eth-tx                  up    provisioned   60
2/2    m60-10/100eth-tx                  up    provisioned   60
3      iom-10g                           up    provisioned         2
3/1    m16-oc12/3-sfp                    up    provisioned   16
3/2    m16-oc3-sfp                       up    provisioned   16
4      iom-20g                           up    provisioned         2
4/1    m4-oc48-sfp                       up    provisioned   4
4/2    m4-oc48-sfp                       up    provisioned   4
5      iom-20g                           up    provisioned         2
5/1    m20-100eth-sfp                    up    provisioned   20
5/2    m20-1gb-tx                        up    provisioned   20
6      iom-20g                           up    provisioned         2
6/1    m2-10gb-xfp                       up    provisioned   2
6/2    m20-1gb-sfp                       up    provisioned   20
7      iom-10g                           up    provisioned         2
7/1    m8-oc12/3-sfp                     up    provisioned   8
7/2    m4-oc48-sfp                       up    provisioned   4
10     iom-20g                           up    provisioned         2
```

```
10/1   vsm-cca                          up    provisioned   6
10/2   vsm-cca                          up    provisioned   6
1/1    vsm-cca          vsm-cca-xp      up    up            6
A      sfm3-7         sfm3-7            up    up                      Active
B      sfm3-12                        up    provisioned             Standby
===============================================================================
A:ALA-42#
```

Sample Output: show card state (showing a 7950 XRS Chassis)

```
A:Dut-A# show card state
===============================================================================
Card State
===============================================================================
Slot/  Provisioned Type                  Admin Operational   Num   Num Comments
Id         Equipped Type (if different)  State State         Ports MDA
-------------------------------------------------------------------------------
1      xcm-x20                           up    up                  2
1/1    cx20-10g-sfp                      up    up            20
1/2    cx20-10g-sfp                      up    up            20
2      xcm-x20                           up    up                  2
2/1    cx20-10g-sfp                      up    up            20
A      cpm-x20                           up    up                      Active
B      cpm-x20                           up    up                      Standby
===============================================================================
```

Output Fields: show card <slot-number> detail (for an IOM or XCM Card)

Table 45 describes the output fields for the **show card detail** command.

Table 45 **Output Fields: show card <slot-number> detail (for an IOM or XCM Card)**

Label	Description
Clock source	Source of clock for the IOM. Currently this parameter always displays “none”.
Available MDA slots	The number of MDA slots available on the IOM.
Installed MDAs	The number of MDAs installed on the IOM.
Initial Extract Priority Mode	The scheme used to select the initial drop priority of extracted control plane traffic. • uniform: Initializes the drop priority of all extracted control traffic as high priority • l3-classify: Initializes the drop priority of all Layer 3 extracted control traffic (for example, BGP or OSPF) based on the QoS classification of the packets. Refer to the *7450 ESS, 7750 SR, and 7950 XRS System Management Guide*, "Classification-Based Priority for Extracted Protocol Traffic", for more details.
Part number	The IOM part number.
CLEI code	The Common Language Location Identifier (CLLI) code string for the router.
Serial number	The serial number. Not user-modifiable.

Table 45 **Output Fields: show card <slot-number> detail (for an IOM or XCM Card)**

Label	Description (Continued)
Manufacture date	The chassis manufacture date. Not user-modifiable.
Manufacturing string	Factory-inputted manufacturing text string. Not user-modifiable.
Manufacturing deviations	Displays a record of changes by manufacturing to the hardware or software that is outside the normal revision control process.
Administrative state	Up — The card is administratively up.
	Down — The card is administratively down.
Operational state	Up — The card is operationally up.
	Down — The card is operationally down.
Temperature	Internal chassis temperature.
Temperature threshold	The value above which the internal temperature must rise in order to indicate that the temperature is critical.
Software boot version	The version of the boot image.
Software version	The software version number.
Time of last boot	The date and time the most recent boot occurred.
Current alarm state	Displays the alarm conditions for the specific board.
Base MAC address	Displays the base MAC address of the hardware component.
Memory capacity	Displays the memory capacity of the card.

Sample Output: show card <slot-number> detail (showing IOM2-20G Card)

```
A:ALA-49# show card 3 detail
===============================================================================
Card 3
===============================================================================
Slot      Provisioned         Equipped            Admin      Operational
          Card-type           Card-type           State      State
-------------------------------------------------------------------------------
3         iom2-20g                                up         provisioned

IOM Card Specific Data
    Clock source                : none
    Available MDA slots         : 2
    Installed MDAs              : 0

Hardware Data
    Part number                 :
    CLEI code                   :
    Serial number               :
    Manufacture date            :
```

```
    Manufacturing string          :
    Manufacturing deviations      :
    Administrative state          : up
    Operational state             : provisioned
    Software boot version         :
    Software version              :
    Time of last boot             : N/A
    Current alarm state           : alarm cleared
    Base MAC address              : 00:00:00:00:00:00
    Memory capacity               : 0 MB
===============================================================================
A:ALA-49#
```

Sample Output: show card <slot-number> detail (showing IOM3-XP Card)

```
A:Dut-A# show card 10 detail
===============================================================================
Card 10
===============================================================================
Slot      Provisioned      Equipped         Admin   Operational        Comments
          Card-type        Card-type        State   State
-------------------------------------------------------------------------------
10        iom3-xp          iom3-xp          up      up


IOM Card Specific Data
    Clock source                  : none
    Named Pool Mode               : Disabled
    Fail On Error                 : Disabled
    Available MDA slots           : 2
    Installed MDAs                : 1

FP 1 Specific Data
    WRED Admin State              : Out Of Service
    WRED buffer-allocation max    : 2500
    WRED buffer-allocation min    : 2500
    WRED reserved-cbs max         : 2500
    WRED reserved-cbs min         : 2500
    WRED Slope Policy             : default
    hi-bw-mc-srcEgress Alarm      : 2
    hi-bw-mc-srcEgress Group      : 0
    mc-path-mgmt Admin State      : Out Of Service
    Ingress Bandwidth Policy      : default
    Stable Pool Sizing            : False
    Ingress Buffer Allocation     : 50.00
    Initial Extract Priority Mode : uniform

Hardware Data
    Platform type                 : 7750
    Part number                   : 3HE03619AAAK01
    CLEI code                     : IPU3AC9EAA
    Serial number                 : NS1112F0955
    Manufacture date              : 03182011
    Manufacturing string          :
    Manufacturing deviations      :
    Manufacturing assembly number : 82-0107-09
    Administrative state          : up
    Operational state             : up
```

```
    Temperature                    : 50C
    Temperature threshold          : 75C
    Software boot (rom) version    : X-0.0.I3122 on Mon Oct 17 18:16:02 PDT 2011*
    Software version               : TiMOS-I-8.0.B1-250 iom/hops Nokia 7750 SR*
    Time of last boot              : 2011/11/15 08:44:52
    Current alarm state            : alarm cleared
    Base MAC address               : 8c:90:d3:a4:fb:33
    Last bootup reason             : hard boot
    Memory capacity                : 2,048 MB
```

Sample Output: show card <slot-number> detail (showing XCM-20 Card)

```
A:Dut-A# show card 1 detail
===============================================================================
Card 1
===============================================================================
Slot   Provisioned Type                            Admin Operational   Comments
           Equipped Type (if different)            State State
-------------------------------------------------------------------------------
1      xcm-x20                                     up    up

IOM Card Specific Data
    Clock source                   : none
    Named Pool Mode                : Disabled
    Fail On Error                  : Disabled
    Available MDA slots            : 2
    Installed MDAs                 : 2

FP 1 Specific Data
    WRED Admin State               : Out Of Service
    WRED buffer-allocation max     : 2500
    WRED buffer-allocation min     : 2500
    WRED reserved-cbs max          : 2500
    WRED reserved-cbs min          : 2500
    WRED Slope Policy              : default
    hi-bw-mc-srcEgress Alarm       : 2
    hi-bw-mc-srcEgress Group       : 0
    mc-path-mgmt Admin State       : Out Of Service
    Ingress Bandwidth Policy       : default
    Stable Pool Sizing             : False
    Ingress Buffer Allocation      : 50.00
    Initial Extract Priority Mode  : uniform

FP 2 Specific Data
    WRED Admin State               : Out Of Service
    WRED buffer-allocation max     : 2500
    WRED buffer-allocation min     : 2500
    WRED reserved-cbs max          : 2500
    WRED reserved-cbs min          : 2500
    WRED Slope Policy              : default
    hi-bw-mc-srcEgress Alarm       : 2
    hi-bw-mc-srcEgress Group       : 0
    mc-path-mgmt Admin State       : Out Of Service
    Ingress Bandwidth Policy       : default
    Stable Pool Sizing             : False
    Ingress Buffer Allocation      : 50.00
    Initial Extract Priority Mode  : uniform
```

```
Hardware Data
    Platform type                 : 7950
    Part number                   :
    CLEI code                     :
    Serial number                 : xx
    Manufacture date              :
    Manufacturing string          : (Not Specified)
    Manufacturing deviations      : (Not Specified)
    Manufacturing assembly number : 82-0334-02
    Administrative state          : up
    Operational state             : up
    Temperature                   : 45C
    Temperature threshold         : 75C
    Software boot (rom) version   : X-0.0.I3326 on Thu May 10 18:22:55 PDT
                                    2012 by builder
    Software version              : TiMOS-I-10.0.S209 iom/hops Nokia 7950 XRS
    Time of last boot             : 2012/05/23 20:27:09
    Current alarm state           : alarm cleared
    Base MAC address              : 00:21:05:8a:ca:0b
    Last bootup reason            : hard boot
    Memory capacity               : 4,096 MB
* indicates that the corresponding row element may have been truncated.
===============================================================================
A:Dut-A#
```

Output Fields: show card <slot-number> detail (for a SF/CPM)

Table 46 describes the output fields for the **show card detail** command for a SF/CPM card.

Table 46 **Output Fields: show card <slot-number> detail (for a SF/CPM)**

Label	Description
Slot	The slot of the card in the chassis.
Card Provisioned	The SF/CPM type that is configured for the slot. Note: CPMs C and D will not show up in the summary unless the Chassis Topology is Extended (XRS-40).
Card Equipped	The SF/CPM type that is actually populated in the slot. Note: CPMs C and D will not show up in the summary unless the Chassis Topology is Extended (XRS-40).
Admin State	Up — The SF/CPM is administratively up. Down — The SF/CPM is administratively down.
Operational State	Up — The SF/CPM is operationally up. Down — The SF/CPM is operationally down.
Inter chassis cpm interconnect	Up — The CPM is operationally up. Down — The CPM is operationally down.
BOF last modified	The date and time of the most recent BOF modification.

Table 46 **Output Fields: show card <slot-number> detail (for a SF/CPM) (Continued)**

Label	Description (Continued)
Config file version	The configuration file version.
Config file last modified	The date and time of the most recent config file modification.
Config file last modified	The date and time of the most recent config file modification.
Config file last saved	The date and time of the most recent config file save.
CPM card status	active — The card is acting as the primary (active) CPM in a redundant system. standby — The card is acting as the standby (secondary) CPM in a redundant system.
Administrative state	Up — The CPM is administratively up. Down — The CPM is administratively down.
Operational state	Up — The CPM is operationally up. Down — The CPM is operationally down.
Serial number	The compact flash part number. Not user modifiable.
Firmware revision	The firmware version. Not user modifiable.
Model number	The compact flash model number. Not user modifiable.
Size	The amount of space available on the compact flash card.
Free space	The amount of space remaining on the compact flash card.
Part number	The SF/CPM part number.
CLEI code	The code used to identify the router.
Serial number	The SF/CPM part number. Not user modifiable.
Manufacture date	The chassis manufacture date. Not user modifiable.
Manufacturing string	Factory-set manufacturing text string. Not user modifiable.
Administrative state	Up — The card is administratively up. Down — The card is administratively down.
Operational state	Up — The card is operationally up. Down — The card is operationally down.
Time of last boot	The date and time the most recent boot occurred.
Current alarm state	Displays the alarm conditions for the specific board.
Status	Displays the current status.

Table 46 **Output Fields: show card <slot-number> detail (for a SF/CPM) (Continued)**

Label	Description (Continued)
Temperature	Internal chassis temperature.
Temperature threshold	The value above which the internal temperature must rise in order to indicate that the temperature is critical.
Software boot version	The version of the boot image.
Memory capacity	The total amount of memory.

Sample Output: show card <slot-number> detail (showing SFM and SFM3-12 Cards)

```
B:Dut-D# show card A detail
===============================================================================
Card A
===============================================================================
Slot      Provisioned         Equipped            Admin      Operational
          Card-type           Card-type           State      State
-------------------------------------------------------------------------------
A         sfm-400g            sfm-200g            up         up/standby


BOF last modified                : N/A
Config file version              :
Config file last modified        : N/A
Config file last saved           : N/A
CPM redundancy status            : standby ready

Flash - cf1:
    Administrative State         : up
    Operational state            : not equipped

Flash - cf2:
    Administrative State         : up
    Operational state            : not equipped

Flash - cf3:
    Administrative State         : up
    Operational state            : up
    Serial number                :     109917C1204W513
    Firmware revision            : HDX 2.1
    Model number                 : SanDisk SDCFBI-128
    Size                         : 125,038 KB
    Free space                   : 116,238 KB

Hardware Data
    Part number                  : 3HE00316AAAA01
    CLEI code                    : IPUCACMFAA
    Serial number                : NS043610538
    Manufacture date             : 02252005
    Manufacturing string         :
    Manufacturing deviations     :
    Administrative state         : up
    Operational state            : up
```

```
    Temperature                   : 43C
    Temperature threshold         : 75C
    Software boot version         : X-2.0.R12 on Mon Jan 24 12:03:16 PST 2007 *
    Software version              : TiMOS-C-4.0.private cpm/hops Nokia 7750 SR
    Time of last boot             : 2007/04/11 09:39:23
    Current alarm state           : alarm cleared
    Base MAC address              : 00:03:fa:30:7c:3c
    Memory capacity               : 2,016 MB
===============================================================================
B:Dut-D#
B:NS082761964# show card B detail
===============================================================================
Card B
===============================================================================
Slot      Provisioned      Equipped         Admin   Operational        Comments
          Card-type        Card-type        State   State
-------------------------------------------------------------------------------
B         sfm3-12          sfm3-12          up      up/active
BOF last modified                 : N/A
Config file version               : WED AUG 11 19:33:06 2010 UTC
Config file last modified         : N/A
Config file last saved            : N/A
M/S clocking ref state            : primary

Flash - cf1:
    Administrative State          : up
    Operational state             : not equipped

Flash - cf2:
    Administrative State          : up
    Operational state             : not equipped

Flash - cf3:
    Administrative State          : up
    Operational state             : up
    Serial number                 : 365ST295S3453SC01311
    Firmware revision             : V2.23
    Model number                  : SILICONSYSTEMS INC 256MB
    Size                          : 253,932 KB
    Free space                    : 121,368 KB

Hardware Data
    Platform type                 : 7750
    Part number                   : 3HE03617AAAA01
    CLEI code                     : IPUCAN4FAA
    Serial number                 : NS987456321
    Manufacture date              : 05072010
    Manufacturing string          :
    Manufacturing deviations      :
    Manufacturing assembly number :
    Administrative state          : up
    Operational state             : up
    Temperature                   : 34C
    Temperature threshold         : 75C
    Software boot (rom) version   : X-0.0.I2627 on Thu Jun 10 18:03:16 PDT 2010*
    Software version              : TiMOS-C-0.0.private cpm/hops Nokia 7750 SR
    Time of last boot             : 2010/08/24 13:07:56
    Current alarm state           : alarm cleared
    Base MAC address              : 00:03:fa:1b:d7:16
```

```
    Memory capacity               : 4,096 MB
    System timing oscillator type : OCXO
===============================================================================
```

Sample Output: show card <slot-number> detail (showing CPM-x20 Cards)

```
*A:bksim3107# show card A detail
===============================================================================
Card A
===============================================================================
Slot Provisioned Type Admin Operational Comments
Equipped Type (if different) State State
-------------------------------------------------------------------------------
A cpm-x20 up up/active

BOF last modified : 2013/05/15 12:33:22
Config file version : FRI MAR 08 13:24:58 2013 UTC
Config file last modified : 2013/05/15 12:34:22
Config file last saved : 2013/05/15 12:36:22
M/S clocking ref state : primary

Flash - cf1:
Administrative State : up
Operational state : up
Serial number : serial-1
Firmware revision : v1.0
Model number : PC HD 1
Size : 1,950 MB
Free space : 1,950 MB

Flash - cf2:
Administrative State : up
Operational state : up
Serial number : serial-2
Firmware revision : v1.0
Model number : PC HD 2
Size : 0 Bytes
Free space : 0 Bytes

Flash - cf3:
Administrative State : up
Operational state : up
Serial number : serial-3
Firmware revision : v1.0
Model number : PC HD 3
Size : 18,432 Bytes
Free space : 6,144 Bytes
Hardware Data
Platform type : 7950
Part number : Sim Part#
CLEI code : Sim CLEI
Serial number : card-11
Manufacture date : 01012003
Manufacturing deviations : Sim MfgDeviation card-11
Manufacturing assembly number : 01-2345-67
Administrative state : up
Operational state : up
Temperature : -1C
```

```
Temperature threshold : 75C
Software boot (rom) version : simulated
Software version : TiMOS-C-11.0.R2 cpm/i386 Nokia 7950 XRS*
Time of last boot : 2013/05/13 08:10:33
Current alarm state : alarm cleared
Base MAC address : ac:9f:0b:00:00:01
Memory capacity : 3,072 MB

Inter Chassis CPM Interconnect
CPM Interconnect Port 1
Oper State : up
SFF Status : operational

CPM Interconnect Port 2
...
* indicates that the corresponding row element may have been truncated.
===============================================================================

*A:Dut-A# show card D detail

===============================================================================
Card D
===============================================================================
Slot   Provisioned Type                            Admin Operational   Comments
           Equipped Type (if different)            State State
-------------------------------------------------------------------------------
D      cpm-x20                                     up    up/ext-stby


BOF last modified                : N/A
Config file version              :
Config file last modified        : N/A
Config file last saved           : N/A
M/S clocking ref state           : secondary

Flash - cf1:
    Administrative State         : up
    Operational state            : up
    Serial number                : WE11K6300191
    Firmware revision            : 2.1ME
    Model number                 : WDC SSD-D0128S-7117
    Size                         : 122,089 MB
    Free space                   : 122,089 MB

Flash - cf2:
    Administrative State         : up
    Operational state            : not equipped

Flash - cf3:
    Administrative State         : up
    Operational state            : up
    Serial number                :     SPG2012061404165
    Firmware revision            : 20101222
    Model number                 : SMART CF
    Size                         : 3,907 MB
    Free space                   : 3,802 MB

Hardware Data
    Platform type                : 7950
```

```
    Part number                   : 3HE07116AARB01
    CLEI code                     : IPUCA9T1AA
    Serial number                 : NS13426D067
    Manufacture date              : 03162014
    Manufacturing deviations      : (Not Specified)
    Manufacturing assembly number : 82-0488-05
    Administrative state          : up
    Operational state             : up
    Temperature                   : 39C
    Temperature threshold         : 75C
    Software boot (rom) version   : X-12.0.B1-120 on Wed Jul 16 18:55:26 PDT
                                    2014 by builder
    Software version              : TiMOS-C-12.0.B1-120 cpm/hops64 Nokia_7950 XRS
                                    7950 Copyright (c) 2000-2016 Nokia
                                    All rights reserved. All use subject to
                                    applicable license agreements.
                                    Built on Wed Jul 16 19:26:12 PDT 2014 by
                                    builder in /rel12.0/b1/B1-120/panos/main
    Time of last boot             : 2014/07/17 13:41:28
    Current alarm state           : alarm cleared
    Base MAC address              : 00:d0:f6:f3:3c:9e
    Memory capacity               : 8,192 MB

Hardware Resources (Power-Zone 2)
    Voltage
        Minimum                   :    53.10 Volts  (07/17/2014 12:40:28)
        Current                   :    53.16 Volts
        Peak                      :    54.15 Volts  (07/17/2014 12:18:27)
    Wattage
        Minimum                   :   151.10 Watts  (07/17/2014 13:31:23)
        Current                   :   202.61 Watts
        Peak                      :   208.79 Watts  (07/17/2014 13:00:07)
        Max Required              :   204.00 Watts
    Amperage
        Minimum                   :     3.69 Amps   (07/17/2014 12:18:27)
        Current                   :     3.82 Amps
        Peak                      :     3.94 Amps   (07/17/2014 13:07:25)

Inter Chassis CPM Interconnect
    CPM Interconnect Port 1
        Oper State                : up
        SFF Status                : operational
    CPM Interconnect Port 2
        Oper State                : up
        SFF Status                : operational
===============================================================================
```

Sample Output: show card <slot-number> detail (showing OES EC Card)

```
*A:Dut-A# show card oes-1/1 detail
===============================================================================
Card oes-1/1
===============================================================================
Slot      Provisioned Type                        Admin Operational   Comments
            Equipped Type (if different)          State State
-------------------------------------------------------------------------------
oes-1/1   ec                                      up    up/active
Hardware Data
```

```
    Part number                   : 8DG62635AAAC02
    CLEI code                     : WOCUA6RUAB
    Serial number                 : EZ1551A0180
    Manufacture date              : 160315
    Administrative state          : up
    Operational state             : up
    Temperature                   : 40C
    Temperature threshold         : 90C
    Software version              : 1830PSSECX-8.2-2
    Memory capacity               : 32 GB
Equipment Controller (EC) Ports
    AUX
      Oper State                  : up
===============================================================================
*A:Dut-A#
```

fwd-engine

Syntax **fwd-engine drop-reason statistics**

Context show>card>fp

Description This command displays egress FP stats for forwarding-engine packets dropped. When any of the packet counters increments it indicates that a packet was dropped in the egress datapath or extracted to the control plane for further processing.

Output Table 47 describes the output fields for the **show elmi** command.

Table 47 **Output Fields: show card fp fwd-engine**

Field	Description
Egress Encapsulation Exceeded	Packet header size exceeded the egress encapsulation limit

Sample Output: show card fp fed-engine

```
A:nodeA# show card 1 fp 1 fwd-engine drop-reason statistics
===============================================================================
Card 1 FP 1 Egress Forwarding Engine Drop Reason Statistics
===============================================================================
Egress Encapsulation Exceeded                          0
===============================================================================
```

elmi

Syntax **elmi**

Context show

Description This command displays Ethernet Link Management Interface (eLMI) information.

Table 48 describes the output fields for the **show elmi** command.

Table 48 **Output Fields: show elmi**

Field	Description
Link Status	Status of the E-LMI protocol when the elmi mode is set to uni-n. Link Status will indicate up if eLMI mode is set to "none".
T391	pooling timer used by UNI-C. UNI-N will send the consecutive single EVC asynchronous status messages every (T391/10) rounded to the second interval.
T392	Pooling verification timer for UNI-N
N393	Status counter for UNI-N
Rx Enq. Time	Last time a status inquiry message was received from UNI-C.
Rx Enq Msg	Number of status inquiry messages received.
Rx Check Time	Last time a status inquiry E-LMI check message was received.
Rx Inv. SeqNum	Counts the number of E-LMI messages received with invalid sequence number.
Enq Timeouts	Counts the number of T392 timer expired.
Tx Status Time	Last time a status message was sent by UNI-N.
Tx Status Msg	Number of status messages sent by UNI-N.
Tx Check Time	Last time a status eLMI check message was sent by UNI-N.
Tx Async Status Msg	Counter for single EVC asynchronous status messages sent by UNI-N.
Discard Msg	Counter for the status inquiry messages discarded due to errors.

evc

Syntax **evc** [*port-id* [**vlan** *vlan-id*]]

Context show>elmi

Description This command displays Ethernet Virtual Connections (EVC). No argument displays all the EVC on the service router. The port and VLAN arguments display information related to EVC associated with the port and VLAN.

Parameters *port-id* — Displays information related to the EVCs configured on the port.

Values

port-id *slot/mda/port*

eth-sat-id	esat-*id*/*slot*/*port*	
	esat	keyword
	id	1 to 20
pxc-id	pxc-*id*.*sub-port*	
	pxc	keyword
	id	1 to 64
	sub-port	a, b

vlan *vlan-id* **—** Specifies the VLAN Identifier of the EVC.

Values 0 to 4094, *

Output See the following sections:

- Output Fields: show elmi evc
- Sample Output: show elmi evc

Output Fields: show elmi evc

Table 49 describes the output fields for the **show elmi evc** command.

Table 49 **Output Fields: show elmi evc**

Field	Description
Port	Port identifier
Vlan	Vlan identifier
Status	New-Act — new and active Act — active
Type	Connection type
EVC Id	EVC identifier

Sample Output: show elmi evc

```
*A:Dut-C# show elmi evc
===============================================================================
ELMI EVC Table
===============================================================================
Port     Vlan  Status    Type  Evc Id
-------------------------------------------------------------------------------
1/1/1    10    New-Act   P2p   EVC11110
1/1/3    30    New-Act   P2p   EVC11220
1/1/5    100   Act       P2p   EVC115100
1/1/5    200   Act       P2p   EVC115200
-------------------------------------------------------------------------------
Number of Evcs : 4
```

```
===============================================================================
*A:Dut-C#


A:Dut-C# show elmi evc 1/1/5
===============================================================================
ELMI EVC Table
===============================================================================
Port     Vlan  Status    Type  Evc Id
-------------------------------------------------------------------------------
1/1/5    100   Act       P2p   EVC115100
1/1/5    200   Act       P2p   EVC115200
-------------------------------------------------------------------------------
Number of Evcs : 2
===============================================================================
A:Dut-C#


*A:Dut-C# show elmi evc 1/1/5 vlan 100
===============================================================================
Evc Detailed Information
===============================================================================
Port          : 1/1/5                   vlanId        : 100
Evc Status    : Act                     Evc Type      : P2p
Evc Identifier: EVC115100
===============================================================================
*A:Dut-C#
```

uni

Syntax **uni** [*port-id*]

Context show>elmi

Description This command displays information about ELMI mode, status, number of EVCs (SAPs) configured on the port for all of the ports on the service router.

Parameters *port-id* — Displays UNI information for the specified port.

Output

Sample Output: show elmi uni

```
*A:Dut-C# show elmi uni
===============================================================================
ELMI UNI-N Table
===============================================================================
Port     Mode  Status   #Evcs Uni Identifier
-------------------------------------------------------------------------------
1/1/1    None  Up       0     10/100 Ethernet TX
1/1/2    None  Up       0     port-21
1/1/3    None  Up       0     10/100 Ethernet TX
1/1/4    None  Up       0     10/100 Ethernet TX
1/1/5    Uni-N Up       2     UNI115
1/1/6    None  Up       0     10/100 Ethernet TX
```

```
1/1/7    None  Up       0     10/100 Ethernet TX
1/1/8    None  Up       0     10/100 Ethernet TX
1/1/9    None  Up       0     10/100 Ethernet TX
1/1/10   None  Up       0     10/100 Ethernet TX
1/1/11   None  Up       0     10/100 Ethernet TX
1/1/12   None  Up       0     10/100 Ethernet TX
1/1/13   None  Up       0     10/100 Ethernet TX
1/1/14   None  Up       0     10/100 Ethernet TX
1/1/15   None  Up       0     10/100 Ethernet TX
1/1/16   None  Up       0     10/100 Ethernet TX
1/1/17   None  Up       0     10/100 Ethernet TX
...
===============================================================================
*A:Dut-C#


*A:Dut-C# show elmi uni 1/1/5
===============================================================================
Uni-N Detailed Information
===============================================================================
Uni Mode      : Uni-N                  Link Status         : Up
Uni Identifier: UNI115
T391          : 10 seconds             T392                : 15 seconds
N393          : 4                      UniType             : Bundling
Rx Enq. Time  : 02/18/2010 17:11:44    Tx Status Time      : 02/18/2010 17:11:44
Rx Enq Msg    : 24                     Tx Status Msg       : 24
Rx Check Time : 02/18/2010 17:12:34   Tx Check Time       : 02/18/2010 17:12:34
Rx Inv. SeqNum: 0                     Tx Async Status Msg : 0
Enq Timeouts  : 0                     Discard Msg         : 0
===============================================================================
*A:Dut-C#
```

eth-tunnel

Syntax **eth-tunnel**

Context show

Description This command displays Ethernet tunnel information.

Output See the following sections:

- Output Fields: show eth-tunnel
- Sample Output: show eth-tunnel

Output Fields: show eth-tunnel

Table 50 describes the output fields for the **show eth-tunnel** command.

Table 50 **Output Fields: show eth-tunnel**

Field	Description
Tunnel Id	Numeric value from 1 to 64
Admin State	Up — The eth tunnel is administratively up. Down — The eth tunnel is administratively down.
Oper State	Up — The eth tunnel is operationally up. Down — The eth tunnel is operationally down.
Protection Type	Two options: g8031-1to1 — two members are allowed, but only one of them is active at one point in time loadsharing — multiple members can be active at one point in time
Active Paths	Only two paths are supported

Sample Output: show eth-tunnel

```
*A:PE-E# show eth-tunnel
===============================================================================
Ethernet Tunnel Groups
===============================================================================
Tunnel Admin  Oper   Protection    Active Paths
ID     State  State  Type            1  2  3  4  5  6  7  8
-------------------------------------------------------------------------------
1      Up     Up     g.8031-1to1     x  2
2      Up     Up     g.8031-1to1     1  x
===============================================================================
*A:PE-E#
*A:PE-E# show eth-tunnel aps
===============================================================================
Ethernet Tunnel APS Groups
===============================================================================
Tunnel Admin  Oper   Working Path           Path   Active Rx PDU
ID     State  State  Protecting Path        State  Path   Tx PDU
-------------------------------------------------------------------------------
1      Up     Up     1 - 1/1/2 1            Down   No     BF010100 (  SF)
                     2 - 2/1/2 1            Up     Yes    BF010100 (  SF)
2      Up     Up     1 - 2/1/2 2            Up     Yes    0F000000 (  NR)
                     2 - 1/1/2 2            Down   No     EF000000 (SF-P)
===============================================================================
*A:PE-E#

*A:PE-E# show eth-tunnel 1
===============================================================================
Ethernet Tunnel Group 1 Information
===============================================================================
Description        : Eth Tunnel
IfIndex            : 1476395009
Admin State        : Up                Oper State       : Up
```

```
Protection Type    : G.8031-1to1        Max Revert Time  :    1 seconds
MAC Address        : 00:1a:f0:44:d2:03  Time to Revert   : N/A
                                        Hold Down Time   :    0 centiseconds
-------------------------------------------------------------------------------
Ethernet Tunnel Group APS Information
-------------------------------------------------------------------------------
APS PDU Rx         : BF010100 (  SF)    Switchover Time  : 05/28/2009 10:10:17
APS PDU Tx         : BF010100 (  SF)
Defect Status      :
-------------------------------------------------------------------------------
-------------------------------------------------------------------------------
Ethernet Tunnel Group Path Summary
-------------------------------------------------------------------------------
Path ID   Member   Control-Tag Precedence      Admin/Oper      Active  Mgmt
-------------------------------------------------------------------------------
   1      1/1/2    1           primary           Up/Down      No      Yes
   2      2/1/2    1           secondary         Up/Up        Yes     No
===============================================================================
*A:PE-E#

*A:PE-E# show eth-tunnel 1 path 1
===============================================================================
Ethernet Tunnel Group 1 Path Information
===============================================================================
Description        : (Not Specified)
Member             : 1/1/2              Control-Tag      : 1
Admin State        : Up                 Oper State       : Down
-------------------------------------------------------------------------------
Ethernet Tunnel Group Path APS Information
-------------------------------------------------------------------------------
Active Count       : 2                  Active Time      : 0d 00:12:09
-------------------------------------------------------------------------------
Eth-Cfm Configuration Information
-------------------------------------------------------------------------------
Md-index           : 1                  Direction        : Down
Ma-index           : 1                  Admin            : Enabled
MepId              : 1                  CCM-Enable       : Enabled
LowestDefectPri    : macRemErrXcon      HighestDefect    : defRemoteCCM
Defect Flags       : bDefRemoteCCM
Mac Address        : 00:16:4d:c0:c1:ca  ControlMep       : True
===============================================================================
*A:PE-E#

*A:PE-E# show eth-tunnel 1 path 1 detail
===============================================================================
Ethernet Tunnel Group 1 Detailed Path Information
===============================================================================
Description        : (Not Specified)
Member             : 1/1/2              Control-Tag      : 1
Admin State        : Up                 Oper State       : Down
-------------------------------------------------------------------------------
Ethernet Tunnel Group Path APS Information
-------------------------------------------------------------------------------
Active Count       : 2                  Active Time      : 0d 00:12:09
-------------------------------------------------------------------------------
Eth-Cfm Configuration Information
-------------------------------------------------------------------------------
Md-index           : 1                  Direction        : Down
Ma-index           : 1                  Admin            : Enabled
```

```
MepId              : 1                   CCM-Enable       : Enabled
LowestDefectPri    : macRemErrXcon       HighestDefect    : defRemoteCCM
Defect Flags       : bDefRemoteCCM
Mac Address        : 00:16:4d:c0:c1:ca   ControlMep       : True
CcmLtmPriority     : 7
CcmTx              : 0                   CcmSequenceErr   : 0
Eth-Ais:           : Disabled
Eth-Tst:           : Disabled
LbRxReply          : 0                   LbRxBadOrder     : 0
LbRxBadMsdu        : 0                   LbTxReply        : 0
LbNextSequence     : 1                   LtNextSequence   : 1
LtRxUnexplained    : 0
===============================================================================
*A:PE-E#
```

fwd-path-ext

Syntax **fwd-path-ext** [**fpe** *fpe-id*]
fwd-path-ext fpe *fpe-id* **associations**

Context show

Description This command displays FPE information.

Parameters **fpe** *fpe-id* **—** Specifies the FPE ID

Values 1 to 64

associations — Displays a list of current fwd path extensions to which the FPE is associated.

Output Table 52 describes the output fields for the **show fwd-path-ext** command.

Table 51 **Output Fields: show fwd-path-ext**

Field	Description
FPE Id	Displays the configured ID of the FPE.
Path pxc/ xc-a, xc-b	Displays the path associated with this FPE. This can be a single PXC (pair of PXC sub-ports .a and .b), or it can be a LAG with PXC sub-ports as member ports. PXC based LAG is used for redundancy and increased throughput of the FPE. In case of a PXC based LAG, the path is referred to as xc-a and xc-b.
Application	Displays the application associated with this FPE. Based on the application type, the system will internally configure logic on underlying PXC (or PXC based LAG) necessary to accommodate the application.
Description	Displays the user-configurable string used to describe the use of the FPE.
SDP-id Range	Displays the configurable SDP-id range used for internal SDPs that are utilized by FPEs.
Path	Path associated with this FPE. This can be a single PXC (pair of PXC sub-ports .a and .b), or it can be a LAG with PXC sub-ports as member ports. PXC based LAG is used for redundancy and increased throughput of the FPE.
PW-Port	Displays the FPE that is used by PW-port application.
VXLAN-Termination	Displays the FPE that is used by Vxlan-Termination application.
Oper	Displays the status of the application.
EPIPE svc Id	Displays the Epipe service ID with which the PW-port is associated.

Table 51 **Output Fields: show fwd-path-ext (Continued)**

Field	Description
PW-Port Id	Displays the PW-port ID that is associated with the EPIPE.
Tunnel termination	Displays the IP addresses on which the VXLAN tunnel is terminated.

```
A:CPM148>config>fwd-path-ext>fpe$ show fwd-path-ext fpe
===============================================================================
FPE Info
===============================================================================
FPE Id    Path Application  Description
          pxc/xc-a, xc-b
-------------------------------------------------------------------------------
1         pxc 1           pw-port      xyz
2         lag 1, lag 2    vxlan-term   abc
-------------------------------------------------------------------------------
Number of entries : 2
-------------------------------------------------------------------------------
SDP-Id Range: 1-100
===============================================================================
```

```
*A:CPM148>config>fwd-path-ext>fpe$ show fwd-path-ext fpe 1
============================================================
FPE Id: 2
============================================================
Description        : xyz
Path               : pxc 1
Pw Port            : Enabled       Oper: up
Vxlan Termination  : Disabled
============================================================
```

```
*A:CPM148>config>fwd-path-ext>fpe$ show fwd-path-ext fpe 2
============================================================
FPE Id: 2
============================================================
Description        : abc
Path               : lag 1, lag 2
Pw Port            : Disabled
Vxlan Termination  : Disabled      Oper: down ß Can be down due to lag 1/
2 being down, PXCs within the lags being down etc
============================================================
```

```
*A:CPM148>config>fwd-path-ext>fpe$ show fwd-path-ext fpe 1 associations
============================================================
pw-port associations
============================================================
```

```
Epipe Svc Id    PW-Port-Id
==============================================================
110
220
330
==============================================================
Vxlan-termination associations
==============================================================
None
==============================================================
*A:CPM148>config>fwd-path-ext>fpe$ show fwd-path-ext fpe 2 associations
==============================================================
pw-port associations
==============================================================
None
==============================================================
Vxlan-termination associations
==============================================================
tunnel-termination
==============================================================
10.1.1.1
20.1.1.1
200::10
300::10
==============================================================
```

interface-group-handler

Syntax **interface-group-handler** [*igh-id*]

Context show

Description This command displays Interface Group Handler (IGH) information.

If no command line options are specified, a summary listing of all IGHs is displayed.

Parameters *igh-id* — Displays information only on the specified IGH ID.

Output See the following sections:

- Output Fields: show interface-group-handler
- Sample Output: show interface-group-handler

Output Fields: show interface-group-handler

Table 52 describes the output fields for the **show interface-group-handler** command.

Table 52 **Output Fields: show interface-group-handler**

Field	Description
IGH Index	A value between 1 and 100 that identifies the specific interface group handler.
Admin State	Up — The interface group handler is administratively up. Down — The interface group handler administratively down.
Number of Members	Identifies the number of ports or channels in the group, up to a maximum of 8.
Threshold	Indicates the minimum number of active links that must be present for the interface group handler to be active.

Sample Output: show interface-group-handler

```
A:ALU-27# show interface-group-handler
===============================================================================
Interface Group Handler Summary Information
===============================================================================
IGH Index Admin     Number of Threshold
          State     Members
-------------------------------------------------------------------------------
1         Up        4         4
2         Up        2         2
===============================================================================
A:ALU-27#


A:ALU-27#show interface-group-handler 2
===============================================================================
Interface Group Handler 2 Information
===============================================================================
Admin Status       : Up
Threshold          : 2                  Last Change      : 02/02/2010 18:10:04
-------------------------------------------------------------------------------
Interface Group Handler Protocol Information
-------------------------------------------------------------------------------
Protocol Oper Status  Active Links                          Up Time
-------------------------------------------------------------------------------
ipcp     up           2                                     0d 00:15:04
ipv6cp   none         0                                             N/A
mplscp   waiting      0                                             N/A
osicp    none         0                                             N/A
-------------------------------------------------------------------------------
Port 1/5/2.2 Information
-------------------------------------------------------------------------------
Protocol Oper Status                                       Up Time
-------------------------------------------------------------------------------
ipcp     up                                                0d 00:15:05
ipv6cp   none                                                     N/A
mplscp   running                                                  N/A
osicp    none                                                     N/A
-------------------------------------------------------------------------------
```

```
Port 1/5/2.3 Information
-------------------------------------------------------------------------------
Protocol Oper Status                                          Up Time
-------------------------------------------------------------------------------
ipcp     up                                                   0d 00:15:05
ipv6cp   none                                                        N/A
mplscp   running                                                     N/A
osicp    none                                                        N/A
===============================================================================
A:ALU-27#
```

mcm

Syntax **mcm** [***slot*** [***/mcm***]] [**detail**]

Context show

Description This command displays MCM information.

If no command line options are specified, a summary output of all MCMs is displayed in table format.

Parameters *slot* — The slot number for which to display MCM information.

Values 1

mcm — The MCM number in the slot for which to display MCM information.

Values 7750 SR-c4 to 1, 3
7750 SR-c12 to 1, 3, 5, 7, 9, 11

detail — Displays detailed MDA information.

Output See the following sections:

- Output Fields: show mcm
- Sample Output: show mcm

Output Fields: show mcm

Table 53 describes the output fields for the **show mcm** command.

Table 53 **Output Fields: show mcm**

Label	Description
Slot	The chassis slot number
MCM	The MCM slot number
Provisioned MCM-type	The MCM type provisioned

Table 53 **Output Fields: show mcm (Continued)**

Label	Description
Equipped MCM-type	The MCM type installed
Admin State	Up — Administratively up
	Down — Administratively down
Ops State	Up — Operationally up
	Down — Operationally down

Sample Output: show mcm

```
A:7750-3# show mcm
===============================================================================
MCM Summary
===============================================================================
Slot Mcm  Provisioned          Equipped            Admin      Operational
           Mcm-type            Mcm-type            State      State
-------------------------------------------------------------------------------
1    1      mcm-xp             mcm-xp              up         up
     3                         mcm-xp              up         unprovisioned
===============================================================================
A:7750-3#

A:7750-3# show mcm 1
===============================================================================
MCM 1/1
===============================================================================
Slot Mcm  Provisioned          Equipped            Admin     Operational
           Mcm-type            Mcm-type            State     State
-------------------------------------------------------------------------------
1    1     mcm-xp              mcm-xp              up         up
===============================================================================
MCM 1/3
===============================================================================
Slot Mcm  Provisioned          Equipped             Admin     Operational
           Mcm-type            Mcm-type             State     State
-------------------------------------------------------------------------------
     3                         mcm-xp               up        unprovisioned
===============================================================================
A:7750-3#
```

mda

Syntax **mda** [***slot*** [***/mda***]] [**detail**]

Context show

Description This command displays MDA\XMA information.

If no command line options are specified, a summary output of all MDAs is displayed in table format.

Parameters *slot* — The slot number for which to display MDA information.

Values 1 to 10

mda — The MDA number in the slot for which to display MDA information.

Values 7450 ESS: 1, 2
7750 SR: 1, 2
7750 SR-c12: 1, 3, 5, 7, 9, 11
7750 SR-c4: 1, 3
7950 XRS: 1, 2

detail — Displays detailed MDA information.

Output See the following sections:

- Output Fields: show mda
- Sample Output: show mda (showing 7450 ESS)
- Sample Output: show mda (showing 7950 XRS)
- Output Fields: show mda <slot/mda> detail
- Sample Output: show mda <slot/mda> detail
- Sample Output: show mda <slot/mda> detail (showing CMA in Slot 1 on a 7750 SR-c12 or 7750 SR-c4 system)
- Sample Output: show mda <slot/mda> detail (showing Channelized MDA on a 7750 SR-7)
- Sample Output: show mda <slot/mda> detail (showing 7950 XRS)

Output Fields: show mda

Table 54 describes the output fields for the **show mda** command.

Table 54 **Output Fields: show mda**

Label	Description
Slot	The chassis slot number
MDA	The MDA slot number
Provisioned MDA-type	The MDA type provisioned
Equipped MDA-type	The MDA type actually installed
Admin State	Up — Administratively up
	Down — Administratively down (e.g., shutdown)

Table 54 **Output Fields: show mda (Continued)**

Label	Description (Continued)
Operational State	Up — Operationally up
	Down — Operationally down

Sample Output: show mda (showing 7450 ESS)

```
A:ALA-42# show mda
===============================================================================
MDA Summary
===============================================================================
Slot Mda  Provisioned          Equipped             Admin    Operational
          Mda-type             Mda-type             State    State
-------------------------------------------------------------------------------
1    1    m60-10/100eth-tx     m60-10/100eth-tx     up       up
     2    m60-10/100eth-tx     m60-10/100eth-tx     up       up
===============================================================================
A:ALA-42#
```

Sample Output: show mda (showing 7950 XRS)

```
A:Dut-A# show mda
===============================================================================
MDA Summary
===============================================================================
Slot  Mda   Provisioned Type   Equipped Type           Admin     Operational
                               (if different)          State     State
-------------------------------------------------------------------------------
1     1     cx20-10g-sfp                              up        up
      2     cx20-10g-sfp                              up        up
2     1     cx20-10g-sfp                              up        up
===============================================================================
A:Dut-A#
```

Output Fields: show mda <slot/mda> detail

Table 55 describes the output fields for the **show MDA <slot/mda> detail** command.

Table 55 **Output Fields: show mda <slot/mda> detail**

Label	Description
Slot	The chassis slot number
Slot	The MDA slot number
Provisioned Provisioned-type	The provisioned MDA type
Equipped Mda-type	The MDA type that is physically inserted into this slot in this chassis

Table 55 **Output Fields: show mda <slot/mda> detail (Continued)**

Label	Description (Continued)
Admin State	Up — The MDA is administratively up
	Down — The MDA is administratively down
Operational State	Up — The MDA is operationally up
	Down — The MDA is operationally down
Failure Reason	This hardware component has failed
Maximum port count	The maximum number of ports that can be equipped on the MDA card
Number of ports equipped	The number of ports that are actually equipped on the MDA
Transmit timing selected	Indicates the source for the timing used by the MDA.
Sync interface timing status	Indicates whether the MDA has qualified one of the timing signals from the CPMs.
Network Ingress Queue Policy	Specifies the network queue policy applied to the MDA to define the queueing structure for this object.
Capabilities	Specifies the minimum size of the port that can exist on the MDA.
Egress XPL error threshold	The Egress XPL Error Threshold value used by the **fail-on-error** feature
Egress XPL error window	The Egress XPL Error Window value used by the **fail-on-error** feature
Max channel size	Specifies the maximum size of the channel that can exist on the channelized MDA.
Channels in use	Applicable for SONET and TDM MDAs only. Indicates the total number of leaf SONET paths, TDM channels and bundles on the MDA which are presently provisioned for passing traffic.
Part number	The hardware part number
CLEI code	The code used to identify the MDA
Serial number	The MDA part number. Not user modifiable
Manufacture date	The MDA manufacture date. Not user modifiable
Manufacturing string	Factory-inputted manufacturing text string. Not user modifiable.
Administrative state	Up — The MDA is administratively up
	Down — The MDA is administratively down
Operational state	Up — The MDA is operationally up
	Down — The MDA is operationally down

Table 55 **Output Fields: show mda <slot/mda> detail (Continued)**

Label	Description (Continued)
Time of last boot	The date and time the most recent boot occurred
Current alarm state	Displays the alarm conditions for the specific MDA.
Base MAC address	The base chassis Ethernet MAC address. Special purpose MAC addresses used by the system software are constructed as offsets from this base address.

Sample Output: show mda <slot/mda> detail

```
*A:Dut-A# show mda 5/1 detail
===============================================================================
MDA 5/1 detail
===============================================================================
Slot  Mda   Provisioned           Equipped              Admin     Operational
            Mda-type              Mda-type              State     State
-------------------------------------------------------------------------------
5     1     m20-1gb-xp-sfp        m20-1gb-xp-sfp        up        up

MDA Specific Data
    Maximum port count            : 20
    Number of ports equipped      : 20
    Network ingress queue policy  : default
    Capabilities                  : Ethernet
    Fail On Error                 : disabled
    Egress XPL error threshold    : 1000
    Egress XPL error window       : 60
Hardware Data
    Platform type                 : 7750
    Part number                   : 3HE03612AAAB01
    CLEI code                     : IPPAABFBAA
    Serial number                 : NS093464752
    Manufacture date              : 08232009
    Manufacturing string          :
    Manufacturing deviations      :
    Manufacturing assembly number :
    Administrative state          : up
    Operational state             : up
    Temperature                   : 37C
    Temperature threshold         : 75C
    Software version              : N/A
    Time of last boot             : 2011/11/15 11:32:49
    Current alarm state           : alarm cleared
    Base MAC address              : 00:23:3e:ea:38:4b
-------------------------------------------------------------------------------
QOS Settings
-------------------------------------------------------------------------------
Ing. Named Pool Policy            : None
Egr. Named Pool Policy            : None
===============================================================================
```

Sample Output: show mda <slot/mda> detail (showing CMA in Slot 1 on a 7750 SR-c12 or 7750 SR-c4 system)

```
A:7750-3# show mda 1/5 detail
===============================================================================
MDA 1/5 detail
===============================================================================
Slot Mda  Provisioned          Equipped             Admin    Operational
          Mda-type             Mda-type             State    State
-------------------------------------------------------------------------------
1    5    c8-10/100eth-tx      c8-10/100eth-tx      up       up

MDA Specific Data
    Maximum port count            : 8
    Number of ports equipped      : 8
    Network ingress queue policy  : default
    Capabilities                  : Ethernet
    Fail On Error                 : disabled
    Egress XPL error threshold    : 1000
    Egress XPL error window       : 60


Hardware Data
    Part number                   : Sim Part#
    CLEI code                     : Sim CLEI
    Serial number                 : mda-5
    Manufacture date              : 01012003
    Manufacturing string          : Sim MfgString mda-5
    Manufacturing deviations      : Sim MfgDeviation mda-5
    Administrative state          : up
    Operational state             : up
    Temperature                   : 33C
    Temperature threshold         : 75C
    Time of last boot             : 2007/04/11 15:13:48
    Current alarm state           : alarm cleared
    Base MAC address              : 04:7b:01:05:00:01
===============================================================================
```

Sample Output: show mda <slot/mda> detail (showing Channelized MDA on a 7750 SR-7)

```
A:SR-7/Dut-C# show mda 5/1 detail
===============================================================================
MDA 5/1 detail
===============================================================================
Slot Mda  Provisioned          Equipped             Admin    Operational
          Mda-type             Mda-type             State    State
-------------------------------------------------------------------------------
5    1    m1-choc12-sfp        m1-choc12-sfp        up       up

MDA Specific Data
    Maximum port count            : 1
    Number of ports equipped      : 1
    Transmit timing selected      : CPM Card A
    Sync interface timing status  : Qualified
    Network ingress queue policy  : default
    Capabilities                  : Sonet, TDM, PPP, FR
    Fail On Error                 : disabled
    Egress XPL error threshold    : 1000
    Egress XPL error window       : 60
```

```
    Min channel size              : PDH DS0 Group
    Max channel size              : PDH DS3
    Max number of channels        : 512
    Channels in use               : 0

Hardware Data
    Part number                   : 3HE00193AAAA01
    CLEI code                     :
    Serial number                 : NS042510655
    Manufacture date              : 07072004
    Manufacturing string          :
    Manufacturing deviations      :
    Administrative state          : up
    Operational state             : up
    Time of last boot             : 2007/04/11 12:51:48
    Current alarm state           : alarm cleared
    Base MAC address              : 00:03:fa:1a:7c:6f
===============================================================================
A:SR-7/Dut-C#
```

Sample Output: show mda <slot/mda> detail (showing 7950 XRS)

```
A:Dut-A# show mda 1/1 detail
===============================================================================
MDA 1/1 detail
===============================================================================
Slot  Mda   Provisioned Type  Equipped Type(if different) Admin     Operational
                                                         State     State
-------------------------------------------------------------------------------
1     1     cx20-10g-sfp                                 up        up


MDA Specific Data
    Maximum port count            : 20
    Number of ports equipped      : 20
    Network ingress queue policy  : default
    Capabilities                  : Ethernet
    Min channel size              : Sonet STS-192
    Max channel size              : Sonet STS-192
    Max number of channels        : 20
    Channels in use               : 0

Hardware Data
    Platform type                 : 7950
    Part number                   :
    CLEI code                     :
    Serial number                 : GRA03-126
    Manufacture date              :
    Manufacturing string          : (Not Specified)
    Manufacturing deviations      : (Not Specified)
    Manufacturing assembly number : 82-0299-03
    Administrative state          : up
    Operational state             : up
    Temperature                   : 45C
    Temperature threshold         : 75C
    Software version              : N/A
    Time of last boot             : 2012/05/23 20:30:55
```

```
    Current alarm state          : alarm cleared
    Base MAC address             : 8c:90:d3:be:69:8a
    Firmware version             : I-10.0.S209

-------------------------------------------------------------------------------
QOS Settings
-------------------------------------------------------------------------------
===============================================================================
A:Dut-A#
```

pools

Syntax **pools** *mda-id* [*/port*] [**access-app** [*pool-name* | **service** *service-id*]] | **queue-group** *queue-group-name*]]
pools *mda-id* [*/port*] [*network-app* [*pool-name* |**queue-group** *queue-group-name*]]
pools *mda-id* [*/port*] [*direction* [*pool-name* |**service** *service-id*| **queue-group** *queue-group-name*]]

Context show

Description This command displays pool information.

Parameters *mda-id*[*/port*] **—** Displays the pool information of the specified MDA and port.

access-app *pool-name* **—** Displays the pool information of the specified QoS policy.

Values access-ingress, access-egress

service *service-id* **—** Displays pool information for the specified service.

Values 1 to 2147483647

queue-group *queue-group-name* **—** Displays information for the specified queue group.

direction — Specifies the traffic direction.

Values ingress, egress

Output See the following sections:

- Output Fields: show pools
- Sample Output: show pools
- Sample Output: show pools access-ingress (When Alarm Information is Pending)
- Sample Output: show pools egress (With Named Pools)
- Sample Output: show pools egress (When Alarm Information is Pending)

Output Fields: show pools

Table 56 describes the output fields for the **show pools** command.

Table 56 **Output Fields: show pools**

Label	Description
Type	Specifies the pool type.
ID	Specifies the card/mda or card/MDA/port designation.
Application/Type	Specifies what the pool would be used for. The pools could be used for access or network traffic at either ingress or egress.
Pool Name	Specifies the name of the pool being used.
Resv CBS	Specifies the percentage of pool size reserved for CBS.
Utilization	Specifies the type of the slope policy.
State	The administrative status of the port.
Start-Avg	Specifies the percentage of the buffer utilized after which the drop probability starts to rise above 0.
Max-Avg	Specifies the percentage of the buffer utilized after which the drop probability is 100 percent. This implies that all packets beyond this point will be dropped.
Time Avg Factor	Specifies the time average factor the weighting between the previous shared buffer average utilization result and the new shared buffer utilization in determining the new shared buffer average utilization.
Actual ResvCBS	Specifies the actual percentage of pool size reserved for CBS.
Admin ResvCBS	Specifies the percentage of pool size reserved for CBS.
PoolSize	Specifies the size in percentage of buffer space. The value '-1' implies that the pool size should be computed as per fair weighting between all other pools.
Pool Total	Displays the total pool size.
Pool Shared	Displays the amount of the pool which is shared.
Pool Resv	Specifies the percentage of reserved pool size.
Pool Total In Use	Displays the total amount of the pool which is in use.
Pool Shared In Use	Displays the amount of the pool which is shared that is in use.

Sample Output: show pools

```
*A:ALA-48# show pools 1/1
===============================================================================
Type    Id        App.    Pool Name                  Actual ResvCBS  PoolSize
                                                     Admin ResvCBS
-------------------------------------------------------------------------------
MDA     1/1       Acc-Ing default
                                                     Sum
MDA     1/1       Acc-Ing MC Path Mgnt
```

```
                                                                50
MDA     1/1       Acc-Egr default
                                                                Sum
MDA     1/1       Net-Ing default
                                                                Sum
MDA     1/1       Net-Egr default
                                                                50
Port    1/1/1     Acc-Ing default
                                                                Sum
Port    1/1/1     Acc-Egr default
                                                                Sum
Port    1/1/1     Net-Egr default
                                                                Sum
Port    1/1/2     Acc-Ing default
                                                                Sum
Port    1/1/2     Acc-Egr default
                                                                Sum
Port    1/1/2     Net-Egr default
                                                                Sum
Port    1/1/3     Acc-Ing default
                                                                Sum
Port    1/1/3     Acc-Egr default
                                                                Sum
Port    1/1/3     Net-Egr default
                                                                Sum
Port    1/1/4     Acc-Ing default
                                                                Sum
Port    1/1/4     Acc-Egr default
                                                                Sum
...
Port    1/1/12    Acc-Egr default
                                                                Sum
Port    1/1/12    Net-Egr default
                                                                Sum
===============================================================================
*A:ALA-48#


*A:ALA-48# show pools 1/1/1 network-egress
===============================================================================
Pool Information
===============================================================================
Port                 : 1/1/1
Application          : Net-Egr           Pool Name          : default
Resv CBS             : Sum
-------------------------------------------------------------------------------
Utilization                   State       Start-Avg    Max-Avg    Max-Prob
-------------------------------------------------------------------------------
High-Slope                    Down              70%        90%         80%
Low-Slope                     Down              50%        75%         80%

Time Avg Factor      : 7
Pool Total           : 3072 KB
Pool Shared          : 1536 KB           Pool Resv          : 1536 KB

Pool Total In Use    : 0 KB
Pool Shared In Use   : 0 KB              Pool Resv In Use   : 0 KB
WA Shared In Use     : 0 KB
```

```
Hi-Slope Drop Prob   : 0                Lo-Slope Drop Prob : 0
-------------------------------------------------------------------------------
FC-Maps                          ID       MBS         Depth  A.CIR     A.PIR
                                          CBS                O.CIR     O.PIR
-------------------------------------------------------------------------------
be                               1/1/1    1536        0      0         100000
                                          28                 0         Max
l2                               1/1/1    1536        0      25000     100000
                                          96                 25000     Max
af                               1/1/1    1536        0      25000     100000
                                          320                25000     Max
l1                               1/1/1    768         0      25000     100000
                                          96                 25000     Max
h2                               1/1/1    1536        0      100000    100000
                                          320                Max       Max
ef                               1/1/1    1536        0      100000    100000
                                          320                Max       Max
h1                               1/1/1    768         0      10000     100000
                                          96                 10000     Max
nc                               1/1/1    768         0      10000     100000
                                          96                 10000     Max
===============================================================================
*A:ALA-48#


*A:Dut-T# show pools 4/1/1 access-ingress
===============================================================================
Pool Information
===============================================================================
Port                 : 4/1/1
Application          : Acc-Ing           Pool Name          : default
CLI Config. Resv CBS : 10%
Resv CBS Step        : 1%                Resv CBS Max       : 30%
Amber Alarm Threshold: 10%               Red Alarm Threshold: 0%
-------------------------------------------------------------------------------
Queue-Groups
-------------------------------------------------------------------------------
-------------------------------------------------------------------------------
Utilization                   State       Start-Avg    Max-Avg    Max-Prob
-------------------------------------------------------------------------------
High-Slope                    Down              70%        90%         80%
Low-Slope                     Down              50%        75%         80%

Time Avg Factor      : 7
Pool Total           : 66048 KB
Pool Shared          : 46080 KB          Pool Resv          : 19968 KB

-------------------------------------------------------------------------------

-------------------------------------------------------------------------------
Current Resv CBS    Provisioned    Rising         Falling        Alarm
%age                all Queues     Alarm Thd      Alarm Thd      Color
-------------------------------------------------------------------------------
30%                 40320 KB       NA             1797 KB        Amber
Pool Total In Use    : 0 KB
Pool Shared In Use   : 0 KB              Pool Resv In Use   : 0 KB
WA Shared In Use     : 0 KB

Hi-Slope Drop Prob   : 0                Lo-Slope Drop Prob : 0
```

```
-------------------------------------------------------------------------------
Name            Tap        FC-Maps       MBS       HP-Only    A.PIR    A.CIR
                                         CBS       Depth      O.PIR    O.CIR
-------------------------------------------------------------------------------
2->4/1/1:1->11
                MCast     be l2 af l1   30720 KB   3072 KB    25000000 0
                          h2 ef h1 nc   0 KB       0          Max      0
2->4/1/1:1->4
                3/1       af            81408 KB   9216 KB    25000000 0
                                        3360 KB    0          Max      0
2->4/1/1:1->4
                3/1       af            81408 KB   9216 KB    25000000 0
                                        3360 KB    0          Max      0
2->4/1/1:1->4
                4/*       af            81408 KB   9216 KB    25000000 0
                                        3360 KB    0          Max      0
2->4/1/1:1->3
                3/1       l2            81408 KB   9216 KB    25000000 0
                                        3360 KB    0          Max      0
2->4/1/1:1->3
                3/1       l2            81408 KB   9216 KB    25000000 0
                                        3360 KB    0          Max      0
2->4/1/1:1->3
                4/*       l2            81408 KB   9216 KB    25000000 0
                                        3360 KB    0          Max      0
2->4/1/1:1->2
                3/1       l1            81408 KB   9216 KB    25000000 0
                                        3360 KB    0          Max      0
2->4/1/1:1->2
                3/1       l1            81408 KB   9216 KB    25000000 0
                                        3360 KB    0          Max      0
2->4/1/1:1->2
                4/*       l1            81408 KB   9216 KB    25000000 0
...
===============================================================
*A:Dut-T#


*A:ALU-2011# show pools 2/1/1 access-egress
===============================================================
Pool Information
===============================================================
Port                 : 2/1/1
Application          : Acc-Egr           Pool Name          : default
Resv CBS             : Sum
-------------------------------------------------------------------------------
Queue-Groups
-------------------------------------------------------------------------------
policer-output-queues
-------------------------------------------------------------------------------
Utilization                  State       Start-Avg    Max-Avg    Max-Prob
-------------------------------------------------------------------------------
High-Slope                   Down              70%        90%         80%
Low-Slope                    Down              50%        75%         80%

Time Avg Factor      : 7
Pool Total              : 6336 KB
Pool Shared           : 4416 KB           Pool Resv          : 1920 KB
```

```
-------------------------------------------------------------------------------
Pool Resv CBS         Provisioned       Rising          Falling           Alarm
      %age              All Queues     Alarm Thd     Alarm Thd       Color
-------------------------------------------------------------------------------
   40%                     300KB            350KB         250KB          Amber

Pool Total In Use    : 0 KB
Pool Shared In Use   : 0 KB              Pool Resv In Use   : 0 KB
WA Shared In Use     : 0 KB

Hi-Slope Drop Prob   : 0                 Lo-Slope Drop Prob : 0
-------------------------------------------------------------------------------
Name            Tap         FC-Maps       MBS       HP-Only    A.PIR    A.CIR
                                          CBS       Depth      O.PIR    O.CIR
-------------------------------------------------------------------------------
2->2/1/1:100->1
                            be l2 af l1   123 KB     15 KB      100000   0
                            h2 ef h1 nc   0 KB       0          Max      0
accQGrp->policer-output-queues(2/1/1)->1
                              n/a         123 KB     15 KB      100000   0
                                          0 KB       0          Max      0
accQGrp->policer-output-queues(2/1/1)->2
                              n/a         123 KB     15 KB      100000   0
                                          0 KB       0          Max      0


*A:ALU-2011# show pools 2/1/1 access-egress
===============================================================
Pool Information
===============================================================
Port                : 2/1/1
Application         : Acc-Egr           Pool Name          : default
Resv CBS            : Sum
-------------------------------------------------------------------------------
Queue-Groups
-------------------------------------------------------------------------------
policer-output-queues
-------------------------------------------------------------------------------
Utilization                   State       Start-Avg    Max-Avg    Max-Prob
-------------------------------------------------------------------------------
High-Slope                    Down              70%        90%         80%
Low-Slope                     Down              50%        75%         80%

Time Avg Factor     : 7
Pool Total             : 6336 KB
Pool Shared          : 4416 KB           Pool Resv          : 1920 KB

-------------------------------------------------------------------------------
Pool Resv CBS         Provisioned       Rising          Falling           Alarm
      %age              All Queues     Alarm Thd     Alarm Thd       Color
-------------------------------------------------------------------------------
CBS Oversubscription Alarm Info Pending

Pool Total In Use    : 0 KB
Pool Shared In Use   : 0 KB              Pool Resv In Use   : 0 KB
WA Shared In Use     : 0 KB

Hi-Slope Drop Prob   : 0                 Lo-Slope Drop Prob : 0
-------------------------------------------------------------------------------
```

```
Name            Tap        FC-Maps       MBS       HP-Only    A.PIR    A.CIR
                                         CBS       Depth      O.PIR    O.CIR
-------------------------------------------------------------------------------
2->2/1/1:100->1
                           be l2 af l1   123 KB     15 KB      100000   0
                           h2 ef h1 nc   0 KB       0          Max      0
accQGrp->policer-output-queues(2/1/1)->1
                           n/a           123 KB     15 KB      100000   0
                                         0 KB       0          Max      0
accQGrp->policer-output-queues(2/1/1)->2


*A:ALU-2011#show pools 1/1/1 egress
===============================================================================
Pool Information
===============================================================================
Port                : 1/1/1
Application         : Egress            Pool Name          : PoolData
Resv CBS            : 25%               Policy Name        : Port1-1-1
-------------------------------------------------------------------------------
Queue-Groups
-------------------------------------------------------------------------------
-------------------------------------------------------------------------------
Utilization                   State       Start-Avg    Max-Avg    Max-Prob
-------------------------------------------------------------------------------
High-Slope                    Down              70%        90%         80%
Low-Slope                     Down              50%        75%         80%
Time Avg Factor     : 7
Pool Total          : 64 KB
Pool Shared         : 48 KB             Pool Resv          : 16 KB
-------------------------------------------------------------------------------
Pool Resv CBS         Provisioned       Rising          Falling          Alarm
       %age              All Queues     Alarm Thd     Alarm Thd       Color
-------------------------------------------------------------------------------
   40%                      300KB            350KB         250KB          Amber
Pool Total In Use   : 0 KB
Pool Shared In Use  : 0 KB              Pool Resv In Use   : 0 KB
WA Shared In Use    : 0 KB
Hi-Slope Drop Prob  : 0                 Lo-Slope Drop Prob : 0
-------------------------------------------------------------------------------
Name            Tap        FC-Maps     MBS       HP-Only    A.PIR    A.CIR
                                                 CBS       Depth      O.PIR    O.CIR
-------------------------------------------------------------------------------
1->1/1/1:10->2
                           af            128 KB     16 KB      100000   0
                                         0 KB       0          Max      0
1->1/1/1:10->4
                           l1            128 KB     16 KB      100000   0
                                         0 KB       0          Max      0
-------------------------------------------------------------------------------
Port                : 1/1/1
Application         : Egress            Pool Name          : PoolVideo
Resv CBS            : 25%               Policy Name        : Port1-1-1
-------------------------------------------------------------------------------
Queue-Groups
-------------------------------------------------------------------------------
-------------------------------------------------------------------------------
Utilization                   State       Start-Avg    Max-Avg    Max-Prob
-------------------------------------------------------------------------------
```

```
High-Slope                    Down              70%        90%         80%
Low-Slope                     Down              50%        75%         80%
Time Avg Factor      : 7
Pool Total           : 64 KB
Pool Shared          : 48 KB              Pool Resv          : 16 KB
-------------------------------------------------------------------------------
Pool Resv CBS         Provisioned       Rising          Falling           Alarm
       %age               All Queues     Alarm Thd     Alarm Thd       Color
-------------------------------------------------------------------------------
   40%                      300KB            350KB         250KB          Amber
Pool Total In Use    : 0 KB
Pool Shared In Use   : 0 KB               Pool Resv In Use   : 0 KB
WA Shared In Use     : 0 KB
Hi-Slope Drop Prob   : 0                  Lo-Slope Drop Prob : 0
-------------------------------------------------------------------------------
Name            Tap        FC-Maps      MBS       HP-Only    A.PIR    A.CIR
                                        CBS       Depth      O.PIR    O.CIR
-------------------------------------------------------------------------------
1->1/1/1:10->5
                          ef            128 KB     16 KB      100000   0
                                        0 KB       0          Max      0
-------------------------------------------------------------------------------
Port                 : 1/1/1
Application          : Egress             Pool Name          : PoolVoice
Resv CBS             : 50%                Policy Name        : Port1-1-1
-------------------------------------------------------------------------------
Queue-Groups
-------------------------------------------------------------------------------
-------------------------------------------------------------------------------
Utilization                   State       Start-Avg    Max-Avg    Max-Prob
-------------------------------------------------------------------------------
High-Slope                    Down              70%        90%         80%
Low-Slope                     Down              50%        75%         80%
Time Avg Factor      : 7
Pool Total              : 64 KB
Pool Shared           : 32 KB                           Pool Resv          : 32 KB
-------------------------------------------------------------------------------
Pool Resv CBS         Provisioned       Rising          Falling           Alarm
   %age               All Queues        Alarm Thd       Alarm Thd         Color
-------------------------------------------------------------------------------
   40%                      300KB            350KB         250KB          Amber
Pool Total In Use    : 0 KB
Pool Shared In Use   : 0 KB               Pool Resv In Use   : 0 KB
WA Shared In Use     : 0 KB
Hi-Slope Drop Prob   : 0                  Lo-Slope Drop Prob : 0
-------------------------------------------------------------------------------
Name            Tap        FC-Maps       MBS       HP-Only    A.PIR    A.CIR
                                         CBS       Depth      O.PIR    O.CIR
-------------------------------------------------------------------------------
1->1/1/1:10->3
                          nc            128 KB     16 KB      100000   0
                                        0 KB       0          Max      0
===============================================================================
*A:ALU-2011#
```

Sample Output: show pools access-ingress (When Alarm Information is Pending)

```
*A:Dut-T# show pools 4/1/1 access-ingress
===============================================================================
Pool Information
===============================================================================
Port                : 4/1/1
Application         : Acc-Ing           Pool Name          : default
CLI Config. Resv CBS : 10%
Resv CBS Step       : 1%                Resv CBS Max       : 35%
Amber Alarm Threshold: 10%              Red Alarm Threshold: 0%
-------------------------------------------------------------------------------
Queue-Groups
-------------------------------------------------------------------------------
Utilization                   State       Start-Avg    Max-Avg    Max-Prob
-------------------------------------------------------------------------------
High-Slope                    Down              70%        90%         80%
Low-Slope                     Down              50%        75%         80%

Time Avg Factor     : 7
Pool Total          : 66048 KB
Pool Shared         : 46080 KB          Pool Resv          : 19968 KB

-------------------------------------------------------------------------------
-------------------------------------------------------------------------------
Current Resv CBS    Provisioned    Rising         Falling        Alarm
%age                all Queues     Alarm Thd      Alarm Thd      Color
-------------------------------------------------------------------------------
CBS Oversubscription Alarm Info Pending
Pool Total In Use   : 0 KB
Pool Shared In Use  : 0 KB              Pool Resv In Use   : 0 KB
WA Shared In Use    : 0 KB

Hi-Slope Drop Prob  : 0                 Lo-Slope Drop Prob : 0
-------------------------------------------------------------------------------
Name            Tap        FC-Maps       MBS       HP-Only    A.PIR    A.CIR
                                         CBS       Depth      O.PIR    O.CIR
-------------------------------------------------------------------------------
2->4/1/1:1->11
                MCast      be l2 af l1   30720 KB   3072 KB    25000000 0
                           h2 ef h1 nc   0 KB       0          Max      0
2->4/1/1:1->4
                3/1        af            81408 KB   9216 KB    25000000 0
                                         3360 KB    0          Max      0
2->4/1/1:1->4
                3/1        af            81408 KB   9216 KB    25000000 0
                                         3360 KB    0          Max      0
2->4/1/1:1->4
                4/*        af            81408 KB   9216 KB    25000000 0
                                         3360 KB    0          Max      0
2->4/1/1:1->3
                3/1        l2            81408 KB   9216 KB    25000000 0
                                         3360 KB    0          Max      0
2->4/1/1:1->3
                3/1        l2            81408 KB   9216 KB    25000000 0
                                         3360 KB    0          Max      0
2->4/1/1:1->3
                4/*        l2            81408 KB   9216 KB    25000000 0
                                         3360 KB    0          Max      0
2->4/1/1:1->2
                3/1        l1            81408 KB   9216 KB    25000000 0
```

```
                                        3360 KB    0          Max      0
2->4/1/1:1->2
                3/1       l1            81408 KB   9216 KB    25000000 0
                                        3360 KB    0          Max      0
2->4/1/1:1->2
                4/*       l1            81408 KB   9216 KB    25000000 0
                                        3360 KB    0          Max      0
2->4/1/1:1->1
                3/1       be h2 ef h1   81408 KB   9216 KB    25000000 0
                          nc            3360 KB    0          Max      0
2->4/1/1:1->1
                3/1       be h2 ef h1   81408 KB   9216 KB    25000000 0
                          nc            3360 KB    0          Max      0
2->4/1/1:1->1
                4/*       be h2 ef h1   81408 KB   9216 KB    25000000 0
                          nc            3360 KB    0          Max      0
===============================================================================
*A:Dut-T#
```

Sample Output: show pools egress (With Named Pools)

```
*A:Dut-T# show pools 9/2/1 egress
===============================================================================
Pool Information
===============================================================================
Port                : 9/2/1
Application         : Egress            Pool Name          : pool1
CLI Config. Resv CBS : 10%              Policy Name        : namedEgr
Resv CBS Step       : 1%                Resv CBS Max       : 25%
Amber Alarm Threshold: 30%              Red Alarm Threshold: 45%
-------------------------------------------------------------------------------
Queue-Groups
-------------------------------------------------------------------------------
Utilization                   State       Start-Avg    Max-Avg    Max-Prob
-------------------------------------------------------------------------------
High-Slope                    Down              70%        90%         80%
Low-Slope                     Down              50%        75%         80%

Time Avg Factor     : 7
Pool Total          : 258 KB
Pool Shared         : 192 KB            Pool Resv          : 66 KB
-------------------------------------------------------------------------------
-------------------------------------------------------------------------------
Current Resv CBS    Provisioned    Rising         Falling        Alarm
%age                all Queues     Alarm Thd      Alarm Thd      Color
-------------------------------------------------------------------------------
25%                 39 KB          NA             24 KB          Red
Pool Total In Use   : 0 KB
Pool Shared In Use  : 0 KB              Pool Resv In Use   : 0 KB
WA Shared In Use    : 0 KB

Hi-Slope Drop Prob  : 0                 Lo-Slope Drop Prob : 0
-------------------------------------------------------------------------------
Name            Tap        FC-Maps       MBS       HP-Only    A.PIR    A.CIR
                                         CBS       Depth      O.PIR    O.CIR
-------------------------------------------------------------------------------
1 Net=be Port=9/2/1
```

```
                           be            66048 B    7680 B     1000000  0
                                         39 KB      0          Max      0
-------------------------------------------------------------------------------
*A:Dut-T#
```

Sample Output: show pools egress (When Alarm Information is Pending)

```
*A:Dut-T# show pools 9/2/1 egress
===============================================================================
Pool Information
===============================================================================
Port                 : 9/2/1
Application          : Egress            Pool Name          : pool1
CLI Config. Resv CBS : 10%               Policy Name        : namedEgr
Resv CBS Step        : 1%                Resv CBS Max       : 35%
Amber Alarm Threshold: 30%               Red Alarm Threshold: 45%
-------------------------------------------------------------------------------
Queue-Groups
-------------------------------------------------------------------------------
Utilization                  State       Start-Avg    Max-Avg    Max-Prob
-------------------------------------------------------------------------------
High-Slope                   Down              70%        90%         80%
Low-Slope                    Down              50%        75%         80%

Time Avg Factor      : 7
Pool Total           : 258 KB
Pool Shared          : 192 KB            Pool Resv          : 66 KB

-------------------------------------------------------------------------------
-------------------------------------------------------------------------------
Current Resv CBS    Provisioned    Rising         Falling        Alarm
%age                all Queues     Alarm Thd      Alarm Thd      Color
-------------------------------------------------------------------------------
CBS Oversubscription Alarm Info Pending
Pool Total In Use    : 0 KB
Pool Shared In Use   : 0 KB              Pool Resv In Use   : 0 KB
WA Shared In Use     : 0 KB

Hi-Slope Drop Prob   : 0                 Lo-Slope Drop Prob : 0
-------------------------------------------------------------------------------
Name            Tap        FC-Maps       MBS       HP-Only    A.PIR    A.CIR
                                         CBS       Depth      O.PIR    O.CIR
-------------------------------------------------------------------------------
1 Net=be Port=9/2/1
                           be            66048 B    7680 B     1000000  0
                                         39 KB      0          Max      0
-------------------------------------------------------------------------------
*A:Dut-T#
```

In Use Stat Note:

The pool shared in use stat only increases when a queue is asking for a buffer outside it's reserved size. If all the buffers in a pool are assigned to queues within their reserved size, then only the reserved in use size will increase. In case of resv CBS oversubscription (CBS sum for all queues is bigger then pool resvCbs), it is possible that pool resv in use stat can increase above the actual pool reserved size. For example:

```
Pool Total      : 57344 KB
Pool Shared      : 32768 KB Pool Resv : 24576 KB

Pool Total In Use    : 57344 KB
Pool Shared In Use   : 0 KB Pool Resv In Use: 57344 KB
```

2.26.2.2 PEQ Show Commands

The PEQ commands apply to the 7950 XRS only.

peq

Syntax **peq** [*peq-slot*] [*detail*]

Context show

Description This command displays APEQ information.

Output See the following sections:

- Output Fields: show peq
- Sample Output: show peq
- Sample Output: show peq <peq-slot> detail
- Sample Output: show peq detail

Output Fields: show peq

Table 56 describes the output fields for the **show peq** command.

Table 57 **Output Fields:show peq**

Label	Description
Slot	The number of the slot in which the APEQ is installed.
Provisioned Type Equipped Type (if different)	The APEQ type provisioned.
Admin State	The administrative state.
Operational State	The operational state.
Input	Specifies the input battery feed: A, or B
Zone	Specifies the chassis power zone.
Hardware Data:	

Table 57 **Output Fields:show peq (Continued)**

Label	Description (Continued)
Part number	The APEQ part number.
CLEI code	The APEQ CLEI code.
Serial number	The APEQ serial number.
Manufacture date	The date the APEQ was manufactured
Manufacturing deviations	Specifies any manufacturing deviations.
Manufacturing assembly number	The APEQ assembly number.
Administrative state	Specifies the administrative state of the APEQ.
Operational state	Specifies the operational state of the APEQ.
Time of last boot	Indicates the time stamp of the last system restart.
Current alarm state	Indicates the current alarm state.

Sample Output: show peq

```
*A:Dut-A# show peq
===============================================================================
PEQ Summary
===============================================================================
Slot   Provisioned Type                       Admin Operational   Input  Zone
           Equipped Type (if different)      State State         A B
-------------------------------------------------------------------------------
1      apeq-dc-2000                          down  down          Y N    1
2      (not provisioned)                     up    unprovisioned Y N    1
           apeq-dc-2000
3      apeq-dc-2000                          up    up            Y N    1
4      apeq-dc-2000                          up    up            Y N    1
5      apeq-dc-2000                          up    up            Y N    1
6      apeq-dc-2000                          up    up            Y N    1
7      apeq-dc-2000                          up    up            Y N    1
8      apeq-dc-2000                          up    up            Y N    1
9      apeq-dc-2000                          up    up            Y N    1
10     apeq-dc-2000                          up    up            Y N    1
11     apeq-dc-2000                          up    up            Y N    1
12     apeq-dc-2000                          up    up            Y N    1
===============================================================================
```

Sample Output: show peq <peq-slot> detail

```
*A:Dut-A# show peq 1 detail
===============================================================================
PEQ 1
===============================================================================
Slot   Provisioned Type                       Admin Operational   Input  Zone
           Equipped Type (if different)      State State         A B
```

```
-------------------------------------------------------------------------------
1      apeq-dc-2000                          down  down          Y N    1

Hardware Data
    Part number                 : 3HE07114AARA01
    CLEI code                   : IPUPAJHUAA
    Serial number               : NS1250G0116
    Manufacture date            : 12202012
    Manufacturing deviations    : (Not Specified)
    Manufacturing assembly number: 8205320107
    Time of last boot           : 2014/01/07 11:01:44
    Current alarm state         : alarm active
===============================================================================
```

Sample Output: show peq detail

In the following example, the entries for PEQ 2 to PEQ 11 are not shown.

```
*A:Dut-A# show peq detail
===============================================================================
PEQ 1
===============================================================================
Slot   Provisioned Type                       Admin Operational   Input  Zone
           Equipped Type (if different)      State State         A B
-------------------------------------------------------------------------------
1      apeq-dc-2000                          down  down          Y N    1

Hardware Data
    Part number                 : 3HE07114AARA01
    CLEI code                   : IPUPAJHUAA
    Serial number               : NS1250G0116
    Manufacture date            : 12202012
    Manufacturing deviations    : (Not Specified)
    Manufacturing assembly number: 8205320107
    Time of last boot           : 2014/01/07 11:01:44
    Current alarm state         : alarm active

===============================================================================

...

===============================================================================
PEQ 12
===============================================================================
Slot   Provisioned Type                       Admin Operational   Input  Zone
           Equipped Type (if different)      State State         A B
-------------------------------------------------------------------------------
12     apeq-dc-2000                          up    up            Y N    1

Hardware Data
    Part number                 : 3HE07114AARA01
    CLEI code                   : IPUPAJHUAA
    Serial number               : NS1250G0115
    Manufacture date            : 12202012
    Manufacturing deviations    : (Not Specified)
    Manufacturing assembly number: 8205320107
    Time of last boot           : 2014/01/07 11:01:44
    Current alarm state         : alarm active
===============================================================================
```

megapools

Syntax **megapools** *slot-number*
megapools *slot-number* **fp** *forwarding-plane* [**service-id** *service-id*] [**queue-group** *queue-group-name*] [**ingress** | **egress**]

Context show

Description This command displays megapool information. A megapool is a mechanism the forwarding plane uses to allow oversubscription of buffer pools. Every buffer pool is created in the context of a megapool.

By default, all buffer pools are associated with a single megapool and the pools are not oversubscribed. When WRED queue support is enabled on the FP, three megapools are used.

- The original megapool services the default and named pools.
- The second megapool services the system internal use pools.
- The third megapool is used by the buffer pools used by the WRED queues.

The traffic manager buffers are allocated to the three megapools without oversubscription. The WRED queue pools are allowed to oversubscribe their megapool, but the megapool protects the pools associated with the other megapools from buffer starvation that could be caused by that oversubscription.

Parameters *slot-number* — Displays information for the specified card slot.

fp-number — The fp-number parameter is optional following the **fp** command. If omitted, the system assumes forwarding plane number 1.

queue-group *queue-group-name* **—** Displays information for the specified port queue group name.

ingress — Displays ingress queue group information.

egress — Displays egress queue group information.

sfm

Syntax **sfm** *sfm-id* **icport** [**down**] [**degraded**] [**detail**]

Context show

Description This command displays SFM status information.

Parameters *sfm-id* — Specifies the SFM identifier.

icport — Displays interconnect port information.

detail — Displays detailed information about the SFM.

Output See the following sections:

• Output Fields: show sfm
• Sample Output: show sfm
• Sample Output: show sfm <sfm-id> detail
• Sample Output: show sfm icport

Output Fields: show sfm

Table 58 describes output fields for the **show sfm** command.

Table 58 **Output Fields: show sfm**

Label	Description
Slot	The number of the slot in which the SFM is installed.
Provisioned Type Equipped Type (if different)	The SFM type provisioned.
Admin State	The administrative state.
Operational State	The operational state.
Hardware Data	
Part number	The SFM part number.
CLEI code	The SFM CLEI code.
Serial number	The SFM serial number.
Manufacture date	The date the SFM was manufactured
Manufacturing deviations	Specifies any manufacturing deviations.
Manufacturing assembly number	The SFM assembly number.
Administrative state	Specifies the administrative state of the SFM.
Operational state	Specifies the operational state of the SFM.
Time of last boot	Indicates the time stamp of the last system restart.
Current alarm state	Indicates the current alarm state.
Inter Chassis SFM Interconnect	
SFM Interconnect Port	Port number of the interconnect port
oper state	Up — The SFM is administratively up.
	Down — The SFM is administratively down.
Misconnect Info	Only displayed if the oper state is **invalid-connection**.

Table 58 **Output Fields: show sfm (Continued)**

Label	Description (Continued)
SFF Status	
fabric degrade state	Indicates state.

Sample Output: show sfm

```
A:7950 XRS-20# show sfm
===============================================================================
SFM Summary
===============================================================================
Slot   Provisioned Type                            Admin Operational   Comments
           Equipped Type (if different)            State State
-------------------------------------------------------------------------------
1      sfm-x20                                     up    up
2      sfm-x20                                     up    up
3      sfm-x20                                     up    up
4      sfm-x20                                     up    up
5      sfm-x20                                     up    up
6      (not provisioned)                           up    unprovisioned
           sfm-x20
7      (not provisioned)                           up    unprovisioned
           sfm-x20
8      (not provisioned)                           up    unprovisioned
           sfm-x20
===============================================================================
```

Sample Output: show sfm <sfm-id> detail

```
A:7950 XRS-20# show sfm 2 detail
===============================================================================
Fabric 2
===============================================================================
Slot   Provisioned Type                            Admin Operational   Comments
           Equipped Type (if different)            State State
-------------------------------------------------------------------------------
2      (not provisioned)                           up    unprovisioned
           sfm-x20

Hardware Data
    Part number                  : xx
    CLEI code                    : xx
    Serial number                : xx
    Manufacture date             : xx
    Manufacturing string         : xx
    Manufacturing deviations     : xx
    Manufacturing assembly number : xx
    Administrative state         : up
    Operational state            : unprovisioned
    Time of last boot            : N/A
    Current alarm state          : alarm cleared
===============================================================================
```

```
Inter Chassis SFM Interconnect
SFM Interconnect Port 1
oper state : no-link
Misconnect Info : Fabric 3 IcPort 14
SFF Status : not-equipped
fabric degrade state : none
```

Sample Output: show sfm icport

```
*A:myNode# show sfm icport
===============================================================================
SFM Interconnect Port Summary
===============================================================================
SFMSFM IcPort IcPort Module Degrade Miscon.Info
Oper State Num Oper State Inserted State SFM IcPort
-------------------------------------------------------------------------------
1 unprovisioned 1 up yes none
1 unprovisioned 2 invalid-conne* no degraded 3 14
2 up 2 indeterminate no none
2 up 3 up no degraded
2 up 5 no-link no none
2 up 14 indeterminate yes degraded
===============================================================================
* indicates that the corresponding row element may have been truncated.
===============================================================================

*A:myNode# show sfm icport down
===============================================================================
SFM Interconnect Port Summary
===============================================================================
SFM SFM IcPortIcPortModuleDegradeMiscon. Info
Oper StateNumOper StateInsertedStateSFMIcPort
-------------------------------------------------------------------------------
1 unprovisioned 2invalid-conne*nodegraded 3 14
2 up 2indeterminatenononone
2 up5no-linknononone
2 up14indeterminateyesdegraded
===============================================================================
* indicates that the corresponding row element may have been truncated.

*A:myNode# show sfm icport degraded
===============================================================================
SFM Interconnect Port Summary
===============================================================================
SFM SFMIcPortIcPortModuleDegradeMiscon. Info
Oper StateNumOper StateInserted State SFM IcPort
-------------------------------------------------------------------------------
2 up 3 up no degraded
2 up 14 indeterminate yes degraded
===============================================================================
```

2.26.2.3 APS Show Commands

aps

Syntax **aps** [*aps-id*] [**detail**]

Context show

Description This command displays Automated Protection Switching (APS) information.

Parameters *aps-id* — Displays information for the specified APS group ID.

Values aps-*group-id*
aps:
group-id:1 to 128

detail — Displays detailed APS information.

Output See the following sections:

- Output Fields: show aps
- Sample Output: show aps (Working Multi-chassis APS Node)
- Sample Output: show aps (Protect MC-APS Node)

Output Fields: show aps

Table 59 describes output fields for the **show aps** command.

Table 59 **Output Fields: show aps**

Label	Description
Interface	Specifies the APS interface name (the APS group port).
Admin State	Up — APS is administratively up.
	Down — APS port is administratively down.
Oper State	Up — APS port is operationally up.
	Down — APS is operationally down.
MC-CTL State	Specifies the multi-chassis state.
Work Circuit	Specifies the working circuit ID.
Prot Circuit	Specifies the physical port that acts as the protection circuit for this APS group.
Active Circuit	Specifies the active circuit.

Table 59 **Output Fields: show aps (Continued)**

Label	Description (Continued)
Tx/Rx K1 Byte	Displays the value of the SONET/SDH K1 byte received or transmitted on the protection circuit.
Group Id	Displays the APS group name.
Protection Circuit	Displays the physical port that will act as the protection circuit for this APS group.
Switching-mode	Displays the switching mode of the APS group.
Switching-arch	The architecture of the APS group.
Revertive-mode	Displays the revertive mode of the APS group.
	non-revertive — Traffic remains on the protection line until another switch request is received. revertive — When the condition that caused a switch to the protection line has been cleared the signal is switched back to the working line.
Revert-time	Displays the configured time, in minutes, to wait after the working circuit has become functional again, before making the working circuit active again. If the revertive mode is non-revertive, then this field will be empty.
Rx K1/K2 byte	Displays the value of the SONET/SDH K1/K2 byte received on the interface.
Tx K1/K2 byte	Displays the value of the SONET/SDH K1/K2 byte transmitted on the interface.
Current APS Status	Displays the current APS status.
Mode Mismatch Cnt	Indicates the number of times a conflict occurs between the current local mode and the received K2 mode information.
Channel mismatch Cnt	Indicates the number of mismatches between the transmitted K1 channel and the received K2 channel has been detected.
PSB failure Cnt	Displays a count of Protection Switch Byte (PSB) failure conditions. This condition occurs when either an inconsistent APS byte or an invalid code is detected.
FEPL failure Cnt	Displays a count of far-end protection-line (FEPL) failure conditions. This condition is declared based on receiving SF on the protection line in the K1 byte.
No. of Switchovers	Displays the number of times a switchover has occurred.
Last Switchover	Displays the time stamp of the last switchover.
Switchover seconds	Displays the cumulative Protection Switching Duration (PSD) time in seconds. For a working channel, this is the cumulative number of seconds that service was carried on the protection line. For the protection line, this is the cumulative number of seconds that the protection line has been used to carry any working channel traffic. This information is only valid if revertive switching is enabled.

Table 59 **Output Fields: show aps (Continued)**

Label	Description (Continued)
Signal Degrade Cnt	Displays the number of times the signal was degraded.
Signal Failure Cnt	Displays the number of times the signal failed.
Last Switch Cmd	Reports the last switch command that was performed on a circuit.
Last Exercise Result	The result of the last exercise request on a circuit.
Neighbor address	Displays the neighbor IP address.
Advertise Interval	Displays the advertise interval.
Hold time	Displays the hold time.

Sample Output: show aps (Working Multi-chassis APS Node)

```
*A:Dut-A# show aps aps-1
===============================================================================
APS Group Info
===============================================================================
Interface Admin  Oper   MC-Ctl  Work      Prot      Active    Tx/Rx
          State  State  State   Circuit   Circuit   Circuit   K1 Byte
-------------------------------------------------------------------------------
aps-1     Up     Up     N/A     1/5/1     1/9/5     1/5/1     PC-Tx: No-Req
===============================================================================
*A:Dut-A#


*A:Dut-A# show aps aps-1 detail
===============================================================================
APS Group: aps-1
===============================================================================
Description        : APS Group
Group Id           : 1                       Active Circuit       : 1/5/1
Admin Status       : Up                      Oper Status          : Up
Working Circuit    : 1/5/1                   Protection Circuit   : 1/9/5
Switching-mode     : Uni-1plus1              Switching-arch       : 1+1(sig,data)
Revertive-mode     : Non-revertive           Revert-time (min)    :
Rx K1/K2 byte      : 0x00/0x00 (No-Req on Protect)
Tx K1/K2 byte      : 0x00/0x00 (No-Req on Protect)
Current APS Status : OK
Multi-Chassis APS  : No
Neighbor           : 0.0.0.0
Control link state : N/A
Advertise Interval : 1000 msec               Hold Time            : 3000 msec
APS SF Hold Time   : 6000 msec               APS SD Hold Time     : 9000 msec
Mode mismatch Cnt  : 0                       Channel mismatch Cnt : 0
PSB failure Cnt    : 0                       FEPL failure Cnt     : 0
-------------------------------------------------------------------------------
 APS Working Circuit - 1/5/1
-------------------------------------------------------------------------------
Admin Status       : Up                      Oper Status          : Up
Current APS Status : OK                      No. of Switchovers   : 0
```

```
Last Switchover    : None                    Switchover seconds   : 0
Signal Degrade Cnt : 1                       Signal Failure Cnt   : 1
Last Switch Cmd    : No Cmd                  Last Exercise Result : Unknown
Tx L-AIS           : None
-------------------------------------------------------------------------------
 APS Protection Circuit - 1/9/5
-------------------------------------------------------------------------------
Admin Status       : Up                      Oper Status          : Up
Current APS Status : OK                      No. of Switchovers   : 0
Last Switchover    : None                    Switchover seconds   : 0
Signal Degrade Cnt : 1                       Signal Failure Cnt   : 1
Last Switch Cmd    : No Cmd                  Last Exercise Result : Unknown
Tx L-AIS           : None
===============================================================================
*A:Dut-A#
```

Sample Output: show aps (Protect MC-APS Node)

```
B:Dut-E# show aps
===============================================================================
APS Group Info
===============================================================================
Interface Admin  Oper    MC-Ctl   Work      Prot       Active     Tx/Rx
                 State   State    State     Circuit    Circuit    Circuit K1 Byte

-------------------------------------------------------------------------------
aps-20    Up     Up      N/A      3/1/1     3/1/2      3/1/1      PC-Tx:  No-Req
===============================================================================
B:Dut-E#


B:Dut-E# show aps aps-30 detail
===============================================================================
APS Group: aps-30
===============================================================================
Description        : APS Group
Group Id           : 30                      Active Circuit       : N/A
Admin Status       : Up                      Oper Status          : Up
Working Circuit    : N/A                     Protection Circuit   : 2/2/2
Switching-mode     : Bi-directional          Switching-arch       : 1+1
Revertive-mode     : Non-revertive           Revert-time (min) :
Rx K1/K2 byte      : 0x00/0x05 (No-Req on Protect)
Tx K1/K2 byte      : 0x00/0x05 (No-Req on Protect)
Current APS Status : OK
Multi-Chassis APS  : Yes
Neighbor           : 13.1.1.1
Control link state : Up
Advertise Interval : 1000 msec               Hold time            : 3000 msec
Mode mismatch Cnt  : 0                       Channel mismatch Cnt : 0
PSB failure Cnt    : 0                       FEPL failure Cnt     : 1
-------------------------------------------------------------------------------
 APS Working Circuit - Neighbor
-------------------------------------------------------------------------------
Admin Status       : N/A                     Oper Status          : N/A
Current APS Status : OK                      No. of Switchovers   : 0
Last Switchover    : None                    Switchover seconds   : 0
Signal Degrade Cnt : 0                       Signal Failure Cnt   : 0
```

```
Last Switch Cmd    : No Cmd                Last Exercise Result : Unknown
Tx L-AIS           : None
-------------------------------------------------------------------------------
 APS Protection Circuit - 2/2/2
-------------------------------------------------------------------------------
Admin Status       : Up                    Oper Status          : Up
Current APS Status : OK                    No. of Switchovers   : 0
Last Switchover    : None                  Switchover seconds   : 0
Signal Degrade Cnt : 0                     Signal Failure Cnt   : 0
Last Switch Cmd    : No Cmd                Last Exercise Result : Unknown
Tx L-AIS           : None
===============================================================================
B:Dut-E#
```

2.26.2.4 Port Show Commands

port

Syntax **port** *port-id* **description**
port *port-id* **associations**
port *port-id* **atm connections**
port *port-id* **atm cp**
port *port-id* **atm ilmi**
port *port-id* **atm port-connection** [**detail**]
port *port-id* **atm pvc** [*vpi*[/*vci*]] [**detail**]
port *port-id* **atm pvp** [*vpi*] [**detail**]
port *port-id* **atm pvt** [*vpi-range*] [**detail**]
port *port-id* **cisco-hdlc**
port *port-id* **monitor-threshold**
port *port-id* **ppp** [**detail**]
port *port-id* **queue-group** [**ingress** | **egress**] [**queue-group-name**] [**access** | **network**] [{**statistics** | **associations**}]
port *port-id* **queue-group** *qgrp-id* [**instance** *instance-id*] **queue-depth** [**queue** *queue-id*] [**ingress**|**egress**] [**access**|**network**]
port *port-id* **mlfr-link** [**detail**]
port *port-id* **otu** [**detail**]
port *port-id* **frame-relay** [**detail**]
port [*port-id*] [**statistics** [**egress-aggregate**]] [**detail**]
port aps [**detail**]
port cem
port *port-id* **ethernet** [**detail**]
port *port-id* **dot1x** [**detail**]
port *port-id* **vport** [*vport-name*] **associations**
port *port-id* **vport** [*vport-name*] **monitor-threshold**

Context show

Description This command displays port or channel information.

If no command line options are specified, the command port displays summary information for all ports on provisioned MDAs.

If the **detail** keyword is specified without any *port-id* then the detailed output of every port is displayed. This is useful for gathering full reporting or as an input into the "| match" post-filtering command to display only certain fields for all ports (customized summaries).

Parameters *port-id* — Specifies the physical port ID in the form *slot/mda/port*.

Values

port-id	slot[/*mda*[/*port*]]		
	slot/*mda*/*port* [.*channel*]		
	eth-sat-id	esat-*id*/*slot*/*port*	
		esat	keyword
		id	1 to 20
	oes-port-id	oes-*id*/*slot*/*oes-port*	
		oes	keyword
		id	1
		slot	1 to 32
		oes-port	c*port* | l*port*
		c	keyword for client ports
		l	keyword for line ports
		port	1 to 10
	pxc-id	pxc-*id*.*sub-port*	
		pxc	keyword
		id	1 to 64
		sub-port	a, b
	aps-id	aps-*group-id*[.*channel*]	
		aps	keyword
		group-id	1 to 64
	ccag-id	*slot*/*mda*/*path-id*[*cc-type*]	
		path-id	a,b
		cc-type	.sap-net, .net-sap

Table 60 **Port ID Values**

Product	Slot	MDA	CMA	Port	Values
7750 SR-12	1 to 10	1, 2		1 to 60 (depending on the MDA type)	—
7750 SR-c12	1	1, 3, 5, 7, 9, 11	1 to 12		—
7750 SR-c4	1	1, 3	1 to 4		—
7750 SR-7	1 to 5	1, 2	—		—
7950 XRS	1 to 20	—	—		—
7450 ESS-6	—		—		1 to 5
7450 ESS-7	—		—		1 to 4
7450 ESS-12	—		—		1 to 0
Channelized MDAs					
CHOC12-SFP	—				slot/mda/port. [1 to 4]. [1 to 3]. [1 to 28]. [..24] For example, 7/2/1.1.1.28.24
CHOC3-SFP	—				slot/mda/port. [1 to 3]. [1 to 28]. [..24] For example, 7/2/1.1.28.24
DS3	—				slot/mda/port. [1 to 28] . [..24] For example, 7/1/1.1.1

aps — Displays ports on APS groups.

associations — Displays a list of current router interfaces to which the port is associated.

cisco-hdlc — Displays Cisco HDLC port information.

count — Displays only port counter summary information.

description — Displays port description strings.

dot1x — Displays information.about 802.1x status and statistics.

down-when-looped — Displays status of port and whether the feature is enabled.

ethernet — Displays Ethernet port information.

efm-oam — Displays EFM OAM information.

event-logs — Displays all active and historical event logs.

failure — Displays the active and cleared failure events.

degraded — Displays the active and cleared failure events.

active — Displays only the active events.

cleared — Displays only the cleared events.

detail — Displays detailed information about the Ethernet port.

frame-relay — Displays Frame Relay information.

ppp — Displays PPP protocol information for the port.

mlfr-link — Displays link-based MLFR information for the port.

detail — Provides detailed information.

atm — Displays ATM information.

connections — Displays ATM connection information.

port-connections — Displays ATM port connection information.

pvc — Displays ATM port PVC information.

pvp — Displays ATM port PVP information.

pvt — Displays ATM port PVT information.

vpi-range vpi:0 to 4095 (NNI)
0 to 255 (UNI)
vpi: 0 to 4095 (NNI)
0 to 255 (UNI)

vpi/vci vpi:0 to 4095 (NNI)
0 to 255 (UNI)
vci:1, 2, 5 to 65534

vport — Displays Vport information.

associations — Displays a list of ports to which the Vport is assigned.

monitor-threshold — Displays the exceed-count for the port-scheduler under Vport (if specified) or for a physical port.

detail — Provides detailed information.

Output See the following sections:

- Output Fields: show port <port-id>
- Sample Output: show port <port-id>
- Output Fields: show port <port-id> detail
- Sample Output: show port <port-id> (Showing Ethernet Interface)
- Sample Output: show port <port-id> vport <vport-name>
- Output Fields: show port <port-id> detail (Excerpt Showing Ethernet Statistics)
- Sample Output: show port <port-id> detail (Excerpt Showing Ethernet Statistics)
- Output Fields: show port <port-id> detail (Excerpt Showing Ethernet-like Medium Statistics Output)
- Sample Output: show port <port-id> detail (Excerpt Showing Ethernet-like Medium Statistics)

- Output Fields: show port <port-id> (Showing Channelized Ports)
- Sample Output: show port <port-id> (Showing Channelized Ports)
- Output Fields: show port <port-id> associations
- Sample Output: show port <port-id> associations
- Output Fields: show port <port-id> frame-relay
- Sample Output: show port <port-id> frame-relay
- Output Fields: show port <port-id> otu detail
- Sample Output: show port <port-id> otu detail
- Output Fields: show port <port-id> ppp
- Sample Output: show port <port-id> ppp
- Output Fields: show port <port-id> atm
- Sample Output: show port <port-id> atm
- Sample Output: show port <port-id> atm cp
- Output Fields: show port <port-id> atm pvc detail
- Sample Output: show port <port-id> atm pvc detail
- Output Fields: show port <port-id> atm pvt detail
- Sample Output: show port <port-id> atm pvt detail
- Sample Output: show port <port-id>[statistics [egress-aggregate]] [detail]
- Sample Output: show port esat-n/n/n

Output Fields: show port <port-id>

Table 61 describes the output fields for the **show port <port-id>** command.

Table 61 **Output Fields: show port <port-id>**

Label	Description
Port ID	The port ID configured or displayed
Admin State	Up — The administrative state is up.
	Down — The administrative state is down.
Phy Link	Yes — A physical link is present.
	No — A physical link is not present.

Table 61 **Output Fields: show port <port-id> (Continued)**

Label	Description (Continued)
Port State	Up — The port is physically present and has physical link present.
	Down — The port is physically present but does not have a link. Note that this state may also be considered as Link Down.
	Ghost — A port that is not physically present.
	None — The port is in its initial creation state or about to be deleted.
	Link Up — A port that is physically present and has physical link present. Note that when Link Up appears at the lowest level of a SONET/SDH path or a TDM tributary, it means the physical connection is active but the port is waiting on some other state before data traffic can flow. It is a waiting state and indicates that data traffic will not flow until it transitions to the Up state.
Cfg MTU	The configured MTU.
Oper MTU	The negotiated size of the largest packet which can be sent on the port SONET/SDH, channel, specified in octets. For channels that are used for transmitting network datagrams, this is the size of the largest network datagram that can be sent on the channel.
LAG ID	The LAG or multi-link trunk (MLT) that the port is assigned to.
Port Mode	network — The port is configured for transport network use.
	access — The port is configured for service access.
	hybrid — The port is configured for both access and network use.
Port Encap	Null — Ingress frames will not use tags or labels to delineate a service.
	dot1q — Ingress frames carry 802.1Q tags where each tag signifies a different service.
Port Type	The type of port or optics installed.
SFP/MDI MDX	GIGE — Indicates the GigE SFP type.
	FASTE — Indicates the FastE SFP type.
	GIGX — Indicates the GigX SFP type.
	MDI — Indicates that the Ethernet interface is of type MDI (Media Dependent Interface).
	MDX — Indicates that the Ethernet interface is of type MDX (Media Dependent Interface with crossovers).

Sample Output: show port <port-id>

```
*A:ALU-1# show port 1/1
===============================================================================
```

```
Ports on Slot 1
===============================================================================
Port        Admin Link Port    Cfg  Oper LAG/ Port Port Port   SFP/XFP/
Id          State      State   MTU  MTU  Bndl Mode Encp Type   MDIMDX
-------------------------------------------------------------------------------
1/1/1       Down  No   Down    1518 1518    1 accs dotq gige
1/1/2       Down  No   Down    1578 1578    - netw null gige
1/1/3       Down  No   Down    1578 1578    - netw null gige
1/1/4       Up    No   Down    1514 1514    - accs null gige
1/1/5       Up    No   Down    1578 1578    - netw null gige
===============================================================================
*A:ALU-1#
```

Sample Output: show port <port-id> (Showing Ethernet Interface)

```
*A:HW_Node_A# show port 1/1/1

===============================================================================
Ethernet Oam (802.3ah)
===============================================================================
Admin State        : downOper State         : disabled (protocol state)
Ignore-efm-state   : Enabled/Disabled
===============================================================================


*A:HW_Node_A# show port 6/2/1
===============================================================================
Ethernet Interface
===============================================================================
Description        : 10/100/Gig Ethernet TX
Interface          : 6/2/1                       Oper Speed       : N/A
Link-level         : Ethernet                    Config Speed     : 1 Gbps
Admin State        : up                          Oper Duplex      : N/A
Oper State         : down                        Config Duplex    : full
Reason Down        : crcError|internalMacTxError
Physical Link      : No                          MTU              : 9212
Single Fiber Mode  : No
IfIndex            : 205553664                   Hold time up     : 0 seconds
Last State Change  : 02/11/2010 07:45:17         Hold time down   : 0 seconds
Last Cleared Time  : N/A                         DDM Events       : Enabled
Phys State Chng Cnt: 3
Configured Mode    : network                     Encap Type       : null
Dot1Q Ethertype    : 0x8100                      QinQ Ethertype   : 0x8100
PBB Ethertype      : 0x88e7
Ing. Pool % Rate   : 100                         Egr. Pool % Rate : 100
Ing. Pool Policy   : n/a
Egr. Pool Policy   : n/a
Net. Egr. Queue Pol: default
Egr. Sched. Pol    : n/a
Auto-negotiate     : true                        MDI/MDX          : unknown
Accounting Policy  : None                        Collect-stats    : Disabled
Egress Rate        : Default                     Ingress Rate     : Default
Load-balance-algo  : default                     LACP Tunnel      : Disabled

Down-when-looped   : Disabled                    Keep-alive       : 10
Loop Detected      : False                       Retry            : 120
Use Broadcast Addr : False
```

```
Sync. Status Msg.  : Disabled                  Rx Quality Level : N/A
Tx DUS/DNU         : Disabled                  Tx Quality Level : N/A
SSM Code Type      : sdh

Down On Int. Error : Enabled

CRC Mon SD Thresh  : 4*10E-5                   CRC Mon Window   : 5 seconds
CRC Mon SF Thresh  : 5*10E-2
CRC Alarms         : sdThresholdExceeded sfThresholdExceeded
...

*A:ALU-211# show port 1/1/2
===============================================================================
Ethernet Interface
===============================================================================
Description        : 10/100 Ethernet TX
Interface          : 1/1/2                     Oper Speed       : 100 mbps
Link-level         : Ethernet                  Config Speed     : 100 mbps
Admin State        : up                        Oper Duplex      : full
Oper State         : up - Active in LAG 10     Config Duplex    : full
Physical Link      : Yes                       MTU              : 1514
Single Fiber Mode  : No
IfIndex            : 35717120                  Hold time up     : 0 seconds
Last State Change  : 12/16/2008 19:31:40       Hold time down   : 0 seconds
Last Cleared Time  : 12/16/2008 19:31:48
.....
===============================================================================
*A:ALU-211#

*A:Dut-C# show port 2/1/2
===============================================================================
     ISA-TMS Port
===============================================================================
     Description        : TMS
     Port               : 2/1/2                     Admin State      : up
     Last State Change  : 09/14/2011 07:03:49       Oper State       : up

     Configured Mode    : network                   Net. Egr. Queue *: default
===============================================================================
     * indicates that the corresponding row element may have been truncated.
===============================================================================
     Port Statistics
===============================================================================
                                                        Input              Output
     -------------------------------------------------------------------------------
     Unicast Packets                                    35365              254
     Multicast Packets                                      0              0
     Broadcast Packets                                      0              0
     Discards                                               0              0
     Unknown Proto Discards                                 0
===============================================================================
===============================================================================
     Ethernet-like Medium Statistics
===============================================================================
     Alignment Errors :                 0  Sngl Collisions  :            0
     FCS Errors       :                 0  Mult Collisions  :            0
     SQE Test Errors  :                 0  Late Collisions  :            0
     CSE              :                 0  Excess Collisns  :            0
     Too long Frames  :                 0  Int MAC Tx Errs  :            0
```

```
     Symbol Errors    :                   0  Int MAC Rx Errs  :            0
===============================================================================



*A:Dut-C# show port 2/1/3
===============================================================================
     ISA-TMS Port
===============================================================================
     Description        : TMS
     Port               : 2/1/3                     Admin State      : up
     Last State Change  : 09/14/2011 07:03:49       Oper State       : up

     Configured Mode    : network                   Net. Egr. Queue *: default
===============================================================================
     * indicates that the corresponding row element may have been truncated.
===============================================================================
     Port Statistics
===============================================================================
                                                      Input                Output
     -------------------------------------------------------------------------------
     Unicast Packets                                      1                35710
     Multicast Packets                                    0                    0
     Broadcast Packets                                    0                    0
     Discards                                             0                    0
     Unknown Proto Discards                               0
===============================================================================
===============================================================================
     Ethernet-like Medium Statistics
===============================================================================
     Alignment Errors :                   0  Sngl Collisions  :            0
     FCS Errors       :                   0  Mult Collisions  :            0
     SQE Test Errors  :                   0  Late Collisions  :            0
     CSE              :                   0  Excess Collisns  :            0
     Too long Frames  :                   0  Int MAC Tx Errs  :            0
     Symbol Errors    :                   0  Int MAC Rx Errs  :            0
===============================================================================



*A:7950 XRS-20# show port 1/1/1
===============================================================================
Ethernet Interface
===============================================================================
Description        : 10-Gig Ethernet
Interface          : 1/1/1                     Oper Speed       : 10 Gbps
Link-level         : Ethernet                  Config Speed     : N/A
Admin State        : down                      Oper Duplex      : full
Oper State         : down                      Config Duplex    : N/A
Physical Link      : No                        MTU              : 1578
Single Fiber Mode  : No                        Min Frame Length : 64 Bytes
IfIndex            : 35684352                  Hold time up     : 0 seconds
Last State Change  : 05/23/2012 12:27:57       Hold time down   : 0 seconds
Last Cleared Time  : N/A                       DDM Events       : Enabled
Phys State Chng Cnt: 0

Configured Mode    : network                   Encap Type       : null
Dot1Q Ethertype    : 0x8100                    QinQ Ethertype   : 0x8100
PBB Ethertype      : 0x88e7
Ing. Pool % Rate   : 100                       Egr. Pool % Rate : 100
```

```
Net. Egr. Queue Pol: default
Egr. Sched. Pol    : n/a
Auto-negotiate     : N/A                        MDI/MDX          : N/A
Accounting Policy  : None                       Collect-stats    : Disabled
Egress Rate        : Default                    Ingress Rate     : Default
Load-balance-algo  : Default                    LACP Tunnel      : Disabled

Down-when-looped   : Disabled                   Keep-alive       : 10
Loop Detected      : False                      Retry            : 120
Use Broadcast Addr : False

Sync. Status Msg.  : Disabled                   Rx Quality Level : N/A
Tx DUS/DNU         : Disabled                   Tx Quality Level : N/A
SSM Code Type      : sdh

Down On Int. Error : Disabled

CRC Mon SD Thresh  : Disabled                   CRC Mon Window   : 10 seconds
CRC Mon SF Thresh  : Disabled

Configured Address :
Hardware Address   :
Cfg Alarm          : remote local
===============================================================================
Traffic Statistics
===============================================================================
                                                    Input                Output
-------------------------------------------------------------------------------
Octets                                                  0                     0
Packets                                                 0                     0
Errors                                                  0                     0
===============================================================================
===============================================================================
Port Statistics
===============================================================================
                                                    Input                Output
-------------------------------------------------------------------------------
Unicast Packets                                         0                     0
Multicast Packets                                       0                     0
Broadcast Packets                                       0                     0
Discards                                                0                     0
Unknown Proto Discards                                  0
===============================================================================
===============================================================================
Ethernet-like Medium Statistics
===============================================================================
Alignment Errors :                   0  Sngl Collisions  :                   0
FCS Errors       :                   0  Mult Collisions  :                   0
SQE Test Errors  :                   0  Late Collisions  :                   0
CSE              :                   0  Excess Collisns  :                   0
Too long Frames  :                   0  Int MAC Tx Errs  :                   0
Symbol Errors    :                   0  Int MAC Rx Errs  :                   0
In Pause Frames  :                   0  Out Pause Frames :                   0
===============================================================================

*A:ALU-1# show port 1/1
===============================================================================
Ports on Slot 1
===============================================================================
```

```
Port        Admin Link Port    Cfg  Oper LAG/ Port Port Port   SFP/XFP/
Id          State      State   MTU  MTU  Bndl Mode Encp Type   MDIMDX
--------------------------------------------------------------------------------
1/1/1       Down  No   Down    1518 1518    1 accs dotq gige
1/1/2       Down  No   Down    1578 1578    - netw null gige
1/1/3       Down  No   Down    1578 1578    - netw null gige
1/1/4       Up    No   Down    1514 1514    - accs null gige
1/1/5       Up    No   Down    1578 1578    - netw null gige
================================================================================
*A:ALU-1#



*A:ALU-1# show port 4/1/1 optical detail
================================================================================
Optical Interface
================================================================================
Transceiver Data

Transceiver Status : operational
Transceiver Type   : MSA-100GLH
Model Number       : 28-0089-XX
TX Laser Wavelength: 1558.172 nm               Present Channel  : 24
TX Laser Frequency : 192.400 THz               Configured Chann*: 24
Laser Tunability   : fully-tunable             50GHz Ch Min/Max : 115/605
                                               100GHz Ch Min/Max: 12/61
RxDTV Adjust       : Enabled                   DAC Percent      : 50.00 %
Diag Capable       : yes
Number of Lanes    : 1
Connector Code     : LC                        Vendor OUI       : 00:03:fa
Manufacture date   : 2012/07/16                Media            : Ethernet
Serial Number      : 122900645
Part Number        : AC100-201-00E
Optical Compliance : DWDM-TUN
Link Length support: 80km for SMF

================================================================================
Transceiver Digital Diagnostic Monitoring (DDM)
================================================================================
                              Value High Alarm  High Warn   Low Warn  Low Alarm
--------------------------------------------------------------------------------
Temperature (C)               +60.9     +80.0      +70.0       +0.0       -5.0
Supply Voltage (V)            12.07     13.00      12.60      11.40      11.00
================================================================================

================================================================================
Transceiver Lane Digital Diagnostic Monitoring (DDM)
================================================================================
                                  High Alarm   High Warn    Low Warn   Low Alarm
--------------------------------------------------------------------------------
Lane Temperature (C)                  +75.0       +70.0       +20.0       +15.0
Lane Tx Bias Current (mA)              10.0         9.0         3.0         2.0
Lane Tx Output Power (dBm)             3.00        2.00        0.00       -1.00
Lane Rx Optical Pwr (avg dBm)          8.16        5.00      -20.00      -23.01

--------------------------------------------------------------------------------
Lane ID Temp(C)/Alm       Tx Bias(mA)/Alm   Tx Pwr(dBm)/Alm   Rx Pwr(dBm)/Alm
--------------------------------------------------------------------------------
    1          +48.4               5.1              0.99            -10.45
```

```
===============================================================================

===============================================================================
Coherent Optical Module
===============================================================================
fg Tx Target Power:   1.00 dBm               Present Rx Channel : 24
Cfg Rx LOS Thresh  : -23.00 dBm               Cfg Rx Channel     : 24 (auto)

Disp Control Mode  : automatic                Sweep Start Disp   : -25500 ps/nm
Cfg Dispersion     :      0 ps/nm             Sweep End Disp     :   2000 ps/nm
CPR Window Size    : 4 symbols

Cfg Alarms         : modflt mod netrx nettx hosttx
Alarm Status       :
Defect Points      :

Rx Q Margin        :    10.1 dB               Chromatic Disp     :  1 ps/nm
SNR X Polar        :   19.7 dB                Diff Group Delay   :      0 ps
SNR Y Polar        :   19.8 dB                Pre-FEC BER        : 0.000E+00

Module State       : ready
Tx Turn-Up States  : init laserTurnUp laserReadyOff laserReady
                     modulatorConverge outputPowerAdjust
Rx Turn-Up States  : init laserReady waitForInput adcSignal opticalLock
                     demodLock
===============================================================================

-------------------------------------------------------------------------------
Coherent Optical Port Statistics (Elapsed Seconds: 80674)
-------------------------------------------------------------------------------
Statistic                          Current      Average      Minimum      Maximum
-------------------------------------------------------------------------------
Rx BER                          0.000E+00    2.323E-05    0.000E+00    4.646E-05
Rx SNR (dB)                          19.6         10.0          0.0         20.1
Rx Chromatic Disp (ps/nm)               1          -18          -37            1
Rx Diff Group Delay (ps)                0            0            0            0
Rx Freq Offset (MHz)                   38          -74         -347          200
Rx Q (dB)                            16.6          8.3          0.0         16.6
Rx Power (dBm)                      -10.44       -13.40       -99.00       -10.39
Tx Power (dBm)                        0.98        -2.00       -99.00         1.01
-------------------------------------------------------------------------------
===============================================================================

===============================================================================
Wavelength Tracker
===============================================================================
Port Type          : pluggable                SFP VOA Present    : yes

SFP VOA Type       : fast
Serial Number      : ALLU11--JS0100456
Part Number        : 21131722-0101

Power Control      : Enabled                  WaveKey Status     : Disabled
Target Power       : -10.00 dBm               WaveKey 1          : 0
Measured Power     :  -9.99 dBm               WaveKey 2          : 0

Cfg Alarms         : enc-fail enc-degr pwr-fail pwr-degr pwr-high pwr-low
                     missing
Alarm Status       :
```

```
Maximum Power      :  -2.60 dBm              Power Upper Margin :   7.39 dB
Minimum Power      : -22.00 dBm              Power Lower Margin :  12.01 dB
===============================================================================
```

Output Fields: show port <port-id> detail

Table 62 describes the output fields for the **show port <port-id> detail** command.

Table 62 **Output Fields: port <port-id> detail**

Label	Description
Description	A text description of the port.
Interface	The port ID displayed.
Speed	The speed of the interface.
Link-level	Ethernet — The port is configured as Ethernet.
	SONET — The port is configured as SONET-SDH.
MTU	The size of the largest packet which can be sent/received on the Ethernet physical interface, specified in octets.
Admin State	Up — The port is administratively up.
	Down — The port is administratively down.
Oper State	Up — The port is operationally up.
	Down — The port is operationally down.
	Additionally, the *lag-id* of the LAG it belongs to in addition to the status of the LAG member (active or standby) is specified.
Duplex	Full — The link is set to full duplex mode.
	Half — The link is set to half duplex mode.
Hold time up	The link up dampening time in seconds. The port link dampening timer value which reduces the number of link transitions reported to upper layer protocols.
Hold time down	The link down dampening time in seconds. The **down** timer controls the dampening timer for link down transitions.
Reset On Path Down	Whether a SONET/SDH port will reset when the path transitions to an operationally down state. Only SONET/SDH ports on 7750 SR 4-port OC48 SFP “-B” MDAs will reset if Reset On Path Down is enabled.
Physical Link	Yes — A physical link is present.
	No — A physical link is not present.

Table 62 **Output Fields: port <port-id> detail (Continued)**

Label	Description (Continued)
IfIndex	Displays the interface's index number which reflects its initialization sequence.
Last State chg	Displays the system time moment that the peer is up.
Last State Change	Displays the system time moment that the MC-LAG group is up.
Phys State Chng Cnt	Increments when a fully qualified (de-bounced) transition occurs at the physical layer of an ethernet port which includes the following transitions of the Port State as shown in the “show port” summary: - from “Down” to either “Link Up” or “Up” - from either “Link Up” or “Up” to “Down” This counter does not increment for changes purely in the link protocol states (e.g. "Link Up" to "Up"). The counter is reset if the container objects for the port are deleted (e.g. MDA deconfigured, or IOM type changes).
Last Cleared Time	Displays the system time moment that the peer is up.
DDM Events	Enabled — DDM events are enabled Disabled — DDM events are disabled
Configured Mode	network — The port is configured for transport network use.
	access — The port is configured for service access.
Dot1Q Ethertype	Indicates the Ethertype expected when the port's encapsulation type is Dot1Q.
QinQ Ethertype	Indicates the Ethertype expected when the port's encapsulation type is QinQ.
Net. Egr. Queue Pol	Specifies the network egress queue policy or that the default policy is used.
Encap Type	Null — Ingress frames will not use any tags or labels to delineate a service.
	dot1q — Ingress frames carry 802.1Q tags where each tag signifies a different service.
Active Alarms	The number of alarms outstanding on this port.
Auto-negotiate	True — The link attempts to automatically negotiate the link speed and duplex parameters.
	False — The duplex and speed values are used for the link.
Alarm State	The current alarm state of the port.
Collect Stats	Enabled — The collection of accounting and statistical data for the network Ethernet port is enabled. When applying accounting policies the data by default will be collected in the appropriate records and written to the designated billing file.
	Disabled — Collection is disabled. Statistics are still accumulated by the IOM cards, however, the CPU will not obtain the results and write them to the billing file.

Table 62 **Output Fields: port <port-id> detail (Continued)**

Label	Description (Continued)
Egress Rate	The maximum amount of egress bandwidth (in kilobits per second) that this Ethernet interface can generate.
Egress Buf (Acc)	The access-buffer policy for the egress buffer.
Egress Buf (Net)	The network-buffer policy for the egress buffer.
Egress Pool Size	The amount of egress buffer space, expressed as a percentage of the available buffer space that will be allocated to the port or channel for egress buffering.
Ingress Buf (Acc)	The access-buffer policy for the ingress buffer.
Ingress Pool Size	The amount of ingress buffer space, expressed as a percentage of the available buffer space that will be allocated to the port or channel for ingress buffering.
OTU	OTU encapsulation status.
Configured Address	The base chassis Ethernet MAC address.
Hardware Address	The interface's hardware or system assigned MAC address at its protocol sub-layer.
Transceiver Type	Type of the transceiver.
Model Number	The model number of the transceiver.
Transceiver Code	The code for the transmission media.
Laser Wavelength	The light wavelength transmitted by the transceiver's laser.
Connector Code	The vendor organizationally unique identifier field (OUI) contains the IEEE company identifier for the vendor.
Diag Capable	Indicates if the transceiver is capable of doing diagnostics.
Vendor OUI	The vendor-specific identifier field (OUI) contains the IEEE company identifier for the vendor.
Manufacture date	The manufacturing date of the hardware component in the mmddyyyy ASCII format.
Media	The media supported for the SFP.
Serial Number	The vendor serial number of the hardware component.
Part Number	The vendor part number contains ASCII characters, defining the vendor part number or product name.
Input/Output	When the collection of accounting and statistical data is enabled, then octet, packet, and error statistics are displayed.
Description	A text description of the port.
Interface	The port ID displayed in the *slot/mda/port* format.

Table 62 **Output Fields: port <port-id> detail (Continued)**

Label	Description (Continued)
Speed	The speed of the interface
Link-level	Ethernet — The port is configured as Ethernet.
	SONET — The port is configured as SONET-SDH
MTU	The size of the largest packet which can be sent/received on the Ethernet physical interface, specified in octets.
Admin State	Up — The port is administratively up.
	Down — The port is administratively down.
Oper State	Up — The port is operationally up.
	Down — The port is operationally down.
Duplex	Full — The link is set to full duplex mode.
	Half — The link is set to half duplex mode.
Hold time up	The link up dampening time in seconds. The port link dampening timer value which reduces the number of link transitions reported to upper layer protocols.
Hold time down	The link down dampening time in seconds. The **down** timer controls the dampening timer for link down transitions.
IfIndex	Displays the interface's index number which reflects its initialization sequence.
Phy Link	Yes — A physical link is present.
	No — A physical link is not present.
Configured Mode	network — The port is configured for transport network use.
	access — The port is configured for service access.
Network Qos Pol	The network QoS policy ID applied to the port.
Encap Type	Null — Ingress frames will not use any tags or labels to delineate a service.
	dot1q — Ingress frames carry 802.1Q tags where each tag signifies a different service.
Active Alarms	The number of alarms outstanding on this port.
Auto-negotiate	True — The link attempts to automatically negotiate the link speed and duplex parameters.
	False — The duplex and speed values are used for the link.
Alarm State	The current alarm state of the port.

Table 62 **Output Fields: port <port-id> detail (Continued)**

Label	Description (Continued)
Collect Stats	Enabled — The collection of accounting and statistical data for the network Ethernet port is enabled. When applying accounting policies the data by default will be collected in the appropriate records and written to the designated billing file.
	Disabled — Collection is disabled. Statistics are still accumulated by the IOM cards, however, the CPU will not obtain the results and write them to the billing file.
Down-When-Looped	Shows whether the feature is enabled or disabled.
Egress Rate	The maximum amount of egress bandwidth (in kilobits per second) that this Ethernet interface can generate.
Egress Buf (Acc)	The access-buffer policy for the egress buffer.
Egress Buf (Net)	The network-buffer policy for the egress buffer.
Ingress Buf (Acc)	The access-buffer policy for the ingress buffer.
Ingress Pool Size	The amount of ingress buffer space, expressed as a percentage of the available buffer space, that will be allocated to the port or channel for ingress buffering.
Configured Address	The base chassis Ethernet MAC address.
Hardware Address	The interface's hardware or system assigned MAC address at its protocol sub-layer.
Errors Input/Output	For packet-oriented interfaces, the number of inbound packets that contained errors preventing them from being deliverable to a higher-layer protocol. For character-oriented or fixed-length interfaces, the number of inbound transmission units that contained errors preventing them from being deliverable to a higher-layer protocol. For packet-oriented interfaces, the number of outbound packets that could not be transmitted because of errors. For character-oriented or fixed-length interfaces, the number of outbound transmission units that could not be transmitted because of errors.
Unicast Packets Input/Output	The number of packets, delivered by this sub-layer to a higher (sub-) layer, which were not addressed to a multicast or broadcast address at this sub-layer. The total number of packets that higher-level protocols requested be transmitted, and which were not addressed to a multicast or broadcast address at this sub-layer, including those that were discarded or not sent.
Multicast Packets Input/Output	The number of packets, delivered by this sub-layer to a higher (sub-) layer, which were addressed to a multicast address at this sub-layer. For a MAC layer protocol, this includes both group and functional addresses. The total number of packets that higher-level protocols requested be transmitted, and which were addressed to a multicast address at this sub-layer, including those that were discarded or not sent. For a MAC layer protocol, this includes both Group and Functional addresses.

Table 62 **Output Fields: port <port-id> detail (Continued)**

Label	Description (Continued)
Broadcast Packets Input/Output	The number of packets, delivered by this sub-layer to a higher (sub-) layer, which were addressed to a broadcast address at this sub-layer. The total number of packets that higher-level protocols requested be transmitted, and which were addressed to a multicast address at this sub-layer, including those that were discarded or not sent. For a MAC layer protocol, this includes both Group and Functional addresses.
Discards Input/Output	The number of inbound packets chosen to be discarded to possibly free up buffer space.
Unknown Proto Discards Input/Output	For packet-oriented interfaces, the number of packets received through the interface which were discarded because of an unknown or unsupported protocol. For character-oriented or fixed-length interfaces that support protocol multiplexing the number of transmission units received via the interface which were discarded because of an unknown or unsupported protocol. For any interface that does not support protocol multiplexing, this counter will always be 0. For ATM, this field displays cells discarded on an invalid vpi/vci. Unknown proto discards do not show up in the packet counts.
Errors	For ATM, this field displays the number of cells discarded due to uncorrectable HEC errors. Errors do not show up in the raw cell counts.
Sync. Status Msg	Whether synchronization status messages are enabled or disabled.
Tx DUS/DNU	Whether the QL value is forcibly set to QL-DUS/QL-DNU.
Rx Quality Level	Indicates which QL value has been received from the interface.
Tx Quality Level	Indicates which QL value is being transmitted out of the interface.
SSM Code Type	Indicates the SSM code type in use on the port.
Egr. Sched. Pol	Specifies the port scheduler policy or that the default policy default is in use.
Access Egr. Qos	Specifies the access egress policy or that the default policy 1 is in use.
Ingress Port Forwarding Engine Drop Reason Statistics	When any of the packet counters increments, it indicates that a packet was dropped in the ingress datapath or extracted to the control plane for further processing. The detailed per-reason drop statistics are available per-port for Ethernet ports (local on the 7450 ESS, 7750 SR, 7950 XRS, or Satellite client ports) and for PXC sub-ports. An aggregate forwarding engine drop counter (packet and byte) is available per-SAP.
IPv4 Header Error	The IPv4 packet header contains an error such as an IPv4 header checksum error, an invalid IP version number (not 4 or 6), or an incorrect Total Length field.
IPv4 Invalid Address	An error in the source (SA) or destination (DA) IPv4 address was detected. For example class D or class E IPv4 DAs, loopback SA (127.0.0.0/8), 0.0.0.0/8 DA, SA is a subnet broadcast or network address and cases where the IPv4 address is a multicast address but the Ethernet destination address is not RFC1112 compliant. RFC1112 checks are also carried out on IPIPE traffic.

Table 62 **Output Fields: port <port-id> detail (Continued)**

Label	Description (Continued)
IPv6 Header Error	The IPv6 packet header contains an error such as an incorrect Payload Length field or an IP version not equal to '6' when the Ethernet etype or PPP ID indicates it is IPv6.
IPv6 Invalid Address	An error in the source (SA) or destination (DA) IPv6 address was detected. For example, an unspecified IPv6 DA, an IPv6 multicast SA and cases where the IPv6 address is a multicast address but the Ethernet destination address is not RFC2464 compliant. RFC 2464 checks are also carried out on IPIPE traffic.
IP Route Blackholed	The destination IP address of the packet matches a black hole route.
ACL Filter Discards	The packet was dropped by a filter (ACL) on the line card (such as IP or MAC filter). Packets dropped by CPM filters or ESM antispoof filters do not increment this counter.
Unicast RPF Check Failed	The IP packet failed the unicast reverse path forwarding (uRPF) check.
BFD Spoof Check Failed	The received BFD packet either failed the TTL check (single hop BFD TTL should be 255) or failed the source IP address lookup of known sessions. This counter may increment when BFD sessions are first configured since one side may start sending before the other is completely programmed and ready.
Unicast MAC DA mismatch	The unicast destination MAC address is a null address or does not match any of the expected MAC addresses associated with the receiving interface. Packets with multicast or broadcast MAC addresses do not increment this counter.
Multicast MAC With Unicast Dest IP	The Ethernet destination (MAC) address is multicast but the IP address is unicast.
Unknown MAC DA Discarded in VPLS	The MAC destination address lookup in the MAC FIB failed and the VPLS service is configured to discard packets with unknown destination MAC addresses.
L2 Service MTU Exceeded	The length of the packet received on a SAP bound to a layer 2 service (such as VPLS or EPIPE) exceeded the configured MTU for the service.
Needs ICMP	The received packet requires the router to generate an ICMP message. For example, the IP packet TTL is expired or the destination host, network, or Enhanced Subscriber Management (ESM) subscriber is unreachable. Host unreachable can occur, among other reasons, if the destination address (e.g. 10.0.1.2) of a packet resolves to a loopback interface subnet (e.g. 10.0.1.1/24) but doesn't match the specific loopback address (e.g. 10.0.1.1). Destination unreachable can also occur, for example, in response to an IPv6 packet received by a router from a point-to-point link (a non-Ethernet link) destined to an address within a subnet assigned to that same link (other than one of the receiving router's own addresses) as described in RFC 4443.

Sample Output: show port <port-id> detail (Ethernet Interface Port)

```
A:ALA-251# show port 1/2/1 detail
===============================================================================
Ethernet Interface
```

```
===============================================================================
Description        : 10/100 Ethernet TX
Interface          : 1/2/1                       Oper Speed       : 0 mbps
Link-level         : Ethernet                    Config Speed     : 100 mbps
Admin State        : up                          Oper Duplex      : N/A
Oper State         : down                        Config Duplex    : full
Physical Link      : No                          MTU              : 1514
Single Fiber Mode  : No                          Clock Mode       :synchronous
IfIndex            : 37781504                    Hold time up     : 0 seconds
Last State Change  : 01/03/2008 15:17:00         Hold time down   : 0 seconds
Last Cleared Time  : 01/03/2008 15:17:01
Phys State Chng Cnt:  Last Cleared Time  : N/A            DDM Events       : Enabled
Phys State Chng Cnt: 3Configured Mode    : network         Encap Type       : null
Dot1Q Ethertype    : 0x8100                      QinQ Ethertype   : 0x8100
PBB Ethertype      : 0x88e7
Ing. Pool % Rate   : 100                         Egr. Pool % Rate : 100
Net. Egr. Queue Pol: default
Egr. Sched. Pol    : n/a
Auto-negotiate     : false                       MDI/MDX          : unknown
Accounting Policy  : None                        Collect-stats    : Disabled
Egress Rate        : Default                     Ingress Rate     : Default
Load-balance-algo  : default                     LACP Tunnel      : Disabled

Down-when-looped   : Disabled                    Keep-alive       : 10
Loop Detected      : False                       Retry            : 120

Sync. Status Msg.  : Enabled                     Rx Quality Level : 0xa(eec2)
Tx DUS/DNU         : Disabled                    Tx Quality Level : 0xa(eec2)
SSM Code Type      : sonet

Configured Address : 00:21:05:7e:b1:48

Hardware Address   : 14:30:01:02:00:01
Cfg Alarm          :
Alarm Status
===============================================================================
Traffic Statistics
===============================================================================
                                                    Input                 Output
-------------------------------------------------------------------------------
Octets                                                 0                      0
Packets                                                0                      0
Errors                                                 0                      0
===============================================================================
Ethernet Statistics
===============================================================================
Broadcast Pckts  :                   0  Drop Events      :                   0
Multicast Pckts  :                   0  CRC/Align Errors :                   0
Undersize Pckts  :                   0  Fragments        :                   0
Oversize Pckts   :                   0  Jabbers          :                   0
Collisions       :                   0

Octets                          :                  0
Packets                         :                  0
Packets of 64 Octets            :                  0
Packets of 65 to 127 Octets     :                  0
Packets of 128 to 255 Octets    :                  0
Packets of 256 to 511 Octets    :                  0
Packets of 512 to 1023 Octets   :                  0
```

```
Packets of 1024 to 1518 Octets :                  0
Packets of 1519 or more Octets :                  0
===============================================================================
Port Statistics
===============================================================================
                                                 Input                  Output
-------------------------------------------------------------------------------
Unicast Packets                                      0                       0
Multicast Packets                                    0                       0
Broadcast Packets                                    0                       0
Discards                                             0                       0
Unknown Proto Discards                               0
===============================================================================
Ethernet-like Medium Statistics
===============================================================================
Alignment Errors :                   0  Sngl Collisions  :                   0
FCS Errors       :                   0  Mult Collisions  :                   0
SQE Test Errors  :                   0  Late Collisions  :                   0
CSE              :                   0  Excess Collisns  :                   0
Too long Frames  :                   0  Int MAC Tx Errs  :                   0
Symbol Errors    :                   0  Int MAC Rx Errs  :                   0
===============================================================================
Ingress Port Forwarding Engine Drop Reason Statistics
===============================================================================
IPv4 Header Error                                    0
IPv4 Invalid Address                                 0
IPv6 Header Error                                    0
IPv6 Invalid Address                                 0
IP Route Blackholed                                  0
ACL Filter Discards                                  0
Unicast RPF Check Failed                             0
BFD Spoof Check Failed                               0
Unicast MAC Destination Address Mismatch             0
Multicast MAC With Unicast Dest IP                   0
Unknown MAC Destination Address Discarded in VPLS    0
L2 Service MTU Exceeded                              0
Needs ICMP                                           0
===============================================================================
Queue Statistics
===============================================================================
Ingress Queue  1             Packets                 Octets
     In Profile  forwarded :    0                       0
     In Profile  dropped   :    0                       0
     Out Profile forwarded :    0                       0
...
Egress Queue  8              Packets                 Octets
     In Profile  forwarded :    0                       0
     In Profile  dropped   :    0                       0
     Out Profile forwarded :    0                       0
     Out Profile dropped   :    0                       0
===============================================================================
A:ALA-251#


B:PE-1# show port 2/1/18 detail
===============================================================================
Ethernet Interface
===============================================================================
Description        : 10/100/Gig Ethernet SFP
```

```
Interface          : 2/1/18                    Oper Speed       : 1 Gbps
Link-level         : Ethernet                  Config Speed     : 1 Gbps
Admin State        : up                        Oper Duplex      : full
Oper State         : up                        Config Duplex    : full
Physical Link      : Yes                       MTU              : 1518
Single Fiber Mode  : No                        Min Frame Length : 64 Bytes
IfIndex            : 69795840                  Hold time up     : 0 seconds
Last State Change  : 08/21/2012 21:47:08       Hold time down   : 0 seconds
Last Cleared Time  : N/A                       DDM Events       : Enabled
Phys State Chng Cnt: 7

Configured Mode    : access                    Encap Type       : 802.1q
Dot1Q Ethertype    : 0x8100                    QinQ Ethertype   : 0x8100
PBB Ethertype      : 0x88e7
Ing. Pool % Rate   : 100                       Egr. Pool % Rate : 100
Ing. Pool Policy   : n/a
Egr. Pool Policy   : n/a
Net. Egr. Queue Pol: default
Egr. Sched. Pol    : n/a
Auto-negotiate     : true                      MDI/MDX          : unknown
Accounting Policy  : None                      Collect-stats    : Disabled
Egress Rate        : Default                   Ingress Rate     : Default
Load-balance-algo  : Default                   LACP Tunnel      : Disabled

Down-when-looped   : Disabled                  Keep-alive       : 10
Loop Detected      : False                     Retry            : 120
Use Broadcast Addr : False

Sync. Status Msg.  : Disabled                  Rx Quality Level : N/A
Tx DUS/DNU         : Disabled                  Tx Quality Level : N/A
SSM Code Type      : sdh

Down On Int. Error : Disabled

CRC Mon SD Thresh  : Disabled                  CRC Mon Window   : 10 seconds
CRC Mon SF Thresh  : Disabled

Configured Address : 00:03:fa:1b:bb:3f
Hardware Address   : 00:03:fa:1b:bb:3f

Transceiver Data

Transceiver Type   : SFP
Model Number       : 3HE00027AAAA02  ALA  IPUIAELDAB
TX Laser Wavelength: 850 nm                    Diag Capable     : yes
Connector Code     : LC                        Vendor OUI       : 00:90:65
Manufacture date   : 2008/09/25                Media            : Ethernet
Serial Number      : PED38UH
Part Number        : FTRJ8519P2BNL-A5
Optical Compliance : GIGE-SX
Link Length support: 300m for OM2 50u MMF; 150m for OM1 62.5u MMF
===============================================================================
Transceiver Digital Diagnostic Monitoring (DDM), Internally Calibrated
===============================================================================
                              Value High Alarm  High Warn   Low Warn  Low Alarm
-------------------------------------------------------------------------------
Temperature (C)              +25.9     +95.0      +90.0      -20.0      -25.0
Supply Voltage (V)            3.32      3.90       3.70       2.90       2.70
Tx Bias Current (mA)           8.1      17.0       14.0        2.0        1.0
```

```
Tx Output Power (dBm)          -4.49      -2.00       -2.00      -11.02      -11.74
Rx Optical Power (avg dBm)     -5.16       1.00       -1.00      -18.01      -20.00
===============================================================================
===============================================================================
Traffic Statistics
===============================================================================
                                                    Input                  Output
-------------------------------------------------------------------------------
Octets                                                 0                       0
Packets                                                0                       0
Errors                                                 0                       0
===============================================================================
Ethernet Statistics
===============================================================================
Broadcast Pckts  :                     0  Drop Events      :                   0
Multicast Pckts  :                     0  CRC/Align Errors :                   0
Undersize Pckts  :                     0  Fragments        :                   0
Oversize Pckts   :                     0  Jabbers          :                   0
Collisions       :                     0

Octets                          :                  0
Packets                         :                  0
Packets of 64 Octets            :                  0
Packets of 65 to 127 Octets     :                  0
Packets of 128 to 255 Octets    :                  0
Packets of 256 to 511 Octets    :                  0
Packets of 512 to 1023 Octets   :                  0
Packets of 1024 to 1518 Octets  :                  0
Packets of 1519 or more Octets  :                  0
===============================================================================
===============================================================================
Port Statistics
===============================================================================
                                                    Input                  Output
-------------------------------------------------------------------------------
Unicast Packets                                        0                       0
Multicast Packets                                      0                       0
Broadcast Packets                                      0                       0
Discards                                               0                       0
Unknown Proto Discards                                 0
===============================================================================
===============================================================================
Ethernet-like Medium Statistics
===============================================================================
Alignment Errors :                     0  Sngl Collisions  :                   0
FCS Errors       :                     0  Mult Collisions  :                   0
SQE Test Errors  :                     0  Late Collisions  :                   0
CSE              :                     0  Excess Collisns  :                   0
Too long Frames  :                     0  Int MAC Tx Errs  :                   0
Symbol Errors    :                     0  Int MAC Rx Errs  :                   0
In Pause Frames  :                     0  Out Pause Frames :                   0
===============================================================================
===============================================================================
Per Threshold MDA Discard Statistics
===============================================================================
                                  Packets                 Octets
-------------------------------------------------------------------------------
Threshold 0 Dropped :             0                       0
Threshold 1 Dropped :             0                       0
```

```
Threshold 2 Dropped :           0                       0
Threshold 3 Dropped :           0                       0
Threshold 4 Dropped :           0                       0
Threshold 5 Dropped :           0                       0
Threshold 6 Dropped :           0                       0
Threshold 7 Dropped :           0                       0
Threshold 8 Dropped :           0                       0
Threshold 9 Dropped :           0                       0
Threshold 10 Dropped :          0                       0
Threshold 11 Dropped :          0                       0
Threshold 12 Dropped :          0                       0
Threshold 13 Dropped :          0                       0
Threshold 14 Dropped :          0                       0
Threshold 15 Dropped :          0                       0
===============================================================================
B:PE-1#


A:ALA-251# show port 1/1/1
===============================================================================
Ethernet Interface
===============================================================================
Description: 1-Gi Ethernet SFP
Interface: 1/1/1Oper Speed: N/A
Link-level: EthernetConfig Speed: N/A
Admin State: up Oper Duplex: N/A
Oper State: downConfig Duplex: N/A
Physical Link: No MTU: 1514
IfIndex : 35815424Hold time up: 0 seconds
Last State Change: 06/06/2007 13:35:41Hold time down : 0 seconds
Last Cleared Time: N/A

Configured Mode: accessEncap Type: null
Dot1Q Ethertype: 0x8100QinQ Ethertype: 0x8100
Net. Egr. Queue Pol: default
Egr. Sched. Pol: n/a
Auto-negotiate: trueMDI/MDX : N/A
Accounting Policy: NoneCollect-stats: Disabled
Egress Rate: DefaultIngress Rate: Default
Load-balance-algo: defaultLACP Tunnel: Disabled

Down-when-looped   : Disabled                  Keep-alive       : 10
Loop Detected      : False                     Retry            : 120

Sync. Status Msg.  : Enabled                   Rx Quality Level : 0xa(eec2)
Tx DUS/DNU         : Disabled                  Tx Quality Level : 0xa(eec2)
SSM Code Type      : sonet

Configured Address : 00:21:05:7e:b1:48
Hardware Address: 8c:1f:01:01:00:05
Cfg Alarm:
Alarm Status: linkLossFwd
===============================================================================
Traffic Statistics
===============================================================================
                                                        Input                 Output
-------------------------------------------------------------------------------
Octets                                                      0              42302904
Packets                                                     0                547917
```

```
Errors                                                  0                     0
===============================================================================
Port Statistics
===============================================================================
                                                    Input                 Output
-------------------------------------------------------------------------------
Unicast Packets                                         0                      0
Multicast Packets                                       0                 296019
Broadcast Packets                                       0                 251898
Discards                                                0                      0
Unknown Proto Discards                                  0
===============================================================================
Ethernet-like Medium Statistics
===============================================================================
Alignment Errors :                   0  Sngl Collisions  :                    0
FCS Errors       :                   0  Mult Collisions  :                    0
SQE Test Errors  :                   0  Late Collisions  :                    0
CSE              :                   0  Excess Collisns  :                    0
Too long Frames  :                   0  Int MAC Tx Errs  :                    0
Symbol Errors    :                   0  Int MAC Rx Errs  :                    0
===============================================================================
A:ALA-251#
```

Sample Output: show port <port-id> vport <vport-name>

```
*A:Bennet-Dut-A# show port 1/1/2 vport "vp1"
===============================================================================
Ethernet port 1/1/2 Access Egress vport
===============================================================================
VPort Name    : vp1
Description   : (Not Specified)
Sched Policy  : psp

Host-Matches
-------------------------------------------------------------------------------
Dest: dslam1
-------------------------------------------------------------------------------
===============================================================================
*A:Bennet-Dut-A#


*A:Bennet-Dut-A# show port 1/1/2 vport "vp1" associations
===============================================================================
Ethernet port 1/1/2 Access Egress vport
===============================================================================
-------------------------------------------------------------------------------
VPort "vp1"
-------------------------------------------------------------------------------
svc-id : 1
 sap   : 1/1/2:1
 subscr: s1
 ip    : 1.1.1.2
 mac   : 00:00:00:00:00:01  pppoe-sid: N/A
===============================================================================
*A:Bennet-Dut-A


*A:Bennet-Dut-A# show port 1/1/1 vport "abc" monitor-threshold
```

```
===============================================================================
Port 1/1/1 Vport "abc" Monitor Threshold Info
===============================================================================
Attribute                              Exceed Count Config Rate   Threshold Prcnt
-------------------------------------------------------------------------------
Agg-Eps                                0            212           32
Lvl-1                                  0            12323         89
Lvl-2                                  0            32132         32
Lvl-5                                  0            2323          4
Grp-01234567890123458746513513355656 0              2121          12
-------------------------------------------------------------------------------
Start Time    : 01/07/2015 16:53:16     End Time      : 01/07/2015 16:53:36
Total Samples :
===============================================================================
*A:Bennet-Dut-A
```

Note: If the Vport name is omitted, statistics for all Vports are displayed (bulk read). The statistics are displayed only for the levels, groups, and agg-eps for which the monitor-threshold is enabled. The output information filtering per level, group, or agg-eps is not embedded in the show commands natively. Instead, the output can be filtered with the match extensions for the show command. For example, show port 1/1/1 vport test monitor-threshold | match Lvl-1.

```
*A:sne# show port 1/1/4 vport statistics
===============================================================================
Port 1/1/4 Access Egress vport
===============================================================================
VPort Name    : vp1
Description   : (Not Specified)
Sched Policy  : portschedpol1
Rate Limit    : Max
Rate Modify   : disabled
Modify delta  : 0
Vport Queueing Statistics

Last Cleared Time  : N/A
                        Packets                 Octets
Forwarded:              0                       0
Dropped  :              0                       0
-------------------------------------------------------------------------------
Vport per Level Queueing Statistics
                        Packets                 Octets
Level : 8
Forwarded:              0                       0
Dropped  :              0                       0
Level : 7
Forwarded:              0                       0
Dropped  :              0                       0
Level : 6
Forwarded:              0                       0
Dropped  :              0                       0
Level : 5
Forwarded:              0                       0
Dropped  :              0                       0
Level : 4
Forwarded:              0                       0
Dropped  :              0                       0
```

```
Level : 3
Forwarded:              0                       0
Dropped  :              0                       0
Level : 2
Forwarded:              0                       0
Dropped  :              0                       0
Level : 1
Forwarded:              0                       0
Dropped  :              0                       0

Host-Matches
-------------------------------------------------------------------------------
Dest: dslam1
-------------------------------------------------------------------------------
===============================================================================
*A:sne#
```

Output Fields: show port <port-id> detail (Excerpt Showing Ethernet Statistics)

Table 63 describes the output fields for the **show port detail** command (showing the Ethernet Statistics section).

Table 63 **Output Fields: show port <port-id> detail (Excerpt Showing Ethernet Statistics)**

Label	Description
Broadcast Pckts	The number of packets, delivered by this sub-layer to a higher (sub-) layer, which were addressed to a broadcast address at this sub-layer. The total number of packets that higher-level protocols requested be transmitted, and which were addressed to a multicast address at this sub-layer, including those that were discarded or not sent. For a MAC layer protocol, this includes both Group and Functional addresses.
Multicast Pckets	The number of packets, delivered by this sub-layer to a higher (sub-) layer, which were addressed to a multicast address at this sub-layer. For a MAC layer protocol, this includes both Group and Functional addresses. The total number of packets that higher-level protocols requested be transmitted, and which were addressed to a multicast address at this sub-layer, including those that were discarded or not sent. For a MAC layer protocol, this includes both Group and Functional addresses.
Undersize Pckets	The total number of packets received that were less than 64 octets long (excluding framing bits, but including FCS octets) and were otherwise well formed.
Oversize Pckts	The total number of packets received that were longer than can be accepted by the physical layer of that port (9900 octets excluding framing bits, but including FCS octets for GE ports) and were otherwise well formed.
Collisions	The best estimate of the total number of collisions on this Ethernet segment.
Drop Events	The total number of events in which packets were dropped by the probe due to lack of resources. Note that this number is not necessarily the number of packets dropped; it is just the number of times this condition has been detected.

Table 63 **Output Fields: show port <port-id> detail (Excerpt Showing Ethernet Statistics)**

Label	Description (Continued)
CRC Align Errors	The total number of packets received that had a length (excluding framing bits, but including FCS octets) of between 64 and 1518 octets, inclusive, but had either a bad Frame Check Sequence (FCS) with an integral number of octets (FCS Error) or a bad FCS with a non-integral number of octets (Alignment Error).
Fragments	The total number of packets received that were less than 64 octets in length (excluding framing bits but including FCS octets) and had either a bad Frame Check Sequence (FCS) with an integral number of octets (FCS Error) or a bad FCS with a non-integral number of octets (Alignment Error).
Jabbers	The total number of packets received that were longer than 1518 octets (excluding framing bits, but including FCS octets), and had either a bad Frame Check Sequence (FCS) with an integral number of octets (FCS Error) or a bad FCS with a non-integral number of octets (Alignment Error).
Ingress Pool Size	The amount of ingress buffer space, expressed as a percentage of the available buffer space that will be allocated to the port or channel for ingress buffering.
Octets	The total number of octets received.
Packets	The total number of packets received.
Packets to	The number of packets received that were equal to or less than the displayed octet limit.

Sample Output: show port <port-id> detail (Excerpt Showing Ethernet Statistics)

```
A:ALA-48# show port 1/3/1 detail
===============================================================================
...
===============================================================================
Ethernet Statistics
===============================================================================
Broadcast Pckts  :               42621  Drop Events      :                   0
Multicast Pckts  :                   0  CRC/Align Errors :                   0
Undersize Pckts  :                   0  Fragments        :                   0
Oversize Pckts   :                   0  Jabbers          :                   0
Collisions       :                   0

Octets                          :             2727744
Packets                         :               42621
Packets of 64 Octets            :               42621
Packets of 65 to 127 Octets     :                   0
Packets of 128 to 255 Octets    :                   0
Packets of 256 to 511 Octets    :                   0
Packets of 512 to 1023 Octets   :                   0
Packets of 1024 to 1518 Octets  :                   0
Packets of 1519 or more Octets  :                   0
===============================================================================
Port Statistics
===============================================================================
                                                 Input                 Output
```

```
-------------------------------------------------------------------------------
Unicast Packets                                      0                      0
Multicast Packets                                    0                      0
Broadcast Packets                                42621                      0
Discards                                             0                      0
Unknown Proto Discards                               0
===============================================================================
...
```

Output Fields: show port <port-id> detail (Excerpt Showing Ethernet-like Medium Statistics Output)

Table 64 describes the output fields for the **show port detail** command (showing the Ethernet-like Medium Statistics section).

Table 64 **Output Fields: show port detail (Excerpt Showing Ethernet-like Medium Statistics)**

Label	Description
Alignment Errors	The total number of packets received that had a length (excluding framing bits, but including FCS octets) of between 64 and 1518 octets, inclusive, but had either a bad Frame Check Sequence (FCS) with an integral number of octets (FCS Error) or a bad FCS with a non-integral number of octets.
FCS Errors	The number of frames received on a particular interface that are an integral number of octets in length but do not pass the FCS check.
SQE Errors	The number of times that the SQE TEST ERROR is received on a particular interface.
CSE	The number of times that the carrier sense condition was lost or never asserted when attempting to transmit a frame on a particular interface.
Too long Frames	The number of frames received on a particular interface that exceed the maximum permitted frame size.
Symbol Errors	For an interface operating at 100 Mb/s, the number of times there was an invalid data symbol when a valid carrier was present.
Sngl Collisions	The number of frames that are involved in a single collision, and are subsequently transmitted successfully.
Mult Collisions	The number of frames that are involved in more than one collision and are subsequently transmitted successfully.
Late Collisions	The number of times that a collision is detected on a particular interface later than one slotTime into the transmission of a packet.
Excess Collisns	The number of frames for which transmission on a particular interface fails due to excessive collisions.
Int MAC Tx Errs	The number of frames for which transmission on a particular interface fails due to an internal MAC sublayer transmit error,

Table 64 **Output Fields: show port detail (Excerpt Showing Ethernet-like Medium Statistics)**

Label	Description (Continued)
Int MAC Rx Errs	The number of frames for which reception on a particular interface fails due to an internal MAC sublayer receive error.

Sample Output: show port <port-id> detail (Excerpt Showing Ethernet-like Medium Statistics)

```
A:ALA-48# show port 1/3/1 detail
===============================================================================
...
===============================================================================
Ethernet-like Medium Statistics
===============================================================================
Alignment Errors :                  0  Sngl Collisions  :                   0
FCS Errors       :                  0  Mult Collisions  :                   0
SQE Test Errors  :                  0  Late Collisions  :                   0
CSE              :                  0  Excess Collisns  :                   0
Too long Frames  :                  0  Int MAC Tx Errs  :                   0
Symbol Errors    :                  0  Int MAC Rx Errs  :                   0
Queue Statistics
===============================================================================
Ingress Queue  1              Packets                 Octets
     In Profile  forwarded :    0                       0
     In Profile  dropped   :    0                       0
     Out Profile forwarded :    0                       0
     Out Profile dropped   :    0                       0
Ingress Queue  2              Packets                 Octets
     In Profile  forwarded :    0                       0
     In Profile  dropped   :    0                       0
     Out Profile forwarded :    0                       0
     Out Profile dropped   :    0                       0
Ingress Queue  3              Packets                 Octets
     In Profile  forwarded :    0                       0
     In Profile  dropped   :    0                       0
     Out Profile forwarded :    0                       0
     Out Profile dropped   :    0                       0
Ingress Queue  4              Packets                 Octets
     In Profile  forwarded :    0                       0
     In Profile  dropped   :    0                       0
     Out Profile forwarded :    0                       0
     Out Profile dropped   :    0                       0
Ingress Queue  5              Packets                 Octets
     In Profile  forwarded :    0                       0
     In Profile  dropped   :    0                       0
     Out Profile forwarded :    0                       0
     Out Profile dropped   :    0                       0
Ingress Queue  6              Packets                 Octets
     In Profile  forwarded :    0                       0
     In Profile  dropped   :    0                       0
     Out Profile forwarded :    0                       0
     Out Profile dropped   :    0                       0
===============================================================================
===============================================================================
                    Per Threshold MDA Discard Statistics
```

```
===============================================================================
                                                    Packets                 Octets
-------------------------------------------------------------------------------
                  Threshold 0 Dropped :             0                       0
                  Threshold 1 Dropped :             0                       0
                  Threshold 2 Dropped :             0                       0
                  Threshold 3 Dropped :             0                       0
                  Threshold 4 Dropped :             0                       0
                  Threshold 5 Dropped :             0                       0
                  Threshold 6 Dropped :             0                       0
                  Threshold 7 Dropped :             0                       0
                  Threshold 8 Dropped :             0                       0
                  Threshold 9 Dropped :             0                       0
                  Threshold 10 Dropped :            0                       0
                  Threshold 11 Dropped :            0                       0
                  Threshold 12 Dropped :            0                       0
                  Threshold 13 Dropped :            0                       0
                  Threshold 14 Dropped :            0                       0
                  Threshold 15 Dropped :            0                       0
===============================================================================
A:ALA-48#


A:ALA-48# show port 1/2/1.sts192
===============================================================================
WAN Interface Sublayer Path Info
===============================================================================
Oper Status        : up
Signal Label       : 0x1a                   Rx Signal Label      : 0x1a
Trace String       : Alcatel 7750 SR
Rx Trace Str(Hex)  : 89 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Cfg Alarm          : pais plop prdi pplm prei puneq plcd
Alarm Status       :
===============================================================================
Port Statistics
===============================================================================
                                                    Input
Output
-------------------------------------------------------------------------------
Unicast Packets                                 367218143
5311
Multicast Packets                                      0
0
Broadcast Packets                                      0
0
Discards                                               0
0
Unknown Proto Discards                                 0
===============================================================================
A:ALA-48#


A:ALA-48# show port 1/2/1.sts192 detail
===============================================================================
WAN Interface Sublayer Path Info
===============================================================================
Oper Status        : up
Signal Label       : 0x1a                   Rx Signal Label      : 0x1a
Trace String       : Alcatel 7750 SR
```

```
Rx Trace Str(Hex)  : 89 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Cfg Alarm          : pais plop prdi pplm prei puneq plcd
Alarm Status       :
===============================================================================
Sonet Path
===============================================================================
                                  Far End
-------------------------------------------
ES-P                    1                0
SES-P                   1                0
UAS-P                   0                0
CV-P                   10                0
===============================================================================
===============================================================================
Transmit:
LOP-P                   :                0
Fifo Error              :               96
Max Packet Error        :                0
Min Packet Error        :                0
LLP Packet Error        :                0
FIFO Underflow Error    :                0

Receive:

LOP-P                   :                0
AIS-P                   :                1
RDI-P                   :                0
PLM-P                   :                0
LCD-P                   :                0
Unequipped              :                0
Remote Error            :                6
Parity Error            :               10
Fifo Error              :                0
Max Pkt Error           :                0
Min Pkt Error           :                0
FCS Error               :                0
Packet Abort Error      :                0
Addr Ctrl Invalid       :                0
===============================================================================
Port Statistics
===============================================================================
Input
Output
-------------------------------------------------------------------------------
Unicast Packets                                  369758853
5312
Multicast Packets                                        0
0
Broadcast Packets                                        0
0
Discards                                                 0
0
Unknown Proto Discards                                   0
===============================================================================
A:ALA-48#
```

Output Fields: show port <port-id> (Showing Channelized Ports)

Table 65 describes the output fields for the **show port** command for a channelized port.

Table 65 **Output Fields: show port <port-id> (Showing Channelized Ports)**

Label	Description
Description	A text description of the port.
Interface	The port ID.
TimeSlots	Specifies the DS0 timeslot used in the T1/E1 channel-group.
Speed	Indicates the speed of the DS0 channels used in the associated channel-group.
CRC	Indicates the precision of the cyclic redundancy check. 16 — A 16-bit CRC calculation.
	32 — A 32-bit CRC calculation. 32-bit CRC increases the error detection ability, but it also adds some performance overhead.
Admin Status	Up — The port is administratively up.
	Down — The administratively down.
Oper Status	Up — The port is operationally up.
	Down — The port is operationally down.
Last State Change	Displays the last time the operational status of the port changed state.
Chan-Grp IfIndex	Displays the channel group's interface index number which reflects its initialization sequence.
Configured Mode	network — The port is configured for transport network use.
	access — The port is configured for service access. Channelized ports are always access ports.
Encap Type	The type of encapsulation protocol configured on this port's network interface. bcp-null — Indicates that BCP is used as the NCP control protocol.
	dot1q — Indicates that ingress frames carry 802.1Q tags where each tag signifies a different service.
Oper MTU	The negotiated size of the largest packet which can be sent on the channel, specified in octets. For channels that are used to transmit network datagrams, this is the size of the largest network datagram that can be sent.
Physical Link	Indicates whether or not the port has a physical link.
Unicast Packets Input/Output	The number of packets, delivered by this sub-layer to a higher (sub-) layer, which were not addressed to a multicast or broadcast address at this sub-layer.

Sample Output: show port <port-id> (Showing Channelized Ports)

```
A:ALA-7# show port 7/1/1.ds0grp-1.1
===============================================================================
TDM DS0 Chan Group
===============================================================================
Description        : DS3
Interface          : 7/1/1.ds0grp-1.1
TimeSlots          : 1
Speed              : 64                        CRC                 : 16
Admin Status       : up                        Oper status         : down
Last State Change  : 2007/04/11 01:14:37       Chan-Grp IfIndex    : 656441433

Configured mode    : access                    Encap Type          : bcp-null
Admin MTU          : 1522                      Oper MTU            : 1522
Physical Link      : No
===============================================================================
Port Statistics
===============================================================================
                                          Input                  Output
-------------------------------------------------------------------------------
Unicast Packets                           0                         0
Multicast Packets                         0                         0
Broadcast Packets                         0                         0
Discards                                  0                         0
Unknown Proto Discards                    0
===============================================================================
A:ALA-7#


A:ALA-7# show port 7/1/1.ds0grp-1.1 detail
===============================================================================
TDM DS0 Chan Group
===============================================================================
Description        : DS3
Interface          : 7/1/1.ds0grp-1.1
TimeSlots          : 1
Speed              : 64                        CRC                 : 16
Admin Status       : up                        Oper status         : down
Last State Change  : 04/11/2007 01:14:37       Chan-Grp IfIndex    : 656441433

Configured mode    : access                    Encap Type          : bcp-null
Admin MTU          : 1522                      Oper MTU            : 1522
Physical Link      : No
===============================================================================
Port Statistics
===============================================================================
                                          Input                  Output
-------------------------------------------------------------------------------
Unicast Packets                           0                         0
Multicast Packets                         0                         0
Broadcast Packets                         0                         0
Discards                                  0                         0
Unknown Proto Discards                    0
===============================================================================
A:ALA-7#


ALA-12# show port 7/1/1.1.1
```

```
===============================================================================
TDM DS0 Chan Group
===============================================================================
Description        : DS0GRP
Interface          : 3/1/1.1.1
TimeSlots          : 1
Speed              : 64                      CRC                 : 16
Admin Status       : up                      Oper status         : down
Last State Change  : 04/11/2007 06:54:28     Chan-Grp IfIndex    : 589332542

Configured mode    : access                  Encap Type          : bcp-null
Admin MTU          : 1518                    Oper MTU            : 1518
Physical Link      : No                      Bundle Number       : none
Idle Cycle Flags   : flags                   Load-balance-algo   : default
===============================================================================
Traffic Statistics
===============================================================================
                                                    Input                Output
-------------------------------------------------------------------------------
Octets                                                 0                     0
Packets                                                0                     0
Errors                                                 0                     0
===============================================================================
Port Statistics
===============================================================================
                                                    Input                Output
-------------------------------------------------------------------------------
Packets                                                0                     0
Discards                                               0                     0
Unknown Proto Discards                                 0
===============================================================================
ALA-12#


A:ALA-48# show port 3/1/3.e3
===============================================================================
TDM Interface
===============================================================================
Description        : E3
Interface          : 3/1/3.e3
Type               : e3                      Framing             : g751
Admin Status       : up                      Oper status         : down
Physical Link      : No                      Clock Source        : loop-timed
Last State Change  : 04/11/2007 06:54:28     Port IfIndex        : 589398019

Configured mode    : access                  Encap Type          : bcp-null
Admin MTU          : 1518                    Oper MTU            : 1518
CRC                : 16                      Channelized         : none
Idle Cycle Flags   : flags                   Loopback            : none
FEAC Loop Respond  : Disabled                In FEAC Loop        : No
BERT Pattern       : none                    BERT Duration       : N/A
Err Insertion Rate : 0                       Last BERT Synched   : 0 Seconds
BERT Status        : idle                    Last BERT Errors    : 0
                                             Last BERT Total Bits : 0
Cfg Alarm          : ais los
Alarm Status       :
Subrate Mode       : none

MDL Transmit       : none
```

```
-------------------------------------------------------------------------------
Local MDL Information
-------------------------------------------------------------------------------
EIC                :                          LIC                :
FIC                :                          Unit               :
PFI                :
Idle Signal Port   :
Test Signal Gen    :
-------------------------------------------------------------------------------
Far End MDL Information
-------------------------------------------------------------------------------
EIC                :                          LIC                :
FIC                :                          Unit               :
PFI                :
Idle Signal Port   :
Test Signal Gen    :
===============================================================================
Traffic Statistics
===============================================================================
                                                    Input                Output
-------------------------------------------------------------------------------
Octets                                                  0                     0
Packets                                                 0                     0
Errors                                                  0                     0
===============================================================================
Port Statistics
===============================================================================
                                                    Input                Output
-------------------------------------------------------------------------------
Packets                                                 0                     0
Discards                                                0                     0
Unknown Proto Discards                                  0
===============================================================================
A:ALA-48#
```

Output Fields: show port <port-id> associations

Table 66 describes the output fields for the **show port <port-id> associations** command.

Table 66 **Output Fields: show port <port-id> associations**

Label	Description
Svc ID	The service identifier.
Name	The name of the IP interface.
Encap Value	The dot1q or qinq encapsulation value on the port for this IP interface

Sample Output: show port <port-id> associations

```
A:ALA-1# show port 1/1/6 associations
===============================================================================
Interface Table
```

```
===============================================================================
Router/ServiceId               Name                           Encap Val
-------------------------------------------------------------------------------
Router: Base                   if1000                         1000
Router: Base                   if2000                         2000
-------------------------------------------------------------------------------
Interfaces
===============================================================================
A;ALA-1#
```

Output Fields: show port <port-id> frame-relay

Table 67 describes the output fields for the **show port <port-id> frame-relay** command.

Table 67 **Output Fields: show port <port-id> frame-relay**

Label	Description
Mode	Displays the mode of the interface. It can be set as Data terminal equipment (dte) or Data circuit-terminating equipment (DCE).
LMI Type	Displays the LMI type.
FR Interface Status	Displays the status of the Frame Relay interface as determined by the performance of the dlcmi. If no DLCMI is running, the Frame Relay interface will stay in the running state indefinitely.

Sample Output: show port <port-id> frame-relay

```
A:ALA-49>config>port# show port 8/1/2 frame-relay
===============================================================================
Frame Relay Info for 8/1/2
===============================================================================
Mode                     : dte           LMI Type                : itu
FR Interface Status      : fault
N391 DTE                 : 6             N392 DCE                : 3
N392 DTE                 : 3             N393 DCE                : 4
N393 DTE                 : 4             T392 DCE                : 15
T391 DTE                 : 10
Tx Status Enquiry        : 0             Rx Status Enquiry       : 0
Rx Status Messages       : 0             Tx Status Messages      : 0
Status Message Timeouts  : 0             Status Enquiry Timeouts : 0
Discarded Messages       : 0             Inv. RxSeqNum Messages  : 0
===============================================================================
A:ALA-49>config>port#
```

Output Fields: show port <port-id> otu detail

Table 68 describes the output fields for the **show port <port-id> otu detail** command.

Table 68 **Output Fields: show port <port-id> otu detail**

Label	Description
OTU Status	Status of the OTU (Optical Transport Unit): enabled or disabled. When OTU is enabled, and additional layer of framing encapsulates an MDA's natively programmed mode of operation, 10-Gigabit Ethernet LAN or WAN, adding SONET-Like Framing with FEC (Forward Error Correction). When OTU is disabled, the MDA operates in a 10-Gigabit Ethernet LAN or WAN as per Ethernet provisioning.
FEC Mode	Type of FEC (Forward Error Correction) in effect: g709, enhanced or disabled. When g709 is selected, the standard FEC method is used. When enhanced is selected, a proprietary FEC algorithm is used that extends optical reach in long haul applications. When disabled the bytes that are reserved for FEC in the OTU frame are transmitted as zeros and the FEC decoder is bypassed, but OTU framing is still in effect.
Data Rate	This indicates the data rate at which the port is operating. When OTU is encapsulating 10-Gigabit Ethernet WAN, the data rate is 10.709 Gb/s, the G.709 standard OTU2 data rate. When OTU is encapsulating 10-Gigabit Ethernet LAN, the data rate is either 11.049 Gb/s or 11.096 Gb/s, depending on the otu2-lan-data-rate configuration parameter of the port's OTU parameters. These data rates (11.049 Gb/s and 11.096 Gb/s) are considered OTU2e data rates that are non-standard or over-clocked with respect to G.709, but have become widely used in optical networking to transport un-altered 10-Gigabit Ethernet LAN payloads.
Cfg Alarms and Alarm Status	This indicates the alarms that shall be reported when raised or cleared. Alarms that are not in this list will not be reported when they are raised or cleared but will appear in the Alarm Status.
SF/SD Method	This indicates the selected method for declaring the SF (Signal Fail) or SD (Signal Degrade) alarm. When BIP8 is selected, the error rate of SM-BIP8 errors in the OTU frames is used to declare SF or SD (This is very similar to SONET SF/SD which uses a rate of B2 errors). When FEC is selected, the rate of corrected bits is used to declare SF or SD. This effectively indicates that the link would be degraded (SD) or failed (SF) if FEC was disabled and gives the user an early warning that the link is degrading or is about to fail.
SF Threshold	This is the configured error rate threshold at which the SF (Signal Fail) alarm will be raised.
SD Threshold	This is the configured error rate threshold at which the SD (Signal Degrade) alarm will be raised.
Signal-type	Indicates if the output signal is a single OTU or multiple OTUs (e.g. 260SCX2 OES card)
SM-TTI Tx (<mode>)	This is the configured SM-TTI (Section Monitor Trail Trace Identifier) to be transmitted by this port in the OTU overhead bytes. The modes are auto, string, or bytes. In the auto and string modes, a printable character string will be displayed. In bytes mode, up to 64 hex bytes will be displayed

Table 68 **Output Fields: show port <port-id> otu detail (Continued)**

Label	Description (Continued)
SM-TTI Rx	This is the SM-TTI (Section Monitor Trail Trace Identifier received by this port. When the received TTI is a printable string of characters, it will be displayed as a text string. When the received TTI contains one or more non-printable characters, it will be displayed at a sequence of 64 hex bytes. When the received TTI is all zeros, the string “Not Specified” will be displayed.
FEC Corrected 0s	Displays the number of bits that were received as 0s but corrected to 1s.
FEC Corrected 1s	Number of bits that were received as 1s but corrected to 0s.
FEC Uncorrectable Sub-Rows	The number of sub-rows that were not corrected because too many errors were detected.
FEC SES	The number of severely errored seconds were the number of uncorrectable sub-rows was greater than 15% of the maximum.
SM BIP8	The number of detected BIP-8 errors in the section monitor overhead.
SM BEI	The number of backward error indications received from the far end in the section monitor overhead.
SM SES	Section monitor severely errored seconds where the number of SM-BIP8 was greater than 15% of the maximum.
PM BIP8	The number of detected BIP-8 errors in the section monitor overhead.
PM BEI	The number of backward error indications received from the far end in the section monitor overhead.
PM SES	Section monitor severely errored seconds where the number of SM-BIP8 was greater than 15% of the maximum.

Sample Output: show port <port-id> otu detail

```
A:ALA-49>config>port# show port 3/2/1 otu detail
===============================================================================
OTU Interface
===============================================================================
OTU Status         : Enabled                     FEC Mode         : enhanced
                                                 Data Rate        : 11.049 Gb/s
Cfg Alarms         : loc los lof lom otu-ber-sf otu-bdi fec-sf
Alarm Status       :
SF/SD Method       : FEC                         SF Threshold     : 1E-5
                                                 SD Threshold     : 1E-7

SM-TTI Tx (auto)   : ALA-49:3/2/1/C17
SM-TTI Rx          : (Not Specified)
===============================================================================
OTU Statistics
===============================================================================
Statistics                                              Count
```

```
-------------------------------------------------------------------------------
FEC Corrected 0s                                                        0
FEC Corrected 1s                                                        0
FEC Unrrectable Sub-rows                                                0
FEC SES                                                                 0
SM BIP8                                                                 0
SM BEI                                                                  0
PM SES                                                                  0
PM BIP8                                                                 0
PM BEI                                                                  0
PM SES                                                                  0
===============================================================================
```

Output Fields: show port <port-id> ppp

Table 69 describes the output fields for the **show port <port-id> ppp** command.

Table 69 **Output Fields: show port <port-id> ppp**

Label	Description
Protocol	Displays the applicable protocols for the specified port.
State	Displays the current status of a PPP link. Values include initial, starting, closed, stopped, closing, stopping, requestSent, ackReceived, ackSent, opened.
Last Change	Displays the last time the PPP link state changed.
Restart Count	Displays the number of times that this Control Protocol has reached the 'open' state.
Last Cleared	Displays the date and time the restart count was set to zero.
Local IP address	Displays the IP address assigned the local end of the PPP link.
Remote IP address	Displays the IP address of the remote end of the PPP link.
Local Mac address	Displays the MAC address assigned the local end of the PPP link.
Remote Mac address	The Ethernet MAC address sent by the remote end of the PPP link.
Local Magic Number	Displays the local magic number to be sent to the peer. The magic number provides a method to detect loopbacks. If the value of the local magic number is the same as the value of remote magic number, then it is possible that the link might be looped back. If the two magic numbers do not match, then the link is not looped back.
Remote Magic Number	Displays the magic number sent by the peer. If the value of remote magic number is the same as the value of the local magic number, then it is possible that the link might be looped back. If the two magic numbers do not match, then the link is not looped back.
Line Monitor Method	The type of line monitoring packets being sent and received on this PPP link.
Request Interval	The time interval in seconds at which keepalive requests are issued.

Table 69 **Output Fields: show port <port-id> ppp (Continued)**

Label	Description (Continued)
Threshold exceeded	Displays the number of times that the drop count was reached.
Drop Count	Displays the number of keepalive or LQR messages that were missed before the line was brought down.
In Packets	Displays the number of echo-reply packets received.
Time to link drop	Displays the time remaining before the link will be declared dropped if a keepalive echo reply packet is not received.
Out packets	Displays the number of echo-request packets sent.
Last cleared time	Displays the time since the last clear.
ACFC	Indicates whether Address and Control Field PPP Header Compression is enabled.
PFC	Indicates whether Protocol Field PPP Header Compression is enabled.

Sample Output: show port <port-id> ppp

```
A:SR-007# show port 1/1/1.1.1.1.1 ppp
===============================================================================
PPP Protocols for 1/1/1.1.1.1.1
===============================================================================
Protocol  State         Last Change         Restart Count   Last Cleared
-------------------------------------------------------------------------------
lcp       opened        03/28/2007 13:06:28          7      03/28/2007 12:12:11
ipcp      initial       03/28/2007 11:39:45          0      03/28/2007 12:12:11
mplscp    initial       03/28/2007 11:39:45          0      03/28/2007 12:12:11
bcp       initial       03/28/2007 11:39:45          0      03/28/2007 12:12:11
osicp     opened        03/28/2007 13:06:28         12      03/28/2007 12:12:11
ipv6cp    opened        03/28/2007 13:06:28          7      03/28/2007 12:12:11
===============================================================================
PPP Statistics
===============================================================================
Local Mac address  : 00:03:fa:0e:76:e2  Remote Mac address : 00:00:00:00:00:00
Local Magic Number : 0x7e9a9            Remote Magic Number: 0x7e18b
Local IPv4 address : 0.0.0.0            Remote IPv4 address: 0.0.0.0
Local IPv6 address : FE80::203:FAFF:FE81:5888
Remote IPv6 address: FE80::203:FAFF:FE1A:7EE2
Line Monitor Method: keepalive
Keepalive statistics
Request interval   : 10           Threshold exceeded : 0
Drop Count         : 3            In packets         : 332
Time to link drop  : 00h00m30s    Out packets        : 332
Last cleared time  : 03/28/2007 12:12:11
===============================================================================
A:SR-007#


A:SR-007# show port 1/1/3 ppp detail
===============================================================================
PPP Protocols for 1/1/3.sts12
```

```
===============================================================================
Protocol  State         Last Change         Restart Count   Last Cleared
-------------------------------------------------------------------------------
lcp       initial       04/11/2007 10:56:11          0      04/11/2007 10:56:11
ipcp      initial       04/11/2007 10:56:11          0      04/11/2007 10:56:11
mplscp    initial       04/11/2007 10:56:11          0      04/11/2007 10:56:11
bcp       initial       04/11/2007 10:56:11          0      04/11/2007 10:56:11
osicp     initial       04/11/2007 10:56:11          0      04/11/2007 10:56:11
===============================================================================
PPP Statistics
===============================================================================
Local IP address   : 0.0.0.0            Remote IP address  : 0.0.0.0
Local Mac address  : 00:00:00:00:00:00  Remote Mac address : 00:00:00:00:00:00
Local Magic Number : 0x0                Remote Magic Number: 0x0
Line Monitor Method: keepalive
Keepalive statistics
Request interval   : 10           Threshold exceeded : 0
Drop Count         : 3            In packets         : 0
Time to link drop  : 00h00m30s    Out packets        : 0
Last cleared time  : 04/11/2007 10:56:11
===============================================================================
A:SR-007#

*A:Performance# show port 1/1/4 detail
===============================================================================
...
Transceiver Digital Diagnostics Monitoring
===============================================================================
                             Value   HighAlarm  High Warn  Low  Warn  Low Alarm
-------------------------------------------------------------------------------
Temperature (C)               +128   YES   +85  YES   +70  NO     -5  NO    -15
Supply Voltage (V)            6.55   YES  6.00  YES  4.50  NO    3.0  NO    1.0
Tx Bias Current (mA)           100   NO    128  NO    110  YES    50  NO     30
Tx Output Power (dBm)        -40.0   NO   +8.0  NO   +5.0  YES -10.0  YES -30.0
Rx Optical Power (dBm - yyy)   N/A   NO   +8.0  NO   +5.0  NO  -10.0  NO  -30.0
===============================================================================
...
*A:Performance#
```

The following output displays an example of a PPP link inside a multilink-bundle group:

```
*A:top_SR7# show port 3/1/4.1.2.3.1 ppp
===============================================================================
LCP Protocol for 3/1/4.1.2.3.1
===============================================================================
Protocol  State         Last Change         Restart Count   Last Cleared
-------------------------------------------------------------------------------
lcp       opened        05/22/2008 07:46:18          1      05/22/2008 06:28:48
===============================================================================
Keepalive statistics

Request interval   : 4            Threshold exceeded : 0
Drop Count         : 3            In packets         : 46404
Time to link drop  : 00h00m12s    Out packets        : 46404
Last cleared time  : 05/22/2008 06:28:48

PPP Header Compression
```

```
 ACFC              : Enabled      PFC               : Enabled
===============================================================================
*A:top_SR7#
```

The following output displays an example of a standalone PPP link:

```
*A:top_SR7# show port 3/1/
4.1.2.3.1 ppp
===============================================================================
PPP Protocols for 3/1/4.1.2.3.1
===============================================================================
Protocol  State         Last Change         Restart Count   Last Cleared
-------------------------------------------------------------------------------
lcp       initial       05/24/2008 11:25:23          1      05/22/2008 06:28:48
ipcp      initial       05/22/2008 06:28:48          0      05/22/2008 06:28:48
mplscp    initial       05/22/2008 06:28:48          0      05/22/2008 06:28:48
bcp       initial       05/22/2008 06:28:48          0      05/22/2008 06:28:48
osicp     initial       05/22/2008 06:28:48          0      05/22/2008 06:28:48
ipv6cp    initial       05/22/2008 06:28:48          0      05/22/2008 06:28:48
===============================================================================
PPP Statistics
===============================================================================
Local Mac address  : 00:16:4d:8f:d3:57  Remote Mac address :
Local Magic Number : 0x0                Remote Magic Number: 0x0
Local IPv4 address : 0.0.0.0            Remote IPv4 address: 0.0.0.0
Local IPv6 address : ::
Remote IPv6 address: ::

Line Monitor Method: keepalive

Keepalive statistics

Request interval   : 4            Threshold exceeded : 0
Drop Count         : 3            In packets         : 46418
Time to link drop  : 00h00m12s    Out packets        : 46418
Last cleared time  : 05/22/2008 06:28:48

PPP Header Compression
 ACFC              : Enabled      PFC               : Enabled
===============================================================================
*A:top_SR7#
```

Output Fields: show port <port-id> atm

Table 70 describes the output fields for the **show port <port-id> atm** command.

Table 70 **Output Fields: show port <port-id> atm**

Label	Description
Cell Mode	Displays the cell format (UNI or NNI) that is used on the ATM interface.
Configured VCs	Displays the number of configured VCs.

Table 70 **Output Fields: show port <port-id> atm (Continued)**

Label	Description (Continued)
Max Supported VCs	Indicates the maximum number of ATM VPCs that can be configured on this MDA.
Interface Oper Status	Indicates the status of the ATM interface. If the SONET-PATH layer and TC sublayer are operationally up, the ATM Interface is considered up. If the SONET-PATH layer and/or TC SubLayer is down, the ATM Interface is set to lowerLayerDown.
Number OCD Events	Displays the number of times the Out of Cell Delineation (OCD) events occurred
TC Alarm State	Displays notifications that are generated when the ATM interface indicates that the TC sublayer is currently in the Loss of Cell Delineation (LCD) defect maintenance state or when the TC sublayer is currently not in the Loss of Cell Delineation (LCD) defect maintenance state.
Last Unknown VPI/ VCI	Indicates the last unknown VPI/VCI that was received on this interface.
Ingress CBR	Indicates the total CBR bandwidth consumed on this interface in the ingress direction.
Egress CBR	Indicates the total CBR bandwidth consumed on this interface in the egress direction.
Ingress RT-VBR	Indicates the total real-time variable bit rate (rt-VBR) bandwidth consumed on this interface in the ingress direction.
Egress RT-VBR	Indicates the total real-time variable bit rate (rt-VBR) bandwidth consumed on this interface in the egress direction.
Ingress NRT-VBR	Indicates the total non-real-time variable bit rate (nrt-VBR) bandwidth consumed on this interface in the ingress direction.
Egress NRT-VBR	Indicates the total non-real-time variable bit rate (nrt-VBR) bandwidth consumed on this interface in the egress direction.
Ingress UBR	Indicates the total unspecified bit rate (UBR) bandwidth consumed on this interface in the ingress direction.
Egress UBR	Indicates the total unspecified bit rate (UBR) bandwidth consumed on this interface in the egress direction.
Ingress Total	Indicates the number of valid ATM cells received by the ATM interface including both CLP=0 and CLP=1 cells. If traffic policing is implemented, then cells are counted prior to the application of traffic policing.
ATM Link Bandwidth	Indicates the total ATM link bandwidth accepted on this interface.
Shaped Bandwidth	Indicates the total shaped bandwidth consumed on this interface in the egress direction.
HEC Errors (Dropped)	Indicates the number of cells with uncorrectable HEC errors on this interface.

Table 70 **Output Fields: show port <port-id> atm (Continued)**

Label	Description (Continued)
HEC Errors (Fixed)	Indicates the number of fixed HEC errors on this interface.

Sample Output: show port <port-id> atm

```
ALA-1# show port 9/1/2 atm
===============================================================================
ATM Info for 9/1/2
===============================================================================
Cell Mode             : UNI
Configured VCs        : 1                 Max Supported VCs  : 2000
Interface Oper Status : lower layer down  Number OCD Events  : 0
TC Alarm State        : LCD Failure
Last Unknown VPI/VCI  : none
===============================================================================
ATM Bandwidth Info
===============================================================================
                     kbps      %                         kbps      %
-------------------------------------------------------------------------------
Ingress CBR        : 0           0%  Egress CBR         : 0           0%
Ingress RT-VBR     : 0           0%  Egress RT-VBR      : 0           0%
Ingress NRT-VBR    : 4000        1%  Egress NRT-VBR     : 0           0%
Ingress UBR        : 0           0%  Egress UBR         : 0           0%
-------------------------------------------------------------------------------
Ingress Total      : 4000        1%  Egress Total       : 0           0%
ATM Link Bandwidth : 599041 kbps
Shaped Bandwidth   : 0 kbps
===============================================================================
ALA-1#


*A:ALA-48# show port 3/2/1 atm detail
===============================================================================
ATM Info for 3/2/1
===============================================================================
Cell Mode             : UNI               Mapping            : Direct
Configured VCs        : 0                 Configured VPs     : 0
Configured VTs        : 0                 Configured IFCs    : 0
Configured minimum VPI: 0
Last Unknown VPI/VCI  : none
===============================================================================
TC Sublayer Information
===============================================================================
TC Alarm State        : LCD Failure       Number OCD Events  : 0
HEC Errors (Dropped)  : 0                 HEC Errors (Fixed) : 0
===============================================================================
ATM Bandwidth Info
===============================================================================
                     kbps      %                             kbps      %
-------------------------------------------------------------------------------
Ingress CBR        : 0           0%      Egress CBR         : 0           0%
Ingress RT-VBR     : 0           0%      Egress RT-VBR      : 0           0%
Ingress NRT-VBR    : 0           0%      Egress NRT-VBR     : 0           0%
Ingress UBR        : 0           0%      Egress UBR         : 0           0%
```

```
-------------------------------------------------------------------------------
Ingress Total      : 0          0%      Egress Total       : 0          0%
ATM Link Bandwidth : 599041 kbps
Shaped Bandwidth   : 0 kbps
===============================================================================
ATM Statistics
===============================================================================
                                                    Input                Output
-------------------------------------------------------------------------------
Octets                                                  0                     0
Cells                                                   0                     0
Unknown VPI/VCI Cells                                   0
===============================================================================
AAL-5 Packet Statistics
===============================================================================
                                                    Input                Output
-------------------------------------------------------------------------------
Packets                                                 0                     0
Dropped Packets                                         0                     0
CRC-32 Errors                                           0
===============================================================================
*A:ALA-48#


B:Dut-D# show port 2/2/1.1.1.1 atm
===============================================================================
ATM Info for 2/2/1.1.1.1
===============================================================================
Cell Mode             : UNI               Mapping            : Direct
Configured VCs        : 16                Configured VPs     : 0
Configured VTs        : 0                 Configured IFCs    : 0
Configured minimum VPI: 0
Last Unknown VPI/VCI  : none
===============================================================================
TC Sublayer Information
===============================================================================
TC Alarm State        : No Alarm          Number OCD Events  : 0
HEC Errors (Dropped)  : 0                 HEC Errors (Fixed) : 0
===============================================================================
ATM Bandwidth Info
===============================================================================
                     kbps      %                              kbps      %
-------------------------------------------------------------------------------
Ingress CBR        : 0          0%      Egress CBR         : 0          0%
Ingress RT-VBR     : 0          0%      Egress RT-VBR      : 0          0%
Ingress NRT-VBR    : 0          0%      Egress NRT-VBR     : 0          0%
Ingress UBR        : 0          0%      Egress UBR         : 0          0%
-------------------------------------------------------------------------------
Ingress Total      : 0          0%      Egress Total       : 0          0%
ATM Link Bandwidth : 1920 kbps
Shaped Bandwidth   : 0 kbps
===============================================================================
B:Dut-D#


B:Dut-D# show port 2/2/1.1.1.1 atm detail
===============================================================================
ATM Info for 2/2/1.1.1.1
===============================================================================
```

```
Cell Mode             : UNI               Mapping            : Direct
Configured VCs        : 16                Configured VPs     : 0
Configured VTs        : 0                 Configured IFCs    : 0
Configured minimum VPI: 0
Last Unknown VPI/VCI  : none
===============================================================================
TC Sublayer Information
===============================================================================
TC Alarm State        : No Alarm          Number OCD Events  : 0
HEC Errors (Dropped)  : 0                 HEC Errors (Fixed) : 0
===============================================================================
ATM Bandwidth Info
===============================================================================
                     kbps      %                               kbps      %
-------------------------------------------------------------------------------
Ingress CBR        : 0           0%      Egress CBR         : 0           0%
Ingress RT-VBR     : 0           0%      Egress RT-VBR      : 0           0%
Ingress NRT-VBR    : 0           0%      Egress NRT-VBR     : 0           0%
Ingress UBR        : 0           0%      Egress UBR         : 0           0%
-------------------------------------------------------------------------------
Ingress Total      : 0           0%      Egress Total       : 0           0%
ATM Link Bandwidth : 1920 kbps
Shaped Bandwidth   : 0 kbps
===============================================================================
ATM Statistics
===============================================================================
                                                    Input                 Output
-------------------------------------------------------------------------------
Octets                                      228425945553          228453511542
Cells                                         4309923501            4310443614
Unknown VPI/VCI Cells                         4294967295
===============================================================================
AAL-5 Packet Statistics
===============================================================================
                                                    Input                 Output
-------------------------------------------------------------------------------
Packets                                       4302445396            4302705455
Dropped Packets                                        0                     0
CRC-32 Errors                                          0
===============================================================================
A:timetra-sim110#


B:Dut-D# show port 2/1/1 atm connections
===============================================================
ATM Connections, Port 2/1/1
===============================================================
           Owner  Type     Ing.TD  Egr.TD  Adm  OAM         Opr
---------------------------------------------------------------
cp.1       SAP    CP       1       1       up              up
10/10      SAP    PVC      1       1       up   up         up
10/11      SAP    PVC      1       1       up   up         up
20/20      SAP    PVC      1       1       up   up         up
===============================================================
B:Dut-D#
```

Sample Output: show port <port-id> atm cp

```
A:SR12# show port 3/1/1 atm cp
===============================================================================
ATM CPs, Port 3/1/1
===============================================================================
CP         Owner  Type     Ing.TD  Egr.TD  Adm  OAM         Opr
-------------------------------------------------------------------------------
5          SAP    CP       1       1
9          SAP    CP       1       1
===============================================================================
A:SR12#


A:SR12# show port 3/1/1 atm cp detail
===============================================================================
ATM CP, Port 3/1/1
===============================================================================
CP         Owner  Type     Ing.TD  Egr.TD  Adm  OAM         Opr
-------------------------------------------------------------------------------
5          SAP    CP       1       1
===============================================================================
ATM CP Statistics
===============================================================================
Input                Output
-------------------------------------------------------------------------------
Octets                                    284958830153          15950085
Cells                                       5376581701            300945
Dropped CLP=0 Cells                                90               200
Dropped Cells (CLP=0+1)                           290
Tagged Cells                                      780
===============================================================================
===============================================================================
ATM CP, Port 3/1/1
===============================================================================
CP         Owner  Type     Ing.TD  Egr.TD  Adm  OAM         Opr
-------------------------------------------------------------------------------
9          SAP    CP       1       1
===============================================================================
ATM CP Statistics
===============================================================================
Input                Output
-------------------------------------------------------------------------------
Octets                                    284958830153          15950085
Cells                                       5376581701            300945
Dropped CLP=0 Cells                                90               200
Dropped Cells (CLP=0+1)                           290
Tagged Cells                                      780
===============================================================================
A:SR12#


A:SR12# show port 3/1/1 atm cp 9
===============================================================================
ATM CP
===============================================================================
Port Id            : 3/1/1              CP                 : 9
Owner              : SAP                Endpoint Type      : CP
Ing. Td Idx        : 1                  Egr. Td Idx        : 1
===============================================================================
A:SR12#
```

```
A:SR12# show port 3/1/1 atm cp 9 detail
===============================================================================
ATM CP
===============================================================================
Port Id            : 3/1/1              CP                 : 9
Owner              : SAP                Endpoint Type      : CP
Ing. Td Idx        : 1                  Egr. Td Idx        : 1
===============================================================================
===============================================================================
ATM CP Statistics==
===============================================================================
Input                 Output
-------------------------------------------------------------------------------
Octets                                    284958830153          15950085
Cells                                       5376581701            300945
Dropped CLP=0 Cells                                90               200
Dropped Cells (CLP=0+1)                           290
Tagged Cells                                      780
===============================================================================
A:SR12#


B:Dut-D# show connection-profile
===============================================================================
Connection Profile Summary Information
===============================================================================
CP Index  Number of
          Members
-------------------------------------------------------------------------------
1         3
===============================================================================
B:Dut-D#


B:Dut-D# show connection-profile 1
===============================================================================
Connection Profile 1 Information
===============================================================================
Description : My Connection Profile
Last Change : 09/11/2010 13:37:32

-------------------------------------------------------------------------------
VPI/VCI
-------------------------------------------------------------------------------
10/10
10/11
20/20
===============================================================================
B:Dut-D#
```

Output Fields: show port <port-id> atm pvc detail

Table 71 describes the output fields for the **show port <port-id> atm pvc detail** command.

Table 71 **Output Fields: show port <port-id> atm pvc detail**

Label	Description
Port Id	Configures or displays the port ID.
VPI/VCI	Displays the VPI/VCI values.
Admin State	Displays the administrative state of the interface connection.
Oper State	Indicates the status of the ATM interface.
OAM State	Indicates the OAM operational status of ATM connections. ETE indicates end-to-end connection. AIS denotes alarm indication signal. RDI denotes for remote defect indication. LOC indicates the alarm was due to loss of continuity.
Encap Type	Indicates the encapsulation type.
Owner	Identifies the system entity that owns a specific ATM connection.
AAL Type	Displays ATM Adaptation Layer 5 (AAL5) information.
Endpoint Type	Displays the endpoint type.
Cast Type	Indicates the connection topology type.
Type	Indicates the connection type.
Ing. Td Idx	Specifies the ATM traffic descriptor profile that applies to the receive direction of the interface connection.
Egr. Td Idx	Specifies the ATM traffic descriptor profile that applies to the transmit direction of the interface connection.
Last Changed	Indicates the date and time when the interface connection entered its current operational state.
Octets	Displays the number of input and output octets. HEC discarded cells are not included in the input octet numbers
Cells	Displays the number of input and output cells. HEC discarded cells are not included in the input cell numbers
Packets	Displays the number of input and output packets. Packets discarded due to HEC or oversize discards are not counted. CRC errors are also in the packet counts show up on the VC level statistics but not on the port level.
Dropped Packets	Displays the number of packets dropped by the ATM SAR device.

Table 71 **Output Fields: show port <port-id> atm pvc detail (Continued)**

Label	Description (Continued)
CRC-32 Errors	Displays the number of valid AAL-5 SDUs and AAL-5 SDUs with CRC-32 errors received by the AAL-5 VCC.
Reassembly Timeouts	Displays the number of reassembly timeout occurrences.
Over Sized SDUs	Displays the total number of oversized SDU discards.
AIS	Displays the number of AIS cells transmitted and received on this connection for both end to end and segment.
RDI	Displays the number of RDI cells transmitted and received on this connection for both end to end and segment.
Loopback	Displays the number of loopback requests and responses transmitted and received on this connection for both end to end and segment.
CRC-10 Errors	Displays the number of cells discarded on this VPL with CRC 10 errors.
Other	Displays the number of OAM cells that are received but not identified.

Sample Output: show port <port-id> atm pvc detail

```
ALA-1# show port 9/1/2 atm pvc 0/500 detail
===============================================================================
ATM Endpoint
===============================================================================
Port Id             : 9/1/2                VPI/VCI             : 0/500
Admin State         : up                   Oper state          : down
OAM State           : ETE-AIS              Encap Type          : llc
Owner               : SAP                  AAL Type            : AAL-5
Endpoint Type       : PVC                  Cast Type           : P2P
Ing. Td Idx         : 5                    Egr. Td Idx         : 3
Last Changed        : 02/14/2007 14:15:12
===============================================================================
ATM Statistics
===============================================================================
                                                    Input                Output
-------------------------------------------------------------------------------
Octets                                                 0                     0
Cells                                                  0                     0
===============================================================================
AAL-5 Packet Statistics
===============================================================================
                                                    Input                Output
-------------------------------------------------------------------------------
Packets                                                0                     0
Dropped Packets                                        0                     0
CRC-32 Errors                                          0
```

```
Reassembly Timeouts                                    0
Over Sized SDUs                                        0
===============================================================================
ATM OAM Statistics
===============================================================================
                                                   Input                  Output
-------------------------------------------------------------------------------
AIS                                                    0                       0
RDI                                                    0                       0
Loopback                                               0                       0
CRC-10 Errors                                          0
Other                                                  0
===============================================================================
A:ALA-1#


A:ALA-228# show port 2/2/1.1.1.1 atm pvc 0/100 detail
===============================================================================
ATM PVC
===============================================================================
Port Id            : 2/2/1.1.1.1         VPI/VCI            : 0/100
Admin State        : up                  Oper state         : up
OAM State          : up                  Encap Type         : llc
Owner              : SAP                 AAL Type           : AAL-5
Endpoint Type      : PVC                 Cast Type          : P2P
Ing. Td Idx        : 101                 Egr. Td Idx        : 201
Last Changed       : 06/15/2007 22:09:11 ILMI Vpi/Vci Range : n/a
===============================================================================
ATM Statistics
===============================================================================
                                                   Input                  Output
-------------------------------------------------------------------------------
Octets                                          57173273                58892699
Cells                                            1078741                 1111183
===============================================================================
AAL-5 Packet Statistics
===============================================================================
                                                   Input                  Output
-------------------------------------------------------------------------------
Packets                                           539382                  555603
Dropped Packets                                        0                       0
CRC-32 Errors                                          0
Reassembly Timeouts                                    0
Over Sized SDUs                                        0
===============================================================================
ATM OAM Statistics
===============================================================================
                                                   Input                  Output
-------------------------------------------------------------------------------
AIS                                                    0                       0
RDI                                                    0                       1
Loopback                                               0                       0
CRC-10 Errors                                          0
Other                                                  0
===============================================================================
A:ALA-228#
```

Output Fields: show port <port-id> atm pvt detail

Table 72 describes the output fields for the **show port <port-id> atm pvt detail** command.

Table 72 **Output Fields: show port <port-id> atm pvt detail**

Label	Description
Port Id	Displays the port ID.
VPI/VCI	Displays the VPI/VCI values.
Admin State	Displays the administrative state of the interface connection.
Oper State	Indicates the status of the ATM interface.
Encap Type	Indicates the encapsulation type.
Owner	Identifies the system entity that owns a specific ATM connection.
Endpoint Type	Displays the endpoint type.
Cast Type	Indicates the connection topology type.
Ing. Td Idx	Specifies the ATM traffic descriptor profile that applies to the receive direction of the interface connection.
Egr. Td Idx	Specifies the ATM traffic descriptor profile that applies to the transmit direction of the interface connection.
Last Changed	Indicates the date and time when the interface connection entered its current operational state.
Octets	Displays the number of input and output octets. HEC discarded cells are not included in the input octet numbers.
Cells	Displays the number of input and output cells. HEC discarded cells are not included in the input cell numbers.
Dropped CLP	Displays the number of times the CLP1 cells have been dropped. CLP1 cells have lower priority than CLP0 cells and are expected to be discarded first in times of congestion.
Dropped Cells	Displays the number of cells dropped by the ATM SAR device.
Tagged Cells	Displays the number of cells that have been demoted from CLP0 to CLP1.

Sample Output: show port <port-id> atm pvt detail

```
A:SR1_5>config>service# show port 1/2/2 atm pvt 0.0 detail
===============================================================================
ATM PVT
===============================================================================
Port Id             : 1/2/2               VPI Range          : 0.0
Admin State         : up                  Oper state         : up
```

```
Owner              : SAP
Endpoint Type      : PVT                 Cast Type          : P2P
Ing. Td Idx        : 1                   Egr. Td Idx        : 1
Last Changed       : 04/02/2007 01:59:21
===============================================================================
ATM Statistics
===============================================================================
                                                      Input                Output
-------------------------------------------------------------------------------
Octets                                                    0                     0
Cells                                                     0                     0
CLP=0 Cells                                               0                     0
Dropped CLP=0 Cells                                       0                     0
Dropped Cells (CLP=0+1)                                   0
Tagged Cells                                              0
===============================================================================
A:SR1_5>config>service#
```

Sample Output: show port <port-id>[statistics [egress-aggregate]] [detail]

The output displays the aggregate egress queue statistics for ports configured with monitor-agg-egress-queue-stats which have non-zero counters. This can be shown for a single port, or all ports on an MDA or card. When the detail parameter is added, the output includes those ports with counters that are all zero.

```
*A:PE# show port 2 statistics egress-aggregate
===============================================================================
Port 2/1/1 Egress Aggregate Statistics on Slot 2
===============================================================================
                        Forwarded               Dropped                 Total
-------------------------------------------------------------------------------
PacketsIn                     292                     0                   292
PacketsOut                      0                     0                     0
OctetsIn                    25013                     0                 25013
OctetsOut                       0                     0                     0
===============================================================================
===============================================================================
Port 2/1/2 Egress Aggregate Statistics on Slot 2
===============================================================================
                        Forwarded               Dropped                 Total
-------------------------------------------------------------------------------
PacketsIn                     136                     0                   136
PacketsOut                      0                     0                     0
OctetsIn                     9320                     0                  9320
OctetsOut                       0                     0                     0
===============================================================================
*A:PE#
*A:PE# show port 2 statistics egress-aggregate detail
===============================================================================
Port 2/1/1 Egress Aggregate Statistics on Slot 2
===============================================================================
                        Forwarded               Dropped                 Total
-------------------------------------------------------------------------------
PacketsIn                     303                     0                   303
PacketsOut                      0                     0                     0
OctetsIn                    25996                     0                 25996
OctetsOut                       0                     0                     0
===============================================================================
```

```
===============================================================================
Port 2/1/2 Egress Aggregate Statistics on Slot 2
===============================================================================
                        Forwarded               Dropped                   Total
-------------------------------------------------------------------------------
PacketsIn                     140                     0                     140
PacketsOut                      0                     0                       0
OctetsIn                     9598                     0                    9598
OctetsOut                       0                     0                       0
===============================================================================
===============================================================================
Port 2/1/3 Egress Aggregate Statistics on Slot 2
===============================================================================
                        Forwarded               Dropped                   Total
-------------------------------------------------------------------------------
PacketsIn                       0                     0                       0
PacketsOut                      0                     0                       0
OctetsIn                        0                     0                       0
OctetsOut                       0                     0                       0
===============================================================================
*A:PE#
```

Sample Output: show port esat-n/n/n

The output displays Ethernet satellite port information.

```
*A:Dut-A# show port esat-1/1/2

===============================================================================
Ethernet Interface
===============================================================================
Description        : 10/100/Gig Ethernet SFP
Interface          : esat-1/1/2                Oper Speed       : 1 Gbps
Link-level         : Ethernet                  Config Speed     : 1 Gbps
Admin State        : up                        Oper Duplex      : full
Oper State         : up                        Config Duplex    : full
Physical Link      : Yes                       MTU              : 1578
Single Fiber Mode  : No                        Min Frame Length : 64 Bytes
IfIndex            : 1140918274                Hold time up     : 0 seconds
Last State Change  : 06/24/2016 09:33:16       Hold time down   : 0 seconds
Last Cleared Time  : N/A                       DDM Events       : Enabled
Phys State Chng Cnt: 1

Configured Mode    : access                    Encap Type       : null
Dot1Q Ethertype    : 0x8100                    QinQ Ethertype   : 0x8100
PBB Ethertype      : 0x88e7
Ing. Pool % Rate   : 100                       Egr. Pool % Rate : 100
Ing. Pool Policy   : n/a
Egr. Pool Policy   : n/a
Net. Egr. Queue Pol: default
Egr. Sched. Pol    : n/a
Monitor Port Sched : Disabled
Monitor Agg Q Stats: Disabled
Auto-negotiate     : true                      MDI/MDX          : MDI
Oper Phy-tx-clock  : not-applicable
Accounting Policy  : None                      Collect-stats    : Disabled
Acct Plcy Eth Phys : None                      Collect Eth Phys : Disabled
Egress Rate        : Default                   Ingress Rate     : Default
Load-balance-algo  : Default                   LACP Tunnel      : Disabled
```

```
Access Bandwidth   : Not-Applicable            Booking Factor   : 100
Access Available BW: 0
Access Booked BW   : 0
Sflow              : Disabled

Down-when-looped   : Disabled                  Keep-alive       : 10
Loop Detected      : False                     Retry            : 120
Use Broadcast Addr : False

Sync. Status Msg.  : Disabled                  Rx Quality Level : N/A
Tx DUS/DNU         : Disabled                  Tx Quality Level : N/A
SSM Code Type      : sdh

Down On Int. Error : Disabled                  DOIE Tx Disable  : N/A

CRC Mon SD Thresh  : Disabled                  CRC Mon Window   : 10 seconds
CRC Mon SF Thresh  : Disabled

EFM OAM            : Disabled                  EFM OAM Link Mon : Disabled

Configured Address : a4:7b:2c:c7:3f:d6
Hardware Address   : a4:7b:2c:c7:3f:d6

Transceiver Data

Transceiver Status : operational
Transceiver Type   : SFP
Model Number       : 3HE00027CAAA01  ALA  IPUIBDKDAA
TX Laser Wavelength: 850 nm                    Diag Capable     : yes
Connector Code     : LC                        Vendor OUI       : 00:90:65
Manufacture date   : 2014/11/30                Media            : Ethernet
Serial Number      : NSN1ABK
Part Number        : FTLF8519P3BTL-A5
Optical Compliance : GIGE-SX
Link Length support: 550m for OM2 50u MMF; 300m for OM1 62.5u MMF

===============================================================================
Transceiver Digital Diagnostic Monitoring (DDM), Internally Calibrated
===============================================================================
                             Value High Alarm  High Warn   Low Warn  Low Alarm
-------------------------------------------------------------------------------
Temperature (C)              +31.7    +110.0      +93.0      -30.0      -40.0
Supply Voltage (V)            3.25      3.60       3.50       3.10       3.00
Tx Bias Current (mA)           6.2      13.0       12.5        2.0        1.0
Tx Output Power (dBm)        -5.08      0.00      -3.00      -9.50     -13.50
Rx Optical Power (avg dBm)   -5.81      0.50      -1.00     -16.99     -21.02
===============================================================================
===============================================================================

===============================================================================
Traffic Statistics
===============================================================================
                                                  Input                 Output
-------------------------------------------------------------------------------
Octets                                       1585504864            1585783120
Packets                                         3196585               3197146
Errors                                                0                     0

===============================================================================
```

```
Port Statistics
================================================================================
                                                    Input                 Output
--------------------------------------------------------------------------------
Unicast Packets                                   3196583                3197143
Multicast Packets                                       0                      0
Broadcast Packets                                       2                      3
Discards                                                0                      0
Unknown Proto Discards                                  0
================================================================================

================================================================================
Ethernet-like Medium Statistics
================================================================================

Alignment Errors :                   0  Sngl Collisions  :                    0
FCS Errors       :                   0  Mult Collisions  :                    0
SQE Test Errors  :                   0  Late Collisions  :                    0
CSE              :                   0  Excess Collisns  :                    0
Too long Frames  :                   0  Int MAC Tx Errs  :                    0
Symbol Errors    :                   0  Int MAC Rx Errs  :                    0
================================================================================
```

cem

Syntax **cem**

Context show>port

Description This command displays CEM encapsulation for ports and channels.

Output The following output is an example of CEM encapsulation information.

Sample Output: show port cem

```
*A:NS062480023# show port cem
================================================================================
Ports on Slot 1
================================================================================
Port              Admin Link Port    Clock        Master            Clock
Id                State      State   Src          Port Id           State
--------------------------------------------------------------------------------
1/9/1.1.1         Up    No   Down    adaptive     1/9/1.1.2.1       hold-over
1/9/1.1.1.1       Up    No   Down
1/9/1.1.2         Up    No   Down    loop-timed   1/9/1.1.2.1       hold-over
1/9/1.1.2.1       Up    No   Down
1/9/1.1.3         Up    No   Down    node-timed
1/9/1.1.3.1       Up    No   Down
1/9/1.1.4         Up    No   Down    node-timed
...
--------------------------------------------------------------------------------
*A:NS062480023#
```

ethernet

Syntax **ethernet [detail]**

Context show>port

Description This command displays Ethernet-specific information, and enables the context to display Ethernet-specific protocol information.

Parameters **detail —** Keyword to display detailed information

Output The following output is an example of Ethernet information.

Sample Output

```
show port 1/1/1 ethernet detail
===============================================================================
Ethernet Interface
===============================================================================
Description        : 10/100/Gig Ethernet SFP
Interface          : 1/1/1                       Oper Speed       : N/A
Link-level         : Ethernet                    Config Speed     : 1 Gbps
Admin State        : up                          Oper Duplex      : N/A
Oper State         : down                        Config Duplex    : full
Physical Link      : No                          MTU              : 8704
Single Fiber Mode  : No                          Min Frame Length : 64 Bytes
IfIndex            : 35684352                    Hold time up     : 0 seconds
Last State Change  : 01/04/2016 10:52:04         Hold time down   : 0 seconds
Last Cleared Time  : N/A                         DDM Events       : Enabled
Phys State Chng Cnt: 0
Configured Mode    : network                     Encap Type       : null
Dot1Q Ethertype    : 0x8100                      QinQ Ethertype   : 0x8100
PBB Ethertype      : 0x88e7
Ing. Pool % Rate   : 100                         Egr. Pool % Rate : 100
Ing. Pool Policy   : n/a
Egr. Pool Policy   : n/a
Net. Egr. Queue Pol: default
Egr. Sched. Pol    : n/a
Monitor Port Sched : Disabled
Monitor Agg Q Stats: Disabled
Auto-negotiate     : true                        MDI/MDX          : unknown
Oper Phy-tx-clock  : not-applicable
Accounting Policy  : None                        Collect-stats    : Disabled
Acct Plcy Eth Phys : None                        Collect Eth Phys : Disabled
Egress Rate        : Default                     Ingress Rate     : Default
Load-balance-algo  : Default                     LACP Tunnel      : Disabled
Access Bandwidth   : Not-Applicable              Booking Factor   : 100
Access Available BW: 0
Access Booked BW   : 0
Sflow              : Disabled
Down-when-looped   : Disabled                    Keep-alive       : 10
Loop Detected      : False                       Retry            : 120
Use Broadcast Addr : False
Sync. Status Msg.  : Disabled                    Rx Quality Level : N/A
Tx DUS/DNU         : Disabled                    Tx Quality Level : N/A
SSM Code Type      : sdh
Down On Int. Error : Disabled                    DOIE Tx Disable  : Disabled
```

```
CRC Mon SD Thresh  : Disabled                   CRC Mon Window   : 10 seconds
CRC Mon SF Thresh  : Disabled
EFM OAM            : Disabled                   EFM OAM Link Mon : Disabled
Configured Address : d8:1c:01:01:00:01
Hardware Address   : d8:1c:01:01:00:01
Transceiver Data
Transceiver Status : operational
Transceiver Type   : SFP
Model Number       : 3HE00028AAAA01  ALA  IPUIAEMDAA
TX Laser Wavelength: 1310 nm                    Diag Capable     : yes
Connector Code     : LC                         Vendor OUI       : 00:00:5f
Manufacture date   : 2006/01/12                 Media            : Ethernet
Serial Number      : 5ZS600H01693
Part Number        : SCP6F44-A4-AWH
Optical Compliance : GIGE-LX
Link Length support: 10km for SMF; 550m for OM2 50u MMF; 550m for OM1 62.5u M*
===============================================================================
Transceiver Digital Diagnostic Monitoring (DDM), Internally Calibrated
===============================================================================
                             Value High Alarm  High Warn   Low Warn  Low Alarm
-------------------------------------------------------------------------------
Temperature (C)               +22.8    +105.0      +95.0      -45.0      -45.0
Supply Voltage (V)             3.33      4.00       3.60       3.00       2.80
Tx Bias Current (mA)            6.0      60.0       50.0        0.0        0.0
Tx Output Power (dBm)         -5.34     -0.00      -2.00     -10.50     -12.50
Rx Optical Power (avg dBm)   -40.00      8.16       8.16     -40.00     -40.00
===============================================================================

===============================================================================
* indicates that the corresponding row element may have been truncated.
===============================================================================
Traffic Statistics
===============================================================================
                                                        Input                 Output
-------------------------------------------------------------------------------
Octets                                                      0                      0
Packets                                                     0                      0
Errors                                                      0                      0
===============================================================================
Ethernet Statistics
===============================================================================
```

efm-oam

Syntax **efm-oam**

Context show>port>ethernet

Description This command displays the EFM-OAM (Link OAM) information for the individual port.

Output The following output is an example of EFM-OAM information.

Sample Output

```
show port 1/1/1 ethernet efm-oam
```

```
===============================================================================
Ethernet Oam (802.3ah)
===============================================================================
Admin State        : down
Oper State         : disabled
Mode               : active
Pdu Size           : 1518
Config Revision    : 0
Function Support   : LB
Transmit Interval  : 1000 ms
Multiplier         : 5
Hold Time          : 0
Tunneling          : false
Loop Detected      : false
Grace Tx Enable    : true (inactive)
Grace Vendor OUI   : 00:16:4d
Dying Gasp on Reset: true (inactive)
Soft Reset Tx Act  : none
Trigger Fault      : none
Vendor OUI         : 00:16:4d (alu)
Vendor Info        : 00:01:00:02
No Peer Information Available
Loopback State     : None
Loopback Ignore Rx : Ignore
Ignore Efm State   : false
Link Monitoring    : disabled
Peer RDI Rx
  Critical Event   : out-of-service
  Dying Gasp       : out-of-service
  Link Fault       : out-of-service
  Event Notify     : log-only
Local SF Action                       Discovery
  Event Burst      : 1                  Ad Link Mon Cap  : yes
  Port Action      : out-of-service
  Dying Gasp       : disabled
  Critical Event   : disabled
Errored Frame                         Errored Frame Period
  Enabled          : no                 Enabled          : no
  Event Notify     : enabled            Event Notify     : enabled
  SF Threshold     : 1                  SF Threshold     : 1
  SD Threshold     : disabled (0)       SD Threshold     : disabled (0)
  Window           : 10 ds              Window           : 1488095 frames
Errored Symbol Period                 Errored Frame Seconds Summary
  Enabled          : no                 Enabled          : no
  Event Notify     : enabled            Event Notify     : enabled
  SF Threshold     : 1                  SF Threshold     : 1
  SD Threshold     : disabled (0)       SD Threshold     : disabled (0)
  Window (time)    : 10 ds              Window           : 600 ds
  Window (symbols) : 125000000
===============================================================================
Active Failure Ethernet OAM Event Logs
===============================================================================
Number of Logs : 0
===============================================================================

===============================================================================
Ethernet Oam Statistics
===============================================================================
                                                  Input                Output
```

```
-------------------------------------------------------------------------------
Information                                          0                      0
Loopback Control                                     0                      0
Unique Event Notify                                  0                      0
Duplicate Event Notify                               0                      0
Unsupported Codes                                    0                      0
Frames Lost                                                                 0
===============================================================================
```

event-logs

Syntax **event-logs** [{**failure** | **degrade**}] [{**active** | **cleared**}]

Context show>port>ethernet>efm-oam

Description This command displays the EFM-OAM (Link OAM) event logs for the individual port.

Parameters **failure —** Keyword to display failure severity events

degrade — Keyword to display degrade severity events

active — Keyword to display only active events

cleared — Keyword to display remote information on the bridge MAC

Output The following output is an example of EFM-OAM (Link OAM) event logs.

Sample Output

```
show port 1/2/1 ethernet efm-oam event-logs
===============================================================================
Active Failure Ethernet OAM Event Logs
===============================================================================
Log Index               : 2
Event Time Reference    : 10d 03:58:24
Location                : remote
Type                    : Dying Gasp
Event Total             : 1
Port Affecting          : yes
-------------------------------------------------------------------------------
Number of Logs : 1
===============================================================================

===============================================================================
Active Degraded Ethernet OAM Event Logs
===============================================================================
Number of Logs : 0
===============================================================================

===============================================================================
Cleared Failure Ethernet OAM Event Logs
===============================================================================
Number of Logs : 0
===============================================================================

===============================================================================
```

```
Cleared Degraded Ethernet OAM Event Logs
===============================================================================
Number of Logs : 0
===============================================================================
```

dot1x

Syntax **dot1x [detail]**

Context show>port>ethernet

Description This command displays 802.1x information.

Parameters **detail —** Displays detailed information.

Output See the following sections:

- Sample Output: show port <port-id> dot1x
- Sample Output: show port dot1x <port-id> detail

Sample Output: show port <port-id> dot1x

```
*A:PE>config>port>ethernet>dot1x# show port 1/1/5 dot1x
===============================================================================
802.1x Port Status
===============================================================================

Port control            : auto
Port status             : authorized
Authenticator PAE state : authenticated
Backend state           : idle
Reauth enabled          : no            Reauth period         : N/A
Max auth requests       : 2             Transmit period       : 30
Supplicant timeout      : 30            Server timeout        : 30
Quiet period            : 60
Radius-plcy             : test
Tunneling               : false

===============================================================================
802.1x Session Statistics
===============================================================================

authentication method   : remote-radius
last session id         : PAC-02228000-11B0A9BB
last session time       : 00h00m06s
last session username   : user1
last session term cause : N/A
user tx octets          : 0             user tx frames        : 0
user rx octets          : 0             user rx frames        : 0
```

Sample Output: show port dot1x <port-id> detail

```
*A:Dut-C>config>port>ethernet>dot1x# /show port 1/1/5 dot1x detail
===============================================================================
802.1x Port Status
===============================================================================

Port control            : auto
Port status             : authorized
Authenticator PAE state : authenticated
Backend state           : idle
Reauth enabled          : no           Reauth period         : N/A
Max auth requests       : 2            Transmit period       : 30
Supplicant timeout      : 30           Server timeout        : 30
Quiet period            : 60
Radius-plcy             : test
Tunneling               : false

===============================================================================
802.1x Session Statistics
===============================================================================

authentication method   : remote-radius
last session id         : PAC-02228000-11B0A9BB
last session time       : 00h00m10s
last session username   : user1
last session term cause : N/A
user tx octets          : 0            user tx frames        : 0
user rx octets          : 0            user rx frames        : 0

===============================================================================
802.1x Authentication Statistics
===============================================================================

tx frames               : 22          rx frames             : 14
tx req/id frames        : 6           rx resp/id frames     : 3
tx request frames       : 3           rx response frames    : 3
rx start frames         : 4           rx logoff frames      : 4
rx unknown frame type   : 0           rx bad eap length     : 0
rx last version         : 1           rx last source mac    : 00:01:02:17:23:22

===============================================================================
802.1x Authentication Diagnostics
===============================================================================

Enters Connecting                    : 6
EapLogoffs While Connecting          : 1
Logoffs While Connecting             : 1
Success While Authenticating         : 3
Timeouts While Authenticating        : 0
Failures While Authenticating        : 0
Reauths While Authenticating         : 0
EapStarts While Authenticating       : 0
EapLogoffs While Authenticating      : 0
Reauths While Authenticated          : 0
EapStarts While Authenticated        : 0
EapLogoffs While Authenticated       : 1
Backend Responses                    : 6
Backend Access Challenges            : 3
Backend Requests To Supplicant       : 3
Backend Access Challenges            : 0
```

```
Backend Non Nak Responses             : 0
Backend Auth Successes                : 3
Backend Auth Failures                 : 0
```

lldp

Syntax **lldp** [**nearest-bridge**|**nearest-non-tpmr**|**nearest-customer**] [**remote-info**] [**detail**]

Context show>port>ethernet

Description This command displays the Link Layer Discovery Protocol (LLDP) information for the individual port.

Parameters **nearest-bridge —** Displays nearest bridge information.

nearest-non-tpmr — Displays nearest Two-Port MAC Relay (TPMR) information.

nearest-customer — Displays nearest customer information.

remote-info — Displays remote information on the bridge MAC.

detail — Shows detailed information.

Output See the following sections:

- Sample Output: show port <port-id> ethernet lldp
- Sample Output: show port <port-id> ethernet lldp remote-info
- Sample Output: show port <port-id> ethernet lldp remote-info detail
- Sample Output: show port <port-id> ethernet lldp detail

Sample Output: show port <port-id> ethernet lldp

```
show port 1/1/1 ethernet lldp
===============================================================================
Link Layer Discovery Protocol (LLDP) Port Information
===============================================================================

Port 1/1/1 Bridge nearest-bridge
-------------------------------------------------------------------------------
Admin State           : txAndRx        Notifications         : Disabled
Tunnel Nearest Bridge : Disabled
Transmit TLVs         : portDesc sysName sysDesc sysCap
PortID TLV Subtype    : tx-if-name

Management Address Transmit Configuration:
Index 1 (system)      : Enabled        Address               : 1.1.1.31
Index 2 (IPv6 system) : Disabled       Address               : ::

Port 1/1/1 Bridge nearest-non-tpmr
-------------------------------------------------------------------------------
Admin State           : disabled       Notifications         : Disabled
Transmit TLVs         : None
PortID TLV Subtype    : tx-local
```

```
Management Address Transmit Configuration:
Index 1 (system)      : Disabled       Address               : 1.1.1.31
Index 2 (IPv6 system) : Disabled       Address               : ::

Port 1/1/1 Bridge nearest-customer
-------------------------------------------------------------------------------
Admin State           : disabled       Notifications         : Disabled
Transmit TLVs         : None
PortID TLV Subtype    : tx-local

Management Address Transmit Configuration:
Index 1 (system)      : Disabled       Address               : 1.1.1.31
Index 2 (IPv6 system) : Disabled       Address               : ::

===============================================================================
```

Sample Output: show port <port-id> ethernet lldp remote-info

```
show port 1/1/1 ethernet lldp remote-info
===============================================================================
Link Layer Discovery Protocol (LLDP) Port Information
===============================================================================
Port 1/1/1 Bridge nearest-bridge Remote Peer Information
-------------------------------------------------------------------------------
Remote Peer Index 9 at timestamp 12/08/2014 21:34:30:
Supported Caps        : bridge router
Enabled Caps          : bridge router
Chassis Id Subtype    : 4 (macAddress)
Chassis Id            : D8:1C:FF:00:00:00
PortId Subtype        : 5 (interfaceName)
Port Id               : 31:2F:32:2F:32
                        "1/2/2"
Port Description      : n/a
System Name           : cses-V28
System Description    : TiMOS-B-0.0.I4269 both/i386 Nokia 7750 SR Copyright
                        (c) 2000-2016 Nokia.
                        All rights reserved. All use subject to applicable
                        license agreements.
                        Built on Wed Dec 3 19:14:27 PST 2014 by builder in /
                        rel0.0/I4269/panos/main

Port 1/1/1 Bridge nearest-non-tpmr Remote Peer Information
-------------------------------------------------------------------------------
No remote peers found

Port 1/1/1 Bridge nearest-customer Remote Peer Information
-------------------------------------------------------------------------------
No remote peers found

===============================================================================
```

Sample Output: show port <port-id> ethernet lldp remote-info detail

```
show port 1/1/1 ethernet lldp remote-info detail
===============================================================================
Link Layer Discovery Protocol (LLDP) Port Information
===============================================================================
```

```
Port 1/1/1 Bridge nearest-bridge Remote Peer Information
-------------------------------------------------------------------------------
Remote Peer Index 9 at timestamp 12/08/2014 21:34:30:
Supported Caps        : bridge router
Enabled Caps          : bridge router
Chassis Id Subtype    : 4 (macAddress)
Chassis Id            : D8:1C:FF:00:00:00
PortId Subtype        : 5 (interfaceName)
Port Id               : 31:2F:32:2F:32
                        "1/2/2"
Port Description      : n/a
System Name           : cses-V28
System Description    : TiMOS-B-0.0.I4269 both/i386 Nokia 7750 SR Copyright
                        (c) 2000-2016 Nokia.
                        All rights reserved. All use subject to applicable
                        license agreements.
                        Built on Wed Dec 3 19:14:27 PST 2014 by builder in /
                        rel0.0/I4269/panos/main

Remote Peer Index 9 management addresses at time 12/08/2014 21:34:30:
Address SubType       : 1 (IPv4)
Address               : 1.1.1.28
Address If SubType    : 2              Address If Id         : 1
Address OID           : .1.3.6.1.4.1.6527.1.3.3


Port 1/1/1 Bridge nearest-non-tpmr Remote Peer Information
-------------------------------------------------------------------------------
No remote peers found

Port 1/1/1 Bridge nearest-customer Remote Peer Information
-------------------------------------------------------------------------------
No remote peers found

===============================================================================
```

Sample Output: show port <port-id> ethernet lldp detail

```
show port 1/1/1 ethernet lldp detail
===============================================================================
Link Layer Discovery Protocol (LLDP) Port Information
===============================================================================

Port 1/1/1 Bridge nearest-bridge
-------------------------------------------------------------------------------
Admin State           : txAndRx        Notifications         : Disabled
Tunnel Nearest Bridge : Disabled
Transmit TLVs         : portDesc sysName sysDesc sysCap
PortID TLV Subtype    : tx-if-name

Management Address Transmit Configuration:
Index 1 (system)      : Enabled        Address               : 1.1.1.31
Index 2 (IPv6 system) : Disabled       Address               : ::

Port LLDP Stats:
Tx Frames             : 11749          Tx Length Err Frames  : 0
Rx Frames             : 70399          Rx Frame Discard      : 0
Rx Frame Errors       : 0              Rx TLV Discard        : 0
```

```
Rx TLV Unknown        : 0              Rx Ageouts            : 3


Port 1/1/1 Bridge nearest-non-tpmr
-------------------------------------------------------------------------------
Admin State           : disabled       Notifications         : Disabled
Transmit TLVs         : None
PortID TLV Subtype    : tx-local

Management Address Transmit Configuration:
Index 1 (system)      : Disabled       Address               : 1.1.1.31
Index 2 (IPv6 system) : Disabled       Address               : ::

Port LLDP Stats:
Tx Frames             : 0              Tx Length Err Frames  : 0
Rx Frames             : 0              Rx Frame Discard      : 0
Rx Frame Errors       : 0              Rx TLV Discard        : 0
Rx TLV Unknown        : 0              Rx Ageouts            : 0


Port 1/1/1 Bridge nearest-customer
-------------------------------------------------------------------------------
Admin State           : disabled       Notifications         : Disabled
Transmit TLVs         : None
PortID TLV Subtype    : tx-local

Management Address Transmit Configuration:
Index 1 (system)      : Disabled       Address               : 1.1.1.31
Index 2 (IPv6 system) : Disabled       Address               : ::

Port LLDP Stats:
Tx Frames             : 0              Tx Length Err Frames  : 0
Rx Frames             : 0              Rx Frame Discard      : 0
Rx Frame Errors       : 0              Rx TLV Discard        : 0
Rx TLV Unknown        : 0              Rx Ageouts            : 0

===============================================================================
```

port-tree

Syntax **port-tree** *port-id*

Context show

Description This command displays the tree for SONET/SDH or TDM ports/channels WAN PHY mode (xgig wan) Ethernet ports.

Parameters *port-id* — Specifies the physical port ID.

Values

port-id	slot[/*mda*[/*port*]]	
	slot/*mda*/*port* [.*channel*]	
	eth-sat-id	esat-*id*/*slot*/*port*

	esat	keyword
	id	1 to 20
pxc-id	pxc-*id*.*sub-port*	
	pxc	keyword
	id	1 to 64
	sub-port	a, b
aps-id	aps-*group-id*[.*channel*]	
	aps	keyword
	group-id	1 to 64
ccag-id	*slot*/*mda*/*path-id*[*cc-type*]	
	path-id	a,b
	cc-type	.sap-net, .net-sap

Table 73 **Port ID Values**

Product	Slot	MDA	CMA	Port	Values
7750 SR-12	1 to 10	1, 2		1 to 60 (depending on the MDA type)	—
7750 SR-c12	1	1, 3, 5, 7, 9, 11	1 to 12		—
7750 SR-c4	1	1, 3	1 to 4		—
7750 SR-7	1 to 5	1, 2	—		—
7950 XRS	1 to 20	—	—		—
7450 ESS-6	—		—		1 to 5
7450 ESS-7	—		—		1 to 4
7450 ESS-12	—		—		1 to 10
Channelized MDAs					
CHOC12-SFP	—				slot/mda/port. [1 to 4] . [1 to 3] . [1 to 28] . [..24] For example, 7/2/1.1.1.28.24
CHOC3-SFP	—				slot/mda/port. [1 to 3] . [1 to 28] . [..24] For example, 7/2/1.1.28.24
DS3	—				slot/mda/port. [1 to 28] . [..24] For example, 7/1/1.1.1

Output See the following sections:

• Output Fields: show port-tree <port-id>
• Sample Output: show port-tree <port-id>

Output Fields: show port-tree <port-id>

Table 74 describes the output fields for the **show port-tree <port-id>** command.

Table 74 **Output Fields: show port-tree <port-id>**

Label	Description
IfIndex	Displays the interface index number which reflects its initialization sequence.
type	Specifies the type.
sonet-sdh-index	Specifies the sonet-sdh-index.
*	When an asterix (*) is displayed after the sonet-sdh-index, the port/channel is provisioned.

Sample Output: show port-tree <port-id>

```
A:ALA-48>config# show port-tree 7/1/1
    ifIndex  type, sonet-sdh-index (* = provisioned)
===========  ====================================
  119570432  Port, N/A *
  656441345      DS3, none *
  656441405          DS1, 1 *
  656441430          DS1, 2
  656441455          DS1, 3
  656441480          DS1, 4
  656441505          DS1, 5
  656441530          DS1, 6
  656441555          DS1, 7
  656441580          DS1, 8
  656441605          DS1, 9
  656441630          DS1, 10
  656441655          DS1, 11
  656441680          DS1, 12
  656441705          DS1, 13
  656441730          DS1, 14
  656441755          DS1, 15
  656441780          DS1, 16
  656441805          DS1, 17
  656441830          DS1, 18
  656441855          DS1, 19
  656441880          DS1, 20
  656441905          DS1, 21
  656441930          DS1, 22
  656441980          DS1, 24
  656442005          DS1, 25
  656442030          DS1, 26
```

```
  656442055          DS1, 27
  656442080          DS1, 28
A:ALA-48>config#
```

redundancy

Syntax **redundancy**

Context show

Description This command enables the context to show multi-chassis redundancy information.

multi-chassis

Syntax **multi-chassis all**
mult-chassis mc-lag peer *ip-address* [**lag** *lag-id*]
mult-chassis mc-lag [**peer** *ip-address* [**lag** *lag-id*]] **statistics**
mult-chassis sync [**peer** *ip-address*] [**detail**]
mult-chassis sync [**peer** *ip-address*] **statistics**

Context show>redundancy

Description This command displays multi-chassis redundancy information.

Parameters **all —** Displays all multi-chassis information.

mc-lag — Displays multi-chassis LAG information.

peer *ip-address* **—** Displays the address of the multi-chassis peer.

lag *lag-id* **—** Displays the specified LAG ID on this system that forms an multi-chassis LAG configuration with the indicated peer.

statistics — Displays statistics for the multi-chassis peer.

sync — Displays synchronization information.

detail — Displays detailed information.

Output See the following sections:

- Sample Output: show redundancy multi-chassis all
- Sample Output: show redundancy multi-chassis mc-lag peer <ip-address>
- Sample Output: show redundancy multi-chassis mc-lag statistics
- Sample Output: show redundancy multi-chassis mc-lag peer <ip-address> lag 2 statistics
- Sample Output: show redundancy multi-chassis mc-lag peer 10.10.10.102 statistics
- Sample Output: show redundancy multi-chassis sync
- Sample Output: show redundancy multi-chassis sync peer <ip-address>

- Sample Output: show redundancy multi-chassis sync peer <ip-address> detail
- Sample Output: show redundancy multi-chassis sync statistics
- Sample Output: show redundancy multi-chassis sync peer <ip-address> statistics

Sample Output: show redundancy multi-chassis all

```
A:pc1# show redundancy multi-chassis all
===============================================================================
Multi-Chassis Peers
===============================================================================
Peer IP          Src IP           Auth             Peer Admin
  MCS Admin        MCS Oper         MCS State        MC-LAG Admin    MC-LAG Oper
-------------------------------------------------------------------------------
10.10.10.102     10.10.10.101     hash             Enabled
  Enabled          Enabled          inSync           Enabled         Enabled
10.10.20.1       0.0.0.0          None             Disabled
  --               --               --               Disabled        Disabled
===============================================================================
A:pc1#
```

Sample Output: show redundancy multi-chassis mc-lag peer <ip-address>

```
*A:Dut-C# show redundancy multi-chassis mc-lag peer 10.10.10.1
===============================================================================
Multi-Chassis MC-Lag Peer 10.10.10.1
===============================================================================
Last State chg: 09/24/2007 07:58:03
Admin State: Up      Oper State   : Up
KeepAlive: 10 deci-seconds     Hold On Ngbr Failure : 3
-------------------------------------------------------------------------------
Lag Id Lacp Key Remote Lag Id System Id  Sys Prio Last State Changed
-------------------------------------------------------------------------------
1      326661      00:00:00:33:33:33  32888  09/24/2007 07:56:35
-------------------------------------------------------------------------------
Number of LAGs : 1
===============================================================================
*A:Dut-C#
```

Sample Output: show redundancy multi-chassis mc-lag statistics

```
A:pc1# show redundancy multi-chassis mc-lag statistics
===============================================================================
Multi-Chassis Statistics
===============================================================================
Packets Rx                        : 129816
Packets Rx Keepalive              : 129798
Packets Rx Config                 : 3
Packets Rx Peer Config            : 5
Packets Rx State                  : 10
Packets Dropped KeepaliveTask     : 0
Packets Dropped Packet Too Short  : 0
Packets Dropped Verify Failed     : 0
Packets Dropped Tlv Invalid Size  : 0
Packets Dropped Out of Seq        : 0
Packets Dropped Unknown Tlv       : 0
```

```
Packets Dropped Tlv Invalid LagId : 0
Packets Dropped MD5               : 0
Packets Dropped Unknown Peer      : 0
Packets Tx                        : 77918
Packets Tx Keepalive              : 77879
Packets Tx Config                 : 6
Packets Tx Peer Config            : 26
Packets Tx State                  : 7
Packets Tx Failed                 : 0
===============================================================================
A:pc1#
```

Sample Output: show redundancy multi-chassis mc-lag peer <ip-address> lag 2 statistics

```
A:pc1# show redundancy multi-chassis mc-lag peer 10.10.10.102 lag 2 statistics
===============================================================================
Multi-Chassis Statistics, Peer 10.10.10.102 Lag 2
===============================================================================
Packets Rx Config                 : 1
Packets Rx State                  : 4
Packets Tx Config                 : 2
Packets Tx State                  : 3
Packets Tx Failed                 : 0
===============================================================================
A:pc1#
```

Sample Output: show redundancy multi-chassis mc-lag peer 10.10.10.102 statistics

```
A:pc1#show redundancy multi-chassis mc-lag peer 10.10.10.102 statistics
===============================================================================
Multi-Chassis Statistics, Peer 10.10.10.102
===============================================================================
Packets Rx                        : 129918
Packets Rx Keepalive              : 129900
Packets Rx Config                 : 3
Packets Rx Peer Config            : 5
Packets Rx State                  : 10
Packets Dropped State Disabled    : 0
Packets Dropped Packets Too Short : 0
Packets Dropped Tlv Invalid Size  : 0
Packets Dropped Tlv Invalid LagId : 0
Packets Dropped Out of Seq        : 0
Packets Dropped Unknown Tlv       : 0
Packets Dropped MD5               : 0
Packets Tx                        : 77979
Packets Tx Keepalive              : 77940
Packets Tx Peer Config            : 26
Packets Tx Failed                 : 0
===============================================================================
A:pc1#
```

Sample Output: show redundancy multi-chassis sync

```
A:pc1# show redundancy multi-chassis sync
===============================================================================
```

```
Multi-chassis Peer Table
===============================================================================
Peer
-------------------------------------------------------------------------------
Peer IP Address         : 10.10.10.102
Description             : CO1
Authentication          : Enabled
Source IP Address       : 10.10.10.101
Admin State             : Enabled
-------------------------------------------------------------------------------
Sync-status
-------------------------------------------------------------------------------
Client Applications     :
Sync Admin State        : Up
Sync Oper State         : Up
DB Sync State           : inSync
Num Entries             : 0
Lcl Deleted Entries     : 0
Alarm Entries           : 0
Rem Num Entries         : 0
Rem Lcl Deleted Entries : 0
Rem Alarm Entries       : 0
===============================================================================
Peer
-------------------------------------------------------------------------------
Peer IP Address         : 10.10.20.1
Authentication          : Disabled
Source IP Address       : 0.0.0.0
Admin State             : Disabled
===============================================================================
A:pc1#
```

Sample Output: show redundancy multi-chassis sync peer <ip-address>

```
pc1# show redundancy multi-chassis sync peer 10.10.10.102
===============================================================================
Multi-chassis Peer Table
===============================================================================
Peer
-------------------------------------------------------------------------------
Peer IP Address         : 10.10.10.102
Description             : CO1
Authentication          : Enabled
Source IP Address       : 10.10.10.101
Admin State             : Enabled
-------------------------------------------------------------------------------
Sync-status
-------------------------------------------------------------------------------
Client Applications     :
Sync Admin State        : Up
Sync Oper State         : Up
DB Sync State           : inSync
Num Entries             : 0
Lcl Deleted Entries     : 0
Alarm Entries           : 0
Rem Num Entries         : 0
Rem Lcl Deleted Entries : 0
Rem Alarm Entries       : 0
```

```
===============================================================================
MCS Application Stats
===============================================================================
Application             : igmp
Num Entries             : 0
Lcl Deleted Entries     : 0
Alarm Entries           : 0
-------------------------------------------------------------------------------
Rem Num Entries         : 0
Rem Lcl Deleted Entries : 0
Rem Alarm Entries       : 0
-------------------------------------------------------------------------------
Application             : igmpSnooping
Num Entries             : 0
Lcl Deleted Entries     : 0
Alarm Entries           : 0
-------------------------------------------------------------------------------
Rem Num Entries         : 0
Rem Lcl Deleted Entries : 0
Rem Alarm Entries       : 0
-------------------------------------------------------------------------------
Application             : subMgmt
Num Entries             : 0
Lcl Deleted Entries     : 0
Alarm Entries           : 0
-------------------------------------------------------------------------------
Rem Num Entries         : 0
Rem Lcl Deleted Entries : 0
Rem Alarm Entries       : 0
-------------------------------------------------------------------------------
Application             : srrp
Num Entries             : 0
Lcl Deleted Entries     : 0
Alarm Entries           : 0
-------------------------------------------------------------------------------
Rem Num Entries         : 0
Rem Lcl Deleted Entries : 0
Rem Alarm Entries       : 0
===============================================================================
A:pc1#
```

Sample Output: show redundancy multi-chassis sync peer <ip-address> detail

```
A:pc1# show redundancy multi-chassis sync peer 10.10.10.102 detail
===============================================================================
Multi-chassis Peer Table
===============================================================================
Peer
-------------------------------------------------------------------------------
Peer IP Address         : 10.10.10.102
Description             : CO1
Authentication          : Enabled
Source IP Address       : 10.10.10.101
Admin State             : Enabled
-------------------------------------------------------------------------------
Sync-status
-------------------------------------------------------------------------------
Client Applications     :
```

```
Sync Admin State        : Up
Sync Oper State         : Up
DB Sync State           : inSync
Num Entries             : 0
Lcl Deleted Entries     : 0
Alarm Entries           : 0
Rem Num Entries         : 0
Rem Lcl Deleted Entries : 0
Rem Alarm Entries       : 0
===============================================================================
MCS Application Stats
===============================================================================
Application             : igmp
Num Entries             : 0
Lcl Deleted Entries     : 0
Alarm Entries           : 0
-------------------------------------------------------------------------------
Rem Num Entries         : 0
Rem Lcl Deleted Entries : 0
Rem Alarm Entries       : 0
-------------------------------------------------------------------------------
Application             : igmpSnooping
Num Entries             : 0
Lcl Deleted Entries     : 0
Alarm Entries           : 0
-------------------------------------------------------------------------------
Rem Num Entries         : 0
Rem Lcl Deleted Entries : 0
Rem Alarm Entries       : 0
-------------------------------------------------------------------------------
Application             : subMgmt
Num Entries             : 0
Lcl Deleted Entries     : 0
Alarm Entries           : 0
-------------------------------------------------------------------------------
Rem Num Entries         : 0
Rem Lcl Deleted Entries : 0
Rem Alarm Entries       : 0
-------------------------------------------------------------------------------
Application             : srrp
Num Entries             : 0
Lcl Deleted Entries     : 0
Alarm Entries           : 0
-------------------------------------------------------------------------------
Rem Num Entries         : 0
Rem Lcl Deleted Entries : 0
Rem Alarm Entries       : 0
===============================================================================
Ports synced on peer 10.10.10.102
===============================================================================
Port/Encap                    Tag
-------------------------------------------------------------------------------
1/1/1
  1-2                         r1
===============================================================================
A:pc1#
```

Sample Output: show redundancy multi-chassis sync statistics

```
A:pc1# show redundancy multi-chassis sync statistics
===============================================================================
Multi-chassis Peer Sync Stats
===============================================================================
Peer IP Address         : 10.10.10.102
Packets Tx Total        : 511
Packets Tx Hello        : 510
Packets Tx Data         : 0
Packets Tx Other        : 1
Packets Tx Error        : 0
Packets Rx Total        : 511
Packets Rx Hello        : 510
Packets Rx Data         : 0
Packets Rx Other        : 1
Packets Rx Error        : 0
Packets Rx Header Err   : 0
Packets Rx Body Err     : 0
Packets Rx Seq Num Err  : 0
-------------------------------------------------------------------------------
Peer IP Address         : 10.10.20.1
Packets Tx Total        : 0
Packets Tx Hello        : 0
Packets Tx Data         : 0
Packets Tx Other        : 0
Packets Tx Error        : 0
Packets Rx Total        : 0
Packets Rx Hello        : 0
Packets Rx Data         : 0
Packets Rx Other        : 0
Packets Rx Error        : 0
Packets Rx Header Err   : 0
Packets Rx Body Err     : 0
Packets Rx Seq Num Err  : 0
===============================================================================
A:pc1#
```

Sample Output: show redundancy multi-chassis sync peer <ip-address> statistics

```
A:pc1# show redundancy multi-chassis sync peer 10.10.10.102 statistics
===============================================================================
Multi-chassis Peer Sync Stats
===============================================================================
Peer IP Address         : 10.10.10.102
Packets Tx Total        : 554
Packets Tx Hello        : 553
Packets Tx Data         : 0
Packets Tx Other        : 1
Packets Tx Error        : 0
Packets Rx Total        : 554
Packets Rx Hello        : 553
Packets Rx Data         : 0
Packets Rx Other        : 1
Packets Rx Error        : 0
Packets Rx Header Err   : 0
Packets Rx Body Err     : 0
Packets Rx Seq Num Err  : 0
===============================================================================
A:pc1#
```

mc-lag

Syntax **mac-lag peer** *ip-address* [**lag** *lag-id*]
mac-lag [**peer** *ip-address* [**lag** *lag-id*]] **statistics**

Context show>redundancy>multi-chassis

Description This command displays multi-chassis LAG information.

Output

Sample Output: show redundancy multi-chassis mc-lag peer <ip-address>

```
*A:Dut-B# show redundancy multi-chassis mc-lag peer 10.20.1.2
===============================================================================
Multi-Chassis MC-Lag Peer 10.20.1.2
===============================================================================
Last State chg : 05/17/2009 19:31:58
Admin State : Up Oper State : Up
KeepAlive : 5 deci-seconds Hold On Ngbr Failure : 2
-------------------------------------------------------------------------------
Lag Id Lacp Remote Source Oper System Id Sys Last State Changed
Key Lag Id MacLSB MacLSB Prio
-------------------------------------------------------------------------------
1 40000 1 Lacp 9c:40 00:02:80:01:00:01 100 05/17/2009 19:31:56

*A:Dut-B# /tools dump redundancy src-bmac-lsb
Src-bmac-lsb: 1025 (04-01) User: B-Vpls - 1 service(s)
Services affected:
B-Vpls: 1
B-Vpls: 2
```

mc-ring

Syntax **mc-ring peer** *ip-address* **statistics**
mc-ring peer *ip-address* [**ring** *sync-tag* [**detail**|**statistics**]]
mc-ring peer *ip-address* **ring** *sync-tag* **ring-node** [*ring-node-name* [**detail**|**statistics**]]
mc-ring global-statistics

Context show>redundancy>multi-chassis

Description This command displays multi-chassis ring information.

Parameters *ip-address* — Specifies the address of the multi-chassis peer to display.

ring *sync-tag* **—** Specifies a synchronization tag to be displayed that was used while synchronizing this port with the multi-chassis peer.

node *ring-node-name* **—** Specifies a ring-node name.

global-statistics — Displays global statistics for the multi-chassis ring.

detail — Displays detailed peer information for the multi-chassis ring.

Output See the following sections:

- Output Fields: show redundancy multi-chassis mc-ring peer <ip-address> ring
- Sample Output: show redundancy multi-chassis mc-ring peer <ip-address> ring <sync-tag> detail
- Output Fields: show redundancy multi-chassis mc-ring peer <ip-address> statistics
- Sample Output: show redundancy multi-chassis mc-ring peer <ip-address> statistics
- Output Fields: show redundancy multi-chassis mc-ring ring-node
- Output Fields: show redundancy multi-chassis mc-ring global-statistics
- Sample Output: show redundancy multi-chassis mc-ring global-statistics

Output Fields: show redundancy multi-chassis mc-ring peer <ip-address> ring

Table 75 describes the output fields for the **show redundancy multi-chassis mc-ring peer <ip-address> ring** command.

Table 75 **Output Fields: show redundancy multi-chassismc-ring peer <ip-address> ring**

Label	Description
Sync Tag	Displays the synchronization tag that was used while synchronizing this port with the multi-chassis peer.
Oper State	noPeer — The peer has no corresponding ring configured.
	connected — The in-band control connection with the peer is operational.
	broken — The in-band control connection with the peer has timed out.
	conflict — The in-band control connection with the peer has timed out but the physical connection is still OK; the failure of the in-band signaling connection is caused by a misconfiguration. For example, a conflict between the configuration of this system and its peer, or a misconfiguration on one of the ring access node systems.
	testingRing — The in-band control connection with the peer is being set up. Waiting for result.
	waitingForPeer — Verifying if this ring is configured on the peer.
	configErr — The ring is administratively up, but a configuration error prevents it from operating properly.
	halfBroken — The in-band control connection indicates that the ring is broken in one direction (towards the peer).
	localBroken — The in-band control connection with the peer is known to be broken due to local failure or local administrative action.
	shutdown — The ring is shutdown.
Failure Reason	Displays the failure reason.

Table 75 **Output Fields: show redundancy multi-chassismc-ring peer <ip-address> ring**

Label	Description (Continued)
Last Debounce	Displays the last time that the debounce mechanism (protecting the router from overload situations in case of a flapping ring) was activated.
Debounce Period	Displays the duration that the debounce mechanism was in action since the “Last Debounce”.

Sample Output: show redundancy multi-chassis mc-ring peer <ip-address> ring <sync-tag> detail

```
*A:ALA-48# show redundancy multi-chassis mc-ring peer 10.0.0.2 ring ring11 detail
===============================================================================
Multi-Chassis MC-Ring Detailed Information
===============================================================================
Peer           : 10.0.0.2
Sync Tag       : ring11
Port ID        : 1/1/3
Admin State    : inService
Oper State     : connected
Admin Change   : 01/07/2008 21:40:07
Oper Change    : 01/07/2008 21:40:24
Last Debounce  : 02/15/2008 09:28:42
Debounce Period: 0d 00:00:00
Failure Reason : None
-------------------------------------------------------------------------------
In Band Control Path
-------------------------------------------------------------------------------
Service ID     : 10
Interface Name : to_an1
Oper State     : connected
Dest IP        : 10.10.0.2
Src  IP        : 10.10.0.1
-------------------------------------------------------------------------------
VLAN Map B Path Provisioned
-------------------------------------------------------------------------------
range 13-13
range 17-17
-------------------------------------------------------------------------------
VLAN Map Excluded Path Provisioned
-------------------------------------------------------------------------------
range 18-18
-------------------------------------------------------------------------------
VLAN Map B Path Operational
-------------------------------------------------------------------------------
range 13-13
range 17-17
-------------------------------------------------------------------------------
VLAN Map Excluded Path Operational
-------------------------------------------------------------------------------
range 18-18
===============================================================================
*A:ALA-48#
```

```
*A:ALA-48>show>redundancy>multi-chassis# mc-ring peer 192.251.10.104
===============================================================================
MC Ring entries
===============================================================================
Sync Tag                        Oper State      Failure Reason
-------------------------------------------------------------------------------
No. of MC Ring entries: 0
===============================================================================
*A:ALA-48#


*A:ALA-48# show redundancy multi-chassis mc-ring peer 10.0.0.2
===============================================================================
MC Ring entries
===============================================================================
Sync Tag                        Oper State      Failure Reason
-------------------------------------------------------------------------------
ring11                          connected       None
ring12                          shutdown        None
-------------------------------------------------------------------------------
No. of MC Ring entries: 4
===============================================================================
*A:ALA-48#


*A:ALA-48# show redundancy multi-chassis mc-ring peer 10.0.0.2 ring ring11 ring-
node an1 detail
===============================================================================
Multi-Chassis MC-Ring Node Detailed Information
===============================================================================
Peer           : 10.0.0.2
Sync Tag       : ring11
Node Name      : an1
Oper State Loc : connected
Oper State Rem : notTested
In Use         : True
Admin Change   : 01/07/2008 21:40:07
Oper Change    : 01/07/2008 21:40:25
Failure Reason : None
-------------------------------------------------------------------------------
Ring Node Connectivity Verification
-------------------------------------------------------------------------------
Admin State    : inService
Service ID     : 11
VLAN Tag       : 11
Dest IP        : 10.11.3.1
Src  IP        : None
Interval       : 1 minutes
Src MAC        : None
===============================================================================
*A:ALA-48#


*A:ALA-48# show redundancy multi-chassis mc-ring peer 10.0.0.2 ring ring11 ring-node
===============================================================================
MC Ring Node entries
===============================================================================
Name                            Loc Oper St.      Failure Reason
  In Use                          Rem Oper St.
```

```
-------------------------------------------------------------------------------
an1                              connected         None
  Yes                              notTested
an2                              connected         None
  Yes                              notTested
-------------------------------------------------------------------------------
No. of MC Ring Node entries: 2
===============================================================================
*A:ALA-48#
```

Output Fields: show redundancy multi-chassis mc-ring peer <ip-address> statistics

Table 76 describes the output fields for the **show redundancy multi-chassismc-ring peer <ip-address> statistics** command.

Table 76 **Output Fields: show redundancy multi-chassis mc-ring peer <ip-address> statistics**

Label	Description
Message	Displays the message type.
Received	Indicates the number of valid MC-Ring signaling messages received from the peer.
Transmitted	Indicates the number of valid MC-Ring signaling messages transmitted from the peer.
MCS ID Request	Displays the number of valid MCS ID requests were received from the peer.
MCS ID Response	Displays the number of valid MCS ID responses were received from the peer.
Ring Exists Request	Displays the number of valid 'ring exists' requests were received from the peer.
Ring Exists Response	Displays the number of valid ring exists' responses were received from the peer.
Keepalive	Displays the number of valid MC-Ring control packets of type 'keepalive' were received from the peer.

Sample Output: show redundancy multi-chassis mc-ring peer <ip-address> statistics

```
*A:ALA-48>show>redundancy>multi-chassis# mc-ring peer 192.251.10.104 statistics
===============================================================================
MC Ring statistics for peer 192.251.10.104
===============================================================================
Message                                          Received     Transmitted
-------------------------------------------------------------------------------
MCS ID Request                                   0            0
MCS ID Response                                  0            0
```

```
Ring Exists Request                                    0            0
Ring Exists Response                                   0            0
Keepalive                                              0            0
-------------------------------------------------------------------------------
Total                                                  0            0
===============================================================================
*A:ALA-48>show>redundancy>multi-chassis#
```

Output Fields: show redundancy multi-chassis mc-ring ring-node

Table 77 describes the output fields for the mc-ring ring-node command.

Table 77 **Output Fields: Show redundancy multi-chassis mc-ring ring-node**

Label	Description
Oper State	Displays the state of the connection verification (both local and remote).
	notProvisioned — Connection verification is not provisioned.
	configErr — Connection verification is provisioned but a configuration error prevents it from operating properly.
	notTested — Connection verification is administratively disabled or is not possible in the current situation.
	testing — Connection Verification is active, but no results are yet available.
	connected — The ring node is reachable.
	disconnected — Connection verification has timed out.
In Use	Displays “True” if the ring node is referenced on an e-pipe or as an inter-dest-id on a static host or dynamic lease.

Output Fields: show redundancy multi-chassis mc-ring global-statistics

Table 78 describes the output fields for the **show redundancy multi-chassis mc-ring global statistics** command.

Table 78 **Output Fields: show redundancy multi-chassis mc-ring global-statistics**

Label	Description
Rx	Displays the number of MC-ring signaling packets were received by this system.

Table 78 **Output Fields: show redundancy multi-chassis mc-ring global-statistics (Continued)**

Label	Description (Continued)
Rx Too Short	Displays the number of MC-ring signaling packets were received by this system that were too short.
Rx Wrong Authentication	Displays the number of MC-ring signaling packets were received by this system with invalid authentication.
Rx Invalid TLV	Displays the number of MC-ring signaling packets were received by this system with invalid TLV.
Rx Incomplete	Displays the number of MC-ring signaling packets were received by this system that were incomplete.
Rx Unknown Type	Displays the number of MC-ring signaling packets were received by this system that were of unknown type.
Rx Unknown Peer	Displays the number of MC-ring signaling packets were received by this system that were related to an unknown peer.
Rx Unknown Ring	Displays the number of MC-ring signaling packets were received by this system that were related to an unknown ring.
Rx Unknown Ring Node	Displays the number of MC-ring signaling packets were received by this system that were related to an unknown ring node.
Tx	Displays the number of MC-ring signaling packets were transmitted by this system.
Tx No Buffer	Displays the number of MC-ring signaling packets could not be transmitted by this system due to a lack of packet buffers.
Tx Transmission Failed	Displays the number of MC-ring signaling packets could not be transmitted by this system due to a transmission failure.
Tx Unknown Destination	Displays the number of MC-ring 'unknown destination' signaling packets were transmitted by this system.
Missed Configuration Events	Displays the number of missed configuration events on this system.
Missed BFD Events	Displays the number of missed BFD events on this system.

Sample Output: show redundancy multi-chassis mc-ring global-statistics

```
*A:ALA-48>show>redundancy>multi-chassis# mc-ring global-statistics
===============================================================================
Global MC Ring statistics
===============================================================================
Rx                              : 0
```

```
Rx Too Short                : 0
Rx Wrong Authentication     : 0
Rx Invalid TLV              : 0
Rx Incomplete               : 0
Rx Unknown Type             : 0
Rx Unknown Peer             : 0
Rx Unknown Ring             : 0
Rx Unknown Ring Node        : 0
Tx                          : 36763
Tx No Buffer                : 0
Tx Transmission Failed      : 0
Tx Unknown Destination      : 0
Missed Configuration Events : 0
Missed BFD Events           : 0
===============================================================================
*A:ALA-48>show>redundancy>multi-chassis#
```

ethernet

Syntax **ethernet**

Context show>system

Description This command enables the context to display system-specific Ethernet information.

efm-oam

Syntax **efm-oam**

Context show>system>ethernet

Description This command displays a system-level summary for EFM-OAM enabled ports. It includes the configuration, action, various states, and soft reset precedence for the protocol.

Output The following output is an example of EFM-OAM summary information.

Sample Output

```
show system ethernet efm-oam
===============================================================================
System Configuration
===============================================================================
Grace Tx Enable             : False
Dying Gasp On Reset         : Disabled
===============================================================================
Active Port Configuration & State Summary
===============================================================================
Fault Header:
  LinkMonitor: F = Frame, FP = Period, FS = Summary, SP = Symbol
  LocalSfAct : CE = Critical, DG = Dying Gasp, EV = Event, PT = Port
  PeerRDIRx  : CE = Critical, DG = Dying Gasp, LF = Link, EV = Event
  Table Legend
```

```
  - = Not Configured, c = Configured, * = SF Active, s = Shutdown, l = Log Only
Soft Reset Header:
  Gasp :  T = True, F = False  (A = active, I = inactive)
  Grace:  T = True, F = False  (A = active, I = inactive)
  SR (Action on Soft Reset):  - = None, DG = Dying Gasp, G = Grace TLV
TF (Trigger-Fault):
  - = Not configured, DG = Dying Gasp,  CE = Critical Event
===============================================================================
Port        States  LinkMonitor LocalSfAct    PeerRdiRx     SoftReset    TF
            EFM LM  F FP FS SP  CE DG EV PT  CE DG LF EV  Gasp Grace SR
-------------------------------------------------------------------------------
1/1/1       Up  Dn  - -  -  -   -  -  -  s   s  s  s  l   T(I) T(I)  -   -
1/1/6       Dn  Dn  - -  -  -   -  -  -  s   s  s  s  l   T(I) T(I)  -   -
-------------------------------------------------------------------------------
No. of ports EFM enabled: 2
===============================================================================
```

lldp

Syntax **lldp** [**neighbor**] *neighbor*

Context show>system

Description This command displays local Link Layer Discovery Protocol (LLDP) information at the system level. This includes an option to display summary information for all known peers.

Parameters **neighbor —** Display all peer summary information.

Output The following output is an example of local LLDP information.

Sample Output: show system lldp

```
show system lldp
===============================================================================
LLDP Configuration
===============================================================================
Transmit Interval      : 30
Hold Multiplier        : 4
Reinit Delay           : 2
Notification Interval  : 5
Tx Credit Max          : 5
Message Fast Tx        : 1
Message Fast Tx Init   : 4
Admin Enabled          : True

-------------------------------------------------------------------------------
LLDP System Information
-------------------------------------------------------------------------------
Chassis Id Subtype     : 4
Chassis Id             : d8:1f:ff:00:00:00
System Name            : cses-V31
System Description     : TiMOS-B-0.0.I4269 both/i386 Nokia 7750 SR Copyright
                         (c) 2000-2016 Nokia.
                         All rights reserved. All use subject to applicable
                         license agreements.
```

```
                        Built on Wed Dec 3 19:14:27 PST 2014 by builder in /
                        rel0.0/I4269/panos/main
Capabilities Supported : bridge router
Capabilities Enabled   : bridge router

-------------------------------------------------------------------------------
LLDP Destination Addresses
-------------------------------------------------------------------------------
Index 1                : 01:80:c2:00:00:0e
Index 2                : 01:80:c2:00:00:03
Index 3                : 01:80:c2:00:00:00

-------------------------------------------------------------------------------
LLDP Remote Statistics
-------------------------------------------------------------------------------
Last Change Time       : 12/08/2014 21:34:48
Rem Table Inserts      : 10
Rem Table Deletes      : 1
Rem Table Drops        : 0
Rem Table Ageouts      : 3

-------------------------------------------------------------------------------
LLDP System Management Addresses
-------------------------------------------------------------------------------
Address SubType        : 1 (IPv4)
Address                : 1.1.1.31
Address If SubType     : 2
Address If Id          : 1
Address OID            : .1.3.6.1.4.1.6527.1.3.3
Address SubType        : 2 (IPv6)
Address                : 2001:dead:beef::31
Address If SubType     : 2
Address If Id          : 1
Address OID            : .1.3.6.1.4.1.6527.1.3.3

===============================================================================

show system lldp neighbor

Link Layer Discovery Protocol (LLDP) System Information
===============================================================================
NB = nearest-bridge   NTPMR = nearest-non-tpmr   NC = nearest-customer
===============================================================================
Lcl Port  Scope  Remote Chassis ID   Index  Remote Port     Remote System Name
-------------------------------------------------------------------------------
1/1/4     NB     D8:1D:FF:00:00:00   1      1/1/5           cses-v29
1/1/6     NB     D8:1D:FF:00:00:00   2      1/1/7           cses-v29
1/2/2     NB     D8:1F:FF:00:00:00   3      1/1/1           cses-v31
1/2/1     NB     D8:1E:FF:00:00:00   4      1/1/1           cses-v30
1/2/3     NB     D8:20:FF:00:00:00   5      1/1/1           cses-v32
1/2/4     NB     D8:21:FF:00:00:00   6      1/1/1           cses-V33
===============================================================================
Number of neighbors : 6
```

switch-fabric

Syntax **switch-fabric** [**exclude-sfm** *sfm-list*]
switch-fabric high-bandwidth-multicast

Context show>system

Description This command displays switch fabric information.

Parameters *sfm-list* — Specifies which SFMs to exclude from the displayed information.

Values “A”, “B”, “A,B”, “1”, “2”, and “1,2”

high-bandwidth-multicast — Displays MDA information about the switch-fabric plane’s high bandwidth multicast traffic tap allocation.

Output The following table describes switch-fabric output fields for 12-slot and 7-slot chassis models.

Table 79 **Switch fabric output**

Label	Description
Slot/MDA	Displays the fabric slot within a chassis in the system. The CPM cards and XCM/IOM cards cannot be physically inserted into the switch fabric card slots.
Min. Forwarding Capacity	Displays the minimum forwarding capacity of the slot and XMA/ MDA as a percentage.
Max. Forwarding Capacity	Displays the maximum forwarding capacity of the slot and XMA/ MDA as a percentage.

Sample Output

```
A:SR-12# show system switch-fabric high-bandwidth-multicast
===============================================================================
Switch Fabric
===============================================================================
Slot/Mda    Min Fwd Cap  Max Fwd Cap  Hi-Bw-Mcast    Mcast Hi  Mcast Low Group
-------------------------------------------------------------------------------
 3/1        100%         100%         Yes            #15#      #1#       1
 4/1        100%         100%         No             3         4         0
 4/2        100%         100%         No             1         2         0
 8/1        100%         100%         Yes            #15#      #1#       2
 A          100%         100%         No             0         0         0
 B          100%         100%         No             0         0         0
===============================================================================
```

2.26.2.5 Multilink Bundle Show Commands

The following multilink bundle show commands apply to the 7450 ESS and 7750 SR only:

multilink-bundle

Syntax **multilink-bundle** [*bundle-id* | *slot/mda* | **type** {**mlppp** | **ima-grp** | **mlfr**}] [**detail**]
multilink-bundle {*bundle-id* | *slot/mda*} [**ppp** | **ima** | **mlfr**]
multilink-bundle *bundle-id* **relations**
multilink-bundle *bundle-id* **ppp** [**multiclass**]
multilink-bundle *bundle-id* **mlfr** [**frame-relay** [**detail**]]

Context show

Description This command displays multilink bundle information. An operator can display:

- All bundles on the system/MDA or all bundles of a given type on the system by specifying the value of type filter to be either mlppp, mlfr or ima-grp.
- Bundle specific information in summary (no detail option) or detailed format (detail option specified) for one or more bundles
- Protocol specific information (example PPP or IMA) for the specified bundle
- ATM interface information for IMA groups see **show port atm** command for more details

Parameters *bundle-id* — Specifies the multilink (PPP, MLFR or IMA) bundle to be associated with this IP interface. The command syntax must be used as follows:

Syntax: bundle-*type-slot/mda.bundle-num*
bpgrp-*type-bpgrp-num*
bundle-ppp-*slot/mda.bundle-num* (Creates a multilink PPP bundle.)
bundle-ima-*slot/mda.bundle-num* (Creates an IMA group bundle.)

bundle-fr-slot/mda.bundle-num (Creates an MLFR group bundle.)
bundle:
slot: IOM/MDA slot numbers
bundle-num: 1 to 128

ppp — Displays PPP bundle information.

ima, ima-grp — Displays IMA-type groups.

mlfr — Displays bundle MLFR information, or used to display MLFR-type groups.

mlppp — Display MLPPP-type groups.

detail — Provides detailed information.

relations — Displays the working and protection bundles associated with this bundle-id.

Output See the following sections:

- Output Fields: show multilink-bundle

• Sample Output: show multilink-bundle
• Sample Output: show multilink-bundle detail
• Sample Output: show multilink-bundle ima-grp
• Sample Output: show multilink-bundle <bundle-id> (showing PPP)
• Sample Output: show multilink-bundle <bundle-id> detail (showing Frame Relay)

Output Fields: show multilink-bundle

Table 80 describes the output fields for the **show multilink-bundle** command.

Table 80 **Output Fields: show multilink-bundle**

Label	Description
Type	Specifies the type of this multilink bundle. mlppp — Indicates that the bundle is of type MLPPP. ima — Indicates that the bundle is of type IMA group.
Admin State	Up — The bundle is administratively up.
	Down — The bundle is administratively down.
Oper State	Up — The bundle is operationally up.
	Down — The bundle is operationally down.
Port State	Displays the state level of the port.
	none — Indicates that the port is either in its initial creation state or is just about to be deleted.
	ghost — No member links are configured as part of this bundle.
	down — All member links are in “none”, “ghost”, or “down” state.
	linkUp — At least one member link is in port state “link up” but the bundle protocol is not yet operationally up (due to bundle protocol still coming up. For example, due to insufficient number of member links in “link up” state yet or to bundle being shut down.
	Up — Indicates that the bundle is ready to pass some kinds of traffic as the bundle protocol has come up (at least “minimum links” member links are in the port state up and the bundle protocol is up.)
Min Links Minimum Links	Displays the minimum number of links that must be active for a bundle to be active. If the number of active links drop below the given minimum then the multilink bundle will transition to an operation down state.
Bundle IfIndex	Displays the bundle’s interface index number which reflects its initialization sequence.
Total Links	Displays the total number of member links configured for this bundle.
Active Links	Displays the total number of active links for the bundle.

Table 80 **Output Fields: show multilink-bundle (Continued)**

Label	Description (Continued)
Description	Displays configured description for this bundle.
Bundle Id	Displays the **port ID** for this bundle.
Red Diff Delay	Displays the maximum acceptable differential delay for individual circuits within this multilink bundle. If the delay exceeds this threshold, a trap is issued. The differential delay is calculated as the round-trip differential delay for MLPPP bundles, and as uni-directional differential delay for IMA bundles.
Fragment Threshold	Displays configured fragment threshold value for this bundle.
Up Time	Displays time elapsed since the last bundle transition to Up when part of bundle information. Displays time elapsed since the last link transition to active when part of member information.
Bandwidth	Displays bandwidth configured for this IMA bundle in Kbytes.
Primary Port Member	Displays the portId of the IMA group member chosen as a Primary Port.
Member Port Id	Displays portId of each member of this bundle.
Admin	Displays administrative port status of a member link.
Oper	Displays operational port status of a member link.
Active	Displays whether a member link is active or not.
Down Reason	Displays the reason for why a member link is not active.
Traffic and Port statistics	The traffic and port statistics information displayed for bundles when detail option is selected is the same as information displayed for physical ports.

Sample Output: show multilink-bundle

```
A:timetra-sim110# show multilink-bundle
===============================================================================
Bundle Summary
===============================================================================
Bundle               Type    Admin     Oper      Port      Min    Total/
Id                           State     State     State     Links  Active Links
-------------------------------------------------------------------------------
bundle-ppp-1/1.1     mlppp   Down      Down      Ghost     1      0/0
bundle-ima-1/1.2     ima     Down      Down      Link Up   1      1/0
-------------------------------------------------------------------------------
Bundles : 2
===============================================================================
A:timetra-sim110#
```

Sample Output: show multilink-bundle detail

```
*A:timetra-44-cpm2# show multilink-bundle detail
===============================================================================
Description        : MultiLink Bundle
Bundle Id          : bundle-ppp-1/1.1   Type               : mlppp
Admin Status       : up                 Oper Status        : down
Minimum Links      : 1                  Bundle IfIndex     : 572522497
Total Links        : 3                  Active Links       : 0
Red Diff Delay     : 0                  Yellow Diff Delay  : 0
Red Diff Delay Act : none               MRRU               : 1524
Short Sequence     : true               Oper MRRU          : 1524
Oper MTU           : 1526               Fragment Threshold : 128 bytes
Up Time            : N/A                Bandwidth          : 0 KBit
PPP Input Discards : 0                  Primary Member Port: 1/1/1.1.1.1.1.1.1
Mode               : access
Interleave-Frag    : false
-------------------------------------------------------------------------------
Member Port Id              #TS   Admin  Oper  Act  Down Reason       Up Time
-------------------------------------------------------------------------------
1/1/1.1.1.1.1.1             12     up     up   no    oper down          N/A
1/1/1.1.1.1.1.2             12     up     up   no    oper down          N/A
1/1/1.1.1.1.1.3             12     up     up   no    oper down          N/A
===============================================================================
Traffic Statistics
===============================================================================
Input                Output
-------------------------------------------------------------------------------
Octets                                          0                         0
Packets                                         0                         0
Errors                                          0                         0

===============================================================================
Port Statistics
===============================================================================
                                                    Input                Output
-------------------------------------------------------------------------------
Packets                                             0                         0
Discards                                            0                         0
Unknown Proto Discards                              0
===============================================================================
*A:timetra-44-cpm2#
```

Sample Output: show multilink-bundle ima-grp

```
A:timetra-sim110# show multilink-bundle type ima-grp
===============================================================================
Bundle Summary
===============================================================================
Bundle               Type    Admin     Oper      Port      Min    Total/
Id                           State     State     State     Links  Active Links
-------------------------------------------------------------------------------
bundle-ima-1/1.2     ima     Down      Down      Link Up   1      1/0
-------------------------------------------------------------------------------
Bundles : 1
===============================================================================
A:timetra-sim110#
```

Sample Output: show multilink-bundle <bundle-id> (showing PPP)

```
A:timetra-sim110# show multilink-bundle bundle-ppp-1/1.1
===============================================================================
Bundle Summary
===============================================================================
Bundle                Type    Admin     Oper      Port      Min    Total/
Id                            State     State     State     Links  Active Links
-------------------------------------------------------------------------------
bundle-ppp-1/1.1      mlppp   Down      Down      Ghost     1      0/0
-------------------------------------------------------------------------------
Bundles : 1
===============================================================================
A:timetra-sim110#


A:timetra-sim110# show multilink-bundle bundle-ppp-1/1.1 detail
===============================================================================
Bundle bundle-ppp-1/1.1 Detail
===============================================================================
Description        : MultiLink Bundle
Bundle Id          : bundle-ppp-1/1.1   Type               : mlppp
Admin Status       : down               Oper Status        : down
Minimum Links      : 1                  Bundle IfIndex     : 555745281
Total Links        : 0                  Active Links       : 0
Red Diff Delay     : 0                  Yellow Diff Delay  : 0
Red Diff Delay Act : none               MRRU               : 1524
Short Sequence     : false              Oper MRRU          : 1524
Oper MTU           : 1522               Fragment Threshold : 128 bytes
Up Time            : N/A                Bandwidth          : 0 KBit
PPP Input Discards : 0                  Primary Member Port: None
Interleave-Frag    : false
===============================================================================
Traffic Statistics
===============================================================================
                                                      Input                 Output
-------------------------------------------------------------------------------
Octets                                                    0                     0
Packets                                                   0                     0
Errors                                                    0                     0
===============================================================================
Port Statistics
===============================================================================
                                                      Input                 Output
-------------------------------------------------------------------------------
Unicast Packets                                           0                     0
Multicast Packets                                         0                     0
Broadcast Packets                                         0                     0
Discards                                                  0                     0
nown Proto Discards                                       0
===============================================================================
A:timetra-sim110#
```

Sample Output: show multilink-bundle <bundle-id> detail (showing Frame Relay)

```
*A:Cpm-A>config>port#  show multilink-bundle

===============================================================================
Bundle Summary
===============================================================================
```

```
Bundle                Type    Admin     Oper      Port      Min    Total/
Id                            State     State     State     Links  Active Links
-------------------------------------------------------------------------------
bundle-fr-1/1.1       mlfr    Down      Down      Ghost     1      0/0
-------------------------------------------------------------------------------
Bundles : 1
===============================================================================
Bundle Summary
===============================================================================
Bundle                Type    Admin     Oper      Port      Min    Total/
Id                            State     State     State     Links  Active Links
-------------------------------------------------------------------------------
bundle-fr-1/1.1       mlfr    Down      Down      Ghost     1      0/0
-------------------------------------------------------------------------------
Bundles : 1
===============================================================================
*A:Cpm-A> show multilink-bundle bundle-fr-1/1.1 detail
===============================================================================
Bundle bundle-fr-1/1.1 Detail
===============================================================================
Description        : MultiLink Bundle
Bundle Id          : bundle-fr-1/1.1    Type               : mlfr
Admin Status       : down               Oper Status        : down
Minimum Links      : 1                  Bundle IfIndex     : 572530689
Total Links        : 0                  Active Links       : 0
Red Diff Delay     : 0                  Yellow Diff Delay  : 0
Red Diff Delay Act : none               MRRU               : N/A
Short Sequence     : N/A                Oper MRRU          : N/A
Oper MTU           : 0                  Fragment Threshold : 128 bytes
Up Time            : N/A                Bandwidth          : 0 KBit
PPP Input Discards : N/A                Primary Member Port: None
Mode               : access
Interleave-Frag    : N/A

===============================================================================
Traffic Statistics
===============================================================================
                                                    Input                 Output
-------------------------------------------------------------------------------
Octets                                                 0                      0
Packets                                                0                      0
Errors                                                 0                      0

===============================================================================
Port Statistics
===============================================================================
Input                 Output
-------------------------------------------------------------------------------
Unicast Packets                                        0                      0
Multicast Packets                                      0                      0
Broadcast Packets                                      0                      0
Discards                                               0                      0
Unknown Proto Discards                                 0
===============================================================================
*A:Cpm-A> show multilink-bundle bundle-fr-1/1.1 mlfr frame-relay

===============================================================================
Frame Relay Info for bundle-fr-1/1.1
===============================================================================
```

```
Mode                    : dte           LMI Type                : itu
FR Interface Status     : fault
N391 DTE                : 6             N392 DCE                : 3
N392 DTE                : 3             N393 DCE                : 4
N393 DTE                : 4             T392 DCE                : 15
T391 DTE                : 10
Tx Status Enquiry       : 0             Rx Status Enquiry       : 0
Rx Status Messages      : 0             Tx Status Messages      : 0
Status Message Timeouts : 0             Status Enquiry Timeouts : 0
Discarded Messages      : 0             Inv. RxSeqNum Messages  : 0
===============================================================================
Service Access Points(SAP)
===============================================================================
Service Id         : 39
SAP                : 1/1/2.3.5.2.2:18         Encap             : frRel
Description        : Default sap description for service id 39
Admin State        : Up                       Oper State        : Up
Flags              : None
Multi Svc Site     : None
Last Status Change : 12/02/2008 20:48:17
Last Mgmt Change   : 12/02/2008 20:46:38
Sub Type           : regular
Split Horizon Group: (Not Specified)

Admin MTU          : 4474                     Oper MTU          : 4474
Ingr IP Fltr-Id    : n/a                      Egr IP Fltr-Id    : n/a
Ingr Mac Fltr-Id   : n/a                      Egr Mac Fltr-Id   : n/a
Ingr IPv6 Fltr-Id  : n/a                      Egr IPv6 Fltr-Id  : n/a
tod-suite          : None                     qinq-pbit-marking : both
Ing Agg Rate Limit : max                      Egr Agg Rate Limit: max
Endpoint           : N/A

FRF-12             : Disabled
Acct. Pol          : None                     Collect Stats     : Disabled

-------------------------------------------------------------------------------

FRF12 on channel where sap resides:

===============================================================================
Service Access Points(SAP)
===============================================================================
Service Id         : 1
SAP                : 1/1/1.3.7.4.1:16         Encap             : frRel
Description        : sap-1-88.10.131.1
Admin State        : Up                       Oper State        : Up
Flags              : None
Multi Svc Site     : None
Last Status Change : 12/02/2008 20:48:15
Last Mgmt Change   : 12/02/2008 20:46:36
Sub Type           : regular
Split Horizon Group: (Not Specified)
Admin MTU          : 9194                     Oper MTU          : 9194
Ingr IP Fltr-Id    : n/a                      Egr IP Fltr-Id    : n/a
Ingr Mac Fltr-Id   : n/a                      Egr Mac Fltr-Id   : n/a
Ingr IPv6 Fltr-Id  : n/a                      Egr IPv6 Fltr-Id  : n/a
tod-suite          : None                     qinq-pbit-marking : both
Ing Agg Rate Limit : max                      Egr Agg Rate Limit: max
```

```
FRF-12 (I/F)       : Enabled
Scheduling Class   : 0
Acct. Pol          : None                    Collect Stats     : Disabled
Anti Spoofing      : None                    Avl Static Hosts  : 0
                                             Tot Static Hosts  : 0
Calling-Station-Id : n/a
Application Profile: None
-------------------------------------------------------------------------------

FRF12 ETE on sap capable of supporting it:

===============================================================================
      Service Access Points(SAP)
===============================================================================
  Service Id         : 1
SAP                : 1/1/1.1:16              Encap             : frRel
Description        : (Not Specified)
Admin State        : Up                      Oper State        : Up
Flags              : None
Multi Svc Site     : None
Last Status Change : 12/02/2008 20:48:12
Last Mgmt Change   : 12/02/2008 20:46:36
Sub Type           : regular
Split Horizon Group: (Not Specified)

Admin MTU          : 9194                    Oper MTU          : 9194
Ingr IP Fltr-Id    : n/a                     Egr IP Fltr-Id    : n/a
Ingr Mac Fltr-Id   : n/a                     Egr Mac Fltr-Id   : n/a
Ingr IPv6 Fltr-Id  : n/a                     Egr IPv6 Fltr-Id  : n/a
tod-suite          : None                    qinq-pbit-marking : both
Ing Agg Rate Limit : max                     Egr Agg Rate Limit: max

FRF-12 (ETE)       : Enabled                 Ete-Frag-Threshold: 128
Scheduling Class   : 3
Acct. Pol          : None                    Collect Stats     :
Disabled
Anti Spoofing      : None                    Avl Static Hosts  : 0
                                             Tot Static Hosts  : 0
Calling-Station-Id : n/a
Application Profile: None
-------------------------------------------------------------------------------
```

relations

Syntax **relations**

Context show>multilink-bundle

Description This command displays the working and protection bundles associated with this bundle-id.

Output See the following sections:

- Output Fields: show multilink-bundle relations
- Sample Output: show multilink-bundle <bundle-id> relations

Output Fields: show multilink-bundle relations

Table 81 describes the output fields for the **show multilink-bundle relations** command.

Table 81 **Output Fields: show multilink-bundle relations**

Label	Description
BundleID	Displays the bundle number.
Admin State	Up—The bundle is administratively up.
	Down — The bundle is administratively down.
Oper State	Up — The bundle is operationally up.
	Down—The bundle is operationally down.
Working BundleID	Displays the bundle that is currently in working mode.
Protect BundleID	Displays the bundle that is currently in protect mode.
Active Bundle	Displays the mode of the active bundle.

Sample Output: show multilink-bundle <bundle-id> relations

```
A:ALA-48>show# show multilink-bundle bundle-ima-1/1.2 relations
===============================================================================
Bundle Relationship
===============================================================================
Bundle          Admin   Oper    Working             Protect             Active
Id              State   State   Bundle Id           Bundle Id           Bundle
-------------------------------------------------------------------------------
bpgrp-ima-1     Down    Down    bundle-ima-1/1.1    bundle-ima-1/1.2    Protect
-------------------------------------------------------------------------------
Bundles : 1
===============================================================================
A:ALA-48>show#
```

ima

Syntax **multilink-bundle ima**

Context show>multilink-bundle

Description This command enables the context to display IMA group data.

Output See the following sections:

- Output Fields: show multilink-bundle bundle-ima
- Sample Output: show multilink-bundle <bundle-id> ima

Output Fields: show multilink-bundle bundle-ima

Table 82 describes the output fields for the **show multilink-bundle bundle-ima** command.

Table 82 **Output Fields: show multilink-bundle bundle-ima**

Label	Description
BundleId	Displays the bundle ID number.
Type	Specifies the type of this multilink bundle. mlppp — Indicates that the bundle is of type MLPPP. ima — Indicates that the bundle is of type IMA group.
Admin State	ima — Indicates that the bundle is of type IMA group.
	Down — The bundle is administratively down.
Oper State	Up — The bundle is operationally up.
	Down — The bundle is operationally down.
Port State	Displays the state level of the port.
	none — Indicates that the port is either in its initial creation state or is just about to be deleted.
	ghost — No member links are configured as part of this bundle.
	down — All member links are in “none”, “ghost”, or “down” state.
	linkUp — At least one member link is in port state “link up” but the bundle protocol is not yet operationally up (due to bundle protocol still coming up. For example, due to insufficient number of member links in “link up” state yet or to bundle being shut down.
	Up — Indicates that the bundle is ready to pass some kinds of traffic as the bundle protocol has come up (at least “minimum links” member links are in the port state up and the bundle protocol is up.)
Min Links Minimum Links	Displays the minimum number of links that must be active for a bundle to be active. If the number of links drop below the given minimum then the multilink bundle will transition to an operation down state.)
Total/Active Links	Displays the total number of active links for the bundle.

Sample Output: show multilink-bundle <bundle-id> ima

```
A:timetra-sim110# show multilink-bundle bundle-ima-1/1.2
===============================================================================
Bundle Summary
===============================================================================
Bundle               Type    Admin     Oper      Port      Min    Total/
Id                           State     State     State     Links  Active Links
-------------------------------------------------------------------------------
bundle-ima-1/1.2     ima     Down      Down      Link Up   1      1/0
-------------------------------------------------------------------------------
Bundles : 1
===============================================================================
A:timetra-sim110#

A:timetra-sim110# show multilink-bundle bundle-ima-1/1.2 detail
===============================================================================
Bundle bundle-ima-1/1.2 Detail
===============================================================================
Description        : MultiLink Bundle
Bundle Id          : bundle-ima-1/1.2   Type               : ima
Admin Status       : down               Oper Status        : down
Minimum Links      : 1                  Bundle IfIndex     : 555749378
Total Links        : 1                  Active Links       : 0
Red Diff Delay     : 25                 Yellow Diff Delay  : N/A
Red Diff Delay Act : down               MRRU               : N/A
Short Sequence     : N/A                Oper MRRU          : N/A
Oper MTU           : 1524               Fragment Threshold : 128 bytes
Up Time            : N/A                Bandwidth          : 0 KBit
PPP Input Discards : N/A                Primary Member Port: 1/1/1.1.1.1
Interleave-Frag    : N/A
-------------------------------------------------------------------------------
Member Port Id              Admin Oper  Active  Down Reason       Up Time
-------------------------------------------------------------------------------
1/1/1.1.1.1                 up    up    no      oper down         N/A
===============================================================================
Traffic Statistics
===============================================================================
                                                    Input                 Output
-------------------------------------------------------------------------------
Octets                                                 0                      0
Packets                                                0                      0
Errors                                                 0                      0
===============================================================================
Port Statistics
===============================================================================
                                                    Input                 Output
-------------------------------------------------------------------------------
Packets                                                0                      0
Discards                                               0                      0
Unknown Proto Discards                                 0
===============================================================================
A:timetra-sim110#

A:timetra-sim110# show multilink-bundle bundle-ima-1/1.2 ima
===============================================================================
Bundle bundle-ima-1/1.2 IMA group information
===============================================================================
Version            : 1.1
Current State      : Startup Near-end
Near-end State     : Startup
```

```
Far-end State      : Not configured
Group Test State   : Disabled
Max BW Links       : 8
Operational Secs   : N/A                Down Secs          : 2811
Tx IMA Id          : 0                  Rx IMA Id          : 255
Tx Timing Ref Link : N/A                Rx Timing Ref Link : N/A
Tx Oam Label       : 3                  Rx Oam Label       : 0
Test Link          : N/A                Test Pattern       : 0
Near-End Clock-Mode: ctc                Far-End Clock-Mode : itc
Link Deact Timer   : 2000               Link Act Timer     : 10000
Alpha-value        : 2                  Beta-value         : 2
Gamma-value        : 1                  Symmetry Mode      : symmetric
Tx CR Available    : 0 KBit             Rx CR Available    : 0 KBit
Least Delayed Link : N/A                Max Obs Diff Delay : 0
Near-End Fails     : 1                  Far-end Fails      : 0
Tx Icp Cells       : 0                  Rx Icp Cells       : 0
Errored Icp Cells  : 0                  Rx Lost Icp Cells  : 0
===============================================================================
A:timetra-sim110#
```

The following stats display when the bundle type is mlppp-lfi and the The following stats should only be displayed if the bundle type is mlppp-lfi and the detail is issued.

```
LFI Statistics
IngressEgress
Packet Bytes PacketByte
High5000500000020002000000
Normal1000010000000050005000000
===============================================================================
```

ppp

Syntax **ppp** [**multiclass**]

Context show>multilink-bundle

Description This command enables the context to display PPP group data.

Parameters *MDA Values* — 1, 2

detail — Specifies to display multi-class MLPPP information.

Output

Sample Output: show multilink-bundle <bundle-id> ppp

```
A:timetra-sim110# show multilink-bundle bundle-ppp-1/1.1 ppp
===============================================================================
PPP Protocols for bundle-ppp-1/1.1
===============================================================================
Protocol  State         Last Change         Restart Count   Last Cleared
-------------------------------------------------------------------------------
ipcp      initial       02/16/2007 06:11:44          0      02/16/2007 06:11:44
mplscp    initial       02/16/2007 06:11:44          0      02/16/2007 06:11:44
bcp       initial       02/16/2007 06:11:44          0      02/16/2007 06:11:44
```

```
osicp     initial       02/16/2007 06:11:44          0      02/16/2007 06:11:44
ipv6cp    initial       02/16/2007 06:11:44          0      02/16/2007 06:11:44
===============================================================================
Local Mac address  : 8c:6e:01:01:00:3d  Remote Mac address : 00:00:00:00:00:00
Local IPv4 address : 0.0.0.0            Remote IPv4 address: 0.0.0.0
Local IPv6 address : ::
Remote IPv6 address: ::
===============================================================================
*A:mlppp_top#


*A:mlppp_top# show multilink-bundle bundle-ppp-1/1.1 ppp multiclass
===============================================================================
MLPPP Per Class Traffic Statistics for bundle-ppp-1/1.1
===============================================================================
                                                    Input                Output
-------------------------------------------------------------------------------
Class  0
  Octets                                              0                     0
  Packets                                             0                     0
  Errors                                              0                     0
Class  1
  Octets                                              0                     0
  Packets                                             0                     0
  Errors                                              0                     0
Class  2
  Packets                                             0                     0
  Errors                                              0                     0
Class  3
  Octets                                              0                270400
  Packets                                             0                  2704
  Errors                                              0                     0
===============================================================================
*A:mlppp_top#
```

atm

Syntax **atm** [**detail**]

Context show>ml-bundle>ima

Description This command displays multilink bundle IMA ATM information.

Parameters **detail —** Displays detailed information.

Output See the following sections:

- Output Fields: show mutlilink-bundle <bundle-id> ima atm
- Sample Output: show multilink-bundle <bundle-id> ima atm>

Output Fields: show mutlilink-bundle <bundle-id> ima atm

Table 83 describes the output fields for the **show multilink-bundle <bundle-id> ima atm** command.

Table 83 **Output Fields: show multilink-bundle <bundle-id> ima atm**

Label	Description
Cell Mode	Displays the cell format (UNI or NNI) used on the ATM interface.
Configured VCs	Displays the number of configured VCs.
Configured VTs	Displays the number of configured VTs.
Configured minimum VPI	Displays the minimum VPI configured for this bundle.
Last Unknown VPI/VCI	Indicates the last unknown VPI/VCI that was received on this interface.
Mapping	Displays ATM cell mapping used on this interface: Direct or PLCP.
Configured VPs	Displays the number of configured VPs.
Configured IFCs	Displays the number of configured IFCs.

Sample Output: show multilink-bundle <bundle-id> ima atm>

```
A:NS052651098# show multilink-bundle bundle-ima-1/1.1 ima atm
===============================================================================
ATM Info for bundle-ima-1/1.1
===============================================================================
Cell Mode             : UNI               Mapping            : Direct
Configured VCs        : 1                 Configured VPs     : 0
Configured VTs        : 0                 Configured IFCs    : 0
Configured minimum VPI: 0
Last Unknown VPI/VCI  : none
===============================================================================
ATM Bandwidth Info
===============================================================================
                     kbps      %                               kbps      %
-------------------------------------------------------------------------------
Ingress CBR        : 15232     100%     Egress CBR         : 15232     100%
Ingress RT-VBR     : 0          0%      Egress RT-VBR      : 0          0%
Ingress NRT-VBR    : 0          0%      Egress NRT-VBR     : 0          0%
Ingress UBR        : 0          0%      Egress UBR         : 0          0%
-------------------------------------------------------------------------------
Ingress Total      : 15232     100%     Egress Total       : 15232     100%
ATM Link Bandwidth : 15232 kbps
Shaped Bandwidth   : 15232 kbps
```

connections

Syntax **connections**

Context show>ml-bundle>ima>atm

Description This command displays connection information.

Parameters **pvc —** Displays ATM port PVC information.

pvp — Displays ATM port PVP information.

pvt — Displays ATM port PVT information.

vpi-range — Displays the VPI range.

Values vpi: 0 to 4095 (NNI)
0 to 255 (UNI)

vpi — Displays the VPI values.

Values vpi: 0 to 4095 (NNI)
0 to 255 (UNI)

vci: — Displays the VCI values.

Values 1, 2, 5 to 65534

detail — Provides detailed information.

Values 1, 2

Output See the following sections:

- Output Fields: show multilink-bundle <bundle-id> ima atm connections
- Sample Output: show multilink-bundle bundle-ima ima atm connections

Output Fields: show multilink-bundle <bundle-id> ima atm connections

Table 84 describes the output fields for the **show multilink-bundle <bundle-id> ima atm connections** command.

Table 84 **Output Fields: show multilink-bundle <bundle-id> ima atm connections**

Label	Description
Owner	Identifies the system entity that owns a specific ATM connection.
Type	Specifies the type of this multilink bundle. mlppp — Indicates that the bundle is of type MLPPP. ima — Indicates that the bundle is of type IMA group.
Ing.TD	Specifies the ATM traffic descriptor profile that applies to the receive direction of the interface connection.
Egr.TD	Specifies the ATM traffic descriptor profile that applies to the transmit direction of the interface connection.

Table 84 **Output Fields: show multilink-bundle <bundle-id> ima atm connections (Continued)**

Label	Description (Continued)
Adm	ima — Indicates that the bundle is of type IMA group.
	Down — The bundle is administratively down.
Opr	Up — The bundle is operationally up. Down — The bundle is operationally down.
OAM	Indicates the OAM operational status of ATM connections.

Sample Output: show multilink-bundle bundle-ima ima atm connections

```
A:NS052651098# show multilink-bundle bundle-ima-1/1.1 ima atm connections
===============================================================
ATM Connections, Port bundle-ima-1/1.1
===============================================================
           Owner  Type     Ing.TD  Egr.TD  Adm  OAM          Opr
---------------------------------------------------------------
1/100      SAP    PVC      2       2       up   up           up
===============================================================
A:NS052651098#
```

port-connection

Syntax **port-connection** [**detail**]

Context show>ml-bundle>ima>atm

Description This command displays port connection information.

Parameters **detail** — Displays detailed information.

Output See the following sections:

- Output Fields: show multilink-bundle <bundle-id> ima atm port-connection
- Sample Output: show multilink-bundle <bundle-id> ima atm port-connection

Output Fields: show multilink-bundle <bundle-id> ima atm port-connection

Table 85 describes the output fields for the **show multilink-bundle <bundle-id> ima atm port-connection** command.

Table 85 **Output Fields: show multilink-bundle <bundle-id> ima atm port-connection**

Label	Description
Port ID	Displays the port ID for this bundle.
Admin State	ima — Indicates that the bundle is of type IMA group.
	Down — The bundle is administratively down.
Oper State	Up — The bundle is operationally up.
	Down—The bundle is operationally down.
Owner	Identifies the system entity that owns a specific ATM connection.
Endpoint Type	Displays the endpoint type.
Cast Type	Indicates the connection topology type.
Ing. Td Idx	Specifies the ATM traffic descriptor profile that applies to the receive direction of the interface connection.
Egr. Td Idx	Specifies the ATM traffic descriptor profile that applies to the transmit direction of the interface connection.
Last Changed	Indicates the date and time when the interface connection entered its current operational state.

Sample Output: show multilink-bundle <bundle-id> ima atm port-connection

```
A:NS052651098# show multilink-bundle bundle-ima-1/1.1 ima atm port-connection
===============================================================================
ATM Port Connection
===============================================================================
Port Id             : bundle-ima-1/1.1
Admin State         : up                  Oper state          : up
Owner               : SAP
Endpoint Type       : Port                Cast Type           : P2P
Ing. Td Idx         : 2                   Egr. Td Idx         : 2
Last Changed        : 01/16/2007 14:24:00
===============================================================================
A:NS052651098#
```

pvc

Syntax **pvc** [*vpi*[/*vci*] [**detail**]

Context show>ml-bundle>ima>atm

Description This command displays ATM port PVC information.

Parameters **vpi —** Displays the VPI values.

Values vpi:0 to 4095 (NNI)
0 to 255 (UNI)

vci: — Displays the VCI values.

Values 1, 2, 5 to 65534

detail — Provides detailed information.

Values 1, 2

Output See the following sections:

- Output Fields: show multilink-bundle <bundle-id> ima atm pvc
- Sample Output: show multilink-bundle <bundle-id> ima atm pvc

Output Fields: show multilink-bundle <bundle-id> ima atm pvc

Table 86 describes the output fields for the **show multilink-bundle <bundle-id> ima atm pvc** command.

Table 86 **Output Fields: show multilink-bundle <bundle-id> ima atm pvc**

Label	Description
VPI/VCI	Displays the VPI/VCI value.
Owner	Specifies the type of this multilink bundle. mlppp — Indicates that the bundle is of type MLPPP. ima — Indicates that the bundle is of type IMA group.
Type	Identifies the system entity that owns a specific ATM connection.
Ing.TD	Specifies the ATM traffic descriptor profile that applies to the receive direction of the interface connection.
Egr.TD	Specifies the ATM traffic descriptor profile that applies to the transmit direction of the interface connection.
Adm	ima — Indicates that the bundle is of type IMA group.
	Down — The bundle is administratively down.
Opr	Up — The bundle is operationally up.
	Down — The bundle is operationally down.
OAM	Indicates the OAM operational status of ATM connections.

Sample Output: show multilink-bundle <bundle-id> ima atm pvc

```
A:NS052651098# show multilink-bundle bundle-ima-1/1.1 ima atm pvc
```

```
===============================================================
ATM PVCs, Port bundle-ima-1/1.1
===============================================================
VPI/VCI    Owner  Type     Ing.TD  Egr.TD  Adm  OAM         Opr
---------------------------------------------------------------
1/100      SAP    PVC      2       2       up   up          up
===============================================================
A:NS052651098#


A:NS052651098# show multilink-bundle bundle-ima-1/1.1 ima atm pvc detail
===============================================================
ATM PVCs, Port bundle-ima-1/1.1
===============================================================
VPI/VCI    Owner  Type     Ing.TD  Egr.TD  Adm  OAM         Opr
---------------------------------------------------------------
1/100      SAP    PVC      2       2       up   up          up

===============================================================================
ATM Statistics
===============================================================================
                                                  Input                Output
-------------------------------------------------------------------------------
Octets                                               0                     0
Cells                                                0                     0
===============================================================================
AAL-5 Packet Statistics
===============================================================================
                                                  Input                Output
-------------------------------------------------------------------------------
Packets                                              0                     0
Dropped Packets                                      0                     0
CRC-32 Errors                                        0
Reassembly Timeouts                                  0
Over Sized SDUs                                      0
===============================================================================
ATM OAM Statistics
===============================================================================
                                                  Input                Output
-------------------------------------------------------------------------------
AIS                                                  0                     0
RDI                                                  0                     0
Loopback                                             0                     0
CRC-10 Errors                                        0
Other                                                0
===============================================================================
A:NS052651098#
```

pvp

Syntax **pvp** [*vpi*] [**detail**]

Context show>ml-bundle>ima>atm

Description This command displays ATM port PVP information.

Parameters **vpi —** Displays the VPI values.

Values vpi: 0 to 4095 (NNI)
0 to 255 (UNI)

detail — Displays detailed information.

Values 1, 2

Output See the following sections:

- Output Fields: show multilink-bundle <bundle-id> ima atm pvp
- Sample Output: show multilink-bundle <bundle-id> ima atm pvp

Output Fields: show multilink-bundle <bundle-id> ima atm pvp

Table 87 describes the output fields for the **show multilink-bundle <bundle-id> ima atm pvp** command.

Table 87 **Output Fields: show multilink-bundle <bundle-id> ima atm pvp**

Label	Description
VPI	Displays the VPI value.
Owner	Identifies the system entity that owns a specific ATM connection.
Type	Specifies the type of this multilink bundle.
	mlppp — Indicates that the bundle is of type MLPPP.
	ima — Indicates that the bundle is of type IMA group.
Ing.TD	Specifies the ATM traffic descriptor profile that applies to the receive direction of the interface connection.
Eng.TD	Specifies the ATM traffic descriptor profile that applies to the transmit direction of the interface connection.
Adm	ima — Indicates that the bundle is of type IMA group.
	Down — The bundle is administratively down.
OAM	Indicates the OAM operational status of ATM connections.
Opr	Up — The bundle is operationally up.
	Down — The bundle is operationally down.

Sample Output: show multilink-bundle <bundle-id> ima atm pvp

```
A:ima2# show multilink-bundle bundle-ima-1/1.1 ima atm pvp
===============================================================
ATM PVPs, Port bundle-ima-1/1.1
```

```
===============================================================
VPI         Owner  Type      Ing.TD  Egr.TD  Adm   OAM         Opr
---------------------------------------------------------------
2           SAP    PVP       1       1       up    up          up
===============================================================
A:ima2#
```

pvt

Syntax **pvt** [*vpi.vpi*] [**detail**]

Context show>ml-bundle>ima>atm

Description This command displays ATM port PVT information.

Parameters **vpi —** Displays the VPI values.

Values vpi:0 to 4095 (NNI)
0 to 255 (UNI)

detail — Provides detailed information.

Values 1, 2

Output See the following sections:

- Output Fields: show multilink-bundle <bundle-id> ima atm pvt
- Sample Output: show multilink-bundle <bundle-id> ima atm pvt

Output Fields: show multilink-bundle <bundle-id> ima atm pvt

Table 88 describes the output fields for the **show multilink-bundle <bundle-id> ima atm pvt** command.

Table 88 **Output Fields: show multilink-bundle <bundle-id> ima atm pvt**

Label	Description
VPI Range	Displays the VPI range:
Owner	Identifies the system entity that owns a specific ATM connection.
Type	Specifies the type of this multilink bundle. mlppp — Indicates that the bundle is of type MLPPP. ima — Indicates that the bundle is of type IMA group.
Ing.Td	Specifies the ATM traffic descriptor profile that applies to the receive direction of the interface connection.
Egr.Td	Specifies the ATM traffic descriptor profile that applies to the transmit direction of the interface connection.

Table 88 **Output Fields: show multilink-bundle <bundle-id> ima atm pvt**

Label	Description (Continued)
Adm	ima — Indicates that the bundle is of type IMA group.
	Down — The bundle is administratively down.
Opr	Up — The bundle is operationally up.
	Down — The bundle is operationally down.

Sample Output: show multilink-bundle <bundle-id> ima atm pvt

```
A:ima2# show multilink-bundle bundle-ima-1/1.1 ima atm pvt
===============================================================
ATM PVTs, Port bundle-ima-1/1.1
===============================================================
VPI Range  Owner  Type     Ing.TD  Egr.TD  Adm              Opr
---------------------------------------------------------------
4.5        SAP    PVT      1       1       up               up
===============================================================
A:ima2#
```

2.26.2.6 LAG Show Commands

lag

Syntax **lag** [*lag-id*] [**detail**] [**statistics**]
lag [*lag-id*] **description**
lag [*lag-id*] **port**
lag *lag-id* **associations**
lag *lag-id* **bfd**
lag *lag-id* [**detail**] **eth-cfm** [**tunnel** *tunnel-id*]
lag *lag-id* **associations per-link-hash interface** [**class** {**1** | **2** | **3**}]
lag *lag-id* **associations link-map-profile** [*link-map-profile*] **interface**
lag *lag-id* **lacp-partner**
lag *lag-id* **detail lacp-partner**
lag *lag-id* **link-map-profile** *link-map-profile*
lag *lag-id* **associations per-link-hash sap** [**class** {**1** | **2** | **3**}]
lag *lag-id* **associations link-map-profile** [*link-map-profile*] **sap**
lag *lag-id* **per-link-hash** [**class** {**1** | **2** | **3**}]
lag *lag-id* **per-link-hash port** *port-id*

Context show

Description This command displays Link Aggregation Group (LAG) information.

If no command line options are specified, a summary listing of all LAGs is displayed.

Parameters *lag-id* — Displays only information on the specified LAG ID.

Default Display information for all LAG IDs.

detail — Displays detailed LAG information.

Default Displays summary information.

statistics — Displays LAG statistics information.

associations — Displays a list of current router interfaces to which the LAG is assigned.

link-map-profile *link-map-profile* **—** Displays information about a particular LAG link map profile.

eth-cfm — Displays a list of Ethernet tunnels to which the LAG is assigned.

per-link-hash — Displays information about a SAP or interface associated with this LAG will send traffic over a single link of a LAG auto-re-balancing as links are added and removed from this LAG.

lacp-partner — Displays LACP partner information.

link-map-profile *link-map-profile* **—** Displays information about a specified LAG link map profile identifier.

Output See the following sections:

- Output Fields: show lag
- Sample Output: show lag
- Output Fields: show lag <lag-id> detail
- Sample Output: show lag <lag-id> detail
- Output Fields: Show LAG Statistics
- Sample Output: Show LAG Statistics
- Output Fields: Show LAG <lag-id> Associations
- Sample Output: Show LAG <lag-id> Associations
- Sample Output: Show LAG <lag-id> detail (with MC-LAG Output)
- Sample Output: show lag <lag-id> detail (Without MC-LAG Output)
- Sample Output: show lag <lag-id> lcap-partner

Output Fields: show lag

Table 89 describes the output fields for the **show lag** command.

Table 89 **Output Fields: show lag**

Label	Description
LAG ID	The LAG or multi-link bundle ID that the port is assigned to.

Table 89 **Output Fields: show lag (Continued)**

Label	Description
Adm	Up — The LAG is administratively up.
	Down — The LAG is administratively down.
Opr	Up — The LAG is operationally up.
	Down—The LAG is operationally down.
Port-Threshold	The number of operational links for the LAG at or below which the configured action will be invoked.
Up-Link-Count	The number of ports that are physically present and have physical links present.
MC Act/Stdby	Member port is selected as active or standby link.

Sample Output: show lag

```
A:ALA-48>config# show lag
===============================================================================
Lag Data
===============================================================================
Lag-id          Adm     Opr     Port-Threshold   Up-Link-Count   MC Act/Stdby
-------------------------------------------------------------------------------
1               up      down    0                0               N/A
2               up      up      0                1               active
3               up      down    0                0               standby
4               up      down    0                0               standby
10              up      down    0                0               N/A
-------------------------------------------------------------------------------
Total Lag-ids: 5       Single Chassis: 2        MC Act: 1       MC Stdby: 2
===============================================================================
A:ALA-48>config# show lag


A:sr7- show lag 10 port
===============================================================================
Lag Port States
LACP Status: e - Enabled, d - Disabled
===============================================================================
Lag-id Port-id   Adm   Act/Stdby Opr   Primary  Sub-group     Forced  Priority
-------------------------------------------------------------------------------
10(e)  1/1/8     up    active    up    yes      1             -       32768
       1/1/9     up    standby   down           2             -       32768
===============================================================================
```

Output Fields: show lag <lag-id> detail

Table 90 describes the output fields for the **show lag** *lag-id* **detail** command. The output is dependent on whether or not the LAG was configured as a multi-chassis (MC) LAG.

Table 90 **Output Fields: show lag <lag-id> detail**

Label	Description
LAG ID	The LAG or multi-link trunk (MLT) that the port is assigned to.
Adm	Up — The LAG is administratively up. Down — The LAG is administratively down.
Port Threshold	If the number of available links is equal or below this number, the threshold action is executed.
Thres. Last Cleared	The last time that keepalive stats were cleared.
Dynamic Cost	The OSPF costing of a link aggregation group based on the available aggregated, operational bandwidth.
Configured Address	The base chassis Ethernet MAC address.
Hardware Address	The hardware address.
Hold-Time Down	The timer, in tenths of seconds, which controls the delay between detecting that a LAG is down and reporting it to the higher levels.
LACP	Enabled — LACP is enabled. Down — LACP is disabled.
LACP Transmit Intvl	LACP timeout signaled to peer.
Selection Criteria	Configured subgroup selection criteria.
MUX control	Configured type of multiplexing machine control used in a LAG with LACP in active/passive modes. coupled — TX and RX activate together. independent — RX activates independent of TX.
Number of subgroups	Total subgroups in LAG.
System ID	System ID used by actor in LACP messages.
Admin Key	Configured LAG key.
Oper Key	Key used by actor in LACP messages.
System Priority	System priority used by actor in LACP messages.
Prtr System ID	System ID used by partner in LACP messages.
Prtr Oper Key	Key used by partner in LACP messages.
Prtr System Priority	System priority used by partner in LACP messages.
Mode	LAG in access or network mode.

Table 90 **Output Fields: show lag <lag-id> detail (Continued)**

Label	Description (Continued)
Opr	Up — The LAG is operationally up. Down — The LAG is operationally down.
Port Threshold	Configured port threshold.
Thres. Exceeded Cnt	The number of times that the drop count was reached.
Threshold Action	Action to take when the number of available links is equal or below the port threshold.
Encap Type	The encapsulation method used to distinguish customer traffic on a LAG.
Lag-IFIndex	A box-wide unique number assigned to this interface.
Adapt QoS	Displays the configured QoS mode.
Port ID	The specific port ID.
(LACP) Mode	LACP active or passive mode.
LACP xmit standby	LACP transmits on standby links enabled / disabled.
Slave-to-partner	Configured enabled/disabled.
Port-id	Displays the member port ID.
Adm	Displays the member port administrative state.
Active/stdby	Indicates that the member port is selected as the active or standby link.
Opr	Indicates that the member port operational state.
Primary	Indicates that the member port is the primary port of the LAG.
Sub-group	Displays the member subgroup where the member port belongs to.
Priority	Displays the member port priority.

Sample Output: show lag <lag-id> detail

```
A:sr7- show lag 10 detail
===============================================================================
LAG Details
===============================================================================
Description        : N/A
-------------------------------------------------------------------------------
Details
-------------------------------------------------------------------------------
Lag-id              : 10                    Mode                : network
Adm                 : up                    Opr                 : up
Thres. Exceeded Cnt : 17                    Port Threshold      : 0
Thres. Last Cleared : 01/22/2000 19:41:38   Threshold Action    : down
Dynamic Cost        : false                 Encap Type          : null
```

```
Configured Address  : 0c:a4:02:20:69:4b     Lag-IfIndex          : 1342177290
Hardware Address    : 0c:a4:02:20:69:4b
Hold-time Down      : 0.0 sec               Port Type            : standard
Per FP Ing Queuing  : disabled
LACP                : enabled               Mode                 : active
LACP Transmit Intvl : fast                  LACP xmit stdby      : enabled
Selection Criteria  : highest-count         Slave-to-partner     : disabled
MUX control         : coupled
Number of sub-groups: 2                     Forced               : -
System Id           : 0c:a4:02:20:68:01     System Priority      : 32768
Admin Key           : 32770                 Oper Key             : 32770
Prtr System Id      : 0c:a4:02:1f:88:01     Prtr System Priority : 32768
Prtr Oper Key       : 32771
Standby Signaling   : lacp

-------------------------------------------------------------------------------
Port-id        Adm     Act/Stdby Opr     Primary   Sub-group     Forced  Prio
-------------------------------------------------------------------------------
1/1/8          up      active    up      yes       1             -       32768
1/1/9          up      standby   down              2             -       32768

-------------------------------------------------------------------------------
Port-id        Role      Exp   Def   Dist  Col   Syn   Aggr  Timeout  Activity
-------------------------------------------------------------------------------
1/1/8          actor     No    No    Yes   Yes   Yes   Yes   Yes      Yes
1/1/8          partner   No    No    Yes   Yes   Yes   Yes   Yes      Yes
1/1/9          actor     No    No    No    No    No    Yes   Yes      Yes
1/1/9          partner   No    No    No    No    No    Yes   Yes      Yes
===============================================================================
*A:sr7-
```

Output Fields: Show LAG Statistics

Table 91 describes the output fields for the **show lag statistics** command.

Table 91 **Output Fields: Show Lag Statistics**

Label	Description
LAG ID	The LAG or multi-link trunk (MLT) that the port is assigned to.
Port ID	The port ID.
Input Bytes	The number of incoming bytes for the LAG on a per-port basis.
Input Packets	The number of incoming packets for the LAG on a per-port basis.
Output Bytes	The number of outbound bytes for the LAG on a per-port basis.
Output Packets	The number of outbound packets for the LAG on a per-port basis.

Table 91 **Output Fields: Show Lag Statistics (Continued)**

Label	Description (Continued)
Input/Output Errors	For packet-oriented interfaces, the number of inbound packets that contained errors preventing them from being deliverable to a higher-layer protocol. For character- oriented or fixed-length interfaces, the number of inbound transmission units that contained errors preventing them from being deliverable to a higher-layer protocol. For packet-oriented interfaces, the number of outbound packets that could not be transmitted because of errors. For character-oriented or fixed-length interfaces, the number of outbound transmission units that could not be transmitted because of errors.
Totals	Displays the column totals for bytes, packets, and errors.

Sample Output: Show LAG Statistics

```
ALA-1# show lag statistics
===============================================================================
LAG Statistics
===============================================================================
Description:
Lag-id Port-id   Input     Input      Output    Output     Input     Output
                 Bytes     Packets    Bytes     Packets    Errors    Errors
-------------------------------------------------------------------------------
1      1/1/3     0         1006       0         2494       0         0
       1/1/4     0         435        0         401        0         0
       1/1/5     0         9968       0         9833       0         0
-------------------------------------------------------------------------------
Totals           0         11409      0         12728      0         0
===============================================================================
ALA-1#
```

Output Fields: Show LAG <lag-id> Associations

Table 92 describes the output fields for the **show lag <lag-id> associations** command.

Table 92 **Output Fields:Show Lag <lag-id> Associations**

Label	Description
Service ID	The service associated with the LAG.
Name	The name of the IP interface.
Encap Val	The Dot1q or QinQ values of the port for the IP interface.

Sample Output: Show LAG <lag-id> Associations

```
A:ALA-1# show lag 5 associations
===============================================================================
Interface Table
===============================================================================
```

```
Router/ServiceId                Name                              Encap Val
-------------------------------------------------------------------------------
Router: Base                    LAG2West                          0
-------------------------------------------------------------------------------
Interfaces
===============================================================================
A:ALA-1#
```

Sample Output: Show LAG <lag-id> detail (with MC-LAG Output)

```
*A:pc5# show lag 2 detail
===============================================================================
LAG Details
===============================================================================
Description:
-------------------------------------------------------------------------------
Details
-------------------------------------------------------------------------------
Lag-id              : 2                     Mode                 : access
Adm                 : up                    Opr                  : up
Thres. Exceeded Cnt : 2                     Port Threshold       : 0
Thres. Last Cleared : 04/11/2007 21:50:55   Threshold Action     : down
Dynamic Cost        : false                 Encap Type           : dot1q
Configured Address  : 8e:8b:ff:00:01:42     Lag-IfIndex          :
1342177282
Hardware Address    : 8e:8b:ff:00:01:42     Adapt Qos            :
distribute
Hold-time Down      : 0.0 sec
LACP                : enabled               Mode                 : active
LACP Transmit Intvl : fast                  LACP xmit stdby      : enabled
Selection Criteria  : highest-count         Slave-to-partner     : disabled
Number of sub-groups: 2                     Forced               : -
System Id           : 8e:8b:ff:00:00:00     System Priority      : 32768
Admin Key           : 32768                 Oper Key             : 32768
Prtr System Id      : 8e:89:ff:00:00:00     Prtr System Priority : 32768
Prtr Oper Key       : 32768

MC Peer Address     : 10.10.10.101          MC Peer Lag-id       : 2
MC System Id        : 01:01:01:01:01:01     MC System Priority   : 2
MC Admin Key        : 1                     MC Active/Standby    : active
MC Lacp ID in use   : false                 MC extended timeout  : false
MC Selection Logic  : waiting for peer info MC Config Mismatch   : no mismatch
-------------------------------------------------------------------------------
Port-id        Adm    Act/Stdby Opr    Primary   Sub-group     Forced
Prio
-------------------------------------------------------------------------------
1/1/1          up     active    up     yes       7             -        99
1/1/2          up     standby   down             8             -        100
-------------------------------------------------------------------------------
Port-id        Role      Exp   Def   Dist  Col   Syn   Aggr  Timeout
Activity
-------------------------------------------------------------------------------
1/1/1          actor     No    No    Yes   Yes   Yes   Yes   Yes      Yes
1/1/1          partner   No    No    Yes   Yes   Yes   Yes   Yes      Yes
1/1/2          actor     No    No    No    No    No    Yes   Yes      Yes
1/1/2          partner   No    No    No    No    Yes   Yes   Yes      Yes
===============================================================================
*A:pc5#
```

Sample Output: show lag <lag-id> detail (Without MC-LAG Output)

```
*A:pc5# show lag 2 detail
===============================================================================
LAG Details
===============================================================================
Description:
-------------------------------------------------------------------------------
Details
-------------------------------------------------------------------------------
Lag-id              : 2                     Mode                : access
Adm                 : up                    Opr                 : up
Thres. Exceeded Cnt : 4                     Port Threshold      : 0
Thres. Last Cleared : 04/11/2007 02:03:49   Threshold Action    : down
Dynamic Cost        : false                 Encap Type          : dot1q
Configured Address  : 8e:8b:ff:00:01:42     Lag-IfIndex         :
1342177282
Hardware Address    : 8e:8b:ff:00:01:42     Adapt Qos           :
distribute
Hold-time Down      : 0.0 sec
LACP                : enabled               Mode                : active
LACP Transmit Intvl : fast                  LACP xmit stdby     : enabled
Selection Criteria  : highest-count         Slave-to-partner    : disabled
Number of sub-groups: 2                     Forced              : -
System Id           : 8e:8b:ff:00:00:00     System Priority     : 32768
Admin Key           : 32768                 Oper Key            : 32768
Prtr System Id      : 8e:89:ff:00:00:00     Prtr System Priority : 32768
Prtr Oper Key       : 32768
-------------------------------------------------------------------------------
Port-id        Adm    Act/Stdby Opr    Primary   Sub-group     Forced
Prio
-------------------------------------------------------------------------------
1/1/1          up     active    up     yes       7             -        99
1/1/2          up     standby   down             8             -        100
-------------------------------------------------------------------------------
Port-id        Role      Exp   Def   Dist  Col   Syn   Aggr  Timeout
Activity
-------------------------------------------------------------------------------
1/1/1          actor     No    No    Yes   Yes   Yes   Yes   Yes      Yes
1/1/1          partner   No    No    Yes   Yes   Yes   Yes   Yes      Yes
1/1/2          actor     No    No    No    No    No    Yes   Yes      Yes
1/1/2          partner   No    No    No    No    Yes   Yes   Yes      Yes
===============================================================================
*A:pc5#

*A:Dut-A# show lag 2 associations per-link-hash sap
===============================================================================
SAP Associations
===============================================================================
SvcId      SAP                           Active Link            Oper   Oper
                                                                 Class  Weight
-------------------------------------------------------------------------------
2          lag-2:4                         1/1/1                 1      500
2          lag-2:5                         1/1/1                 1      100
2          lag-2:6                         1/1/26                1      1000
2          lag-2:7                         1/1/25                1      1000
===============================================================================
Number of SAP associations: 4
```

```
A:bksim4001# show lag 1  per-link-hash
===============================================================================
Per-link-hash Weight
===============================================================================
Port                            Class      Num Users  Agg Weight
-------------------------------------------------------------------------------
1/1/1                           1          0         0
1/1/1                           2          0          0
1/1/1                           3          0          0
===============================================================================
Number of entries: 3
===============================================================================
```

Sample Output: show lag <lag-id> lcap-partner

```
A:ALU-Dut1# show lag 3 lacp-partner
===============================================================================
LAG Partner information
===============================================================================
Partner system ID           : ea:3e:ff:00:00:00
Partner system priority     : 32768
Partner operational key     : 2
===============================================================================
===============================================================================
LAG 3 Ports Partner operational information
===============================================================================
Port                        Actor Port  Prio  Key
                            port
-------------------------------------------------------------------------------
1/1/52                      33908 33909 5     2
1/1/54                      33910 33911 5     2
1/1/56                      33912 33913 7     2
===============================================================================
===============================================================================
LAG 3 Ports Partner operational state information
===============================================================================
Port                        Exp  Def  Dist Col  Syn  Aggr Time Act
                                                        out
-------------------------------------------------------------------------------
1/1/52                      No   No   Yes  Yes  Yes  Yes  Yes  Yes
1/1/54                      No   No   Yes  Yes  Yes  Yes  Yes  Yes
1/1/56                      No   No   No   No   No   Yes  Yes  Yes
===============================================================================
A:ALU-Dut1#


A:Dut-A# show lag 10 lacp-neighbors
===============================================================================
LAG Neighbor information
===============================================================================
Partner system ID           : de:41:ff:00:00:00
Partner system priority     : 32768
Partner operational key     : 32768
===============================================================================
-------------------------------------------------------------------------------
LAG port 1/1/6 partner information
-------------------------------------------------------------------------------
Actor port                  : 33862
```

```
Partner admin system prio   : 32768
Partner oper system prio    : 32768
Partner admin system ID     : 00:00:00:00:00:00
Partner oper system ID      : de:41:ff:00:00:00
Partner admin key           : 0
Partner oper key            : 32768
Partner admin port          : (Not Specified)
Partner oper port           : 33863
Partner admin port prio     : 32768
Partner oper port prio      : 32768
Partner admin state         : (Not Specified)
Partner oper state          : lacp-timeout aggregation synchronization
                              collecting distributing
===============================================================================
A:Dut-A#


*A:bksim4001>config>lag# selection-criteria highest-weight subgroup-hold-
time 1show lag 1 detail
ght subgroup-hold-time 10
===============================================================
LAG Details
===============================================================
Description        : To Sim4002
-------------------------------------------------------------------------------
Details
-------------------------------------------------------------------------------
Lag-id              : 1                       Mode                 : access
Adm                 : down                  Opr                  : down
Thres. Exceeded Cnt : 0                     Port Threshold       : 0
Thres. Last Cleared : 01/21/2014 09:00:48   Threshold Action     : down
Dynamic Cost        : false                 Encap Type           : null
Configured Address  : 36:95:ff:00:01:41     Lag-IfIndex          : 1342177281
Hardware Address    : 36:95:ff:00:01:41     Adapt Qos (access)   : distribute
Hold-time Down      : 0.0 sec               Port Type            : standard
Per-Link-Hash       : disabled
Include-Egr-Hash-Cfg: enabled
Per FP Ing Queuing  : disabled              Per FP Egr Queuing   : disabled
Per FP SAP Instance : disabled
LACP                        : enabled               Mode                 : passive
LACP Transmit Intvl : fast                  LACP xmit stdby      : enabled
Selection Criteria      : highest-weight        Slave-to-partner     : disabled
Subgrp hold time    : 20.0 sec               Remaining time        : 2.6 sec
Subgrp selected       : 1                     Subgrp candidate     : 2
Subgrp count            : 2                     Forced               : -
System Id                 : 36:95:ff:00:00:00     System Priority      : 32768
Admin Key             : 32768                 Oper Key             : 32768
Prtr System Id          :                       Prtr System Priority : 0
Prtr Oper Key         : 0
Standby Signaling   : lacp
Port weight (gbps)   : (Not Specified)
Weight Threshold    : 0                     Threshold Action     : down
...
===============================================================================


*A:Dut-A# show lag 2 associations per-link-hash sap
===============================================================================
SAP Associations
```

```
===============================================================================
SvcId      SAP                          Active Link           Oper   Oper
                                                              Class  Weight
-------------------------------------------------------------------------------
2          lag-2:4                          1/1/1              1      500
2          lag-2:5                          1/1/1              1      100
2          lag-2:6                          1/1/26             1      1000
2          lag-2:7                          1/1/25             1      1000
===============================================================================
Number of SAP associations: 4

A:bksim4001# show lag 1  per-link-hash
===============================================================================
Per-link-hash Weight
===============================================================================
Port                            Class      Num Users  Agg Weight
-------------------------------------------------------------------------------
1/1/1                           1          10                     10
1/1/1                           2          0          0
1/1/1                           3          2          500
===============================================================================
Number of entries: 3
===============================================================================
```

2.26.2.7 Monitor Commands

card

Syntax **card** *slot-number* **fp** *fp-number* **ingress** {**access**|**network**} **queue-group** *queue-group-name* **instance** *instance-id* [**absolute**] [**interval** *seconds*] [**repeat** *repeat*] **policer** *policer-id*

Context monitor

Description This command monitors card parameters.

port

Syntax **port** ***port-id*** [***port-id***] [**interval** ***seconds***] [**repeat** ***repeat***] [**absolute** | **rate**] [**multiclass**]

Context monitor

Description This command enables port traffic monitoring. The specified port(s) statistical information displays at the configured interval until the configured count is reached.

The first screen displays the current statistics related to the specified port(s). The subsequent statistical information listed for each interval is displayed as a delta to the previous display.

When the **rate** is specified, the "rate per second" for each statistic is displayed instead of the delta.

Monitor commands are similar to **show** commands but only statistical information displays. Monitor commands display the selected statistics according to the configured number of times at the interval specified.

Parameters **port** *port-id* **—** Specify up to 5 port IDs. Port-IDs are only MLPPP bundles or bundle protection groups when the multiclass is specified.

port-id	*slot*/*mda*/*port* [.*channel*]		
	eth-sat-id	esat-*id*/*slot*/*port*	
		esat	keyword
		id	1 to 20
	pxc-id	pxc-*id*.*sub-port*	
		pxc	keyword
		id	1 to 64
		sub-port	a, b
	aps-id	aps-*group-id*[.*channel*]	
		aps	keyword
		group-id	1 to 64 (16 for 7750 SR-c12 and 7750 SR-c4)
	bundle ID	bundle-*type-slot/mda.bundle-num*	
		bundle	keyword
		type	ima, ppp
		bundle-num	1 to 128 (16 for 7750 SR-c12 and 7750 SR-c4)
	bpgrp-*type-bpgrp-num*		

interval *seconds* **—** Configures the interval for each display in seconds.

Values 3 to 60

Default 10 seconds

repeat *repeat* **—** Configures how many times the command is repeated.

Values 1 to 999

Default 10

absolute — When the **absolute** is specified, the raw statistics are displayed, without processing. No calculations are performed on the delta or rate statistics.

rate — When the **rate** is specified, the rate-per-second for each statistic is displayed instead of the delta.

Output

Sample Output

```
A:ALA-12>monitor# port 2/1/4 interval 3 repeat 3 absolute
```

```
===============================================================================
Monitor statistics for Port 2/1/4
===============================================================================
                                                 Input                  Output
-------------------------------------------------------------------------------
At time t = 0 sec (Base Statistics)
-------------------------------------------------------------------------------
Octets                                               0                       0
Packets                                             39                     175
Errors                                               0                       0
-------------------------------------------------------------------------------
At time t = 3 sec (Mode: Absolute)
-------------------------------------------------------------------------------
Octets                                               0                       0
Packets                                             39                     175
Errors                                               0                       0
-------------------------------------------------------------------------------
At time t = 6 sec (Mode: Absolute)
-------------------------------------------------------------------------------
Octets                                               0                       0
Packets                                             39                     175
Errors                                               0                       0
-------------------------------------------------------------------------------
At time t = 9 sec (Mode: Absolute)
-------------------------------------------------------------------------------
Octets                                               0                       0
Packets                                             39                     175
Errors                                               0                       0
===============================================================================
A:ALA-12>monitor#

A:ALA-12>monitor# port 2/1/4 interval 3 repeat 3 rate
===============================================================================
Monitor statistics for Port 2/1/4
===============================================================================
                                                 Input                  Output
-------------------------------------------------------------------------------
At time t = 0 sec (Base Statistics)
-------------------------------------------------------------------------------
Octets                                               0                       0
Packets                                             39                     175
Errors                                               0                       0
-------------------------------------------------------------------------------
At time t = 3 sec (Mode: Rate)
-------------------------------------------------------------------------------
Octets                                               0                       0
Packets                                              0                       0
Errors                                               0                       0
Bits                                                 0                       0
Utilization (% of port capacity)                  0.00                    0.00
-------------------------------------------------------------------------------
At time t = 6 sec (Mode: Rate)
-------------------------------------------------------------------------------
Octets                                               0                       0
Packets                                              0                       0
Errors                                               0                       0
Bits                                                 0                       0
Utilization (% of port capacity)                  0.00                    0.00
-------------------------------------------------------------------------------
```

```
At time t = 9 sec (Mode: Rate)
-------------------------------------------------------------------------------
Octets                                          0                           0
Packets                                         0                           0
Errors                                          0                           0
Bits                                            0                           0
Utilization (% of port capacity)             0.00                        0.00
===============================================================================
A:ALA-12>monitor#


===============================================================================
*A:Cpm-A> monitor port bundle-fr-1/1.1
===============================================================================
Monitor statistics for Port bundle-fr-1/1.1
===============================================================================
                                                  Input                  Output
-------------------------------------------------------------------------------
At time t = 0 sec (Base Statistics)
-------------------------------------------------------------------------------
Octets                                              0                       0
Packets                                             0                       0
Errors                                              0                       0
```

port

Syntax **port all-ethernet-rates** [**interval** ***seconds***] [**repeat** ***repeat***]

Context monitor

Description This command enables port traffic monitoring and utilization output for all data Ethernet ports enabled in the system, in a table output format.

Monitor commands are similar to **show** commands but only statistical information displays. Monitor commands display the selected statistics according to the configured number of times at the interval specified.

Parameters **interval** *seconds* **—** Configures the interval for each display in seconds.

Values 3 to 60

Default 10 seconds

repeat *repeat* **—** Configures how many times the command is repeated.

Values 1 to 999

Default 10

Output

Sample Output

```
A:ALA-12>monitor# port all-ethernet-rates interval 3 repeat 100
===============================================================================
```

```
Monitor statistics for all Ethernet Port Rates
================================================================================
Port-Id          D                Bits   Packets     Errors    Util
--------------------------------------------------------------------------------
At time t = 0 sec (Base Statistics)
--------------------------------------------------------------------------------
5/1/1            I                0        0          0          0.00
                 O                0        0          0          0.00

5/2/1            I                0        0          0          0.00
                 O                0        0          0          0.00

--------------------------------------------------------------------------------
At time t = 3 sec (Mode: Rate)
--------------------------------------------------------------------------------
5/1/1            I                0        0          0          0.00
                 O                0        0          0          0.00

5/2/1            I                0        0          0          0.00
                 O                0        0          0          0.00

--------------------------------------------------------------------------------
At time t = 6 sec (Mode: Rate)
--------------------------------------------------------------------------------
5/1/1            I                0        0          0          0.00
                 O                0        0          0          0.00

5/2/1            I                0        0          0          0.00
                 O                0        0          0          0.00

--------------------------------------------------------------------------------
At time t = 9 sec (Mode: Rate)
--------------------------------------------------------------------------------
5/1/1            I       4286480384   697669          0         43.98
                 I       4286382080   697653          0         43.98

5/2/1            I       4254070784   692394          0         43.64
                 I       4253952000   692375          0         43.64
--------------------------------------------------------------------------------
At time t = 12 sec (Mode: Rate)
--------------------------------------------------------------------------------
5/1/1            I       9746288640    1586K          0         99.99
                 I       9746216960    1586K          0         99.99

5/2/1            I       9746280448    1586K          0         99.99
                 I       9746167808    1586K          0         99.99
================================================================================
A:ALA-12>monitor#
```

port

Syntax **atm** [**interval** *seconds*] [**repeat** *repeat*] [**absolute** | **rate**]

Context monitor>port

Description This command enables ATM port traffic monitoring.

Parameters **interval** *seconds* **—** Configures the interval for each display in seconds.

Values 3 to 60

Default 10 seconds

repeat *repeat* **—** Configures how many times the command is repeated.

Values 1 to 999

Default 10

absolute — When the **absolute** is specified, the raw statistics are displayed, without processing. No calculations are performed on the delta or rate statistics.

rate — When the **rate** is specified, the rate-per-second for each statistic is displayed instead of the delta.

Output

Sample Output

```
A:ALA-49# monitor port 9/1/1 atm interval 3 repeat 2 absolute
===============================================================================
Monitor ATM statistics for Port 9/1/1
===============================================================================
                                                    Input                 Output
-------------------------------------------------------------------------------
At time t = 0 sec (Base Statistics)
-------------------------------------------------------------------------------
Octets                                              0                         0
Cells                                               0                         0
Unknown VPI/VCI Cells                               0
-------------------------------------------------------------------------------
At time t = 3 sec (Mode: Absolute)
-------------------------------------------------------------------------------
Octets                                              0                         0
Cells                                               0                         0
Unknown VPI/VCI Cells                               0
-------------------------------------------------------------------------------
At time t = 6 sec (Mode: Absolute)
-------------------------------------------------------------------------------
Octets                                              0                         0
Cells                                               0                         0
Unknown VPI/VCI Cells                               0
===============================================================================
A:ALA-49#
```

queue-group

Syntax **queue-group** *queue-group-name* **egress** *access* **egress-queue** *egress-queue-id* [**interval** *seconds*] [**repeat** *repeat*] [**absolute**|**rate**]

Context monitor

Description This command enables queue-group monitoring for the specified parameters.

queue-group

Syntax **queue-group** *queue-group-name* **ingress** *access* **ingress-queue** *ingress-queue-id* [**interval** *seconds*] [**repeat** *repeat*] [**absolute** | **rate**]

Context monitor

Description This command enables queue-group monitoring for the specified parameters.

queue-group

Syntax **queue-group** *queue-group-name* **egress** *network* **instance** *instance-id* [**policer** *policer-id*] [**egress-queue** *egress-queue-id*] [**interval** seconds] [**repeat** *repeat*] [**absolute** | **rate**]

Context monitor

Description This command enables queue-group monitoring for the specified parameters.

2.26.2.8 Clear Commands

card

Syntax **card** *slot-number* **soft**
card *slot-number* **soft** [**hard-reset-unsupported-mdas**]
card *slot-number* **fp** [value] **ingress mode** {**access** | **network**} **queue-group** *group-name* **instance** *instance* **statistics**
card *slot-number* [**soft**]

Context clear

Description This command re-initializes the card in the specified slot. A clear card command (without the soft) is referred to as a *Hard Reset*. A clear card x soft command (with the soft) is referred to as a *Soft Reset*.

Parameters *slot-number* — Clears information for the specified card slot.

Values for7750 SR:
7750 SR-c12 and 7750 SR-c4: cards can not be cleared in these chassis types
7750 SR-7: 1 - 6
7750 SR-12: 1 - 10

Values for 7450 ESS:

7450 ESS-1: cards can not be cleared in this chassis type
7450 ESS-6: 1 - 5
7450 ESS-7: 1 - 6
7450 ESS-12: 1 - 10

Values for 7950 XRS:
1 - 20: whether you are in xrs-20 or xrs-40 mode.
C | D -> resets an extension CPM.

soft — Issues a soft reset of the I/O module (IOM).

lag

Syntax **lag** *lag-id* **statistics**

Context clear

Description This command clears statistics for the specified LAG ID.

Parameters *lag-id* — The LAG ID to clear statistics.

statistics — Specifies to clear statistics for the specified LAG ID.

mda

Syntax **mda** *mda-id* [**statistics**]

Context clear

Description This command reinitializes the specified MDA in a particular slot.

Parameters *mda-id* — Clears the specified slot and MDA/CMA.

Values 1, 2

statistics — Clears statistics for the specified MDA.

port

Syntax **port** *port-id* **atm pvc** [*vpi*[*/vci*]] **statistics**
port *port-id* **atm pvp** [*vpi*] **statistics**
port *port-id* **atm pvt** [*vpi1.vpi2*] **statistics**
port *port-id* **atm ilmi statistics**
port *port-id* **atm port-connection statistics**
port <port-id> phys-state-change-count
port *port-id* **ethernet efm-oam events** *local* | *remote*
port *port-id* **queue-group** *qgrp-id* [**instance** *instance-id*] **queue-depth** [**queue** *queue-id*] {**ingress**|**egress**} [**access**|**network**]

port *port-id* **queue-group** *queue-group-name* [**access** | **network**] {**ingress** | **egress**} [**access**|**network**] [{**statistics**|**associations**}]
port *port-id* **statistics**

Context clear

Description This command clears port statistics for the specified port(s).

Parameters *port-id* — The port identifier.

Values For the 7450 ESS and 7750 SR

port-id	*slot*/*mda*/*port* [.*channel*]		
	slot[/*mda*[/*port*]]		
	eth-sat-id	esat-*id*/*slot*/*port*	
		esat	keyword
		id	1 to 20
	pxc-id	pxc-*id*.*sub-port*	
		pxc	keyword
		id	1 to 64
		sub-port	a, b
	aps-id	aps-*group-id*[.*channel*]	
		aps	keyword
		group-id	1 to 64 (16 for 7750 SR-c12 and 7750 SR-c4)
	bundle ID	bundle-*type*-*slot*/*mda*.*bundle-num*	
		bundle	keyword
		type	ima, ppp
		bundle-num	1 to 336
	bpgrp-id	bpgrp-*type*-*bpgrp-num*	
		bgrp	keyword
		type	ima, ppp
		bgrp-num	1 to 2000 (256 for 7750 SR-c12 and 7750 SR-c4)

Values for the 7950 XRS:

port-id	*slot*/*mda*/*port* [.*channel*]		
	slot[/*mda*[/*port*]]		
	eth-sat-id	esat-*id*/*slot*/*port*	
		esat	keyword
		id	1 to 20
	pxc-id	pxc-*id*.*sub-port*	

pxc	keyword
id	1 to 64
sub-port	a, b

statistics — Specifies that port statistics will be cleared.

atm — Specifies that ATM port statistics will be cleared.

ilmi — Clears ILMI information. This parameter is only applicable for ports/bundles that support ILMI.

vpi — Specifies the ATM network virtual path identifier (VPI) for this PVC.

vci — Specifies the ATM network virtual channel identifier (VCI) for this PVC.

slot — The slot number.

Values 1 to10

mda — The MDA number.

Values 1, 2
MDA: 7750 SR-c12: 1, 3, 5, 7, 9, 11
CMA: 7750 SR-c12: 1 to 12

Default All MDAs

pvc — Clears PVC statistics.

port-connection — Clears port-connection statistics.

phys-state-change-count — Clears the counter that tracks physical port state transitions for ethernet ports ("Phys State Chng Cnt" in "show port" output, or tmnxPortPhysStateChangeCount in the TIMETRA-PORT-MIB)

queue-group *queue-group-name* **—** Clears the specified port queue group name. It uniquely identifies a port ingress queue group in the managed system.

ingress — Clears ingress queue group information

egress — Clears egress queue group information

ethernet — Specifies an Ethernet port will have the clear functions executed

efm-oam — Specifies the efm-oam will experience the cleared

events — specifies an efm-oam event will be cleared

local — only local efm-oam events will be cleared

remote — Only remote (received from peer) events will be cleared. Local and remote is not specified.

Default Without specifying an option, both local and remote are cleared.

Output

Sample Output

```
A:SR12# clear port 3/1/1 atm
  - atm

      cp              - Clear Connection Profile statistics
      ilmi            - Clear ILMI statistics
      interface-conn* - Clear interface-connection statistics
      pvc             - Clear PVC statistics
      pvp             - Clear PVP statistics
      pvt             - Clear PVT statistics

A:SR12# clear port 3/1/1 atm cp
  - cp [<cp>] statistics

 <cp>                : [1..8000]
 <statistics>        :
```

queue-group

Syntax **queue-group** *queue-group-name* **egress** *access* **egress-queue** *egress-queue-id* [**interval** *seconds*] [**repeat** *repeat*] [**absolute** | **rate**]

Context clear

Description This command clears queue-group monitoring for the specified parameters.

queue-group

Syntax **queue-group** *queue-group-name* **ingress** *access* **ingress-queue** *ingress-queue-id* [**interval** *seconds*] [**repeat** *repeat*] [**absolute** | **rate**]

Context clear

Description This command clears queue-group monitoring for the specified parameters.

queue-group

Syntax **queue-group** *queue-group-name* **egress** *network* **instance** *instance-id* [**policer** *policer-id*] [**egress-queue** *egress-queue-id*] [**interval** seconds] [**repeat** *repeat*] [**absolute** | **rate**]

Context clear

Description This command clears queue-group monitoring for the specified parameters.

2.26.2.9 Tools Commands

aps

Syntax **aps** *aps-id* [**clear**]
aps mc-aps-signaling [**clear**]
aps mc-aps-ppp [**clear**]

Context tools>dump>aps

Description This command displays Automated Protection Switching (APS) information.

Parameters **clear —** Removes all Automated Protection Switching (APS) operational commands.

mc-aps-signaling — Displays multi-chassis APS signaling information.

mc-aps-ppp — Displays multi-chassis APS PPP information.

Output

Sample Output

```
*A:AS_SR7_2# tools dump aps aps-33

GrpId = 33, state = Running, mode:cfg/oper = Bi-directional/Bi-directional
   revert = 0, workPort: N/A, protPort: 2/1/1, activePort: working
   rxK1 = 0x0 (No-Req on Protect), physRxK1 = 0x0, rxK2 = 0x5
   txK1 = 0x0 (No-Req on Protect), physTxK1 = 0x0, txK2 = 0x5
   K1ReqToBeTxed = 0x0, K1ChanToBeTxed = 0x0, lastRxReq = 0xc
   MC-APS Nbr = 100.100.100.1 (Up), advIntvl = 10, hold = 30
   workPort: status = OK, Tx-Lais = None, sdCnt = 1, sfCnt = 1
     numSwitched = 1, switchSecs = 0, lastSwitched = 07/25/2007 08:00:12
     disCntTime = , alarms = , switchCmd = No Cmd
   protPort: status = OK, Tx-Lais = None, sdCnt = 1,  sfCnt = 0
     numSwitched = 1, switchSecs = 0, lastSwitched = 07/25/2007 08:03:39
     disCntTime = , alarms = ,  switchCmd = No Cmd
   GrpStatus: OK, mmCnt = 1, cmCnt = 1, psbfCnt = 1, feplfCnt = 2
   LocalSwitchCmd: priority = No-Req, portNum = 0
   RemoteSwitchCmd: priority = No-Req, portNum = 0
   Running Timers = mcAdvIntvl mcHold
   processFlag =  apsFailures = , sonet = Y
   DebugInfo: dmEv = 0, dmClrEv = 0, amEv = 1, amClrEv = 1
     cmEv = 1, cmClrEv = 1, psbfEv = 1, psbfClrEv = 1
     feplfEv = 2, feplfClrEv = 2, wtrEv = 0, psbfDetectEv = 0
     wSdEv = 1, wSfEv = 2, pSdEv = 1, pSfEv = 1
     portStatusEv = 8, rxK1Ev = 9, txLaisEv = 2, lastEvName = FeplClr
     CtlUpEv = 3, CtlDnEv = 2, wAct = 0, wDeAct = 0
Seq      Event  TxK1/K2 RxK1/K2  Dir    Active         Time
===     ======= ======= ======= =====   ======  ================
000     ProtAdd 0xc005  0x0000  Tx-->     Work  497 02:18:10.590
001     RxKByte 0xc005  0x6dea  Rx<--     Work  497 02:20:14.820
002     RxKByte 0xc005  0xc005  Rx<--     Work  497 02:21:30.970
003     RxKByte 0xc005  0x2005  Rx<--     Work  497 02:21:36.530
004      pSFClr 0x0005  0x2005  Tx-->     Work  497 02:21:40.590
```

```
005     RxKByte 0x0005  0x0005  Rx<--     Work  497 02:21:40.600
006     RxKByte 0x0005  0xc115  Rx<--     Work  497 02:25:22.840
007     RxKByte 0x2115  0xc115  Tx-->     Prot  497 02:25:22.840
008     RxKByte 0x2115  0xa115  Rx<--     Prot  000 00:00:47.070
009     RxKByte 0x2115  0x1115  Rx<--     Prot  000 00:00:47.560
010     RxKByte 0x2115  0xc005  Rx<--     Prot  000 00:00:57.010
011     RxKByte 0x2005  0xc005  Tx-->     Work  000 00:00:57.010
012     RxKByte 0x2005  0x0005  Rx<--     Work  000 00:01:06.170
013     RxKByte 0x0005  0x0005  Tx-->     Work  000 00:01:06.170
```

Sample Output

```
:AS_SR7_1# tools dump aps mc-aps-ppp

 pppmMcsModStarted = Yes
 pppmMcsDbgDoSync = Yes
 pppmMcsApsGrpHaAuditDone = Yes
 pppmMcsPostHaSyncedApsGrpId = 47
 pppmMcsMcApsChanCnt = 1280

 pppmMcsDbgRxPktCnt = 2560
 pppmMcsDbgRxPktNotProcessedCnt = 0
 pppmMcsDbgRxPktInvalidCnt = 0
 pppmMcsDbgInconsistentRxPktDropCnt = 0
 pppmMcsDbgInconsistentTxPktDropCnt = 1176
 pppmMcsDbgTxPktNotSentCnt = 0
 pppmMcsDbgTxPktSentCnt = 25
 pppmMcsDbgEvtDropCnt = 0
 pppmMcsDbgMemAllocErrCnt = 0
 pppmMcsDbgReTxCnt = 0
 pppmMcsDbgReTxExpCnt = 0
 pppmMcsDbgReReqCnt = 0

 pppmMcsStateAckQueueCnt (curr/peek) = 0/130
 pppmMcsStateReqQueueCnt (curr/peek) = 0/1280
 pppmMcsStateReReqQueueCnt (curr/peek) = 0/256
 pppmMcsStateTxQueueCnt (curr/peek) = 0/512
 pppmMcsStateReTxQueueCnt (curr/peek) = 0/130

 MC-APS Peer Info :
 --------------------

   Grp 13 Addr 100.100.100.2 - Up
   Grp 20 Addr 100.100.100.2 - Up
   Grp 35 Addr 100.100.100.2 - Up
   Grp 43 Addr 100.100.100.2 - Up
   Grp 47 Addr 100.100.100.2 - Up

 Number of pppmMcs Evt Msgs dispatched:
   ctl_link_state : 0
   ctl_link_up_tmr : 0
   ctl_link_down_tmr : 0
   ha_audit_done : 0
```

Sample Output

```
*A:eth_aps_sr7# tools dump aps mc-aps-signaling
```

```
MC-APS Control Debug Counters :
-------------------------------
Ctl Pkt Rx = 0
Invalid Rx Ctl Pkt = 0
Incompatible Rx Ctl Pkt = 0
Nbr not Rx Ctl Pkt = 0
Invalid Rx Ctl Pkt Tlv = 0
Ctl Pkt Rx-ed before HaReady = 0
Not sent Tx Ctl Pkt = 0

MC-APS-LAG Debug Counters :
---------------------------
Ctl Pkt Rx from IOM        = 0

Not processed Rx Ctl Pkt   = 0
Invalid Rx Ctl Pkt         = 0
Incompatible Rx Ctl Pkt    = 0
Rx Ctl Pkt queueing failed = 0

Ctl Pkt Tx (direct)        = 0
Ctl Pkt Tx (UDP socket)    = 0
Not sent Tx Ctl Pkt        = 0

Route Update               = 0
Matched Route Update       = 0

Msg Buf Alloc Failed       = 0

MC-APS-LAG NbrRoute Entries :
-------------------------------
NbrAddr 1.1.1.1 NextHopAddr ::
  EgressIfIndex =  0
  EgressPortId =  Unknown
  app refCnt  =  1
  refCntTotal =  1
```

aps

Syntax **aps**

Context tools>perform

Description This command enables the context to perform Automated Protection Switching (APS) operations.

clear

Syntax **clear** *aps-id* {**protect** | **working**}

Context tools>perform>aps
tools>dump>aps

Description This command removes all Automated Protection Switching (APS) operational commands.

Parameters *aps-id* — This option clears a specific APS on un-bundled SONET/SDH ports.

protect — This command clears a physical port that is acting as the protection circuit for the APS group.

working — This command clears a physical port that is acting as the working circuit for this APS group.

clear

Syntax **clear** *ring-id*

Context tools>perform>eth-ring

Description This command, at the Ethernet Ring Node, is used for the following operations:

a. Clearing an active local administrative command (for example, Forced Switch or Manual Switch).
b. Triggering reversion before the WTR or WTB timer expires in case of revertive operation.
c. Triggering reversion in case of non-revertive operation.

Parameters *ring-id* — This option clears a specific Ethernet Ring.

exercise

Syntax **exercise** *aps-id* {**protect** | **working**}

Context tools>perform
tools>dump>aps

Description This command performs an exercise request on the protection or working circuit.

Parameters *aps-id* — This option clears a specific APS on un-bundled SONET/SDH ports.

protect — This command performs an exercise request on the port that is acting as the protection circuit for the APS group.

working — This command performs an exercise request on the port that is acting as the working circuit for this APS group.

force

Syntax **force** *aps-id* {**protect** | **working**}

Context tools>perform

tools>dump>aps

Description This command forces a switch to either the protect or working circuit

Parameters *aps-id* — This option clears a specific APS on un-bundled SONET/SDH ports.

protect — This command clears a physical port that is acting as the protection circuit for the APS group.

working — This command clears a physical port that is acting as the working circuit for this APS group.

force

Syntax **force** *ring-id* **path** {**1** | **2**}

Context tools>perform>eth-ring

Description This command forces a block on the ring port where the command is issued.

manual

Syntax **manual** *ring-id* **path** {**1** | **2**}

Context tools>perform>eth-ring

Description In the absence of a failure or FS, this command forces a block on the ring port where the command is issued.

lockout

Syntax **lockout** *aps-id*

Context tools>perform
tools>dump>aps

Description This command locks out the protection circuit.

Parameters *aps-id* — Automated Protection Switching ID

Values 1 to 64

request

Syntax **request** *aps-id* {**protect** | **working**}

Context tools>perform

tools>dump>aps

Description This command requests a manual switch to protection or working circuit.

Parameters *aps-id* — This option clears a specific APS on unbundled SONET/SDH ports.

protect — This command requests a manual switch to a port that is acting as the protection circuit for the APS group.

working — This command requests a manual switch to a port that is acting as the working circuit for this APS group.

eth-tunnel

Syntax **eth-tunnel** *tunnel-index* [**clear**]

Context tools>dump

Description This command displays Ethernet tunnel information.

Output

Sample Output

```
*A:PE-E# tools dump eth-tunnel 1

TunnelId 1 (Up/Up), Port eth-tunnel-1 (Up/Up): type g8031-1to1
 NumMems 2/2, Up/Dn 0/0, active 0x1, present 0x3 baseMemPort 1/1/2
  memId 1 (P), port 1/1/2 (Up), tag 1.0(Up) status (Up/Up)
    ccCnt-sf/ok 1/1 idx 0 tunId 1
  memId 2 (S), port 2/1/2 (Up), tag 1.0(Up) status (Up/Up)
    ccCnt-sf/ok 0/0 idx 1 tunId 1

  TunId = 1, state = Running, Active =  Work, Now = 000 00:16:48.140
   revert = 1, ReqState = NR-NULL, Pdu(Tx/Rx): 0x0f0000/0x0f0000
   Defects =
   Running Timers = PduReTx
    Work MemId = 1 (1/1/2:1.0), state = Ok, cc = 000 00:16:23.510U
      ActiveCnt = 4, ActiveSeconds = 791
    Protect MemId = 2 (2/1/2:1.0), state = Ok, cc = 000 00:09:47.560U
      ActiveCnt = 3, ActiveSeconds = 308
   DbgCnts: swoEv = 2, wMemSts = 2, pMemSts =  0
      rxPdu (valid/Invalid) = 4/0, wSfClr = 1, pSfClr = 0, wtrExp =  1
      cm = 0, cmClr = 0, pm = 0, pmClr = 0, nr = 0, nrClr = 0
  Seq  Event     TxPdu           RxPdu       Dir    Act          Time
  ===  ========  ============  ============  =====  ====  ================
  000   wMemSts  0xbf0101 wSF  0x0f0000  NR  Tx-->  Prot  000 00:16:12.450
  001     RxPdu  0xbf0101 wSF  0x0f0101  NR  Rx<--  Prot  000 00:16:12.450
  002     RxPdu  0xbf0101 wSF  0xbf0101 wSF  Rx<--  Prot  000 00:16:12.480
  003     RxPdu  0xbf0101 wSF  0x0f0101  NR  Rx<--  Prot  000 00:16:24.890
  004    wSFClr  0x5f0101 WTR  0x0f0101  NR  Tx-->  Prot  000 00:16:25.030
  005       WTR  0x0f0000  NR  0x0f0101  NR  Tx-->  Work  000 00:16:26.630
  006     RxPdu  0x0f0000  NR  0x0f0000  NR  Rx<--  Work  000 00:16:26.630
*A:PE-E#
```

frame-relay

Syntax **frame-relay** *port-id*

Context tools>dump

Description This command displays frame-relay information.

Parameters *port-id* — Specifies the physical port ID.

port-id	*slot*/*mda*/*port* [.*channel*]		
	eth-sat-id	esat-*id*/*slot*/*port*	
		esat	keyword
		id	1 to 20
	pxc-id	pxc-*id*.*sub-port*	
		pxc	keyword
		id	1 to 64
		sub-port	a, b

Output

Sample Output

```
tools dump frame-relay bundle-fr-1/1.1

MLFR info for bundle-fr-1/1.1:
    expectedBundleIdStr : "7750-bundle-fr-1/1.1"
    bundleId            : 1
    active/configured   : 4/4
    adminEnabled        : 1
    ddDebDownCnt        : 10
    ddMaxForBundle      : 0
    fwdId               : 0
    linkDebugMask       : 0


-------- Member Information ---------

1/1/1.1.1.1                PortId = 0x22208056
    Internal ID             : bundle 1, link 1
    Link protocol state     : Up
    Diff delay state        : Yellow
    ddRedCnt                : 0
    ddYellowCnt             : 11
    Smoothed diff delay     : 20 ms.
    Historical RTT          : 22788, 22756, 22752 us.
    Rx LinkId               : "1/1/1.1.1.1"
    WARNING                 : dbgDelay=20 ms
    LIP CTL Messages        : Tx: 136         Rx: 135
    Hello Messages          : Tx: 121         Rx: 12
    Hello Ack Messages      : Tx: 12          Rx: 121
    AddLink Messages        : Tx: 2           Rx: 1
```

```
    AddLinkAck Messages      : Tx: 1           Rx: 1
    AddLinkRej Messages      : Tx: 0           Rx: 0
1/1/1.1.2.1                 PortId = 0x22208077
    Internal ID              : bundle 1, link 2
    Link protocol state      : Up
    Diff delay state         : OK
    Smoothed diff delay      : 0 ms.
    Historical RTT           : 2271, 2304, 2309 us.
    Rx LinkId                : "1/1/1.1.2.1"
    LIP CTL Messages         : Tx: 136         Rx: 135
    Hello Messages           : Tx: 121         Rx: 12
    Hello Ack Messages       : Tx: 12          Rx: 121
    AddLink Messages         : Tx: 2           Rx: 1
    AddLinkAck Messages      : Tx: 1           Rx: 1
    AddLinkRej Messages      : Tx: 0           Rx: 0
1/1/1.1.3.1                 PortId = 0x22208098
    Internal ID              : bundle 1, link 4
    Link protocol state      : Up
    Diff delay state         : OK
    Smoothed diff delay      : 0 ms.
    Historical RTT           : 2218, 2223, 2359 us.
    Rx LinkId                : "1/1/1.1.3.1"
    LIP CTL Messages         : Tx: 14          Rx: 13
    Hello Messages           : Tx: 8           Rx: 1
    Hello Ack Messages       : Tx: 1           Rx: 8
    AddLink Messages         : Tx: 3           Rx: 1
    AddLinkAck Messages      : Tx: 1           Rx: 2
    AddLinkRej Messages      : Tx: 0           Rx: 0
1/1/1.1.4.1                 PortId = 0x222080b9
    Internal ID              : bundle 1, link 3
    Link protocol state      : Up
    Diff delay state         : OK
    Smoothed diff delay      : 0 ms.
    Historical RTT           : 2248, 2242, 2309 us.
    Rx LinkId                : "1/1/1.1.4.1"
    LIP CTL Messages         : Tx: 14          Rx: 13
    Hello Messages           : Tx: 8           Rx: 1
    Hello Ack Messages       : Tx: 1           Rx: 8
    AddLink Messages         : Tx: 3           Rx: 1
    AddLinkAck Messages      : Tx: 1           Rx: 2
    AddLinkRej Messages      : Tx: 0           Rx: 0
```

lag

Syntax **lag lag-id** *lag-id*

Context tools>dump

Description This command dumps LAG information.

Parameters *lag-id* — Specifies the LAG ID.

Values 1 to 800

map-to-phy-port

Syntax **map-to-phy-port** {**ccag** *ccag-id* | **lag** *lag-id* | **eth-tunnel** *tunnel-index*} {**isid** *isid* [**end-isid** *isid*] | **service** *service-id* | *svc-name* [**end-service** *service-id* | *svc-name*]} [**summary**]

Context tools>dump

Description This command provides the ability to respond to a query to provide the link in a LAG/Ethernet tunnel (load sharing protection mode)/CCAG that is currently assigned to a given service-id or ISID.

Parameters *lag-id* — Specifies the LAG ID.

Values 1 to 800

isid — Specifies the ISID.

Values 0 to 16777215

service-id — Specifies the service ID.

Values 1 to 2147483648, 64 char max

tunnel-index — Specifies the tunnel index.

Values 1 to 1024

ccag-id — Specifies the CCAG ID.

Values 1 to 8

ppp

Syntax **ppp** *port-id*

Context tools>dump

Description This command displays PPP information for a port.

Parameters *port-id* — Specifies the physical port ID.

port-id	*slot*/*mda*/*port* [.*channel*]		
	eth-sat-id	esat-*id*/*slot*/*port*	
		esat	keyword
		id	1 to 20
	pxc-id	pxc-*id*.*sub-port*	
		pxc	keyword
		id	1 to 64
		sub-port	a, b

Output

Sample Output

```
*A:sr7# tools dump ppp aps-1.1.1.1
===============================================================================
Id              : aps-1.1.1.1        ppp unit       : 40
member of       : bpgrp-ppp-1
===============================================================================
looped back     : no                 dbgMask        : 0x0
-------------------------------------------------------------------------------
LCP
-------------------------------------------------------------------------------
phase           : NETWORK            state          : OPENED
passive         : off                silent         : off
restart         : on

mru             : 1500               mtu            : 1502
ack'd peer mru  : 1500
got local mrru  : 1524
local magic     : 0x0                peer magic     : 0x0

keepalive       : on                 echo num       : 2
echo timer      : on                 echos fail     : 3
echo intv       : 10                 echos pend     : 0

options      mru      asyncMap upap     chap     magic    pfc
we negotiate Yes       No       No       No       No      Yes
peer ack'd   Yes       No       No       No       No       No
we allow     Yes       No       No       No       No      Yes
we ack'd     Yes       No       No       No       No       No

options      acfc     lqr      mrru     shortSeq endPoint mlhdrfmt
we negotiate Yes       No      Yes       No      Yes       No
peer ack'd    No       No      Yes       No      Yes       No
we allow     Yes       No      Yes      Yes      Yes       No
we ack'd      No       No      Yes       No      Yes       No
===============================================================================
*A:sr7#
```

redundancy

Syntax **redundancy**

Context tools>dump

Description This command enables the context to dump redundancy parameters.

multi-chassis

Syntax **multi-chassis**

Context tools>dump>redundancy

Description This command enables the context to dump multi-chassis parameters.

mc-ring

Syntax **mc-ring**

Context tools>dump>redundancy>multi-chassis

Description This command dumps multi-chassis ring data.

sync-database

Syntax **sync-database** [**peer** *ip-address*] [**port** *port-id* | *lag-id*] [**sync-tag** *sync-tag*] [**application** {**dhcps** | **igmp** | **igmp-snooping** | **srrp** | **sub-mgmt** | **mld-snooping** | **mc-ring**}] [**detail**] [**type** {**alarm-deleted** | **local-deleted**}]

Context tools>dump>redundancy>multi-chassis

Description This command dumps multi-chassis sync database information.

Parameters **peer** *ip-address* **—** Dumps the specified address of the multi-chassis peer.

port *port-id* **—** Dumps the specified port ID of the multi-chassis peer.

port *lag-id* **—** Dumps the specified Link Aggregation Group (LAG) on this system.

sync-tag *sync-tag* **—** Dumps the synchronization tag used while synchronizing this port with the multi-chassis peer.

application — Dumps the specified application information that was synchronized with the multi-chassis peer.

Values dhcps, igmp, igmp-snooping, mc-ring, srrp, sub-mgmt, mld-snooping, all

detail — Displays detailed information.

alarm-deleted|*local-deleted* — Filters by entry type.

Output

Sample Output

```
A:Dut-C# tools dump redundancy multi-chassis sync-database application

 <ip-address>         : a.b.c.d
 <port-id|lag-id>     : slot/mda/port or lag-<lag-id>
 <sync-tag>           : [32 chars max]
 <application>        : dhcp-server    - local dhcp server
                        igmp           - internet group management protocol
                        igmp-snooping  - igmp-snooping
                        mc-ring        - multi-chassis ring
                        mld            - multicast listener discovery
                        mld-snooping   - multicast listener discovery-snooping
                        srrp           - simple router redundancy protocol
                        sub-host-trk   - subscriber host tracking
                        sub-mgmt-ipoe  - subscriber management for IPoE
```

```
                        sub-mgmt-pppoe - subscriber management for PPPoE
                        mc-ipsec       - multi-chassis IPsec
<detail>              :  - displays detailed information
<type>                : alarm-deleted|local-deleted|global-deleted|
                        omcr-standby|omcr-alarmed
```

srrp-sync-data

Syntax **srrp-sync-database** [**instance** *instance-id*] [**peer** *ip-address*]

Context tools>dump>redundancy>multi-chassis

Description This command dumps multi-chassis SRRP sync database information.

Parameters *instance-id* — Specifies the instance ID.

Values 1 to 4294967295

ip-address — Dumps the specified address (in the form of a.b.c.d).

ima

Syntax **ima**

Context tools>perform

Description This command allows the use of IMA operations.

reset

Syntax **reset** *bundle-id*

Context tools>perform>ima

Description This command sets an IMA-bundle to the Start Up state.

Parameters *bundle-id* — Specifies an existing bundle ID.

Values **bundle**-**ima**-*slot/mda.bundle-num*

bundle-num — Specifies the bundle number.

Values 1 to 256

lag

Syntax **lag**

Context tools>perform

Description This command provides tools for controlling LAG.

clear-force

Syntax **clear-force all-mc**
clear-force lag-id *lag-id* [**sub-group** *sub-group-id*]
clear-force peer-mc *ip-address*

Context tools>perform>lag

Description This command clears forced status.

Parameters **all-mc —**

lag-id *lag-id* **—** Specifies the LAG ID.

Values 1 to 800

sub-group *sub-group-id* **—** Specifies the subscriber group ID.

Values 1 to 16

peer-mc *ip-address* **—** Specifies the peer MC IP address.

force

Syntax **force all-mc** {**active** | **standby**}
force lag-id *lag-id* [**sub-group** *sub-group-id*] {**active** | **standby**}
force peer-mc *peer-ip-address* {**active** | **standby**}

Context tools>perform>lag

Description This commands allow forcing specified LAG, subgroup, all MC-LAGs or remote peer for MC-LAGs to become active or standby when LAG runs in Active/Standby mode. To remove forced condition, an operator must execute tools perform lag clear-force command.

load-balance

Syntax **load-balance lag-id** *lag-id* [**class** {**1** | **2** | **3**}]

Context tools>perform>lag

Description Load balance specified LAG's links when per-link-hash weighted is deployed. Load balancing can be per specified class or on all classes if no class is specified.

2.26.2.9.1 Debug Commands

lmi (frame-relay)

Syntax **lmi** [*port-id*]
no lmi

Context debug>frame-relay

Description This debug command enables tracing of all the LMI messages in both receive and transmit directions for one or all of the Frame Relay interfaces. All types of Frame Relay interfaces are supported. If the port ID is not specified, debug is enabled on all Frame Relay interfaces.

The **no** form of the command turns off LMI and Frame-Relay debugging, **debug>frame-relay>no lmi** and **debug>no frame-relay**.

Parameters *port-id* — Specifies the ILMI-supporting port ID.

Values

port-id	*slot*/*mda*/*port* [.*channel*]		
	eth-sat-id	esat-*id*/*slot*/*port*	
		esat	keyword
		id	1 to 20
	pxc-id	pxc-*id*.*sub-port*	
		pxc	keyword
		id	1 to 64
		sub-port	a, b

Output

Sample Output

```
2959 2007/04/11 23:01:34.63 MINOR: DEBUG #2001 - FR
"FR: TX STATUS Msg on dce Port: 1/1/1 LMI: itu
FR Hdr: 00 01 03 08 00 7D
Rpt IE: 51 01 01 LINK_INT_VERIFY
KA IE: 53 02 31 45 TxSeqNo=49 RxSeqNo=69"

2960 2007/04/11 23:01:44.63 MINOR: DEBUG #2001 - FR
"FR: RX STATUS ENQ Msg on dce Port: 1/1/1 LMI: itu
FR Hdr: 00 01 03 08 00 75
Rpt IE: 51 01 01 LINK_INT_VERIFY
KA IE: 53 02 46 31 TxSeqNo=70 RxSeqNo=49"
```

ilmi (atm)

Syntax [**no**] **ilmi** *port-id*

Context debug>atm

Description This command enables debugging for ATM ILMI.

The **no** form of the command turns off ILMI and debugging,.

Parameters *port-id* — Specifies the ILMI-supporting port ID.

Values

port-id	*slot*/*mda*/*port* [.*channel*]		
	eth-sat-id	esat-*id*/*slot*/*port*	
		esat	keyword
		id	1 to 20
	pxc-id	pxc-*id*.*sub-port*	
		pxc	keyword
		id	1 to 64
		sub-port	a, b

Output

Sample Output

```
A:CHRISILMI# debug atm no ilmi 1/2/2
A:CHRISILMI# debug atm ilmi 1/2/4

In kernel:
ILMI_DEBUG_LOG {557907970}: 21:32:28
PDU DUMP (RAW):
 30 77 02 01 00 04 04 49 4c 4d 49 a4
 6c 06 07 2b 06 01 04 01 82 61 40 04
 00 00 00 00 02 01 06 02 01 02 43 03
 1b 24 b1 30 50 30 12 06 0d 2b 06 01
 04 01 82 61 02 05 01 01 01 00 02 01
 00 30 12 06 0d 2b 06 01 04 01 82 61
 02 05 01 01 03 00 02 01 21 30 12 06
 0d 2b 06 01 04 01 82 61 02 05 01 01
 02 00 02 01 00 30 12 06 0d 2b 06 01
 04 01 82 61 02 05 01 01 04 00 02 01

 00 00 00
PDU DUMP (DECODED):
  PDU Length: 123
   Community: ILMI
     Version: 1
    Msg Type: SNMP TRAP
    ObjectId: 1.3.6.1.4.1.353.2.5.1.1.1.0
    ObjectId: 1.3.6.1.4.1.353.2.5.1.1.3.0
```

```
    ObjectId: 1.3.6.1.4.1.353.2.5.1.1.2.0
    ObjectId: 1.3.6.1.4.1.353.2.5.1.1.4.0
...
```

cisco-hdlc

Syntax **cisco-hdlc** [*port-id*]
no cisco-hdlc

Context debug

Description This command configures debugging for Cisco-HDLC encapsulation.

Parameters *port-id* — Specifies the physical port ID.

port-id	*slot*/*mda*/*port* [.*channel*]		
	eth-sat-id	esat-*id*/*slot*/*port*	
		esat	keyword
		id	1 to 20
	pxc-id	pxc-*id*.*sub-port*	
		pxc	keyword
		id	1 to 64
		sub-port	a, b

lag

Syntax **lag** [**lag-id** *lag-id* [**port** *port-id*]] [**all**]
lag [**lag-id** *lag-id* [**port** *port-id*]] [**sm**] [**pkt**] [**cfg**] [**red**] [**iom-upd**] [**port-state**] [**timers**] [**sel-logic**] [**mc**] [**mc-pkt**]
no lag [**lag-id** *lag-id*]

Context debug

Description This command enables debugging for LAG.

Parameters *lag-id* — Specifies the link aggregation group ID.

port-id — Specifies the physical port ID.

port-id	*slot*/*mda*/*port* [.*channel*]		
	eth-sat-id	esat-*id*/*slot*/*port*	
		esat	keyword
		id	1 to 20
	pxc-id	pxc-*id*.*sub-port*	
		pxc	keyword
		id	1 to 64

	sub-port	a, b

sm — Specifies to display trace LACP state machine.

pkt — Specifies to display trace LACP packets.

cfg — Specifies to display trace LAG configuration.

red — Specifies to display trace LAG high availability.

iom-upd — Specifies to display trace LAG IOM updates.

port-state — Specifies to display trace LAG port state transitions.

timers — Specifies to display trace LAG timers.

sel-logic — Specifies to display trace LACP selection logic.

mc — Specifies to display multi-chassis parameters.

mc-packet — Specifies to display the MC-LAG control packets with valid authentication were received on this system.

lmi

Syntax **lmi** [*port-id*]
no lmi

Context debug>frame-relay

Description This debug command enables tracing of all the LMI messages in both receive and transmit directions for one or all of the Frame Relay interfaces. All types of Frame Relay interfaces are supported. If the port ID is not specified, debug is enabled on all Frame Relay interfaces.

The **no** form of the command turns off LMI and Frame-Relay debugging, **debug>frame-relay>no lmi** and **debug>no frame-relay**.

Parameters *port-id* — Specifies the ILMI-supporting port ID.

port-id	*slot*/*mda*/*port* [.*channel*]		
	eth-sat-id	esat-*id*/*slot*/*port*	
		esat	keyword
		id	1 to 20
	pxc-id	pxc-*id*.*sub-port*	
		pxc	keyword
		id	1 to 64
		sub-port	a, b

Output

Sample Output

```
2959 2007/04/11 23:01:34.63 MINOR: DEBUG #2001 - FR
"FR: TX STATUS Msg on dce Port: 1/1/1 LMI: itu
FR Hdr: 00 01 03 08 00 7D
Rpt IE: 51 01 01 LINK_INT_VERIFY
KA IE: 53 02 31 45 TxSeqNo=49 RxSeqNo=69"

2960 2007/04/11 23:01:44.63 MINOR: DEBUG #2001 - FR
"FR: RX STATUS ENQ Msg on dce Port: 1/1/1 LMI: itu
FR Hdr: 00 01 03 08 00 75
Rpt IE: 51 01 01 LINK_INT_VERIFY
KA IE: 53 02 46 31 TxSeqNo=70 RxSeqNo=49"
```

frf16

Syntax [**no**] **frf16** *port-id*

Context debug>frame-relay

Description This command enables tracing of all FRF16 compliant MLFR link integrity protocol messages in both the receive and transmit directions on a specific member link of an MLFR bundle. The **no** form of the command turns off MLFR debugging.

Parameters *port-id* — Specifies the port ID of the FRF16 bundle member link.

port-id	*slot*/*mda*/*port* [.*channel*]		
	eth-sat-id	esat-*id*/*slot*/*port*	
		esat	keyword
		id	1 to 20
	pxc-id	pxc-*id*.*sub-port*	
		pxc	keyword
		id	1 to 64
		sub-port	a, b

Output

Sample Output

```
1 2009/02/18 10:39:42.74 UTC MINOR: DEBUG #2001 Base MLFR
"MLFR: [_LIP_ParseRxFrame]
RxMsg <bundle-fr-1/1.1:1/1/1.0x56> <state-0: Up>
<MsgType-5:HelloAck>
     <ie-03:      MagicNum>,<len 06>, <27002>
     <ie-05:     TimeStamp>,<len 06>, <0x4b1c4558>"

2 2009/02/18 10:39:43.73 UTC MINOR: DEBUG #2001 Base MLFR
"MLFR: [_LIP_TxFrame]
TxMsg <bundle-fr-1/1.1:1/1/1.0x56> <state-0: Up>
<MsgType-4:Hello>
```

```
     <ie-03:      MagicNum>,<len 06>, <31104>
     <ie-05:     TimeStamp>,<len 06>, <0x5d804569>"

3 2009/02/18 10:39:43.73 UTC MINOR: DEBUG #2001 Base MLFR
"MLFR: [_LIP_ParseRxFrame]
RxMsg <bundle-fr-1/1.1:1/1/1.0x56> <state-0: Up>
<MsgType-5:HelloAck>
     <ie-03:      MagicNum>,<len 06>, <27002>
     <ie-05:     TimeStamp>,<len 06>, <0x5d804569>"
```

ppp

Syntax [**no**] **ppp** *port-id*

Context debug

Description This command enables/disables and configures debugging for PPP.

Parameters *port-id* — Specifies the physical port ID

port-id	*slot*/*mda*/*port* [.*channel*]		
	eth-sat-id	esat-*id*/*slot*/*port*	
		esat	keyword
		id	1 to 20
	pxc-id	pxc-*id*.*sub-port*	
		pxc	keyword
		id	1 to 64
		sub-port	a, b
	aps-id	aps-*group-id*[.*channel*]	
		aps	keyword
		group-id	1 to 64
	bundle ID	bundle-*type-slot/mda.bundle-num*	
		bundle	keyword
		type	ppp
		bundle-num	1 to 256 (16 for 7750 SR-c12 and 7750 SR-c4)
	bgrp ID	bpgrp-*type-bpgrp-num*	

3 Standards and Protocol Support

Note: The information presented is subject to change without notice.

Nokia assumes no responsibility for inaccuracies contained herein.

Access Node Control Protocol (ANCP)

draft-ietf-ancp-protocol-02, *Protocol for Access Node Control Mechanism in Broadband Networks*

RFC 5851, *Framework and Requirements for an Access Node Control Mechanism in Broadband Multi-Service Networks*

Application Assurance (AA)

3GPP Release 12 (ADC rules over Gx interfaces)

RFC 3507, *Internet Content Adaptation Protocol (ICAP)*

Asynchronous Transfer Mode (ATM)

AF-ILMI-0065.000, *Integrated Local Management Interface (ILMI) Version 4.0*

AF-PHY-0086.001, *Inverse Multiplexing for ATM (IMA) Specification Version 1.1*

AF-TM-0121.000, *Traffic Management Specification Version 4.1*

AF-TM-0150.00, *Addendum to Traffic Management v4.1 optional minimum desired cell rate indication for UBR*

GR-1113-CORE, *Asynchronous Transfer Mode (ATM) and ATM Adaptation Layer (AAL) Protocols Generic Requirements, Issue 1*

GR-1248-CORE, *Generic Requirements for Operations of ATM Network Elements (NEs), Issue 3*

ITU-T I.432.1, *B-ISDN user-network interface - Physical layer specification: General characteristics (02/99)*

ITU-T I.610, *B-ISDN operation and maintenance principles and functions (11/95)*

RFC 1626, *Default IP MTU for use over ATM AAL5*

RFC 2684, *Multiprotocol Encapsulation over ATM Adaptation Layer 5*

Border Gateway Protocol (BGP)

draft-hares-idr-update-attrib-low-bits-fix-01, *Update Attribute Flag Low Bits Clarification*

draft-ietf-idr-add-paths-04, *Advertisement of Multiple Paths in BGP*

draft-ietf-idr-best-external-03, *Advertisement of the best external route in BGP*

draft-ietf-idr-bgp-gr-notification-01, *Notification Message support for BGP Graceful Restart*

draft-ietf-idr-error-handling-03, *Revised Error Handling for BGP UPDATE Messages*

draft-ietf-sidr-origin-validation-signaling-04, *BGP Prefix Origin Validation State Extended Community*

RFC 1772, *Application of the Border Gateway Protocol in the Internet*

RFC 1997, *BGP Communities Attribute*

RFC 2385, *Protection of BGP Sessions via the TCP MD5 Signature Option*

RFC 2439, *BGP Route Flap Damping*

RFC 2545, *Use of BGP-4 Multiprotocol Extensions for IPv6 Inter-Domain Routing*

RFC 2858, *Multiprotocol Extensions for BGP-4*

RFC 2918, *Route Refresh Capability for BGP-4*

RFC 3107, *Carrying Label Information in BGP-4*

RFC 3392, *Capabilities Advertisement with BGP-4*

RFC 4271, *A Border Gateway Protocol 4 (BGP-4)*

RFC 4360, *BGP Extended Communities Attribute*

RFC 4364, *BGP/MPLS IP Virtual Private Networks (VPNs)*

RFC 4456, *BGP Route Reflection: An Alternative to Full Mesh Internal BGP (IBGP)*

RFC 4486, *Subcodes for BGP Cease Notification Message*

RFC 4659, *BGP-MPLS IP Virtual Private Network (VPN) Extension for IPv6 VPN*

RFC 4684, *Constrained Route Distribution for Border Gateway Protocol/ MultiProtocol Label Switching (BGP/MPLS) Internet Protocol (IP) Virtual Private Networks (VPNs)*

RFC 4724, *Graceful Restart Mechanism for BGP* (helper mode)

RFC 4760, *Multiprotocol Extensions for BGP-4*

RFC 4798, *Connecting IPv6 Islands over IPv4 MPLS Using IPv6 Provider Edge Routers (6PE)*

RFC 4893, *BGP Support for Four-octet AS Number Space*

RFC 5004, *Avoid BGP Best Path Transitions from One External to Another*

RFC 5065, *Autonomous System Confederations for BGP*

RFC 5291, *Outbound Route Filtering Capability for BGP-4*

RFC 5575, *Dissemination of Flow Specification Rules*

RFC 5668, *4-Octet AS Specific BGP Extended Community*

RFC 6810, *The Resource Public Key Infrastructure (RPKI) to Router Protocol*

RFC 6811, *Prefix Origin Validation*

RFC 7607, *Codification of AS 0 Processing*

Circuit Emulation

MEF-8, *Implementation Agreement for the Emulation of PDH Circuits over Metro Ethernet Networks, October 2004*

RFC 4553, *Structure-Agnostic Time Division Multiplexing (TDM) over Packet (SAToP)*

RFC 5086, *Structure-Aware Time Division Multiplexed (TDM) Circuit Emulation Service over Packet Switched Network (CESoPSN)*

RFC 5287, *Control Protocol Extensions for the Setup of Time-Division Multiplexing (TDM) Pseudowires in MPLS Networks*

Ethernet

IEEE 802.1AB, *Station and Media Access Control Connectivity Discovery*

IEEE 802.1ad, *Provider Bridges*

IEEE 802.1ag, *Connectivity Fault Management*

IEEE 802.1ah, *Provider Backbone Bridges*

IEEE 802.1ak, *Multiple Registration Protocol*

IEEE 802.1aq, *Shortest Path Bridging*

IEEE 802.1ax, *Link Aggregation*

IEEE 802.1D, *MAC Bridges*

IEEE 802.1p, *Traffic Class Expediting*

IEEE 802.1Q, *Virtual LANs*

IEEE 802.1s, *Multiple Spanning Trees*

IEEE 802.1w, *Rapid Reconfiguration of Spanning Tree*

IEEE 802.1X, *Port Based Network Access Control*

IEEE 802.3ab, *1000BASE-T*

IEEE 802.3ac, *VLAN Tag*

IEEE 802.3ad, *Link Aggregation*

IEEE 802.3ae, *10 Gb/s Ethernet*

IEEE 802.3ah, *Ethernet in the First Mile*

IEEE 802.3ba, *40 Gb/s and 100 Gb/s Ethernet*

IEEE 802.3i, *Ethernet*

IEEE 802.3u, *Fast Ethernet*

IEEE 802.3x, *Ethernet Flow Control*

IEEE 802.3z, *Gigabit Ethernet*

ITU-T G.8031/Y.1342, *Ethernet Linear Protection Switching*

ITU-T G.8032/Y.1344, *Ethernet Ring Protection Switching*

ITU-T Y.1731, *OAM functions and mechanisms for Ethernet based networks*

Ethernet VPN (EVPN)

draft-ietf-bess-evpn-overlay-02, *A Network Virtualization Overlay Solution using EVPN*

draft-ietf-bess-evpn-prefix-advertisement-02, *IP Prefix Advertisement in EVPN*

draft-ietf-bess-evpn-proxy-arp-nd-00, *Operational Aspects of Proxy-ARP/ND in EVPN Networks*

draft-ietf-bess-evpn-vpls-seamless-integ-00, *(PBB-)EVPN Seamless Integration with (PBB-)VPLS*

draft-ietf-bess-evpn-vpws-06, *VPWS support in EVPN*

RFC 7432, *BGP MPLS-Based Ethernet VPN*

RFC 7623, *Provider Backbone Bridging Combined with Ethernet VPN (PBB-EVPN)*

Frame Relay

ANSI T1.617 Annex D, *DSS1 - Signalling Specification For Frame Relay Bearer Service*

FRF.1.2, *PVC User-to-Network Interface (UNI) Implementation Agreement*

FRF.12, *Frame Relay Fragmentation Implementation Agreement*

FRF.16.1, *Multilink Frame Relay UNI/NNI Implementation Agreement*

FRF.5, *Frame Relay/ATM PVC Network Interworking Implementation*

FRF2.2, *PVC Network-to-Network Interface (NNI) Implementation Agreement*

ITU-T Q.933 Annex A, *Additional procedures for Permanent Virtual Connection (PVC) status management*

Generalized Multiprotocol Label Switching (GMPLS)

draft-ietf-ccamp-rsvp-te-srlg-collect-04, *RSVP-TE Extensions for Collecting SRLG Information*

RFC 3471, *Generalized Multi-Protocol Label Switching (GMPLS) Signaling Functional Description*

RFC 3473, *Generalized Multi-Protocol Label Switching (GMPLS) Signaling Resource ReserVation Protocol-Traffic Engineering (RSVP-TE) Extensions*

RFC 4204, *Link Management Protocol (LMP)*

RFC 4208, *Generalized Multiprotocol Label Switching (GMPLS) User-Network Interface (UNI): Resource ReserVation Protocol-Traffic Engineering (RSVP-TE) Support for the Overlay Model*

RFC 4872, *RSVP-TE Extensions in Support of End-to-End Generalized Multi-Protocol Label Switching (GMPLS) Recovery*

Intermediate System to Intermediate System (IS-IS)

draft-ginsberg-isis-mi-bis-01, *IS-IS Multi-Instance* (single topology)

draft-ietf-isis-mi-02, *IS-IS Multi-Instance*

draft-ietf-isis-segment-routing-extensions-04, *IS-IS Extensions for Segment Routing*

draft-kaplan-isis-ext-eth-02, *Extended Ethernet Frame Size Support*

ISO/IEC 10589:2002, Second Edition, Nov. 2002, *Intermediate system to Intermediate system intra-domain routeing information exchange protocol for use in conjunction with the protocol for providing the connectionless-mode Network Service (ISO 8473)*

RFC 1195, *Use of OSI IS-IS for Routing in TCP/IP and Dual Environments*

RFC 2973, *IS-IS Mesh Groups*

RFC 3359, *Reserved Type, Length and Value (TLV) Codepoints in Intermediate System to Intermediate System*

RFC 3719, *Recommendations for Interoperable Networks using Intermediate System to Intermediate System (IS-IS)*

RFC 3787, *Recommendations for Interoperable IP Networks using Intermediate System to Intermediate System (IS-IS)*

RFC 4971, *Intermediate System to Intermediate System (IS-IS) Extensions for Advertising Router Information*

RFC 5120, *M-ISIS: Multi Topology (MT) Routing in IS-IS*

RFC 5130, *A Policy Control Mechanism in IS-IS Using Administrative Tags*

RFC 5301, *Dynamic Hostname Exchange Mechanism for IS-IS*

RFC 5302, *Domain-wide Prefix Distribution with Two-Level IS-IS*

RFC 5303, *Three-Way Handshake for IS-IS Point-to-Point Adjacencies*

RFC 5304, *IS-IS Cryptographic Authentication*

RFC 5305, *IS-IS Extensions for Traffic Engineering TE*

RFC 5306, *Restart Signaling for IS-IS* (helper mode)

RFC 5307, *IS-IS Extensions in Support of Generalized Multi-Protocol Label Switching (GMPLS)*

RFC 5308, *Routing IPv6 with IS-IS*

RFC 5309, *Point-to-Point Operation over LAN in Link State Routing Protocols*

RFC 5310, *IS-IS Generic Cryptographic Authentication*

RFC 6213, *IS-IS BFD-Enabled TLV*

RFC 6232, *Purge Originator Identification TLV for IS-IS*

RFC 6233, *IS-IS Registry Extension for Purges*

RFC 6329, *IS-IS Extensions Supporting IEEE 802.1aq Shortest Path Bridging*

Internet Protocol (IP) — Fast Reroute

draft-ietf-rtgwg-lfa-manageability-08, *Operational management of Loop Free Alternates*

RFC 5286, *Basic Specification for IP Fast Reroute: Loop-Free Alternates*

RFC 7431, *Multicast-Only Fast Reroute*

RFC 7490, *Remote Loop-Free Alternate (LFA) Fast Reroute (FRR)*

Internet Protocol (IP) — General

draft-grant-tacacs-02, *The TACACS+ Protocol*

draft-ietf-vrrp-unified-spec-02, *Virtual Router Redundancy Protocol Version 3 for IPv4 and IPv6*

RFC 768, *User Datagram Protocol*

RFC 793, *Transmission Control Protocol*

RFC 854, *Telnet Protocol Specifications*

RFC 951, *Bootstrap Protocol (BOOTP)*

RFC 1034, *Domain Names - Concepts and Facilities*

RFC 1035, *Domain Names - Implementation and Specification*

RFC 1350, *The TFTP Protocol (revision 2)*

RFC 1534, *Interoperation between DHCP and BOOTP*

RFC 1542, *Clarifications and Extensions for the Bootstrap Protocol*

RFC 2131, *Dynamic Host Configuration Protocol*

RFC 2132, *DHCP Options and BOOTP Vendor Extensions*

RFC 2347, *TFTP Option Extension*

RFC 2348, *TFTP Blocksize Option*

RFC 2349, *TFTP Timeout Interval and Transfer Size Options*

RFC 2428, *FTP Extensions for IPv6 and NATs*

RFC 2784, *Generic Routing Encapsulation (GRE)*

RFC 2865, *Remote Authentication Dial In User Service (RADIUS)*

RFC 2866, *RADIUS Accounting*

RFC 2867, *RADIUS Accounting Modifications for Tunnel Protocol Support*

RFC 2868, *RADIUS Attributes for Tunnel Protocol Support*

RFC 3046, *DHCP Relay Agent Information Option (Option 82)*

RFC 3315, *Dynamic Host Configuration Protocol for IPv6 (DHCPv6)*

RFC 3596, *DNS Extensions to Support IP version 6*

RFC 3768, *Virtual Router Redundancy Protocol (VRRP)*

RFC 4250, *The Secure Shell (SSH) Protocol Assigned Numbers*

RFC 4251, *The Secure Shell (SSH) Protocol Architecture*

RFC 4252, *The Secure Shell (SSH) Authentication Protocol* (publickey, password)

RFC 4253, *The Secure Shell (SSH) Transport Layer Protocol*

RFC 4254, *The Secure Shell (SSH) Connection Protocol*

RFC 4632, *Classless Inter-domain Routing (CIDR): The Internet Address Assignment and Aggregation Plan*

RFC 5082, *The Generalized TTL Security Mechanism (GTSM)*

RFC 5656, *Elliptic Curve Algorithm Integration in the Secure Shell Transport Layer* (ECDSA)

RFC 5880, *Bidirectional Forwarding Detection (BFD)*

RFC 5881, *Bidirectional Forwarding Detection (BFD) IPv4 and IPv6 (Single Hop)*

RFC 5883, *Bidirectional Forwarding Detection (BFD) for Multihop Paths*

RFC 6398, *IP Router Alert Considerations and Usage* (MLD)

RFC 6528, *Defending against Sequence Number Attacks*

RFC 6929, *Remote Authentication Dial-In User Service (RADIUS) Protocol Extensions*

RFC 7130, *Bidirectional Forwarding Detection (BFD) on Link Aggregation Group (LAG) Interfaces*

Internet Protocol (IP) — Multicast

cisco-ipmulticast/pim-autorp-spec01, *Auto-RP: Automatic discovery of Group-to-RP mappings for IP multicast*

draft-dolganow-bess-mvpn-expl-track-01, *Explicit Tracking with Wild Card Routes in Multicast VPN*

draft-ietf-idmr-traceroute-ipm-07, *A "traceroute" facility for IP Multicast*

draft-ietf-l2vpn-vpls-pim-snooping-07, *Protocol Independent Multicast (PIM) over Virtual Private LAN Service (VPLS)*

RFC 1112, *Host Extensions for IP Multicasting*

RFC 2236, *Internet Group Management Protocol, Version 2*

RFC 2375, *IPv6 Multicast Address Assignments*

RFC 2710, *Multicast Listener Discovery (MLD) for IPv6*

RFC 3306, *Unicast-Prefix-based IPv6 Multicast Addresses*

RFC 3376, *Internet Group Management Protocol, Version 3*

RFC 3446, *Anycast Rendevous Point (RP) mechanism using Protocol Independent Multicast (PIM) and Multicast Source Discovery Protocol (MSDP)*

RFC 3590, *Source Address Selection for the Multicast Listener Discovery (MLD) Protocol*

RFC 3618, *Multicast Source Discovery Protocol (MSDP)*

RFC 3810, *Multicast Listener Discovery Version 2 (MLDv2) for IPv6*

RFC 3956, *Embedding the Rendezvous Point (RP) Address in an IPv6 Multicast Address*

RFC 3973, *Protocol Independent Multicast - Dense Mode (PIM-DM): Protocol Specification (Revised)* (auto-RP groups)

RFC 4541, *Considerations for Internet Group Management Protocol (IGMP) and Multicast Listener Discovery (MLD) Snooping Switches*

RFC 4601, *Protocol Independent Multicast - Sparse Mode (PIM-SM): Protocol Specification (Revised)*

RFC 4604, *Using Internet Group Management Protocol Version 3 (IGMPv3) and Multicast Listener Discovery Protocol Version 2 (MLDv2) for Source-Specific Multicast*

RFC 4607, *Source-Specific Multicast for IP*

RFC 4608, *Source-Specific Protocol Independent Multicast in 232/8*

RFC 4610, *Anycast-RP Using Protocol Independent Multicast (PIM)*

RFC 4611, *Multicast Source Discovery Protocol (MSDP) Deployment Scenarios*

RFC 5059, *Bootstrap Router (BSR) Mechanism for Protocol Independent Multicast (PIM)*

RFC 5186, *Internet Group Management Protocol Version 3 (IGMPv3) / Multicast Listener Discovery Version 2 (MLDv2) and Multicast Routing Protocol Interaction*

RFC 5384, *The Protocol Independent Multicast (PIM) Join Attribute Format*

RFC 5496, *The Reverse Path Forwarding (RPF) Vector TLV*

RFC 6037, *Cisco Systems' Solution for Multicast in MPLS/BGP IP VPNs*

RFC 6512, *Using Multipoint LDP When the Backbone Has No Route to the Root*

RFC 6513, *Multicast in MPLS/BGP IP VPNs*

RFC 6514, *BGP Encodings and Procedures for Multicast in MPLS/IP VPNs*

RFC 6515, *IPv4 and IPv6 Infrastructure Addresses in BGP Updates for Multicast VPNs*

RFC 6516, *IPv6 Multicast VPN (MVPN) Support Using PIM Control Plane and Selective Provider Multicast Service Interface (S-PMSI) Join Messages*

RFC 6625, *Wildcards in Multicast VPN Auto-Discover Routes*

RFC 6826, *Multipoint LDP In-Band Signaling for Point-to-Multipoint and Multipoint-to-Multipoint Label Switched Path*

RFC 7246, *Multipoint Label Distribution Protocol In-Band Signaling in a Virtual Routing and Forwarding (VRF) Table Context*

RFC 7385, *IANA Registry for P-Multicast Service Interface (PMSI) Tunnel Type Code Points*

Internet Protocol (IP) — Version 4

RFC 791, *Internet Protocol*

RFC 792, *Internet Control Message Protocol*

RFC 826, *An Ethernet Address Resolution Protocol*

RFC 1519, *Classless Inter-Domain Routing (CIDR): an Address Assignment and Aggregation Strategy*

RFC 1812, *Requirements for IPv4 Routers*

RFC 1918, *Address Allocation for Private Internets*

RFC 1981, *Path MTU Discovery for IP version 6*

RFC 2003, *IP Encapsulation within IP*

RFC 2401, *Security Architecture for Internet Protocol*

RFC 3021, *Using 31-Bit Prefixes on IPv4 Point-to-Point Links*

Internet Protocol (IP) — Version 6

RFC 2460, *Internet Protocol, Version 6 (IPv6) Specification*

RFC 2464, *Transmission of IPv6 Packets over Ethernet Networks*

RFC 2473, *Generic Packet Tunneling in IPv6 Specification*

RFC 2529, *Transmission of IPv6 over IPv4 Domains without Explicit Tunnels*

RFC 3122, *Extensions to IPv6 Neighbor Discovery for Inverse Discovery Specification*

RFC 3587, *IPv6 Global Unicast Address Format*

RFC 3633, *IPv6 Prefix Options for Dynamic Host Configuration Protocol (DHCP) version 6*

RFC 3646, *DNS Configuration options for Dynamic Host Configuration Protocol for IPv6 (DHCPv6)*

RFC 3736, *Stateless Dynamic Host Configuration Protocol (DHCP) Service for IPv6*

RFC 3971, *SEcure Neighbor Discovery (SEND)*

RFC 3972, *Cryptographically Generated Addresses (CGA)*

RFC 4007, *IPv6 Scoped Address Architecture*

RFC 4193, *Unique Local IPv6 Unicast Addresses*

RFC 4291, *Internet Protocol Version 6 (IPv6) Addressing Architecture*

RFC 4443, *Internet Control Message Protocol (ICMPv6) for the Internet Protocol Version 6 (IPv6) Specification*

RFC 4861, *Neighbor Discovery for IP version 6 (IPv6)*

RFC 4862, *IPv6 Stateless Address Autoconfiguration* (router functions)

RFC 4941, *Privacy Extensions for Stateless Address Autoconfiguration in IPv6*

RFC 5007, *DHCPv6 Leasequery*

RFC 5095, *Deprecation of Type 0 Routing Headers in IPv6*

RFC 5952, *A Recommendation for IPv6 Address Text Representation*

RFC 6106, *IPv6 Router Advertisement Options for DNS Configuration*

RFC 6164, *Using 127-Bit IPv6 Prefixes on Inter-Router Links*

Internet Protocol Security (IPsec)

draft-ietf-ipsec-isakmp-mode-cfg-05, *The ISAKMP Configuration Method*

draft-ietf-ipsec-isakmp-xauth-06, *Extended Authentication within ISAKMP/Oakley (XAUTH)*

RFC 2401, *Security Architecture for the Internet Protocol*

RFC 2403, *The Use of HMAC-MD5-96 within ESP and AH*

RFC 2404, *The Use of HMAC-SHA-1-96 within ESP and AH*

RFC 2405, *The ESP DES-CBC Cipher Algorithm With Explicit IV*

RFC 2406, *IP Encapsulating Security Payload (ESP)*

RFC 2409, *The Internet Key Exchange (IKE)*

RFC 2410, *The NULL Encryption Algorithm and Its Use With IPsec*

RFC 2560, *X.509 Internet Public Key Infrastructure Online Certificate Status Protocol - OCSP*

RFC 3526, *More Modular Exponential (MODP) Diffie-Hellman group for Internet Key Exchange (IKE)*

RFC 3566, *The AES-XCBC-MAC-96 Algorithm and Its Use With IPsec*

RFC 3602, *The AES-CBC Cipher Algorithm and Its Use with IPsec*

RFC 3706, *A Traffic-Based Method of Detecting Dead Internet Key Exchange (IKE) Peers*

RFC 3947, *Negotiation of NAT-Traversal in the IKE*

RFC 3948, *UDP Encapsulation of IPsec ESP Packets*

RFC 4210, *Internet X.509 Public Key Infrastructure Certificate Management Protocol (CMP)*

RFC 4211, *Internet X.509 Public Key Infrastructure Certificate Request Message Format (CRMF)*

RFC 4301, *Security Architecture for the Internet Protocol*

RFC 4303, *IP Encapsulating Security Payload*

RFC 4307, *Cryptographic Algorithms for Use in the Internet Key Exchange Version 2 (IKEv2)*

RFC 4308, *Cryptographic Suites for IPsec*

RFC 4434, *The AES-XCBC-PRF-128 Algorithm for the Internet Key Exchange Protocol (IKE)*

RFC 4868, *Using HMAC-SHA-256, HMAC-SHA-384, and HMAC-SHA-512 with IPSec*

RFC 4891, *Using IPsec to Secure IPv6-in-IPv4 Tunnels*

RFC 4945, *The Internet IP Security PKI Profile of IKEv1/ISAKMP, IKEv2 and PKIX*

RFC 5280, *Internet X.509 Public Key Infrastructure Certificate and Certificate Revocation List (CRL) Profile*

RFC 5996, *Internet Key Exchange Protocol Version 2 (IKEv2)*

RFC 5998, *An Extension for EAP-Only Authentication in IKEv2*

RFC 7321, *Cryptographic Algorithm Implementation Requirements and Usage Guidance for Encapsulating Security Payload (ESP) and Authentication Header (AH)*

RFC 7383, *Internet Key Exchange Protocol Version 2 (IKEv2) Message Fragmentation*

Label Distribution Protocol (LDP)

draft-ietf-mpls-ldp-ip-pw-capability-09, *Controlling State Advertisements Of Non-negotiated LDP Applications*

draft-ietf-mpls-ldp-ipv6-15, *Updates to LDP for IPv6*

draft-pdutta-mpls-ldp-adj-capability-00, *LDP Adjacency Capabilities*

draft-pdutta-mpls-ldp-v2-00, *LDP Version 2*

draft-pdutta-mpls-mldp-up-redundancy-00, *Upstream LSR Redundancy for Multi-point LDP Tunnels*

draft-pdutta-mpls-multi-ldp-instance-00, *Multiple LDP Instances*

draft-pdutta-mpls-tldp-hello-reduce-04, *Targeted LDP Hello Reduction*

RFC 3037, *LDP Applicability*

RFC 3478, *Graceful Restart Mechanism for Label Distribution Protocol* (helper mode)

RFC 5036, *LDP Specification*

RFC 5283, *LDP Extension for Inter-Area Label Switched Paths (LSPs)*

RFC 5443, *LDP IGP Synchronization*

RFC 5561, *LDP Capabilities*

RFC 5919, *Signaling LDP Label Advertisement Completion*

RFC 6388, *Label Distribution Protocol Extensions for Point-to-Multipoint and Multipoint-to-Multipoint Label Switched Paths*

RFC 6512, *Using Multipoint LDP When the Backbone Has No Route to the Root*

RFC 6826, *Multipoint LDP in-band signaling for Point-to-Multipoint and Multipoint-to-Multipoint Label Switched Paths*

Layer Two Tunneling Protocol (L2TP) Network Server (LNS)

draft-mammoliti-l2tp-accessline-avp-04, *Layer 2 Tunneling Protocol (L2TP) Access Line Information Attribute Value Pair (AVP) Extensions*

RFC 2661, *Layer Two Tunneling Protocol "L2TP"*

RFC 2809, *Implementation of L2TP Compulsory Tunneling via RADIUS*

RFC 3438, *Layer Two Tunneling Protocol (L2TP) Internet Assigned Numbers: Internet Assigned Numbers Authority (IANA) Considerations Update*

RFC 3931, *Layer Two Tunneling Protocol - Version 3 (L2TPv3)*

RFC 4638, *Accommodating a Maximum Transit Unit/Maximum Receive Unit (MTU/MRU) Greater Than 1492 in the Point-to-Point Protocol over Ethernet (PPPoE)*

RFC 4719, *Transport of Ethernet Frames over Layer 2 Tunneling Protocol Version 3 (L2TPv3)*

RFC 4951, *Fail Over Extensions for Layer 2 Tunneling Protocol (L2TP) "failover"*

Management

draft-ieft-snmpv3-update-mib-05, *Management Information Base (MIB) for the Simple Network Management Protocol (SNMP)*

draft-ietf-isis-wg-mib-06, *Management Information Base for Intermediate System to Intermediate System (IS-IS)*

draft-ietf-mboned-msdp-mib-01, *Multicast Source Discovery protocol MIB*

draft-ietf-mpls-ldp-mib-07, *Definitions of Managed Objects for the Multiprotocol Label Switching, Label Distribution Protocol (LDP)*

draft-ietf-mpls-lsr-mib-06, *Multiprotocol Label Switching (MPLS) Label Switching Router (LSR) Management Information Base Using SMIv2*

draft-ietf-mpls-te-mib-04, *Multiprotocol Label Switching (MPLS) Traffic Engineering Management Information Base*

draft-ietf-ospf-mib-update-08, *OSPF Version 2 Management Information Base*

ianaaddressfamilynumbers-mib, *IANA-ADDRESS-FAMILY-NUMBERS-MIB*

ianagmplstc-mib, *IANA-GMPLS-TC-MIB*

ianaiftype-mib, *IANAifType-MIB*

ianaiprouteprotocol-mib, *IANA-RTPROTO-MIB*

IEEE8021-CFM-MIB, *IEEE P802.1ag(TM) CFM MIB*

IEEE8021-PAE-MIB, *IEEE 802.1X MIB*

IEEE8023-LAG-MIB, *IEEE 802.3ad MIB*

LLDP-MIB, *IEEE P802.1AB(TM) LLDP MIB*

RFC 1157, *A Simple Network Management Protocol (SNMP)*

RFC 1212, *Concise MIB Definitions*

RFC 1213, *Management Information Base for Network Management of TCP/IP-based Internets: MIB-II*

RFC 1215, *A Convention for Defining Traps for use with the SNMP*

RFC 1724, *RIP Version 2 MIB Extension*

RFC 2021, *Remote Network Monitoring Management Information Base Version 2 using SMIv2*

RFC 2115, *Management Information Base for Frame Relay DTEs Using SMIv2*

RFC 2206, *RSVP Management Information Base using SMIv2*

RFC 2213, *Integrated Services Management Information Base using SMIv2*

RFC 2494, *Definitions of Managed Objects for the DS0 and DS0 Bundle Interface Type*

RFC 2514, *Definitions of Textual Conventions and OBJECT-IDENTITIES for ATM Management*

RFC 2515, *Definitions of Managed Objects for ATM Management*

RFC 2570, *SNMP Version 3 Framework*

RFC 2571, *An Architecture for Describing SNMP Management Frameworks*

RFC 2572, *Message Processing and Dispatching for the Simple Network Management Protocol (SNMP)*

RFC 2573, *SNMP Applications*

RFC 2574, *User-based Security Model (USM) for version 3 of the Simple Network Management Protocol (SNMPv3)*

RFC 2575, *View-based Access Control Model (VACM) for the Simple Network Management Protocol (SNMP)*

RFC 2578, *Structure of Management Information Version 2 (SMIv2)*

RFC 2579, *Textual Conventions for SMIv2*

RFC 2580, *Conformance Statements for SMIv2*

RFC 2787, *Definitions of Managed Objects for the Virtual Router Redundancy Protocol*

RFC 2819, *Remote Network Monitoring Management Information Base*

RFC 2856, *Textual Conventions for Additional High Capacity Data Types*

RFC 2863, *The Interfaces Group MIB*

RFC 2864, *The Inverted Stack Table Extension to the Interfaces Group MIB*

RFC 2933, *Internet Group Management Protocol MIB*

RFC 3014, *Notification Log MIB*

RFC 3164, *The BSD syslog Protocol*

RFC 3165, *Definitions of Managed Objects for the Delegation of Management Scripts*

RFC 3231, *Definitions of Managed Objects for Scheduling Management Operations*

RFC 3273, *Remote Network Monitoring Management Information Base for High Capacity Networks*

RFC 3416. *Version 2 of the Protocol Operations for the Simple Network Management Protocol (SNMP)*

RFC 3417, *Transport Mappings for the Simple Network Management Protocol (SNMP)* (SNMP over UDP over IPv4)

RFC 3419, *Textual Conventions for Transport Addresses*

RFC 3498, *Definitions of Managed Objects for Synchronous Optical Network (SONET) Linear Automatic Protection Switching (APS) Architectures*

RFC 3584, *Coexistence between Version 1, Version 2, and Version 3 of the Internet-standard Network Management Framework*

RFC 3592, *Definitions of Managed Objects for the Synchronous Optical Network/ Synchronous Digital Hierarchy (SONET/SDH) Interface Type*

RFC 3593, *Textual Conventions for MIB Modules Using Performance History Based on 15 Minute Intervals*

RFC 3635, *Definitions of Managed Objects for the Ethernet-like Interface Types*

RFC 3637, *Definitions of Managed Objects for the Ethernet WAN Interface Sublayer*

RFC 3826, *The Advanced Encryption Standard (AES) Cipher Algorithm in the SNMP User-based Security Model*

RFC 3877, *Alarm Management Information Base (MIB)*

RFC 3895, *Definitions of Managed Objects for the DS1, E1, DS2, and E2 Interface Types*

RFC 3896, *Definitions of Managed Objects for the DS3/E3 Interface Type*

RFC 4001, *Textual Conventions for Internet Network Addresses*

RFC 4022, *Management Information Base for the Transmission Control Protocol (TCP)*

RFC 4113, *Management Information Base for the User Datagram Protocol (UDP)*

RFC 4220, *Traffic Engineering Link Management Information Base*

RFC 4273, *Definitions of Managed Objects for BGP-4*

RFC 4292, *IP Forwarding Table MIB*

RFC 4293, *Management Information Base for the Internet Protocol (IP)*

RFC 4379, *Detecting Multi-Protocol Label Switched (MPLS) Data Plane Failures*

RFC 4511, *Lightweight Directory Access Protocol (LDAP): The Protocol*

RFC 4513, *Lightweight Directory Access Protocol (LDAP): Authentication Methods and Security Mechanisms* (TLS)

RFC 4631, *Link Management Protocol (LMP) Management Information Base (MIB)*

RFC 4878, *Definitions and Managed Objects for Operations, Administration, and Maintenance (OAM) Functions on Ethernet-Like Interfaces*

RFC 5101, *Specification of the IP Flow Information Export (IPFIX) Protocol for the Exchange of IP Traffic Flow Information*

RFC 5102, *Information Model for IP Flow Information Export*

RFC 5246, *The Transport Layer Security (TLS) Protocol Version 1.2* (TLS client, RSA public key)

RFC 5357, *A Two-Way Active Measurement Protocol (TWAMP)* (server, unauthenticated mode)

RFC 5938, *Individual Session Control Feature for the Two-Way Active Measurement Protocol (TWAMP)*

RFC 6020, *YANG - A Data Modeling Language for the Network Configuration Protocol (NETCONF)*

RFC 6038, *Two-Way Active Measurement Protocol (TWAMP) Reflect Octets and Symmetrical Size Features*

RFC 6241, *Network Configuration Protocol (NETCONF)*

RFC 6242, *Using the NETCONF Protocol over Secure Shell (SSH)*

RFC 6243, *With-defaults Capability for NETCONF*

RFC 6424, *Mechanism for Performing Label Switched Path Ping (LSP Ping) over MPLS Tunnels*

RFC 6425, *Detecting Data Plane Failures in Point-to-Multipoint Multiprotocol Label Switching (MPLS) - Extensions to LSP Ping*

RFC 7420, *Path Computation Element Communication Protocol (PCEP) Management Information Base (MIB) Module*

SFLOW-MIB, *sFlow MIB Version 1.3 (Draft 5)*

Multiprotocol Label Switching - Transport Profile (MPLS-TP)

RFC 5586, *MPLS Generic Associated Channel*

RFC 5921, *A Framework for MPLS in Transport Networks*

RFC 5960, *MPLS Transport Profile Data Plane Architecture*

RFC 6370, *MPLS Transport Profile (MPLS-TP) Identifiers*

RFC 6378, *MPLS Transport Profile (MPLS-TP) Linear Protection*

RFC 6426, *MPLS On-Demand Connectivity and Route Tracing*

RFC 6427, *MPLS Fault Management Operations, Administration, and Maintenance (OAM)*

RFC 6428, *Proactive Connectivity Verification, Continuity Check and Remote Defect indication for MPLS Transport Profile*

RFC 6478, *Pseudowire Status for Static Pseudowires*

RFC 7213, *MPLS Transport Profile (MPLS-TP) Next-Hop Ethernet Addressing*

Multiprotocol Label Switching (MPLS)

RFC 3031, *Multiprotocol Label Switching Architecture*

RFC 3032, *MPLS Label Stack Encoding*

RFC 3443, *Time To Live (TTL) Processing in Multi-Protocol Label Switching (MPLS) Networks*

RFC 4023, *Encapsulating MPLS in IP or Generic Routing Encapsulation (GRE)*

RFC 4182, *Removing a Restriction on the use of MPLS Explicit NULL*

RFC 5332, *MPLS Multicast Encapsulations*

RFC 6790, *The Use of Entropy Labels in MPLS Forwarding*

Network Address Translation (NAT)

draft-ietf-behave-address-format-10, *IPv6 Addressing of IPv4/IPv6 Translators*

draft-ietf-behave-v6v4-xlate-23, *IP/ICMP Translation Algorithm*

draft-miles-behave-l2nat-00, *Layer2-Aware NAT*

draft-nishitani-cgn-02, *Common Functions of Large Scale NAT (LSN)*

RFC 4787, *Network Address Translation (NAT) Behavioral Requirements for Unicast UDP*

RFC 5382, *NAT Behavioral Requirements for TCP*

RFC 5508, *NAT Behavioral Requirements for ICMP*

RFC 6146, *Stateful NAT64: Network Address and Protocol Translation from IPv6 Clients to IPv4 Servers*

RFC 6333, *Dual-Stack Lite Broadband Deployments Following IPv4 Exhaustion*

RFC 6334, *Dynamic Host Configuration Protocol for IPv6 (DHCPv6) Option for Dual-Stack Lite*

RFC 6888, *Common Requirements For Carrier-Grade NATs (CGNs)*

RFC 7383, *Internet Key Exchange Protocol Version 2 (IKEv2) Message Fragmentation*

Open Shortest Path First (OSPF)

draft-ietf-ospf-prefix-link-attr-06, *OSPFv2 Prefix/Link Attribute Advertisement*

draft-ietf-ospf-segment-routing-extensions-04, *OSPF Extensions for Segment Routing*

RFC 1586, *Guidelines for Running OSPF Over Frame Relay Networks*

RFC 1765, *OSPF Database Overflow*

RFC 2328, *OSPF Version 2*

RFC 3101, *The OSPF Not-So-Stubby Area (NSSA) Option*

RFC 3509, *Alternative Implementations of OSPF Area Border Routers*

RFC 3623, *Graceful OSPF Restart Graceful OSPF Restart* (helper mode)

RFC 3630, *Traffic Engineering (TE) Extensions to OSPF Version 2*

RFC 4203, *OSPF Extensions in Support of Generalized Multi-Protocol Label Switching (GMPLS)*

RFC 4222, *Prioritized Treatment of Specific OSPF Version 2 Packets and Congestion Avoidance*

RFC 4552, *Authentication/Confidentiality for OSPFv3*

RFC 4576, *Using a Link State Advertisement (LSA) Options Bit to Prevent Looping in BGP/MPLS IP Virtual Private Networks (VPNs)*

RFC 4577, *OSPF as the Provider/Customer Edge Protocol for BGP/MPLS IP Virtual Private Networks (VPNs)*

RFC 4970, *Extensions to OSPF for Advertising Optional Router Capabilities*

RFC 5185, *OSPF Multi-Area Adjacency*

RFC 5187, *OSPFv3 Graceful Restart* (helper mode)

RFC 5243, *OSPF Database Exchange Summary List Optimization*

RFC 5250, *The OSPF Opaque LSA Option*

RFC 5309, *Point-to-Point Operation over LAN in Link State Routing Protocols*

RFC 5340, *OSPF for IPv6*

RFC 5709, *OSPFv2 HMAC-SHA Cryptographic Authentication*

RFC 5838, *Support of Address Families in OSPFv3*

RFC 6987, *OSPF Stub Router Advertisement*

OpenFlow

ONF *OpenFlow Switch Specification Version 1.3.1* (OpenFlow-hybrid switches)

Path Computation Element Protocol (PCEP)

draft-alvarez-pce-path-profiles-04, *PCE Path Profiles*

draft-ietf-pce-segment-routing-05, *PCEP Extensions for Segment Routing*

draft-ietf-pce-stateful-pce-11, *PCEP Extensions for Stateful PCE*

RFC 5440, *Path Computation Element (PCE) Communication Protocol (PCEP)*

Point-to-Point Protocol (PPP)

RFC 1332, *The PPP Internet Protocol Control Protocol (IPCP)*

RFC 1377, *The PPP OSI Network Layer Control Protocol (OSINLCP)*

RFC 1661, *The Point-to-Point Protocol (PPP)*

RFC 1662, *PPP in HDLC-like Framing*

RFC 1877, *PPP Internet Protocol Control Protocol Extensions for Name Server Addresses*

RFC 1989, *PPP Link Quality Monitoring*

RFC 1990, *The PPP Multilink Protocol (MP)*

RFC 1994, *PPP Challenge Handshake Authentication Protocol (CHAP)*

RFC 2153, *PPP Vendor Extensions*

RFC 2516, *A Method for Transmitting PPP Over Ethernet (PPPoE)*

RFC 2615, *PPP over SONET/SDH*

RFC 2686, *The Multi-Class Extension to Multi-Link PPP*

RFC 2878, *PPP Bridging Control Protocol (BCP)*

RFC 4638, *Accommodating a Maximum Transit Unit/Maximum Receive Unit (MTU/MRU) Greater Than 1492 in the Point-to-Point Protocol over Ethernet (PPPoE)*

RFC 5072, *IP Version 6 over PPP*

Policy Management and Credit Control

3GPP TS 29.212 Release 11, *Policy and Charging Control (PCC); Reference points* (Gx support as it applies to wireline environment (BNG))

RFC 3588, *Diameter Base Protocol*

RFC 4006, *Diameter Credit-Control Application*

Pseudowire

draft-ietf-l2vpn-vpws-iw-oam-04, *OAM Procedures for VPWS Interworking*

MFA Forum 12.0.0, *Multiservice Interworking - Ethernet over MPLS*

MFA Forum 13.0.0, *Fault Management for Multiservice Interworking v1.0*

MFA Forum 16.0.0, *Multiservice Interworking - IP over MPLS*

MFA Forum 9.0.0, *The Use of Virtual trunks for ATM/MPLS Control Plane Interworking*

RFC 3916, *Requirements for Pseudo- Wire Emulation Edge-to-Edge (PWE3)*

RFC 3985, *Pseudo Wire Emulation Edge-to-Edge (PWE3)*

RFC 4385, *Pseudo Wire Emulation Edge-to-Edge (PWE3) Control Word for Use over an MPLS PSN*

RFC 4446, *IANA Allocations for Pseudowire Edge to Edge Emulation (PWE3)*

RFC 4447, *Pseudowire Setup and Maintenance Using the Label Distribution Protocol (LDP)*

RFC 4448, *Encapsulation Methods for Transport of Ethernet over MPLS Networks*

RFC 4619, *Encapsulation Methods for Transport of Frame Relay over Multiprotocol Label Switching (MPLS) Networks*

RFC 4717, *Encapsulation Methods for Transport Asynchronous Transfer Mode (ATM) over MPLS Networks*

RFC 4816, *Pseudowire Emulation Edge-to-Edge (PWE3) Asynchronous Transfer Mode (ATM) Transparent Cell Transport Service*

RFC 5085, *Pseudowire Virtual Circuit Connectivity Verification (VCCV): A Control Channel for Pseudowires*

RFC 5659, *An Architecture for Multi-Segment Pseudowire Emulation Edge-to-Edge*

RFC 5885, *Bidirectional Forwarding Detection (BFD) for the Pseudowire Virtual Circuit Connectivity Verification (VCCV)*

RFC 6073, *Segmented Pseudowire*

RFC 6310, *Pseudowire (PW) Operations, Administration, and Maintenance (OAM) Message Mapping*

RFC 6391, *Flow-Aware Transport of Pseudowires over an MPLS Packet Switched Network*

RFC 6575, *Address Resolution Protocol (ARP) Mediation for IP Interworking of Layer 2 VPNs*

RFC 6718, *Pseudowire Redundancy*

RFC 6829, *Label Switched Path (LSP) Ping for Pseudowire Forwarding Equivalence Classes (FECs) Advertised over IPv6*

RFC 6870, *Pseudowire Preferential Forwarding Status bit*

RFC 7023, *MPLS and Ethernet Operations, Administration, and Maintenance (OAM) Interworking*

RFC 7267, *Dynamic Placement of Multi-Segment Pseudowires*

Quality of Service (QoS)

RFC 2430, *A Provider Architecture for Differentiated Services and Traffic Engineering (PASTE)*

RFC 2474, *Definition of the Differentiated Services Field (DS Field) in the IPv4 and IPv6 Headers*

RFC 2598, *An Expedited Forwarding PHB*

RFC 3140, *Per Hop Behavior Identification Codes*

RFC 3260, *New Terminology and Clarifications for Diffserv*

Resource Reservation Protocol - Traffic Engineering (RSVP-TE)

draft-newton-mpls-te-dynamic-overbooking-00, *A Diffserv-TE Implementation Model to dynamically change booking factors during failure events*

RFC 2702, *Requirements for Traffic Engineering over MPLS*

RFC 2747, *RSVP Cryptographic Authentication*

RFC 2961, *RSVP Refresh Overhead Reduction Extensions*

RFC 3097, *RSVP Cryptographic Authentication -- Updated Message Type Value*

RFC 3209, *RSVP-TE: Extensions to RSVP for LSP Tunnels*

RFC 3473, *Generalized Multi-Protocol Label Switching (GMPLS) Signaling Resource ReserVation Protocol-Traffic Engineering (RSVP-TE) Extensions* (IF_ID RSVP_HOP object with unnumbered interfaces and RSVP-TE graceful restart helper procedures)

RFC 3477, *Signalling Unnumbered Links in Resource ReSerVation Protocol - Traffic Engineering (RSVP-TE)*

RFC 3564, *Requirements for Support of Differentiated Services-aware MPLS Traffic Engineering*

RFC 3906, *Calculating Interior Gateway Protocol (IGP) Routes Over Traffic Engineering Tunnels*

RFC 4090, *Fast Reroute Extensions to RSVP-TE for LSP Tunnels*

RFC 4124, *Protocol Extensions for Support of Diffserv-aware MPLS Traffic Engineering*

RFC 4125, *Maximum Allocation Bandwidth Constraints Model for Diffserv-aware MPLS Traffic Engineering*

RFC 4127, *Russian Dolls Bandwidth Constraints Model for Diffserv-aware MPLS Traffic Engineering*

RFC 4561, *Definition of a Record Route Object (RRO) Node-Id Sub-Object*

RFC 4875, *Extensions to Resource Reservation Protocol - Traffic Engineering (RSVP-TE) for Point-to-Multipoint TE Label Switched Paths (LSPs)*

RFC 4950, *ICMP Extensions for Multiprotocol Label Switching*

RFC 5151, *Inter-Domain MPLS and GMPLS Traffic Engineering -- Resource Reservation Protocol-Traffic Engineering (RSVP-TE) Extensions*

RFC 5712, *MPLS Traffic Engineering Soft Preemption*

RFC 5817, *Graceful Shutdown in MPLS and Generalized MPLS Traffic Engineering Networks*

Routing Information Protocol (RIP)

RFC 1058, *Routing Information Protocol*

RFC 2080, *RIPng for IPv6*

RFC 2082, *RIP-2 MD5 Authentication*

RFC 2453, *RIP Version 2*

Synchronous Optical Networking (SONET)/Synchronous Digital Hierarchy (SDH)

ITU-G.841, *Types and Characteristics of SDH Networks Protection Architecture, issued in October 1998 and as augmented by Corrigendum 1, issued in July 2002*

Timing

GR-1244-CORE, *Clocks for the Synchronized Network: Common Generic Criteria, Issue 3, May 2005*

GR-253-CORE, *SONET Transport Systems: Common Generic Criteria. Issue 3, September 2000*

IEEE 1588-2008, *IEEE Standard for a Precision Clock Synchronization Protocol for Networked Measurement and Control Systems*

ITU-T G.781, *Synchronization layer functions, issued 09/2008*

ITU-T G.813, *Timing characteristics of SDH equipment slave clocks (SEC), issued 03/2003*

ITU-T G.8261, *Timing and synchronization aspects in packet networks, issued 04/2008*

ITU-T G.8262, *Timing characteristics of synchronous Ethernet equipment slave clock (EEC), issued 08/2007*

ITU-T G.8264, *Distribution of timing information through packet networks, issued 10/2008*

ITU-T G.8265.1, *Precision time protocol telecom profile for frequency synchronization, issued 10/2010*

ITU-T G.8275.1, *Precision time protocol telecom profile for phase/time synchronization with full timing support from the network, issued 07/2014*

RFC 5905, *Network Time Protocol Version 4: Protocol and Algorithms Specification*

Virtual Private LAN Service (VPLS)

RFC 4761, *Virtual Private LAN Service (VPLS) Using BGP for Auto-Discovery and Signaling*

RFC 4762, *Virtual Private LAN Service (VPLS) Using Label Distribution Protocol (LDP) Signaling*

RFC 5501, *Requirements for Multicast Support in Virtual Private LAN Services*

RFC 6074, *Provisioning, Auto-Discovery, and Signaling in Layer 2 Virtual Private Networks (L2VPNs)*

RFC 7041, *Extensions to the Virtual Private LAN Service (VPLS) Provider Edge (PE) Model for Provider Backbone Bridging*

RFC 7117, *Multicast in Virtual Private LAN Service (VPLS)*

Voice and Video

DVB BlueBook A86, *Transport of MPEG-2 TS Based DVB Services over IP Based Networks*

ETSI TS 101 329-5 Annex E, *QoS Measurement for VoIP - Method for determining an Equipment Impairment Factor using Passive Monitoring*

ITU-T G.1020 Appendix I, *Performance Parameter Definitions for Quality of Speech and other Voiceband Applications Utilizing IP Networks - Mean Absolute Packet Delay Variation & Markov Models*

ITU-T G.107, *The E Model - A computational model for use in planning*

ITU-T P.564, *Conformance testing for voice over IP transmission quality assessment models*

RFC 3550 Appendix A.8, *RTP: A Transport Protocol for Real-Time Applications* (estimating the interarrival jitter)

RFC 4585, *Extended RTP Profile for Real-time Transport Control Protocol (RTCP)-Based Feedback (RTP/AVPF)*

RFC 4588, *RTP Retransmission Payload Format*

Wireless Local Area Network (WLAN) Gateway

3GPP TS 23.402, *Architecture enhancements for non-3GPP accesses* (S2a roaming based on GPRS)

Customer Document and Product Support

Customer Documentation

Customer Documentation Welcome Page

Technical Support

Product Support Portal

Documentation Feedback

Customer Documentation Feedback

© 2016 Nokia.
3HE 10786 AAAB TQZZA 01