Asus N56VM Optical drive Replacement

Written By: Stanky

This document was generated on 2019-10-06 12:14:09 PM (MST).

© iFixit — CC BY-NC-SA

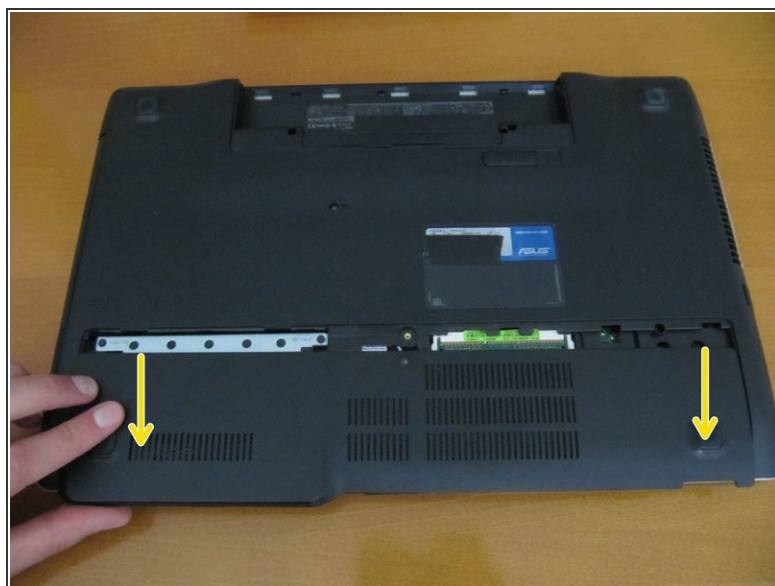www.iFixit.com

Page 1 of 4

🔧 TOOLS:

- [Mako Driver Kit - 64 Precision Bits](#) (1)

Step 1 — Remove battery

- Remove the battery and the AC power

Step 2 — Remove bottom cover

- Remove the M2x4 screw of the bottom cover

- Remove the bottom cover by sliding it downwards

This document was generated on 2019-10-06 12:14:09 PM (MST).

© iFixit — CC BY-NC-SA | www.iFixit.com | Page 3 of 4

Step 3 — Optical drive

- Remove the screw holding the optical drive

Step 4

- Pull out the optical drive

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2019-10-06 12:14:09 PM (MST).