Asus Zenbook UX501 Teardown

This guide is to show a teardown of an Asus Zenbook UX501.

Written By: Andy Lin

This document was generated on 2019-10-04 02:01:02 AM (MST).

© iFixit — CC BY-NC-SA   www.iFixit.com   Page 1 of 5

🔧 TOOLS:

- Spudger (1)
- Phillips #0 Screwdriver (1)

www.iFixit.com

Step 1 — Current Condition

- Here is our shiny new UX501! we'll be tearing this laptop down!

Step 2 — Starting the disassembly!

华硕UX501的拆解是从底面板开始，除底面板四周的螺丝外，在转轴处的垫脚下还隐藏着两颗螺丝。

- Flip the laptop down.
- Remove all the visible screws.

This document was generated on 2019-10-04 02:01:02 AM (MST).
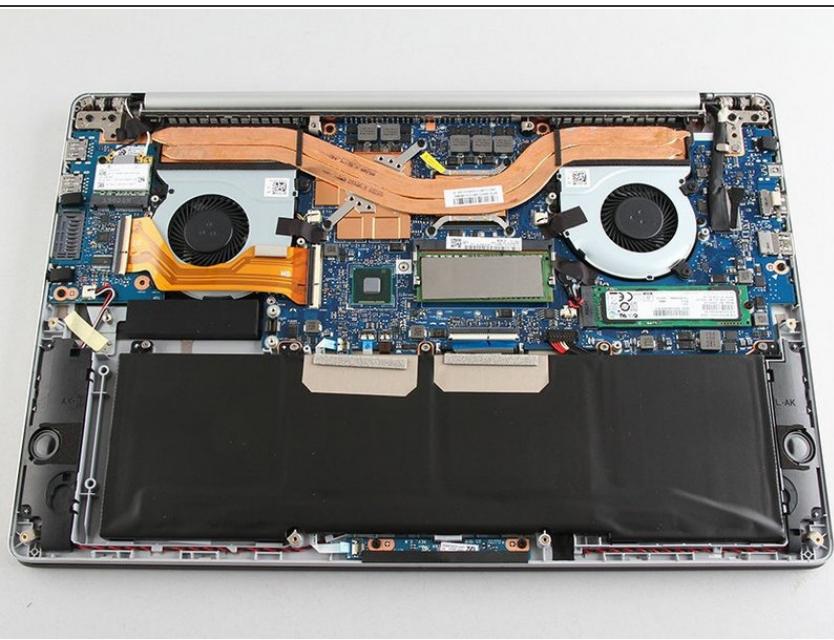
Step 3

- Remove the rubber stoppers from all four corners of the laptop.

- Then remove the screws.

Step 4

- Remove the bottom case.

Step 5

- Here, we have access to the RAM, the WiFi card, and the SSD.