HP HDX 16-1160US Disk Drive Replacement
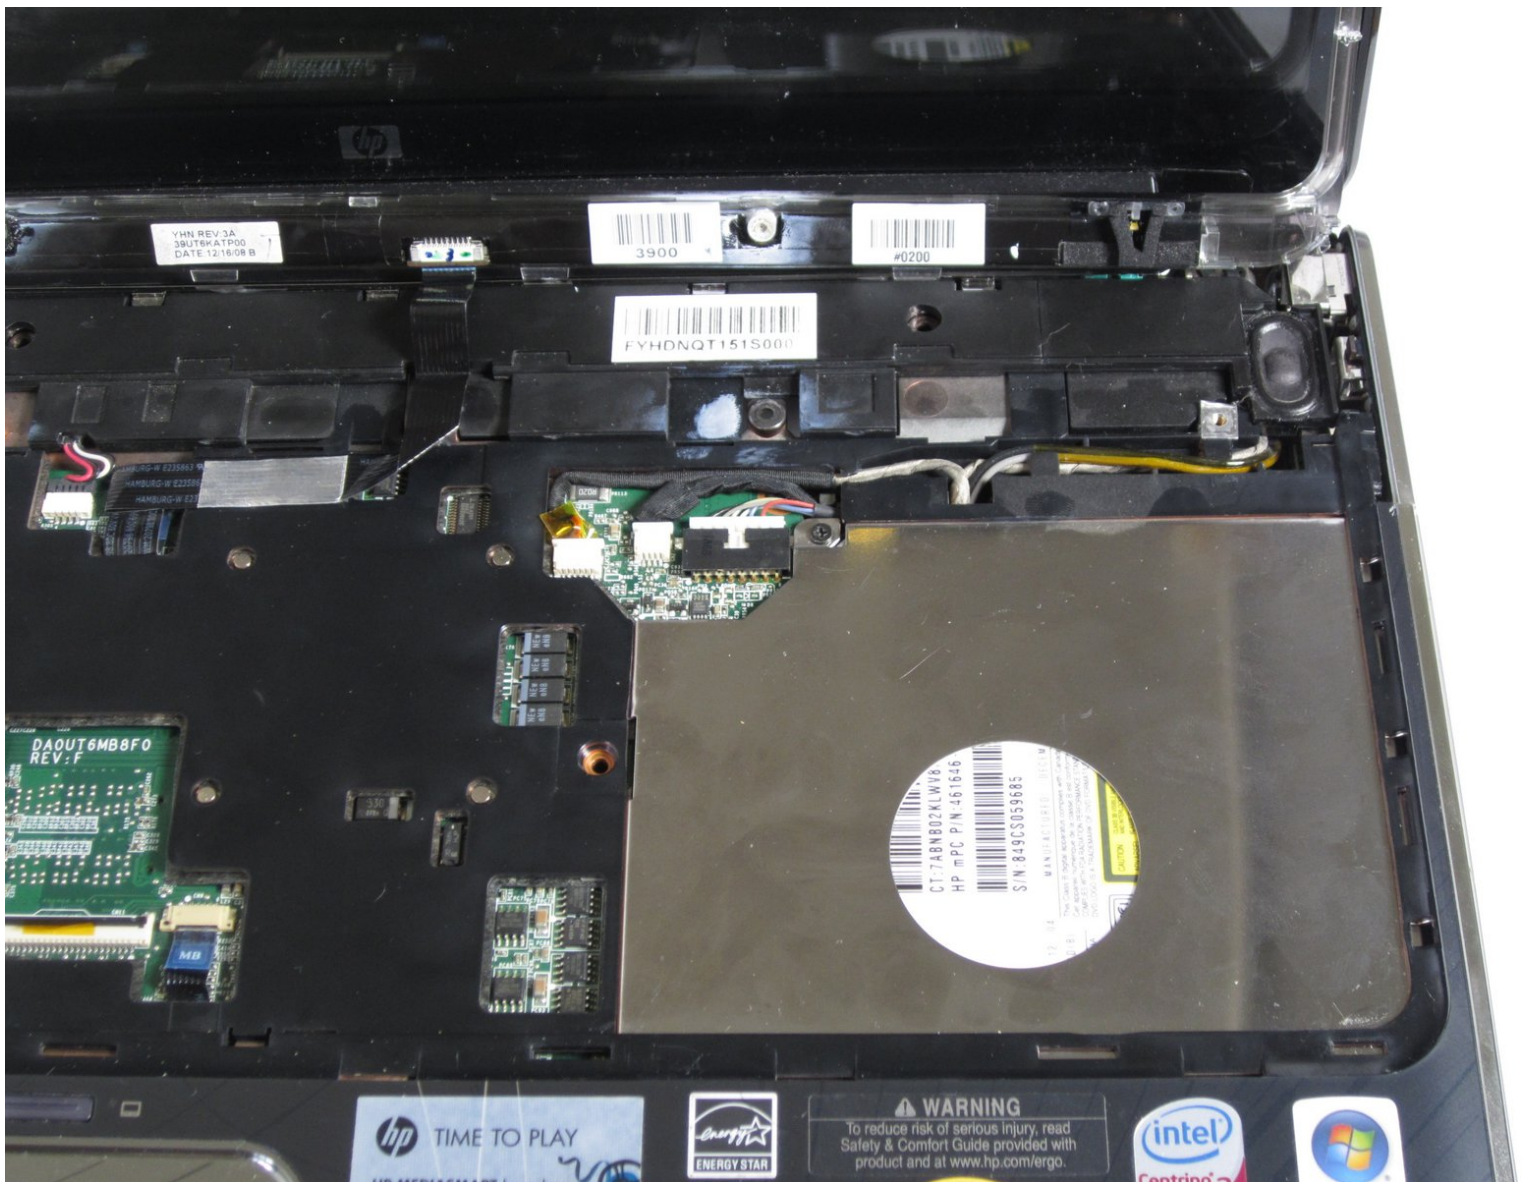
This guide will allow the user to replace the Disk Drive.

Written By: Marshall Reid

This document was generated on 2019-09-19 02:36:24 PM (MST).

🔧 TOOLS:

- Phillips #1 Screwdriver (1)
- iFixit Opening Tools (1)

Step 1 — Battery

- Turn the device over so that the bottom side is facing up and the battery is facing away from you.
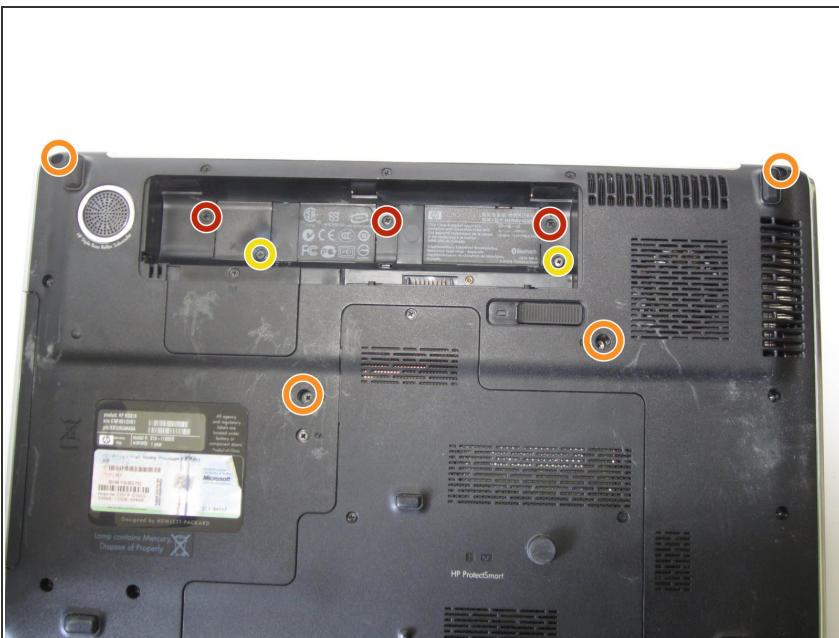
Step 2

- Locate the slider under the right side of the battery.

- Using your thumb, slide it all the way to the left until the front of the battery lifts up.

This document was generated on 2019-09-19 02:36:24 PM (MST).

Step 3

- With your thumb still holding the slider to the left, use the opposite hand to lift the battery out, removing it from the computer.

Step 4 — Keyboard

- Remove the three 4mm screws using Phillips #1 screw driver.

- Remove the four 6mm screws using Phillips #1 screw driver.

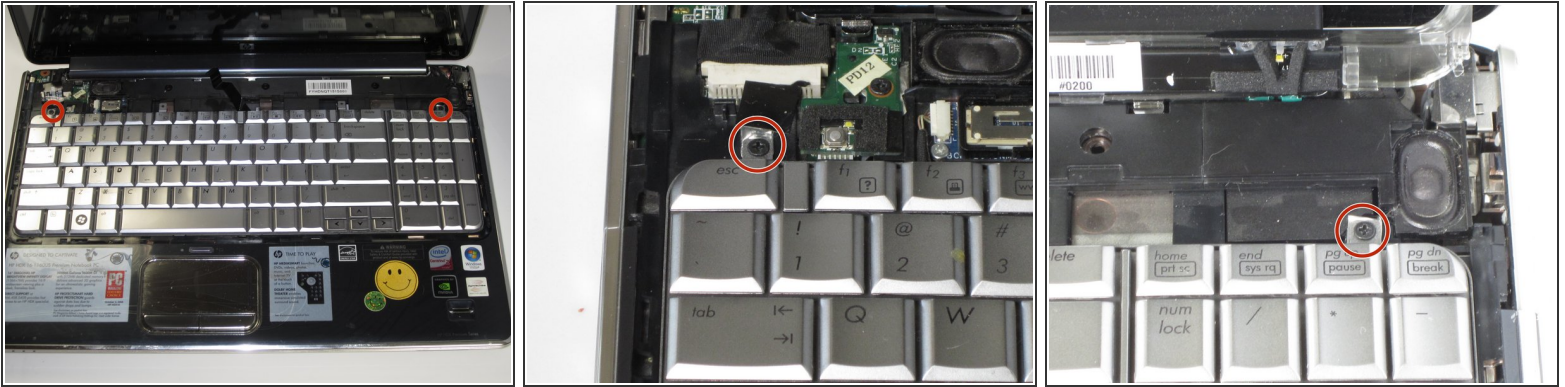- Remove the two 3mm screws using Phillips #1 screw driver.

This document was generated on 2019-09-19 02:36:24 PM (MST).

Step 5

- Using your fingers, pry off the speaker cover.

Step 6

- Use the plastic opener to pry up the chrome keyboard cover from the lab top itself. Carefully work around the edges by prying each snap individually.

- Remove the chrome keyboard cover.

  ⚠️ Be careful not to pull the chrome cover completely off because there is a black strip connecting it to the laptop itself.

This document was generated on 2019-09-19 02:36:24 PM (MST).

Step 7

- Locate and remove the two 4mm screws with the Phillips #1 screw driver.

Step 8

- Using your hands, pull the keyboard out.

⚠️ Do not pull completely off because there is a grey strip connecting it to the laptop itself.

Step 9

- Lift the black tab using the plastic opening tool.

- Gently pull the grey strip out, horizontally way from you. This will release the keyboard from the computer.

Step 10 — Disk Drive

- Use the Phillips #1 Screw Driver to unscrew the 5mm screw.

This document was generated on 2019-09-19 02:36:24 PM (MST).

Step 11

- Flip over the device so that the bottom side is facing up.

- Use the Phillips #1 Screw Driver to unscrew the 7mm screw near the center of the device.

Step 12

- Push down and pull out the Disk Drive on the left side of the device.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2019-09-19 02:36:24 PM (MST).