HP iPAQ h4155 Back Case Replacement

How to replace the HP iPAQ h4155 back case.

Written By: John Pagliero

This document was generated on 2020-03-19 05:55:45 PM (MST).

© iFixit — CC BY-NC-SA   www.iFixit.com   Page 1 of 6

INTRODUCTION

This step-by-step guide illustrates how to remove and replace the back case of a Pocket PC.

🔧 TOOLS:

- iFixit Opening Tools (1)
- T5 Torx Screwdriver (1)

This document was generated on 2020-03-19 05:55:45 PM (MST).

www.iFixit.com

Step 1 — Battery

- Slide the silver release tab up and simultaneously lift the cover up from the left side.

Step 2

- Push the tab from left to right to remove the cover.

This document was generated on 2020-03-19 05:55:45 PM (MST).

Step 3

- Now lift the battery up and away from the device to remove it.
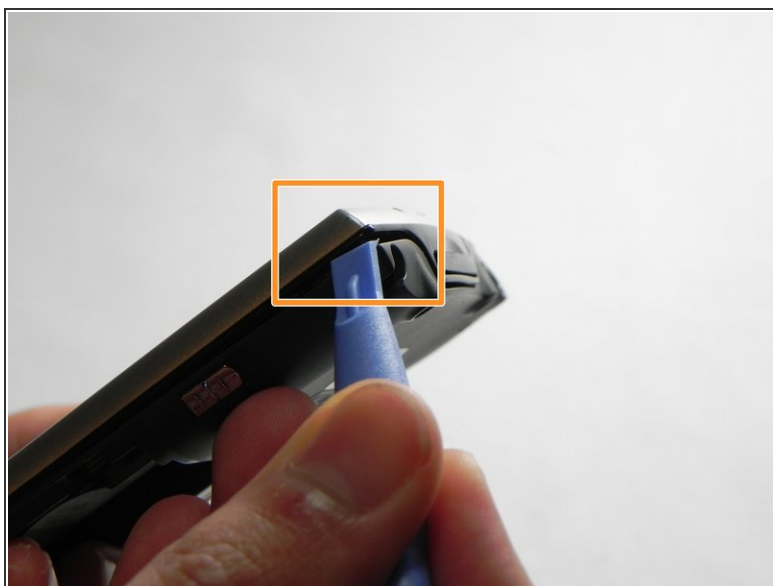
Step 4 — Back Case

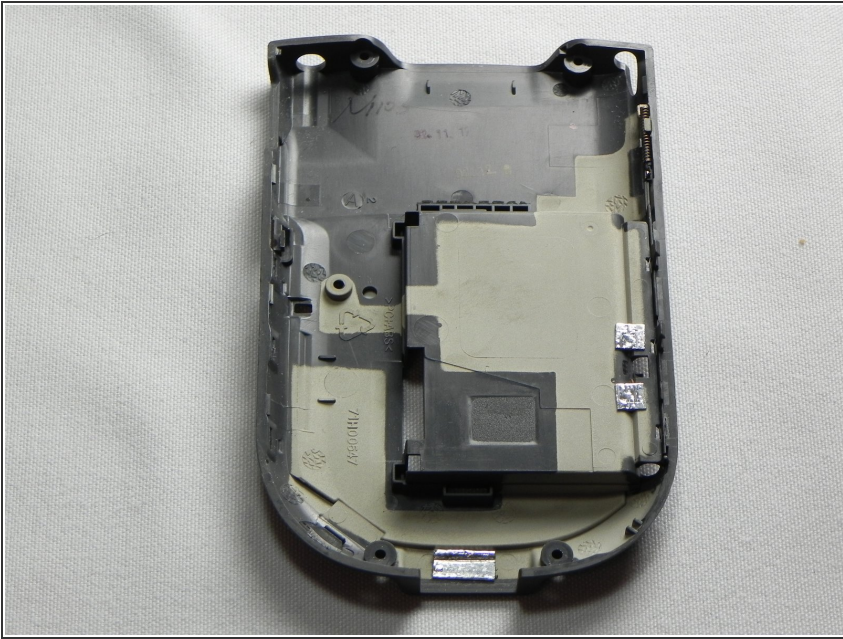- Remove the four silver screws (T5 x .25 in).

Step 5

- Remove the single black screw (T5 x .125 in) beneath the HP sticker.

Step 6

- Next, use your plastic removal tool to separate the gray back from the black center piece.

- For better results, start the separation at the corner piece.

This document was generated on 2020-03-19 05:55:45 PM (MST).

Step 7

● Remove the back case.

To reassemble your device, follow these instructions in reverse order.