Lenovo IdeaPad 310 Touch-15ISK Battery Replacement
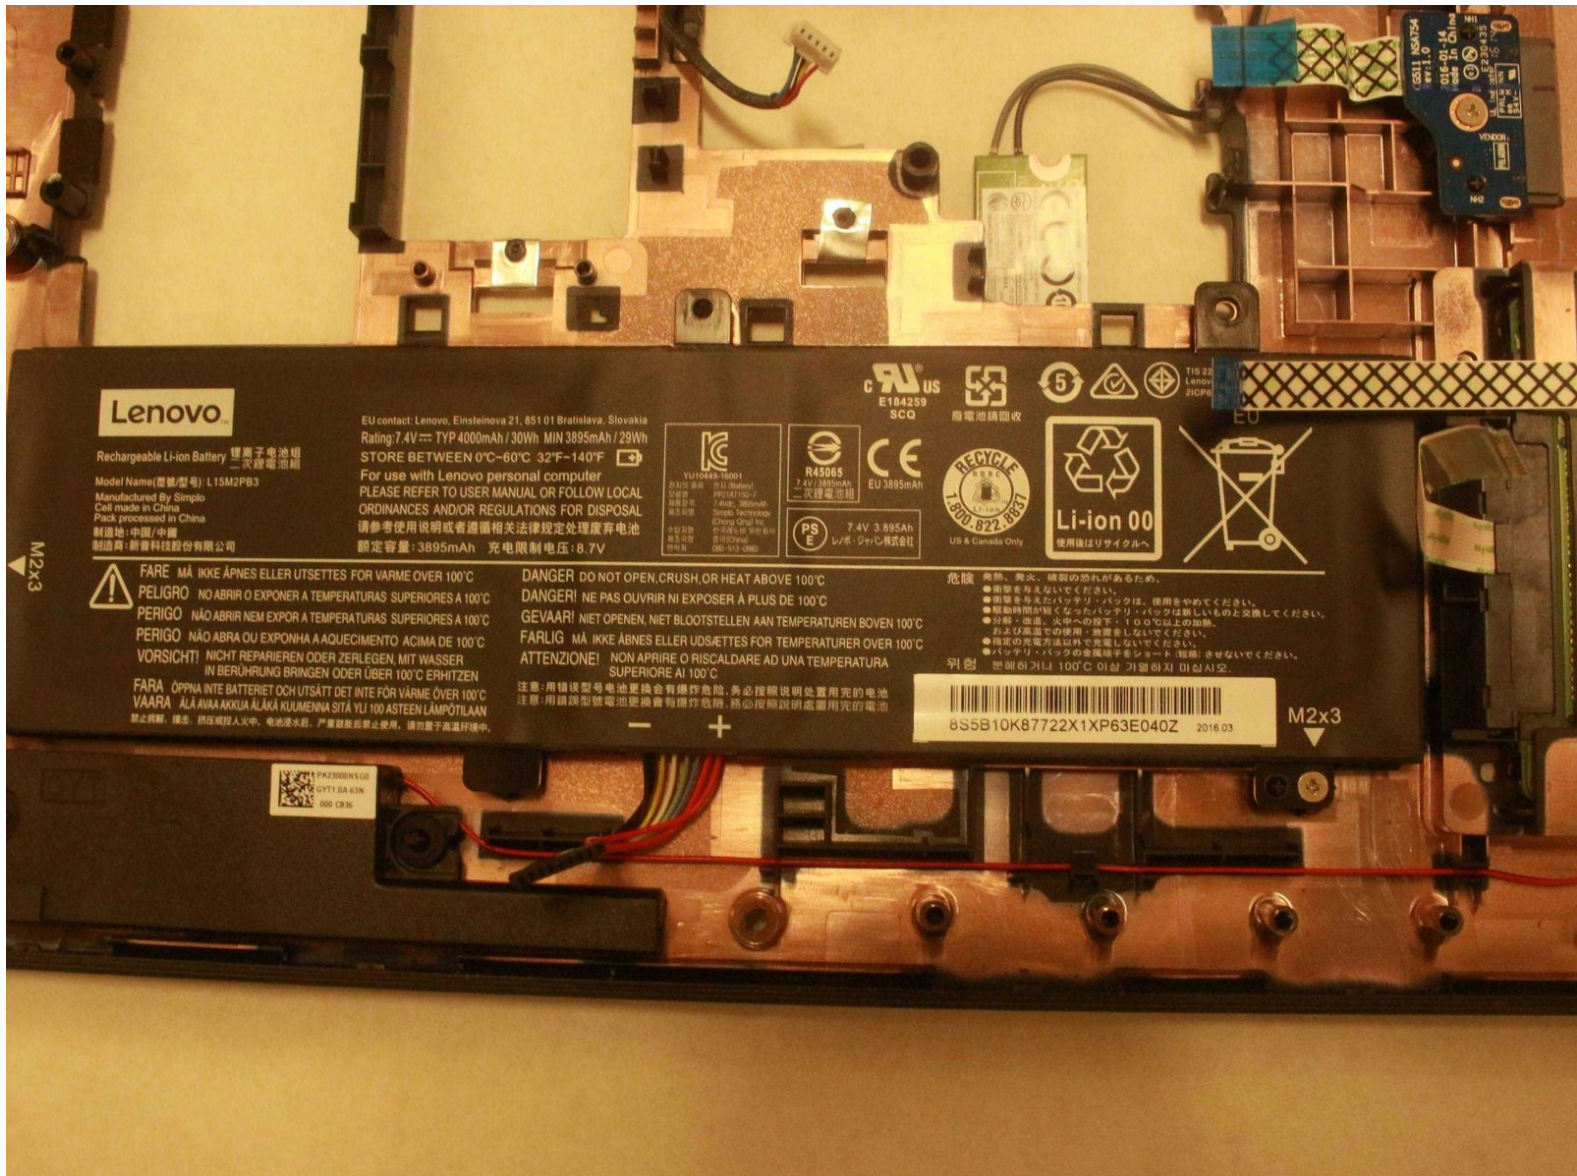
Replace the battery of your Lenovo IdeaPad 310 Touch-15ISK.

Written By: Cam Plute
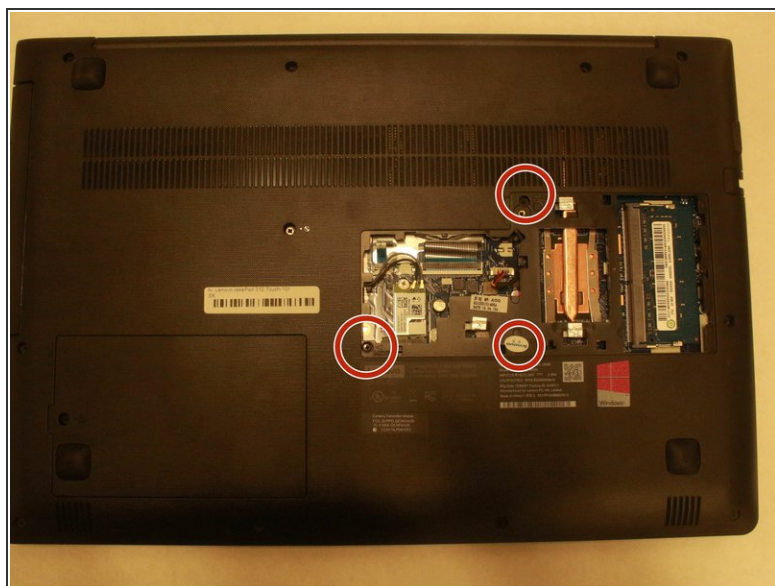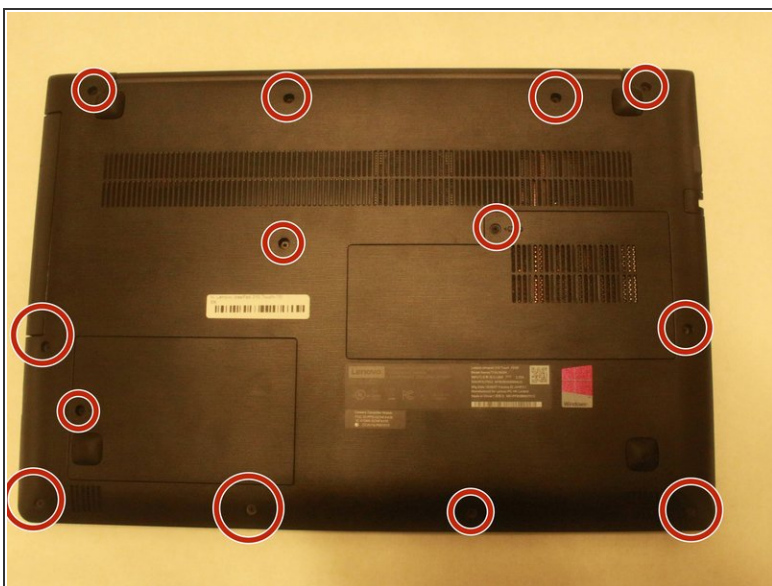
🔧 TOOLS:

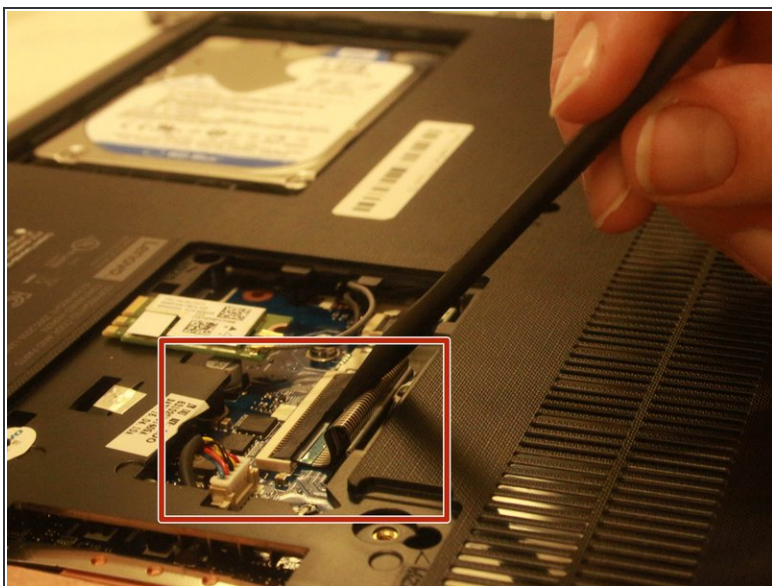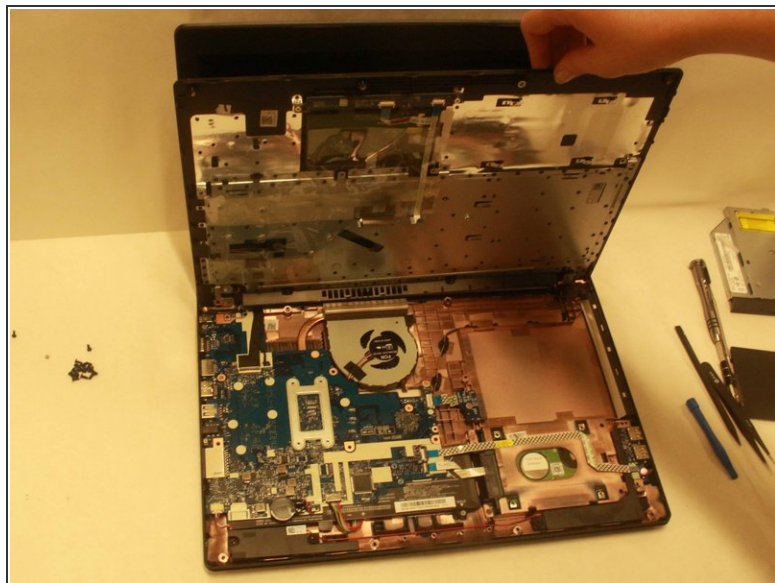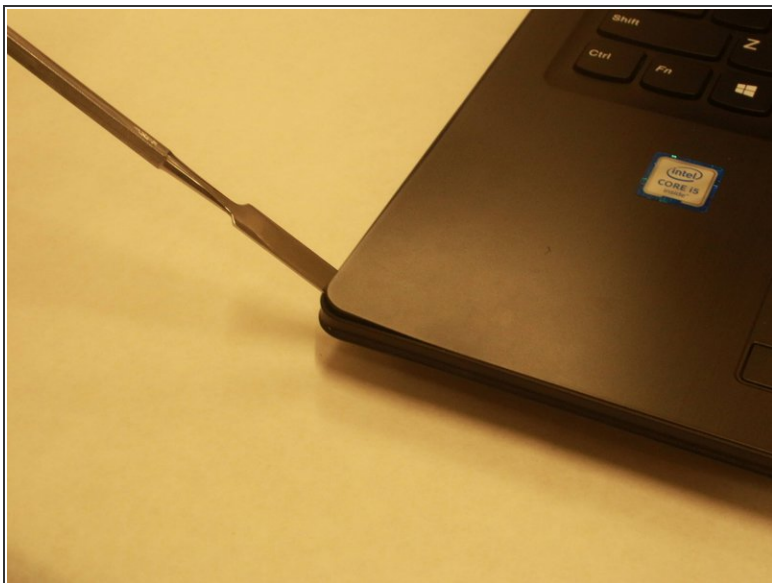- Pro Tech Toolkit (1)

Step 1 — Battery

- Flip laptop over and remove 13 screws from the bottom panel.

- Remove RAM panel after removing 3 screws.
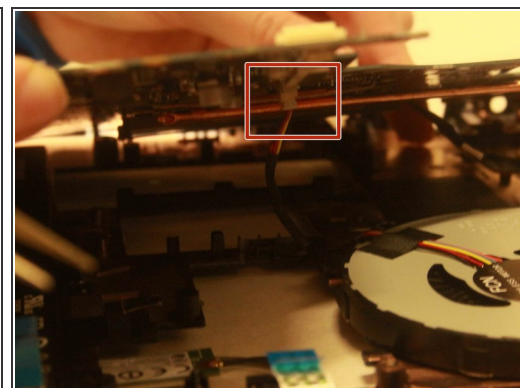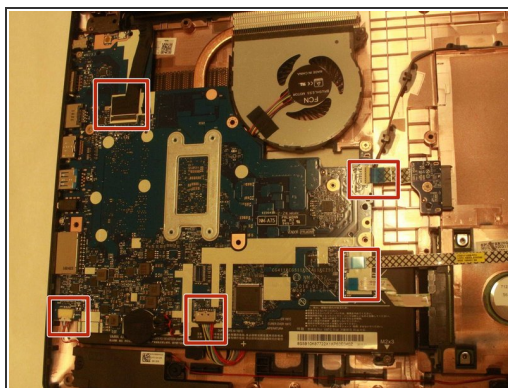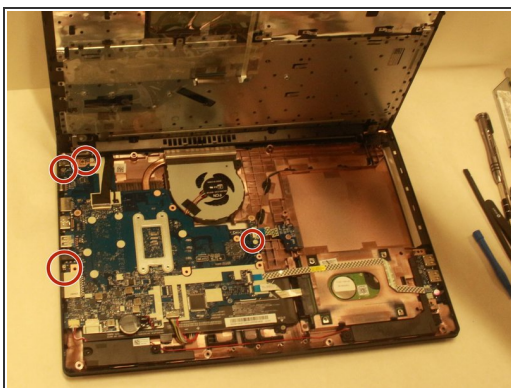
Step 2

- Disconnect keyboard and touchpad wire.

- Remove CD port.

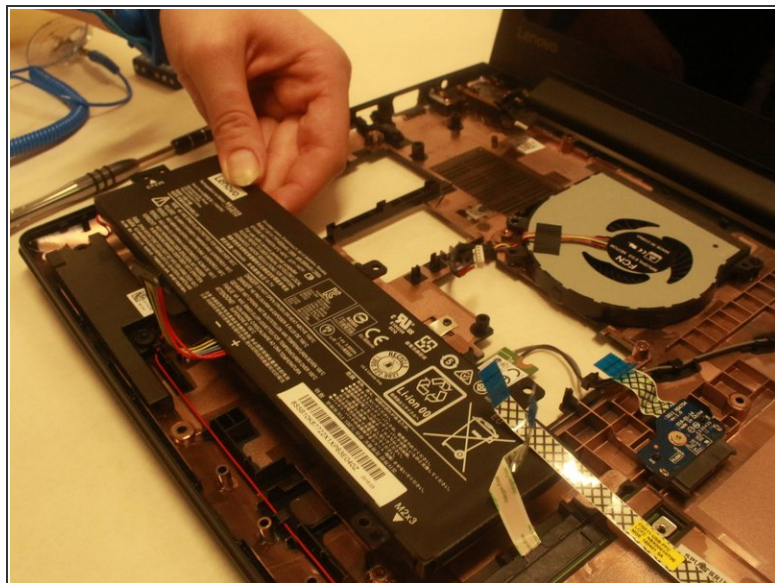This document was generated on 2019-09-23 11:18:58 AM (MST).
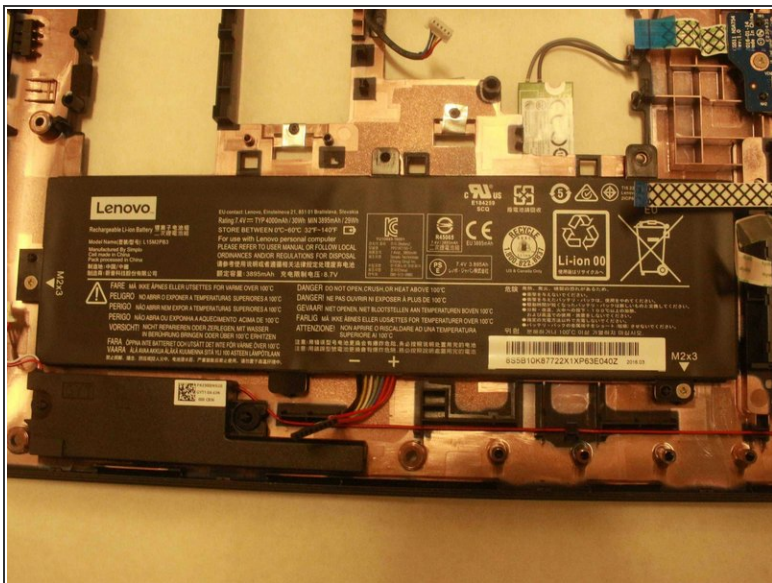
Step 3

- Flip laptop back over.

- Using a plastic spudger, pry between the keyboard panel and bottom panel on all 4 sides.

Step 4

- Remove the 5 screws and 4 tabs holding the motherboard and remove.

- Before removing motherboard, be sure to disconnect the fan tab on the bottom.

This document was generated on 2019-09-23 11:18:58 AM (MST).

Step 5

- Unscrew the 2 screws and 1 pull tab holding the battery in place.

- Carefully remove battery.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2019-09-23 11:18:58 AM (MST).