Nikon COOLPIX P2 LCD Screen Replacement

Repair guide for installing a new LCD screen.

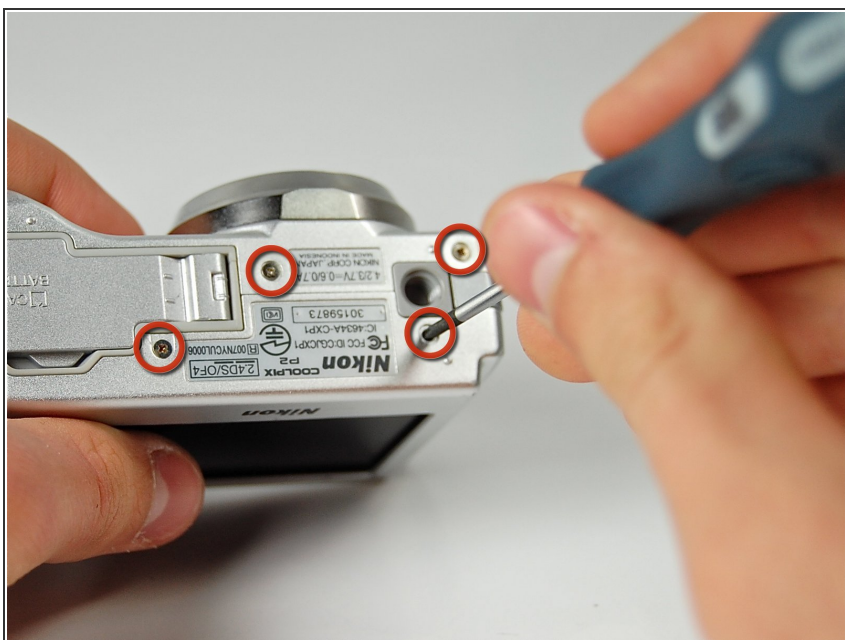Written By: Joshua Avery

🔧 TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [Soldering Iron](#) (1)
- [iFixit Opening Tools](#) (1)
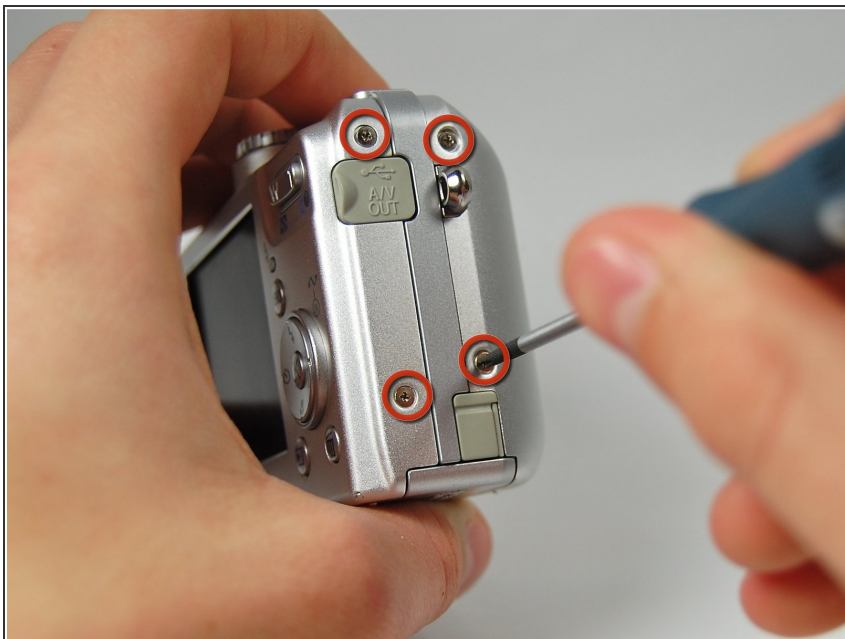
Step 1 — Case

- Remove the screw located near the speaker port using a Phillips 00 screwdriver.

Step 2

- Turn camera upside down so that the battery compartment is facing you.

- Remove all four screws from the bottom of the camera with a Phillips 00 screwdriver.

Step 3

- Rotate the camera to the opposite side where the A/V outlet is located.

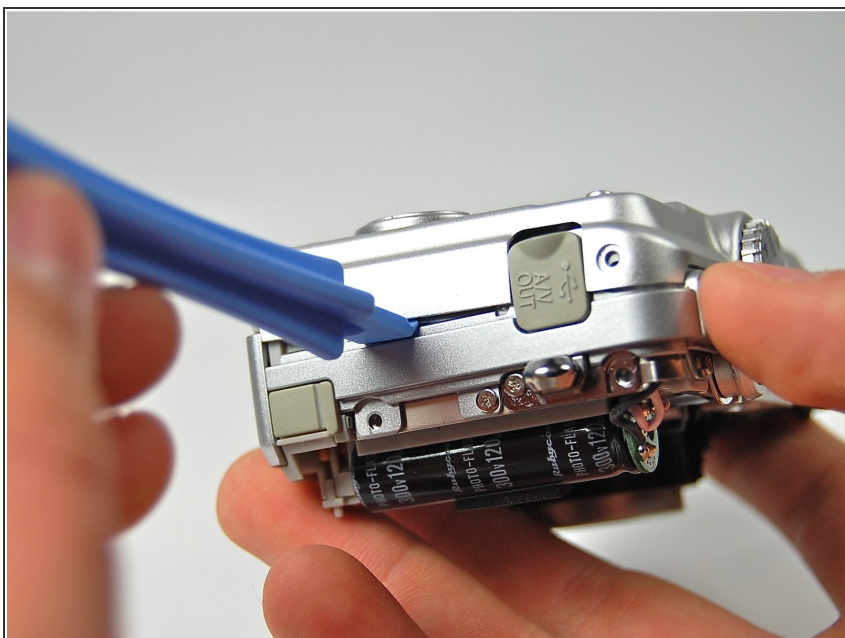- Unscrew and remove all four screws with a Phillips 00 screwdriver.

Step 4

- Turn the camera so that the Wi-Fi adapter is facing you.

- Unscrew and remove all four screws with a Phillips 00 screwdriver.

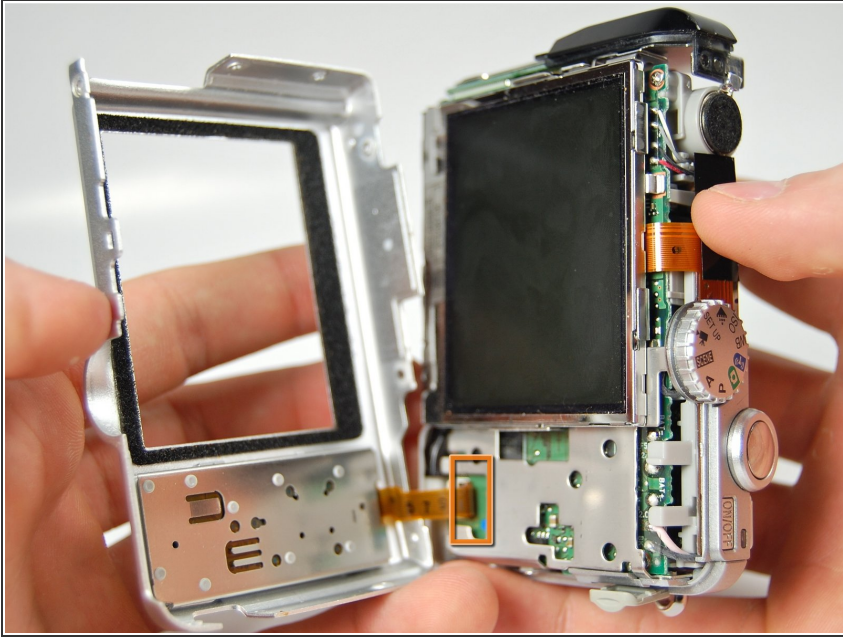This document was generated on 2019-10-06 06:15:53 AM (MST).

Step 5

- Using a plastic opening tool, pry the front casing of the camera.

- Continue this motion all around the front casing of the camera.

- Gently pull apart the front casing from the rest of the camera.

Step 6

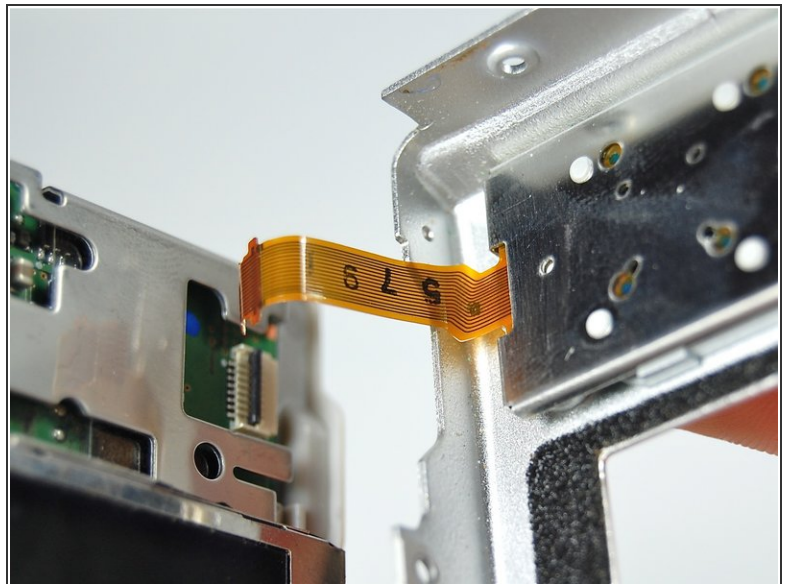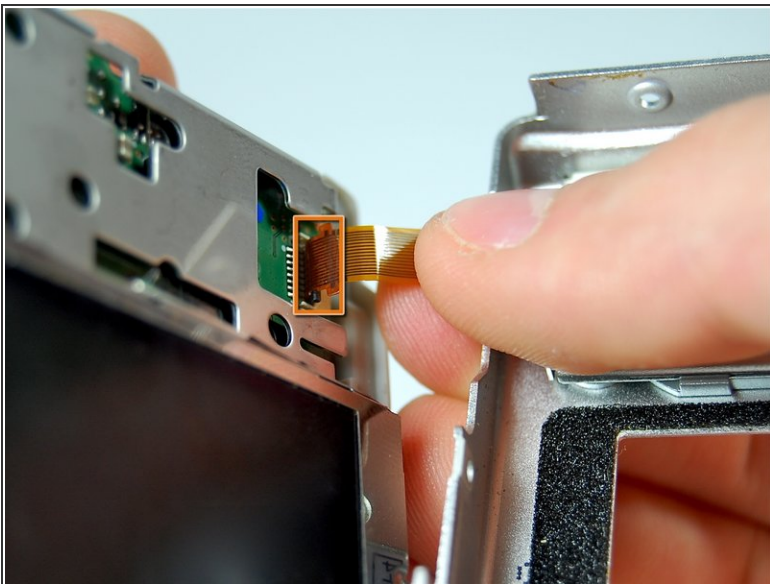- Using the plastic opening tool pry the back casing of the camera.
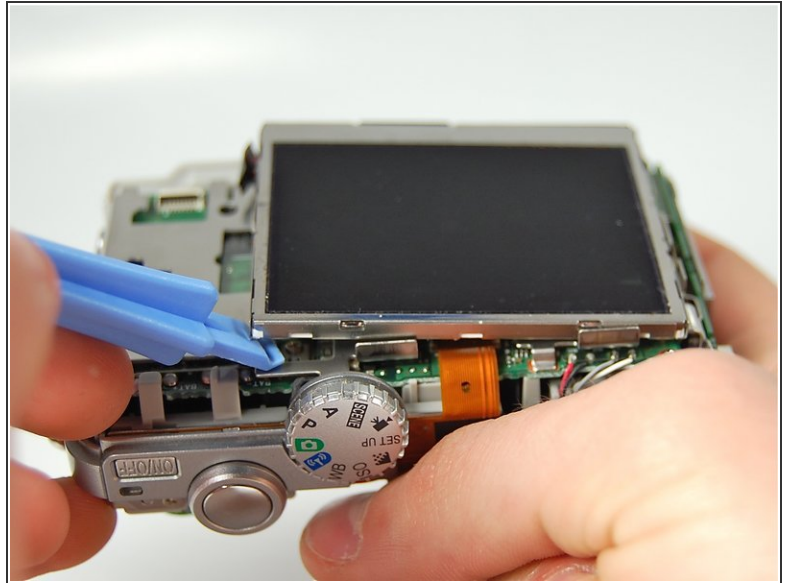
Step 7

⚠ Orange ribbon is fragile

● Carefully pull apart the back casing of the camera from the front of the camera without tearing the orange ribbon.
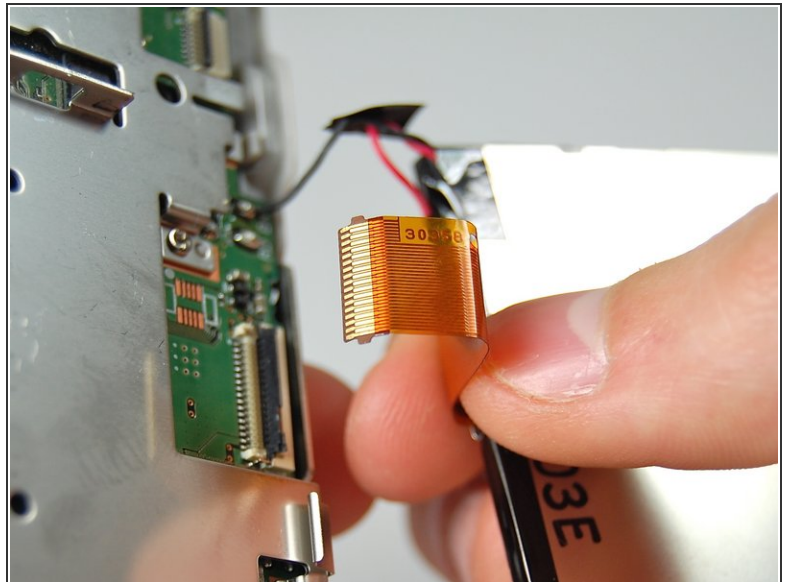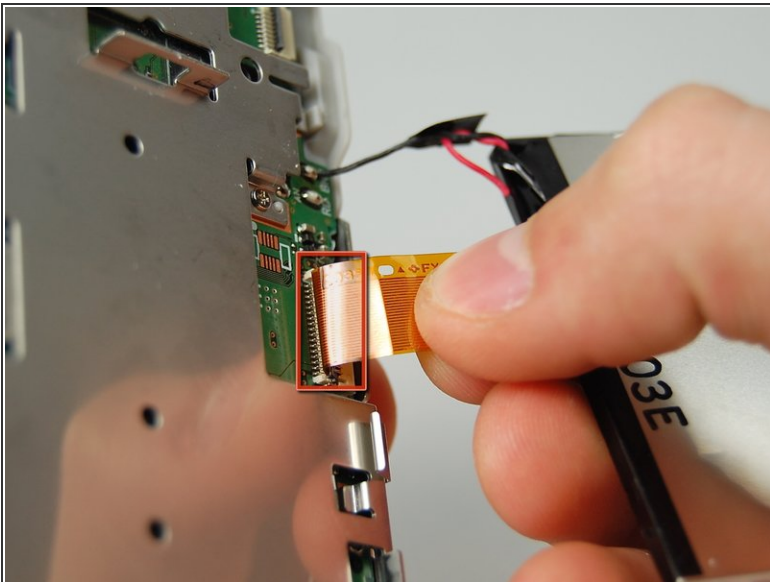
Step 8

● Pull down the on the black latch to carefully separate the orange ribbon from the motherboard.

● Pull apart the orange ribbon and front casing from the rest of the camera.
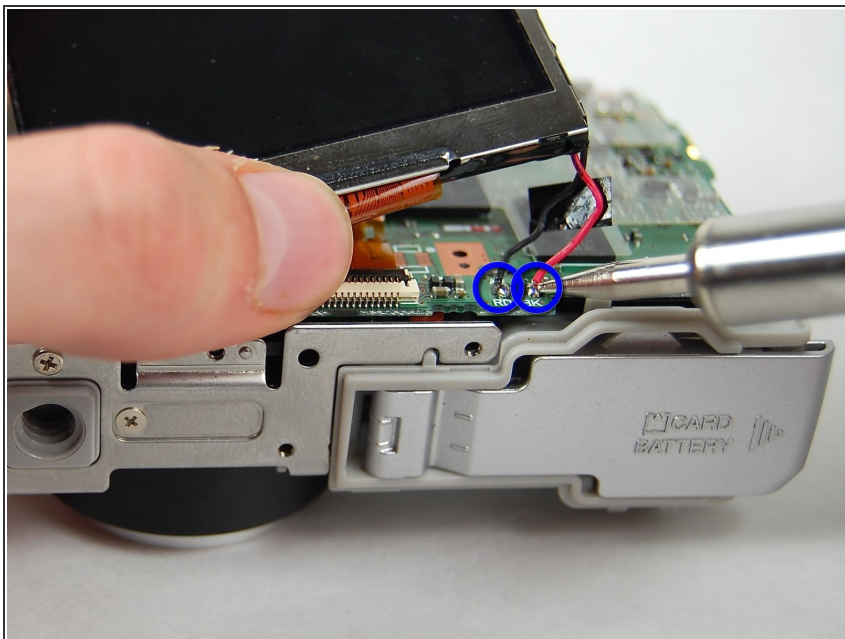
Step 9 — LCD Screen

- Use plastic opening tool to carefully pry the LCD Screen from the camera.

Step 10

- Gently pull the ribbon cable down to release the latch, then pull up to remove it from the motherboard.

This document was generated on 2019-10-06 06:15:53 AM (MST).

Step 11

- De-solder the black and red wires from the mainboard.

⚠ Using a soldering iron can be dangerous! Refer to the [iFiixit Soldering Iron Safety Information Page](#) Use caution while attempting this repair.

To reassemble your device, follow these instructions in reverse order.