Sky Thunder HD 8500WH Lockstich Replacement

This guide will show you how to replace the lockstich on the Sky Thunder HD 8500WH.

Written By: Nicholas Jones
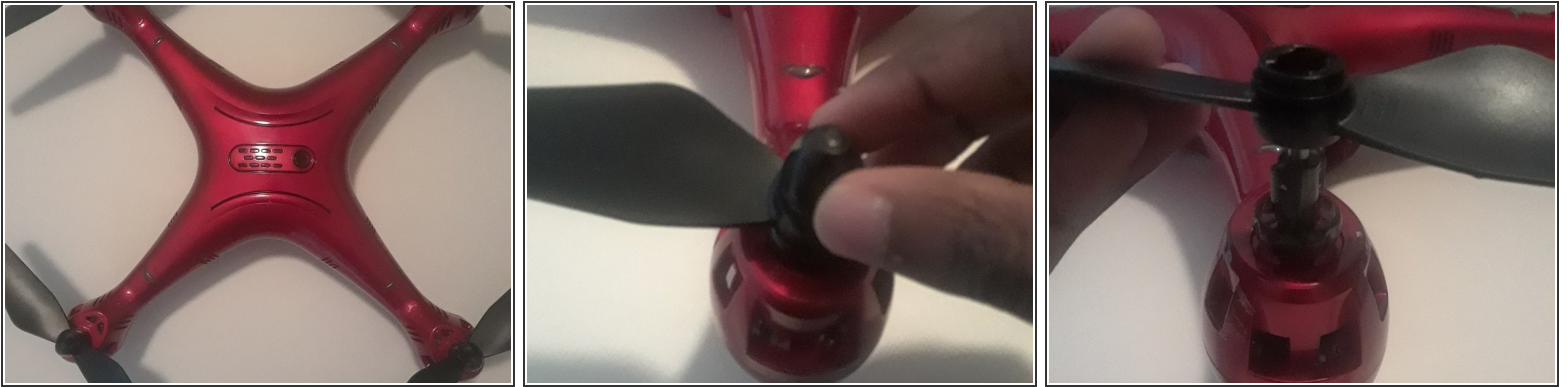
TOOLS:

- Phillips #0 Screwdriver (1)

Step 1 — Rotor Blade

- Place the drone with the top side facing up.

- Remove the blade cover.

- Remove the rotor blade.

Step 2 — Lockstitch

- Unscrew the 1cm screw holding in the blade lockstitch with the Phillips 0 Screwdriver.

- Remove the blade lockstitch.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2019-10-06 10:45:03 AM (MST).

www.iFixit.com