Toshiba Portege R835-P88 RAM Replacement
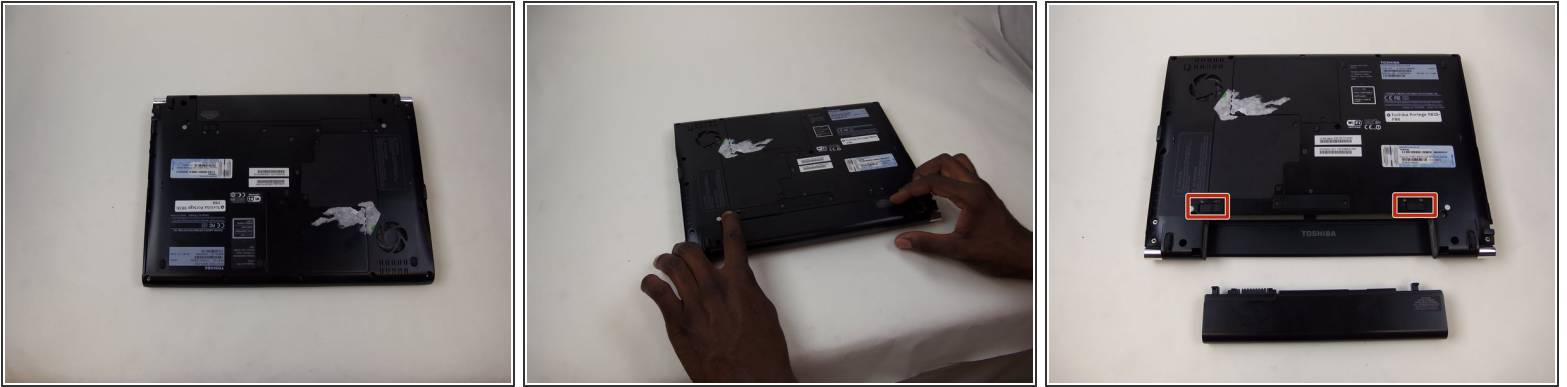
Replace the RAM in your Toshiba Portege R835-P88.

Written By: Colby

INTRODUCTION

Use this guide to replace the RAM in your Toshiba Portege R835-P88.

TOOLS:

- Small Phillips Head Screwdriver (1)

This document was generated on 2019-10-04 05:08:08 PM (MST).
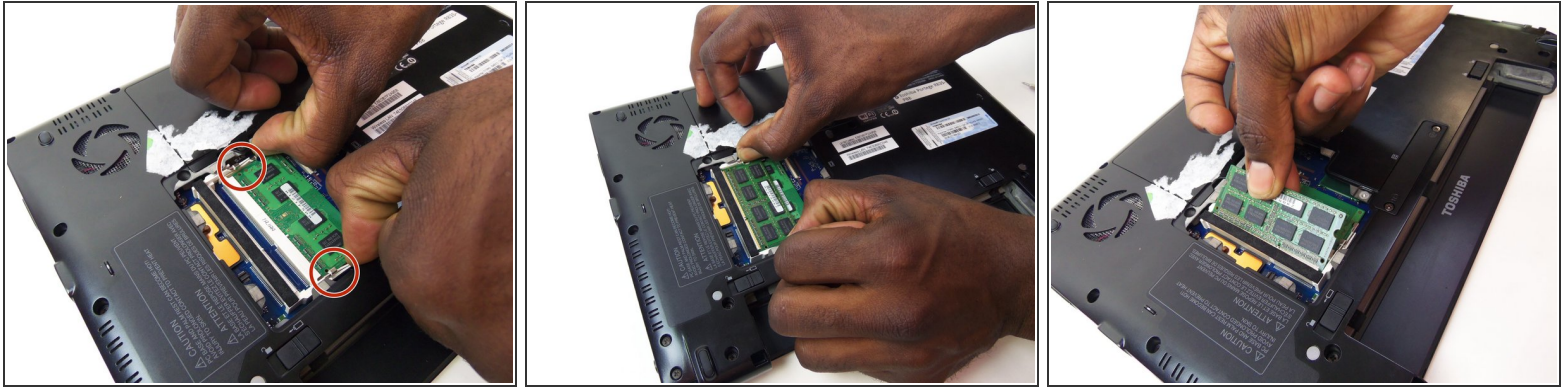
Step 1 — RAM

- Remove the battery by sliding the interlocks to the unlock position.

Step 2

- Remove the two 6mm screws from the RAM cover. Lift the RAM cover upward to remove.

Step 3

● Push back the little white plastic clips to extract the RAM.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2019-10-04 05:08:08 PM (MST).