Asus Padfone 2 Vibrator Replacement

Replacing a damaged A68 Vibrator

Written By: Zach Standridge

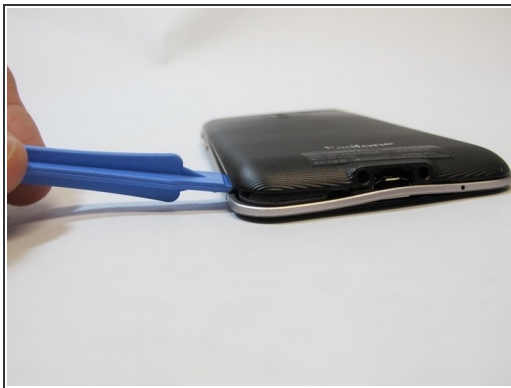This document was generated on 2019-09-20 01:16:24 PM (MST).

© iFixit — CC BY-NC-SA   www.iFixit.com   Page 1 of 6
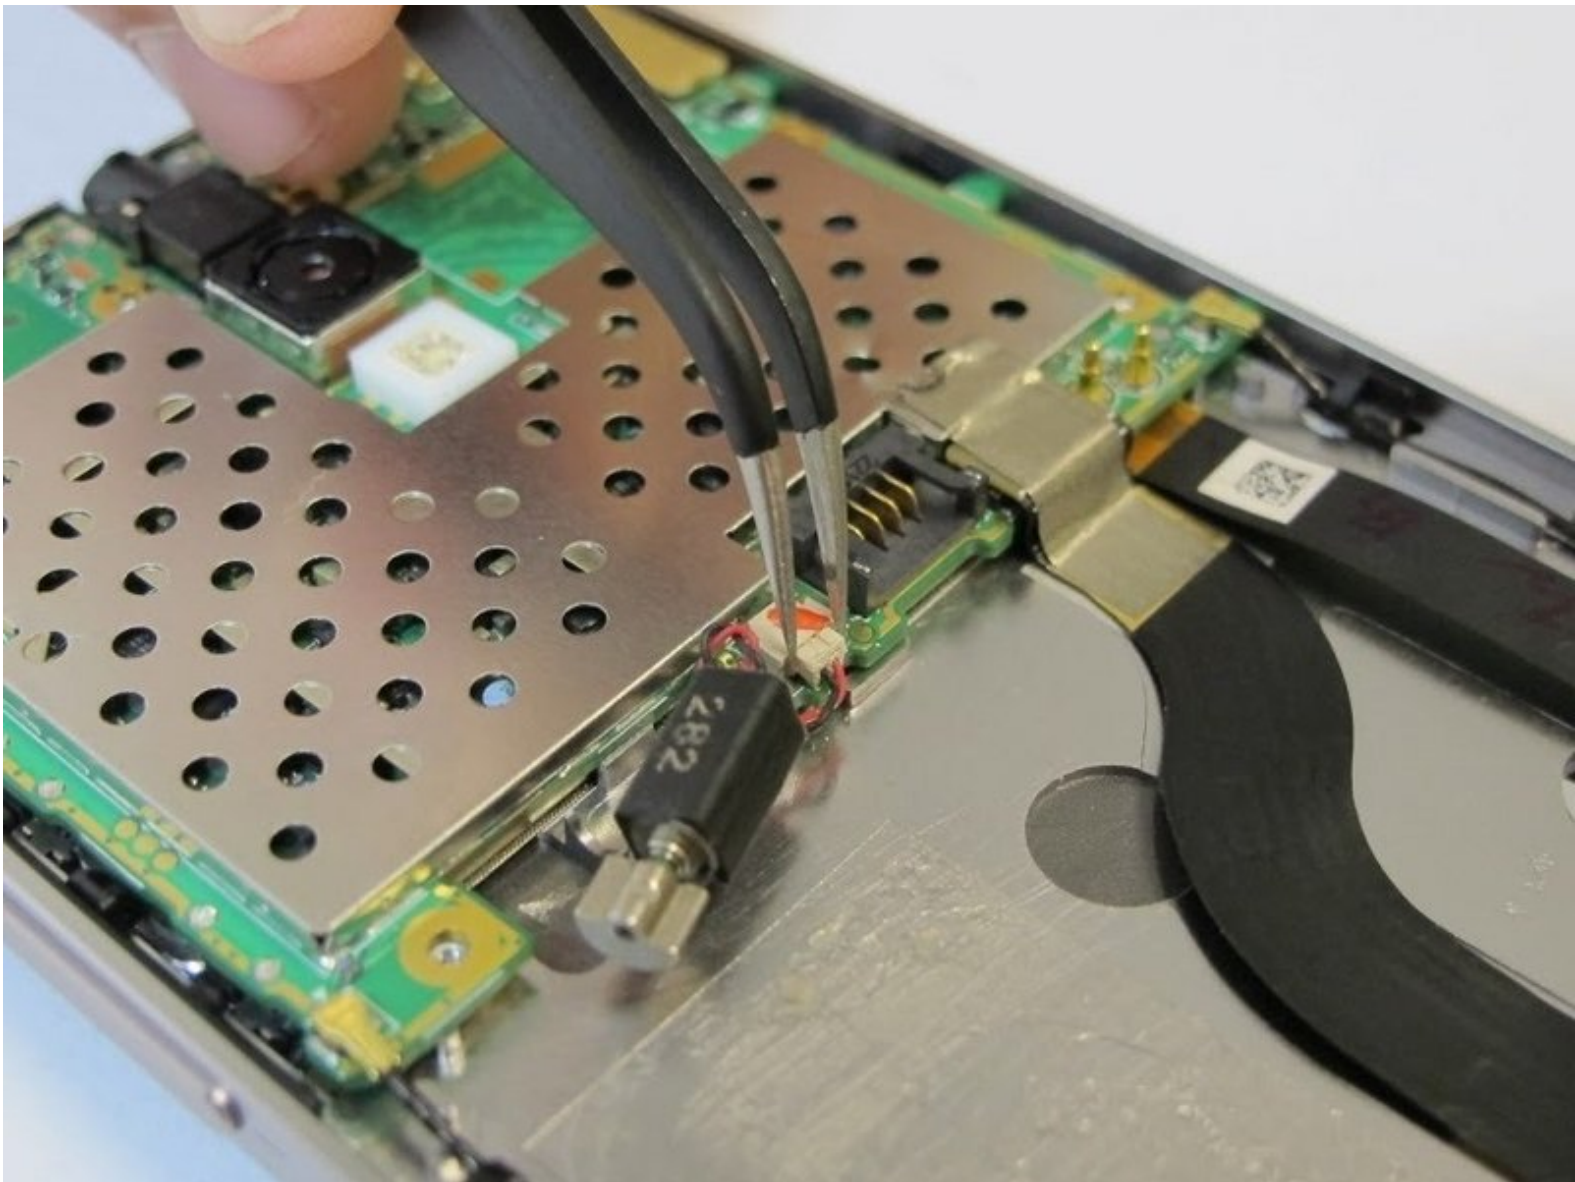
🔧 TOOLS:

- iFixit Opening Tools (1)
- T5 Torx Screwdriver (1)
- Tweezers (1)
- Magnetic Project Mat (1)

This document was generated on 2019-09-20 01:16:24 PM (MST).
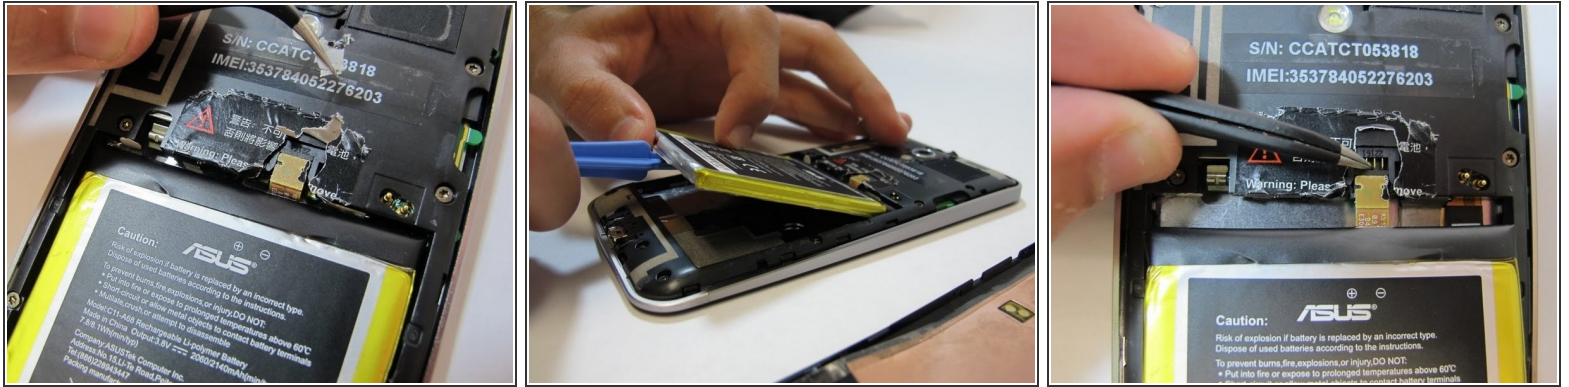
Step 1 — Power Down Device

⚠️ Hold down the power button

## Step 2 — Remove Back Plate

- Use plastic opening tool to pry off the back cover of the phone.

| |

Step 3 — Battery Removal

- Remove the warning sticker that covers the battery plug and connecting cord.

- Look for the widest gap on either side of the battery. Using the plastic opening tool carefully lift battery out.

⚠ The battery is held down with adhesive. Be careful not to damage battery or connecting cord.

- Disconnect battery connecting cord using tweezers.

This document was generated on 2019-09-20 01:16:24 PM (MST).

Step 4 — Remove Internal Back Plate
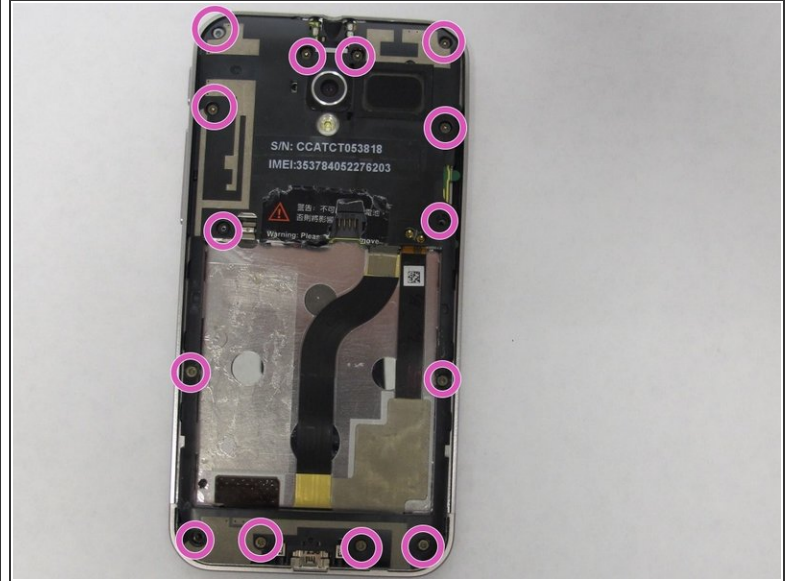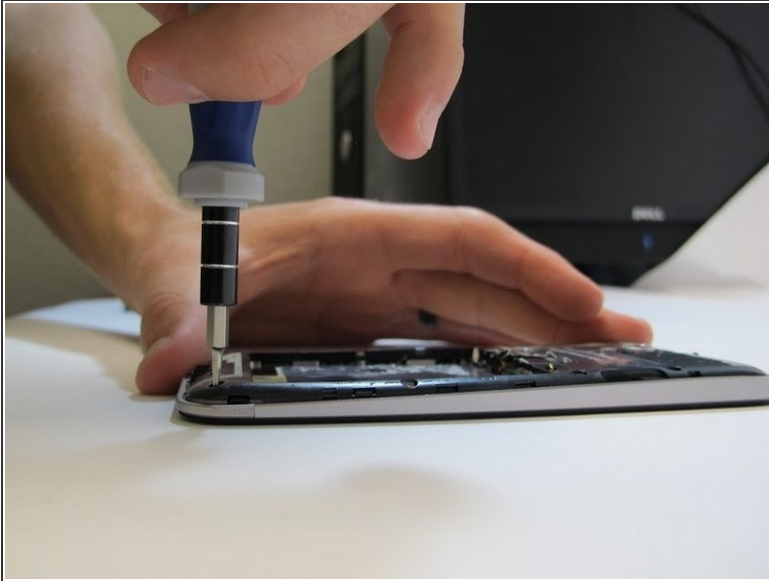
- Use T5 Torx screwdriver to remove 14 screws from internal back plate.

- ⓘ Use of magnetic pad will help with keeping track of screws.

- Once screws are out, remove the plate.

Step 5 — Removal of A68 Vibrator
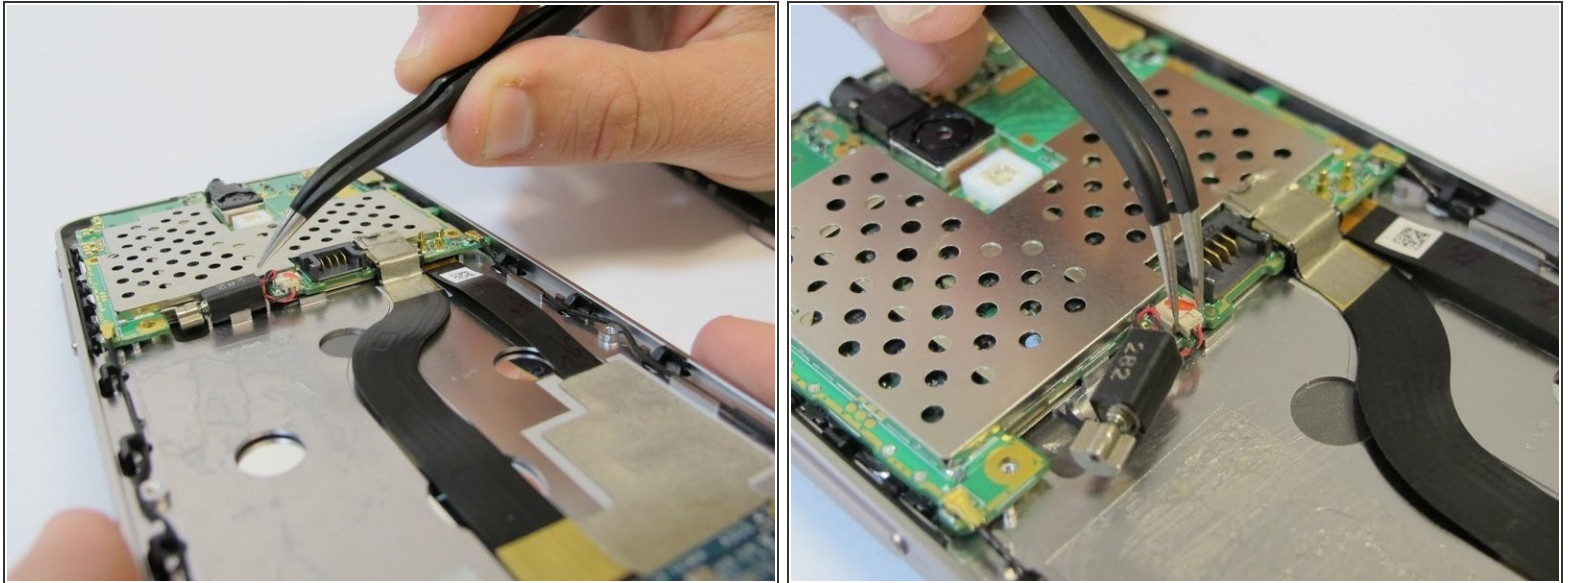
- Use tweezers to remove motor from housing, pulling the plug downward away from the phone.

- Use tweezers to unplug the device from the circuit board.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2019-09-20 01:16:24 PM (MST).