Dell Inspiron 1545 Memory Module Replacement

Written By: Terrence15

This document was generated on 2019-10-31 09:58:52 PM (MST).

© iFixit — CC BY-NC-SA

www.iFixit.com
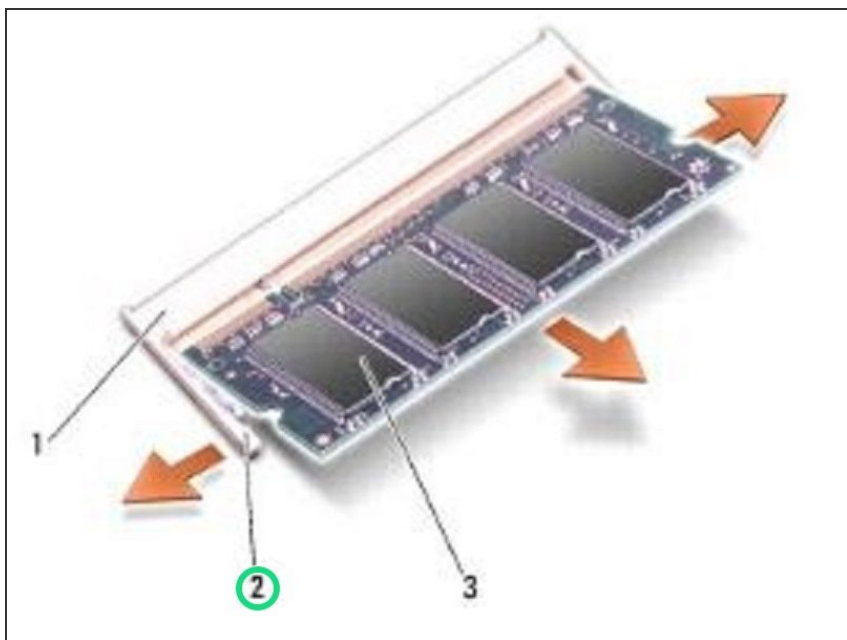
Page 1 of 5
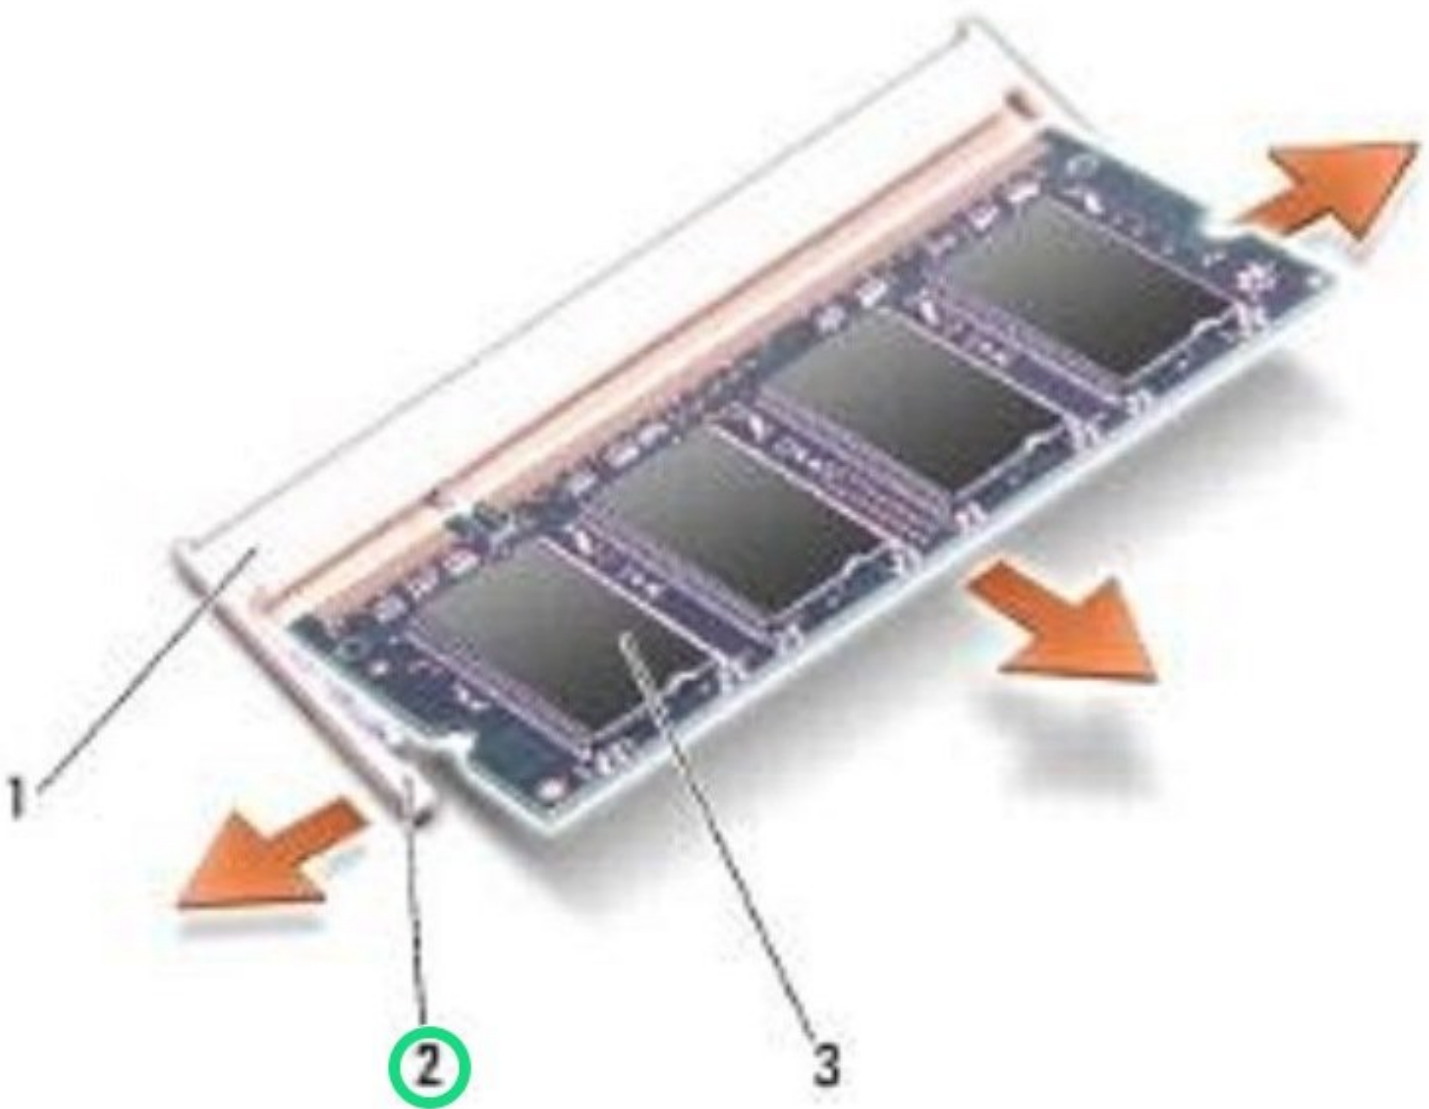
INTRODUCTION

In this guide, we will be showing you how to remove and replace the Memory Module.

## Step 1 — Popping up the Memory Module

- ⚠ CAUTION: Before working inside your computer, read the safety information that shipped with your computer. Follow the instructions in [Before You Begin.](#)

- ⓘ NOTICE: To prevent damage to the memory module connector, do not use tools to spread the memory module securing clips.
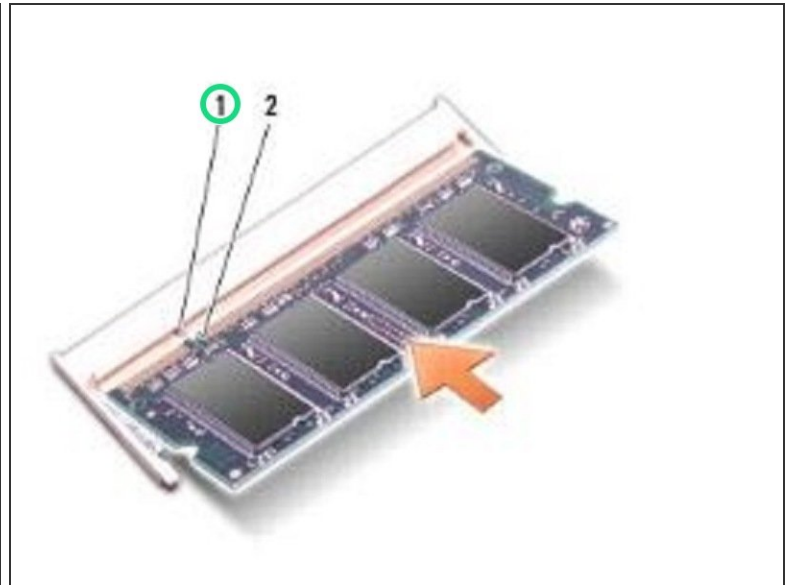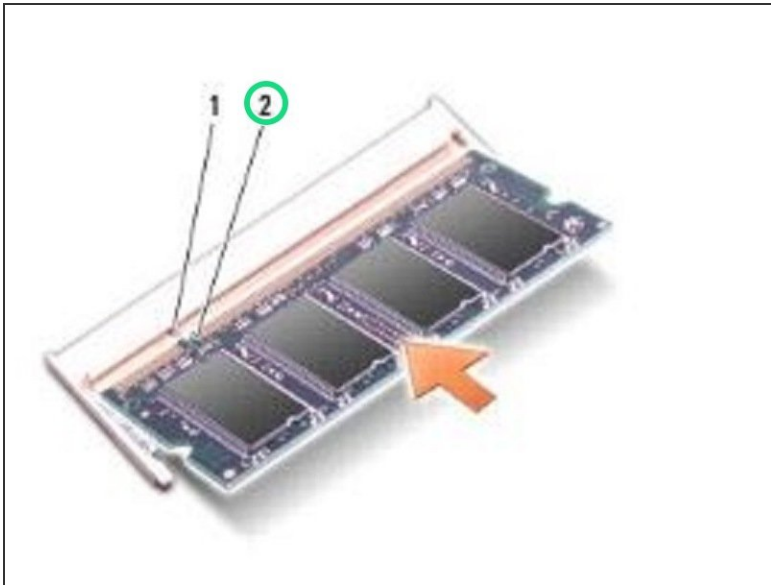
- Use your fingertips to carefully spread apart the securing clips on each end of the memory module connector until the module pops up.
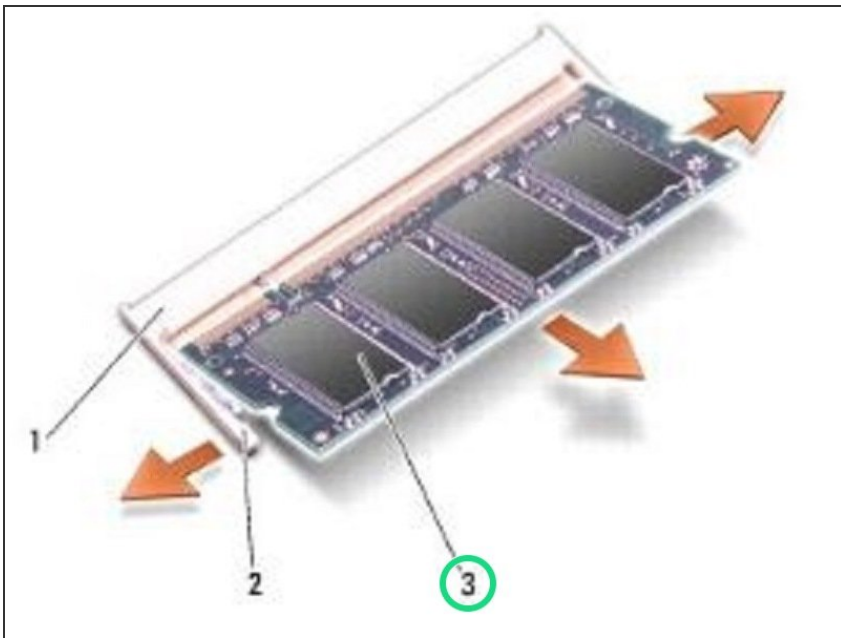
Step 2 — Remove the Memory Module
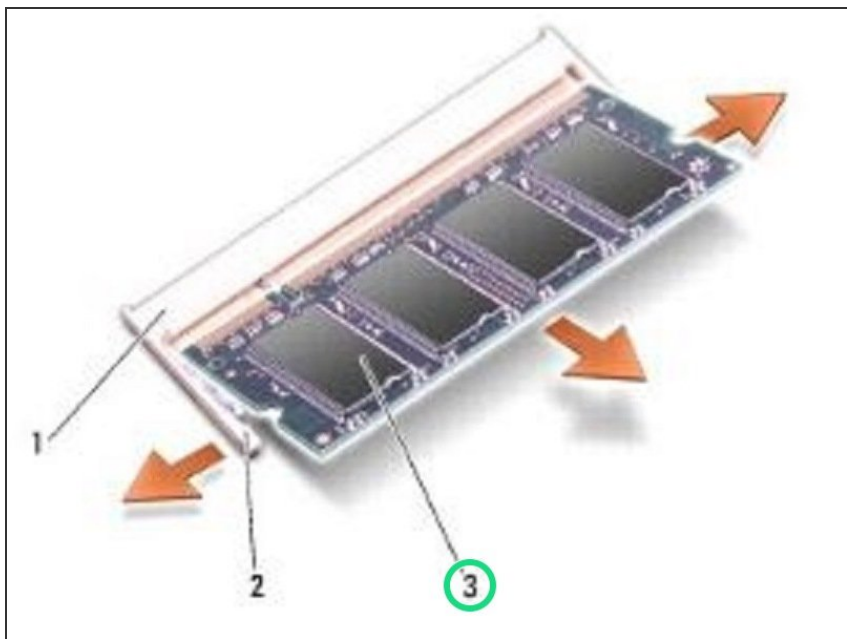
- Remove the memory module from the connector.

This document was generated on 2019-10-31 09:58:52 PM (MST).

Step 3 — Align the Notch

- Align the notch in the edge of the **NEW** memory module with the tab in the memory module connector.

Step 4 — Sliding the Module

- Slide the module firmly into the slot at a 45-degree angle, and press the module down until it clicks into place. If you do not hear the click, remove the module and reinstall it.

- ⓘ NOTE: If the memory module is not installed properly, the computer may not boot.

This document was generated on 2019-10-31 09:58:52 PM (MST).

This document was generated on 2019-10-31 09:58:52 PM (MST).