Dyson v6 Absolute Cyclone Replacement

The cyclone of the Dyson v6 Absolute can be easily replaced for regular cleaning and to check for blockages.

Written By: Tabitha Espina Velasco

INTRODUCTION

If there are issues with the suction of the Dyson v6 Absolute, the cyclone may have to be cleaned or replaced.

🔧 TOOLS:

- Tweezers (1)
- Heavy-Duty Spudger (1)
- T9 Torx Screwdriver (1)

This document was generated on 2019-10-06 07:47:38 AM (MST).

Step 1 — Bin

- Unplug the device.

Step 2

- Push down the red lever located on the outside of the bin, next to the device handle.

- Avoid pressing the trigger on the handle opposite the red lever, which activates the motor.

This document was generated on 2019-10-06 07:47:38 AM (MST).

© iFixit — CC BY-NC-SA   www.iFixit.com   Page 3 of 8

Step 3
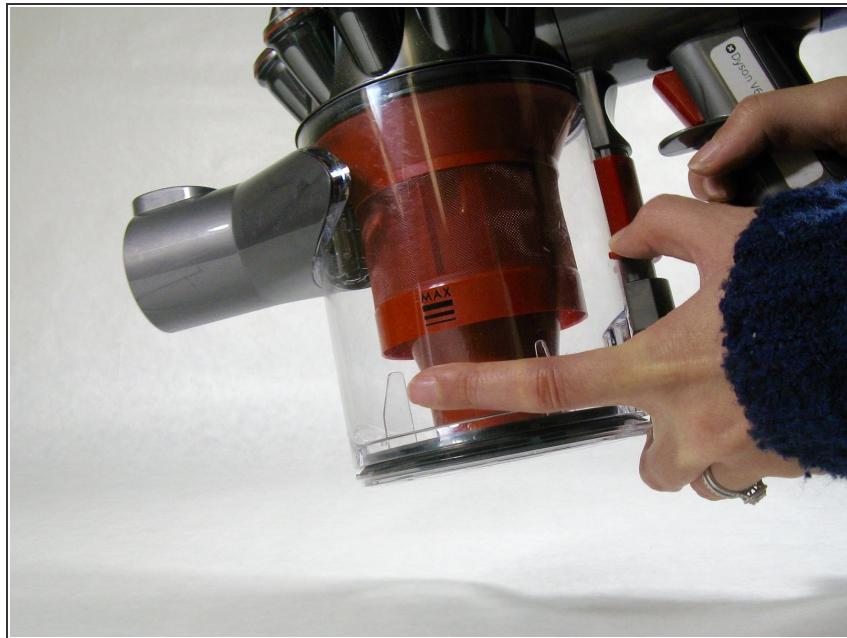
- Push the red lever down a second time to release the bin.

- Avoid pressing the trigger on the handle opposite the red lever, which activates the motor.

Step 4

- Pull bin away from the cyclone.

This document was generated on 2019-10-06 07:47:38 AM (MST).

© iFixit — CC BY-NC-SA

www.iFixit.com

Page 4 of 8

Step 5 — Main Body

- Separate the bin from the main body of the device.

Step 6
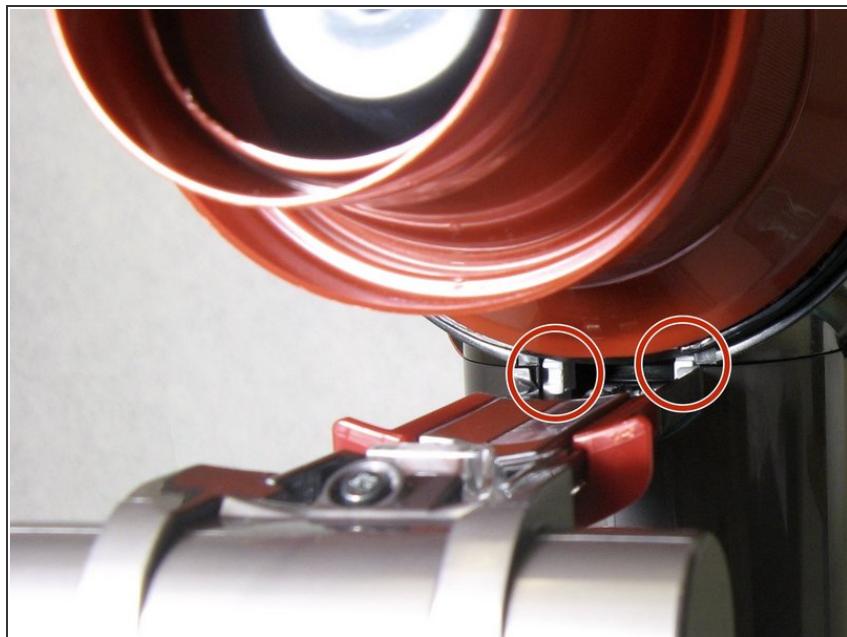
- Locate two visible white clips between the main body and the cyclone.

This document was generated on 2019-10-06 07:47:38 AM (MST).

© iFixit — CC BY-NC-SA   www.iFixit.com   Page 5 of 8

Step 7
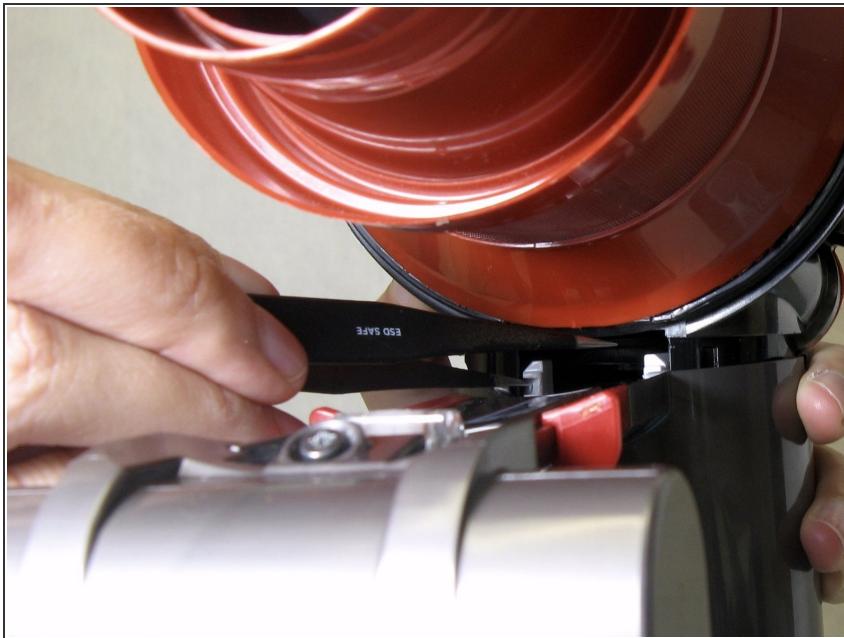
- Use tweezers to pinch the white clips together.

- Widely hold the tweezers apart to get them to reach between the two white clips.

- Because the space is tight between the cyclone and the main body, pinching the white clips may require additional effort.

Step 8

- Tilt and pull the main body away from the cyclone.

- There may be a loud snap when the main body separates from the cyclone.

This document was generated on 2019-10-06 07:47:38 AM (MST).

Step 9 — Cyclone

- Use the spudger to remove the cyclone.

- Start at the small opening beneath the place where the cyclone connects to the main body.

- Work the spudger around the rim of the red screen filter.

- You will hear popping noises.

Step 10

- Use a T9 Torx screwdriver to remove five 14mm screws from the edge of the screen filter body.

Step 11

- Remove the filter screen cover away from the cyclone.

- Pull down on the black tube inside the cyclone body to remove it from the cyclone.

To reassemble your device, follow these instructions in reverse order.