Gigabyte Aero 15x Disassembly

This is how to remove the backplate to insert new storage, replace memory or anything else

Written By: Kev

This document was generated on 2019-12-14 06:40:35 PM (MST).

INTRODUCTION

You just need:

> 1 screwdriver Tors TR6

> 1 screwdriver Philips classical Cross little

> courage and bravery :)

🔧 TOOLS:

- TR6 Torx Security Screwdriver (1)

This document was generated on 2019-12-14 06:40:35 PM (MST).

Step 1 — Remove the screws



- With Torx T6, you can remove the 13 screws. Follow their emplacement because 3 of them are taller (orange on picture 2)

This document was generated on 2019-12-14 06:40:35 PM (MST).

© iFixit — CC BY-NC-SA | www.iFixit.com | Page 3 of 6

Step 2 — Unclip the lower case

- Using plastic tools, you can start unclipping the hood from the front of the machine. Insert one opening tool and insert a second. Slide the tools around to pop off the bottom of the laptop.

  ⚠️ Do not insert your tool too deeply, to avoid hanging a clip.

- Do not unclip the back face fully; only the front and the two sides. You can nevertheless detach the 4 corners.

- ⓘ Photo 3 shows the location of the clips to dislocate in green. In red, these are the "hinges" of the hood (see next step)

Step 3 — Remove the lower case
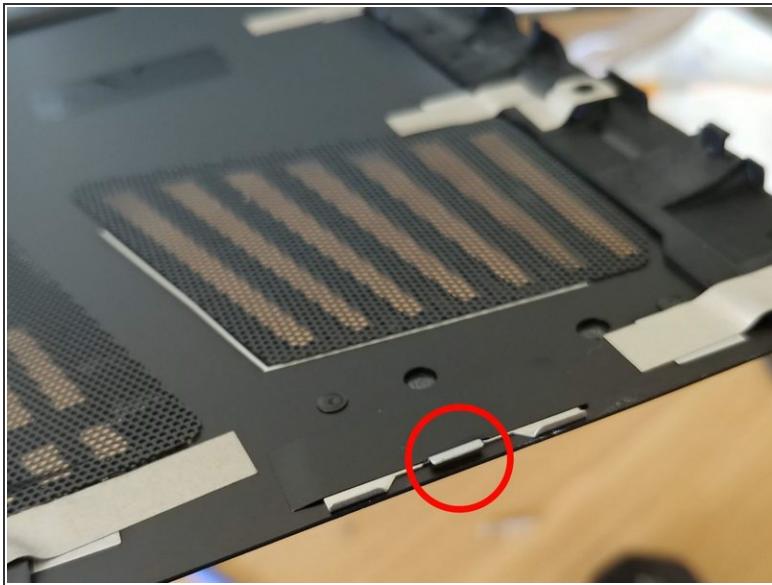
ⓘ Before removing the hood, remember that it is held by 2 aluminum rails at the back (hinge side).

● Remove the hood starting at the front two corners. Lift up at those corners.

⚠ Do not force if you encounter a hard spot, the metal could bend. You can use leverage with a small tool if necescery.

Step 4 — You're finished!
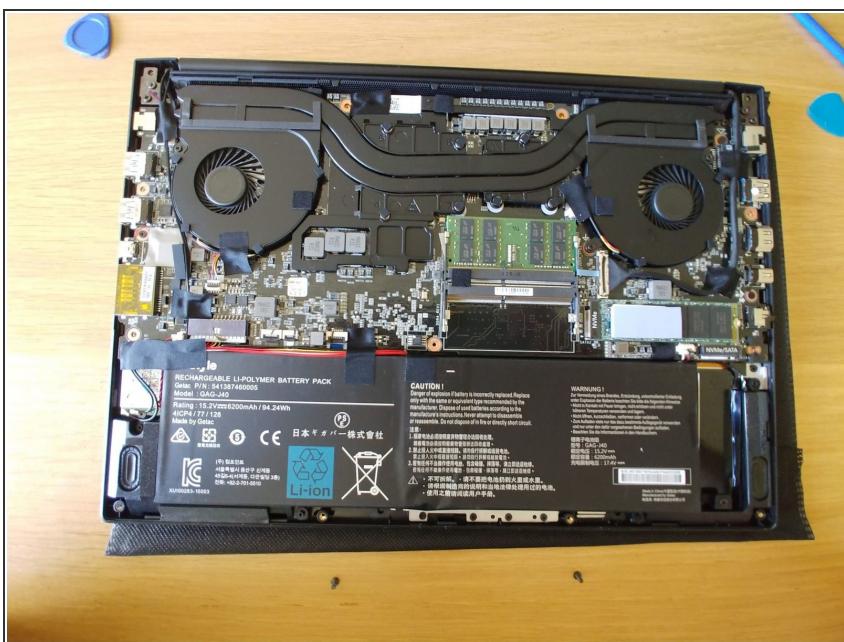
● Congratulations!

To reassemble, follow these steps in reverse order.

This document was generated on 2019-12-14 06:40:35 PM (MST).