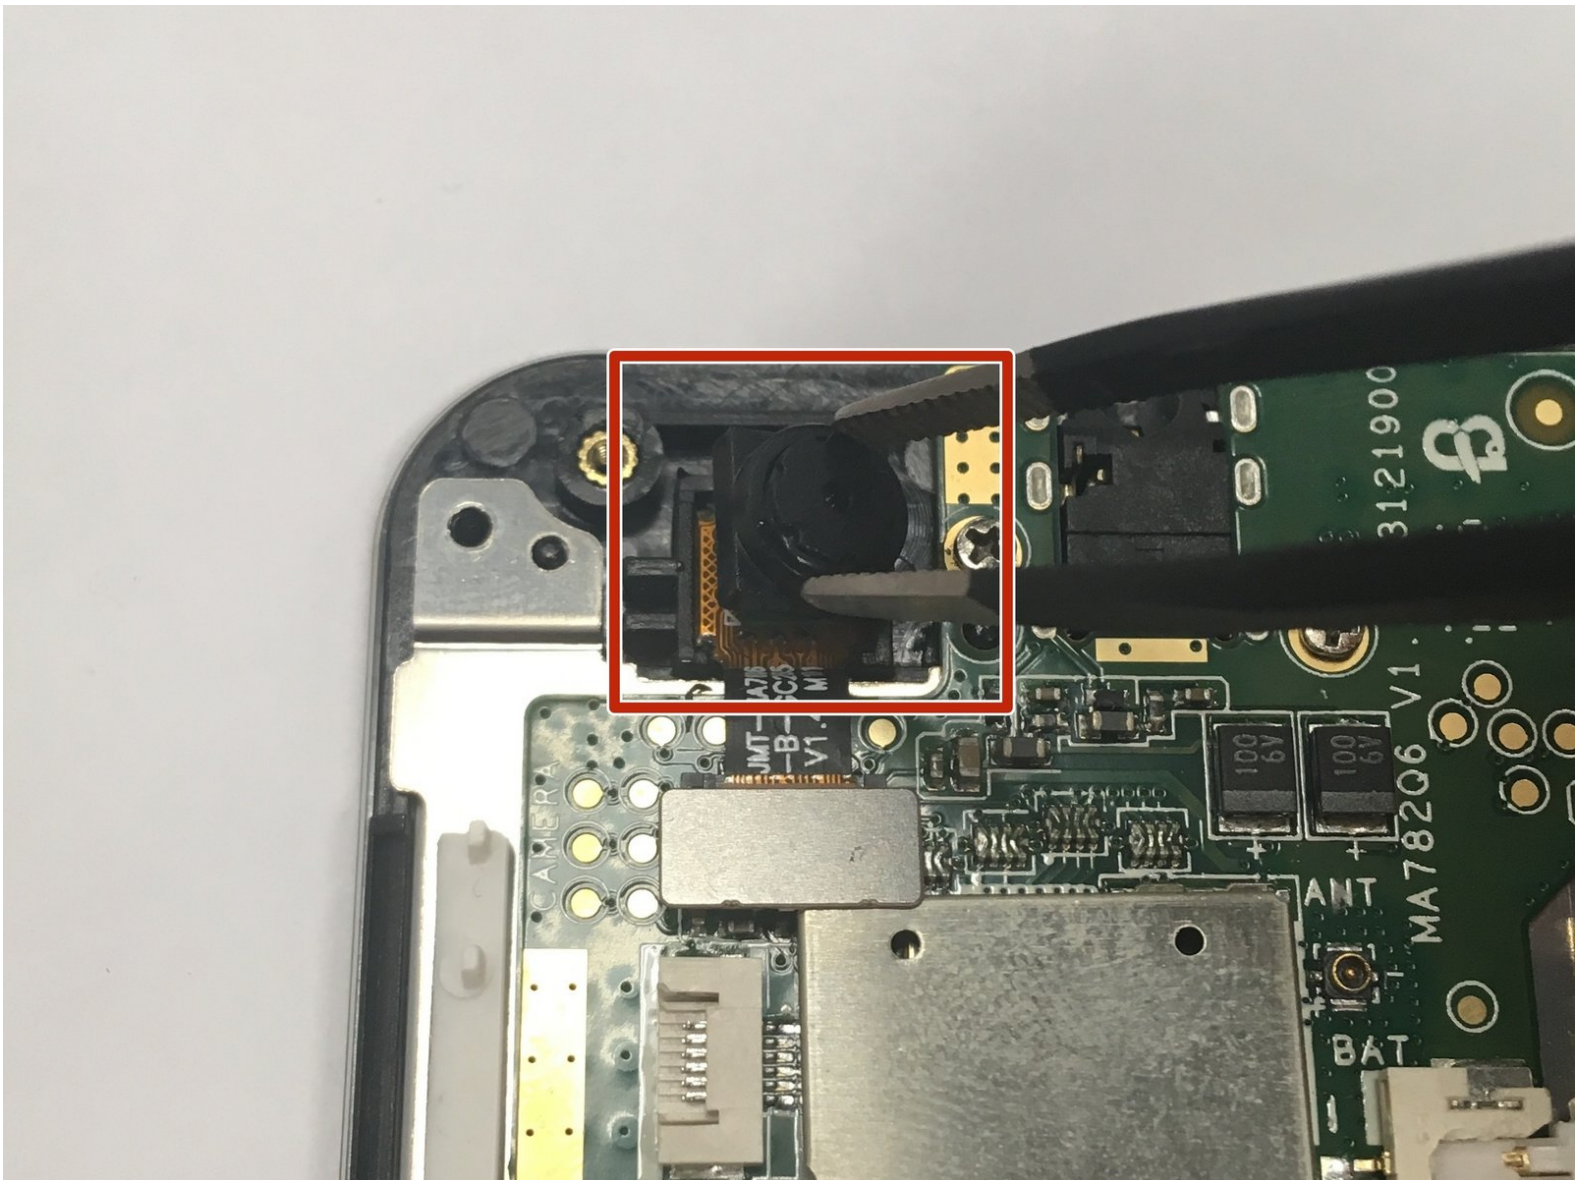# HP 8 1401 Rear-Facing Camera Replacement

In this guide, you will learn how to replace the rear-facing camera of your HP tablet.

Written By: Katie Presz

This document was generated on 2019-09-18 05:47:11 AM (MST).

INTRODUCTION

This guide will help you if your rear-facing camera is cracked or damaged. You may need to pull a little bit to remove the camera, it is well secured in the tablet.

🔧 TOOLS:

- iFixit Opening Tools (1)
- T4 Torx Screwdriver (1)
- ESD Safe Tweezers Blunt Nose (1)
- Spudger (1)

This document was generated on 2019-09-18 05:47:11 AM (MST).

Step 1 — Back Panel

- Using a Torx T4 screwdriver, remove the four 5 mm screws on the back panel.

Step 2

- Insert the tip of a plastic opening tool in the seam between the front and back panels.

This document was generated on 2019-09-18 05:47:11 AM (MST).

Step 3

- Slide the plastic opening tool around all edges of the device until the back panel detaches.

- Lift off the back panel.

Step 4 — Rear-Facing Camera
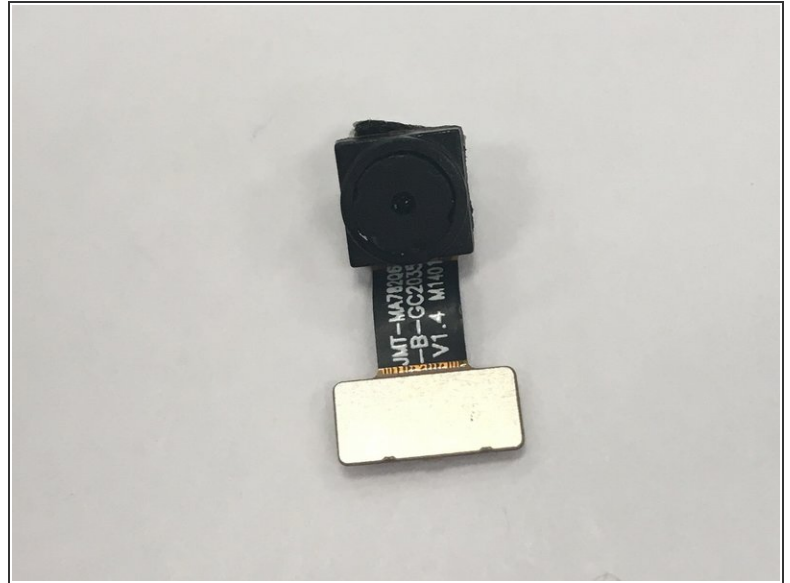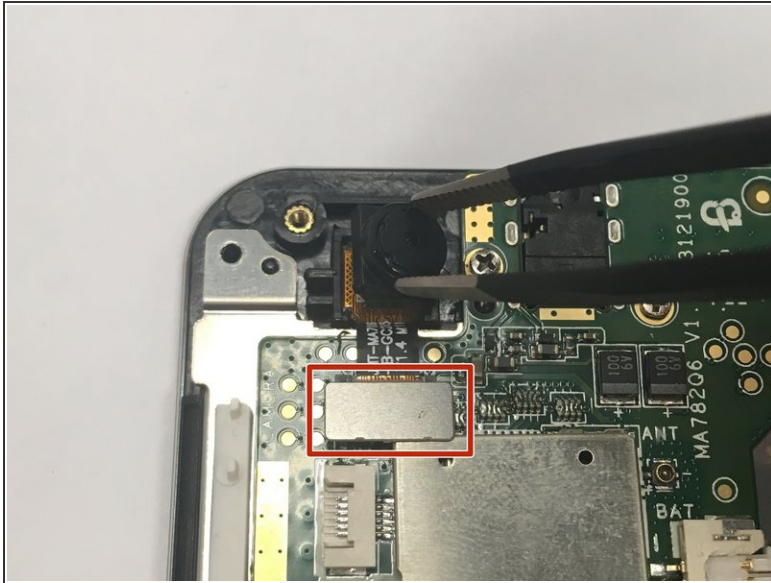
- Place the tip of your spudger under the edge of the press fit connector, and pry the connector straight up from its socket.

- Lift the rear-facing camera out of its compartment using the tweezers.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2019-09-18 05:47:11 AM (MST).