Lenovo A7-50 A3500 Battery Replacement

Replacing the battery in a A3500

Written By: Stefan K

TOOLS:

- small cross screw driver, plastic openning tool (1)

PARTS:

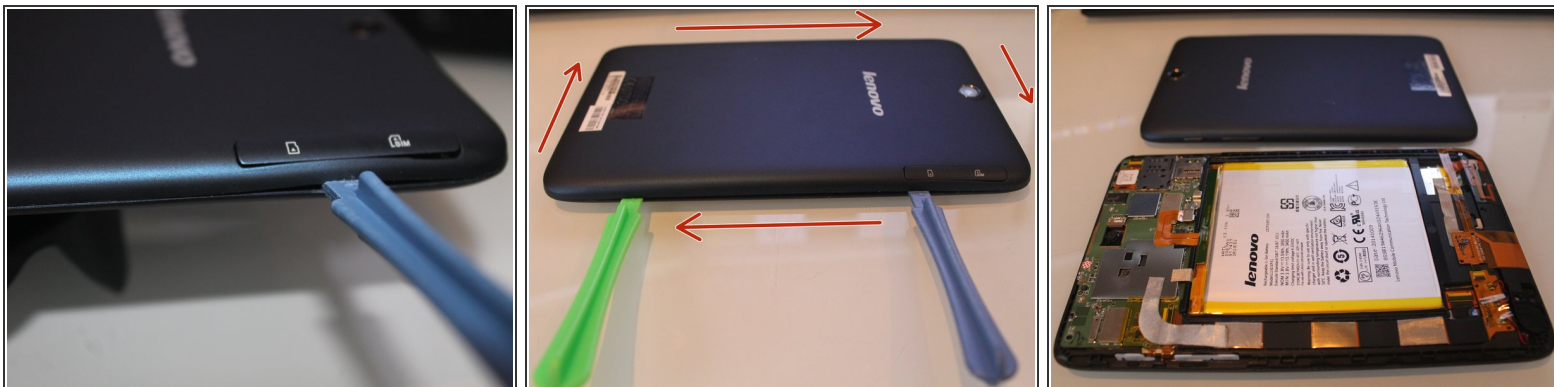- Battery (1)

Step 1 — Battery

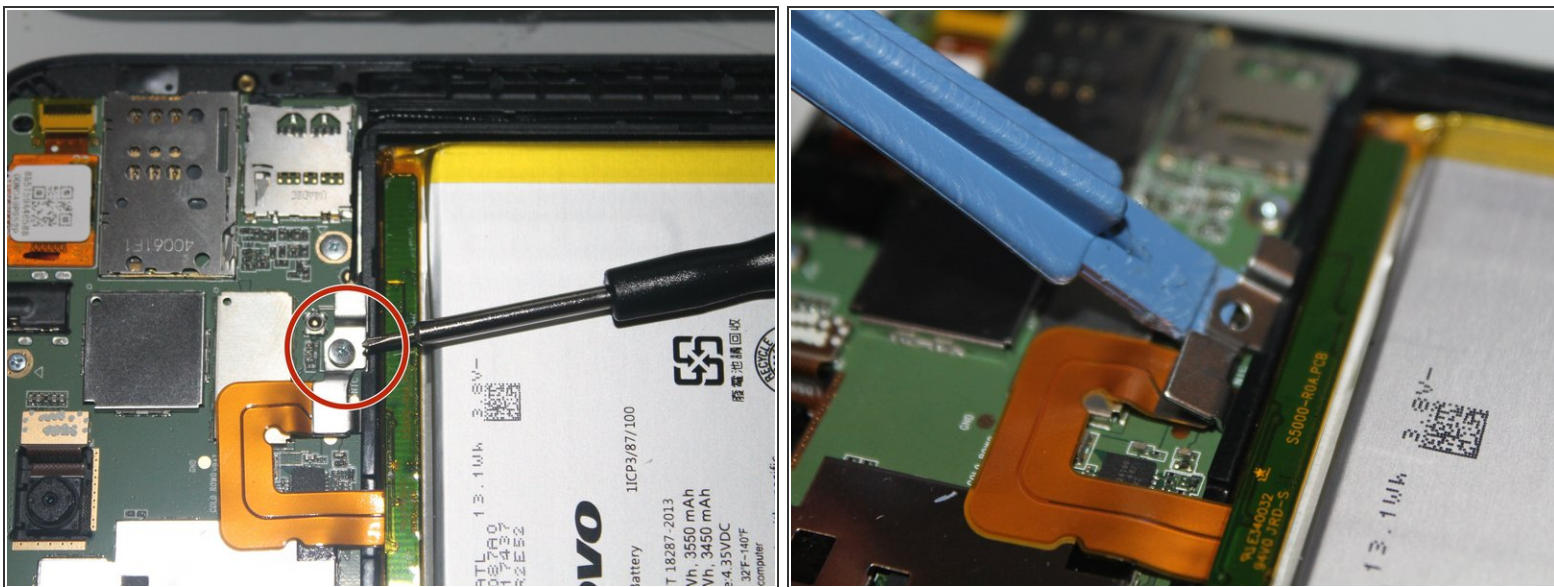

- Remove SD and SIM card from device

Step 2

- Remove screw with a simple coss screwdriver
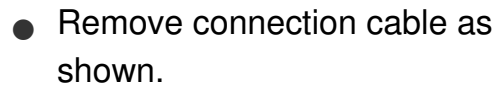
Step 3

- Remove cover. Starting from the point where you removed the screw.

- Disassemble cover clockwise.
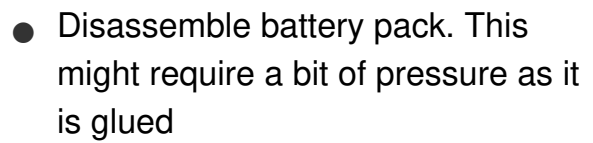
Step 4

- Remove screw with simple screw driver

- Remove metal holder as shown in picture

This document was generated on 2019-09-24 03:45:42 PM (MST).

Step 5

- Remove connection cable as shown.

Step 6

- Disassemble battery pack. This might require a bit of pressure as it is glued

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2019-09-24 03:45:42 PM (MST).