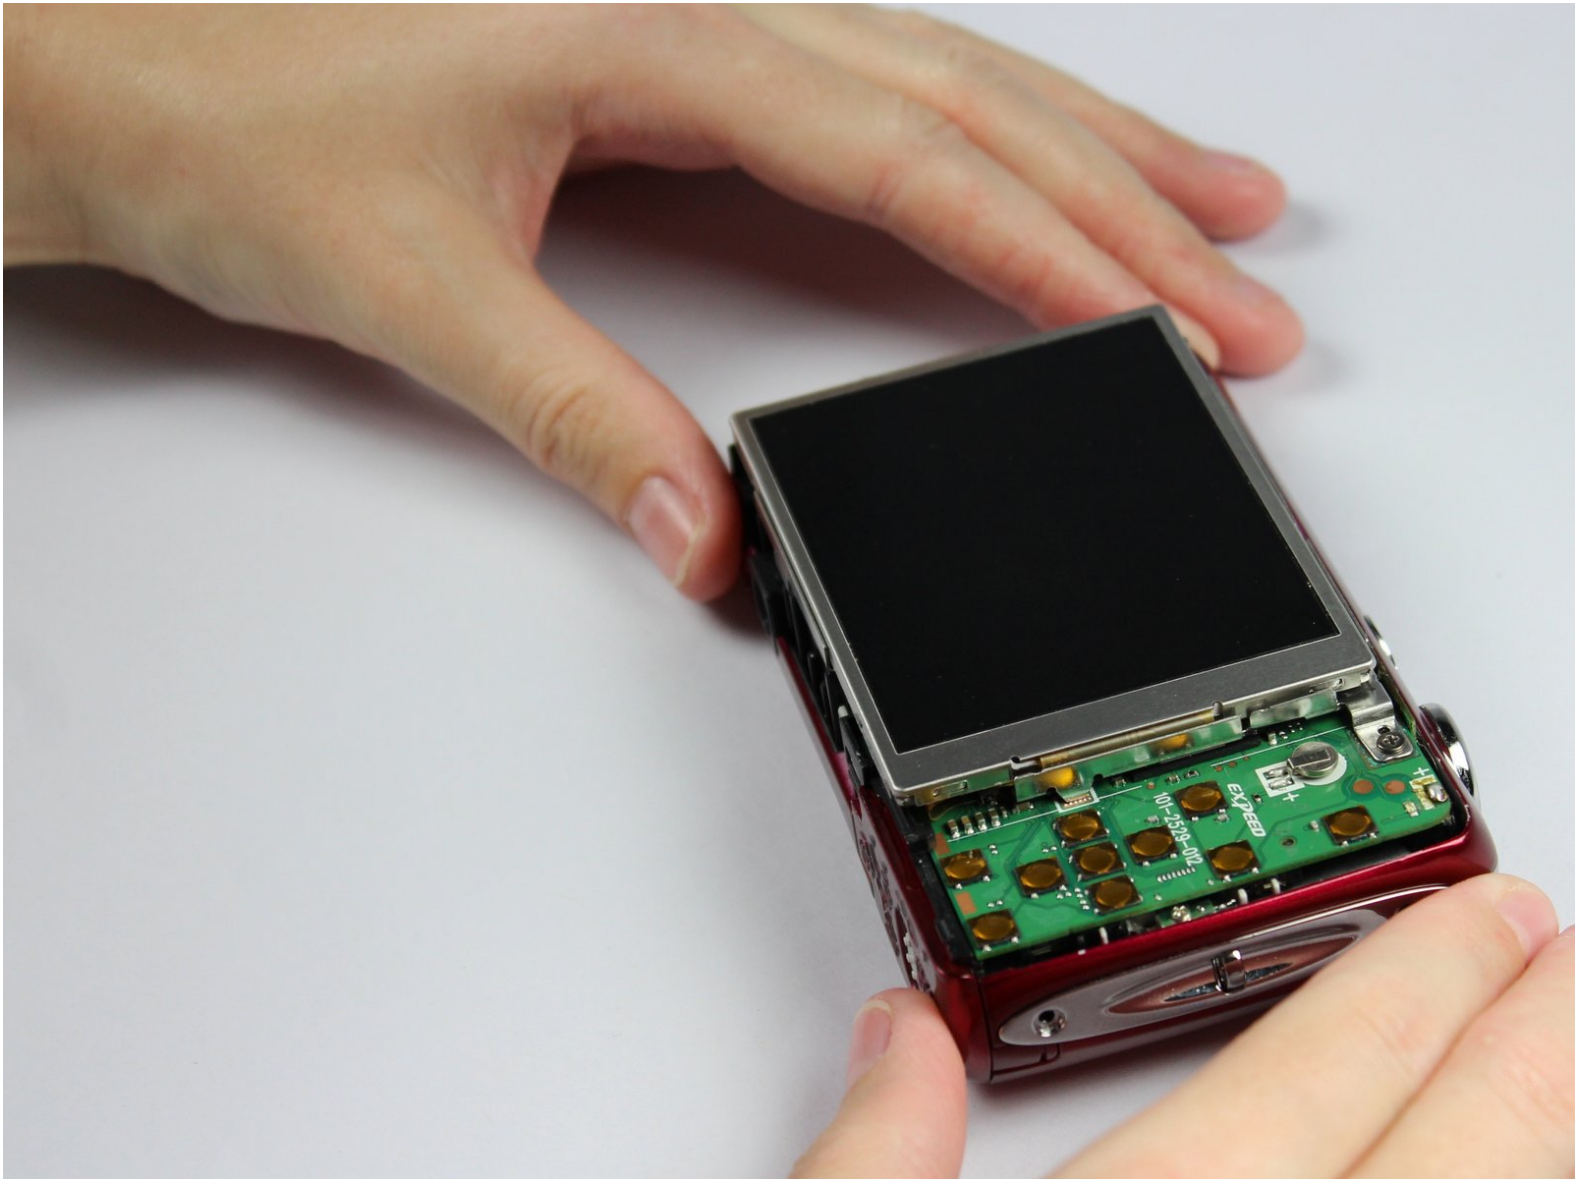# Nikon Coolpix L26 Camera LCD Screen Replacement

How to replace a Nikon Coolpix L26 LCD screen.

Written By: Sadie

INTRODUCTION

This repair guide follows the back cover guide and requires the use of the spudger tool and Phillips screwdriver.

🔧 TOOLS:

- Spudger (1)
- Phillips #000 Screwdriver (1)

Step 1 — Back Cover

- Remove the batteries from the battery compartment by sliding the white battery compartment switch up and then move the panel toward the right.

Step 2

- Using the Phillips #000 screwdriver, unscrew the two 2mm screws next to the battery compartment on the right side of the camera.

This document was generated on 2019-09-26 03:10:50 PM (MST).

© iFixit — CC BY-NC-SA
www.iFixit.com
Page 3 of 9

Step 3

- Unscrew the two 2mm screws on the opposite side.
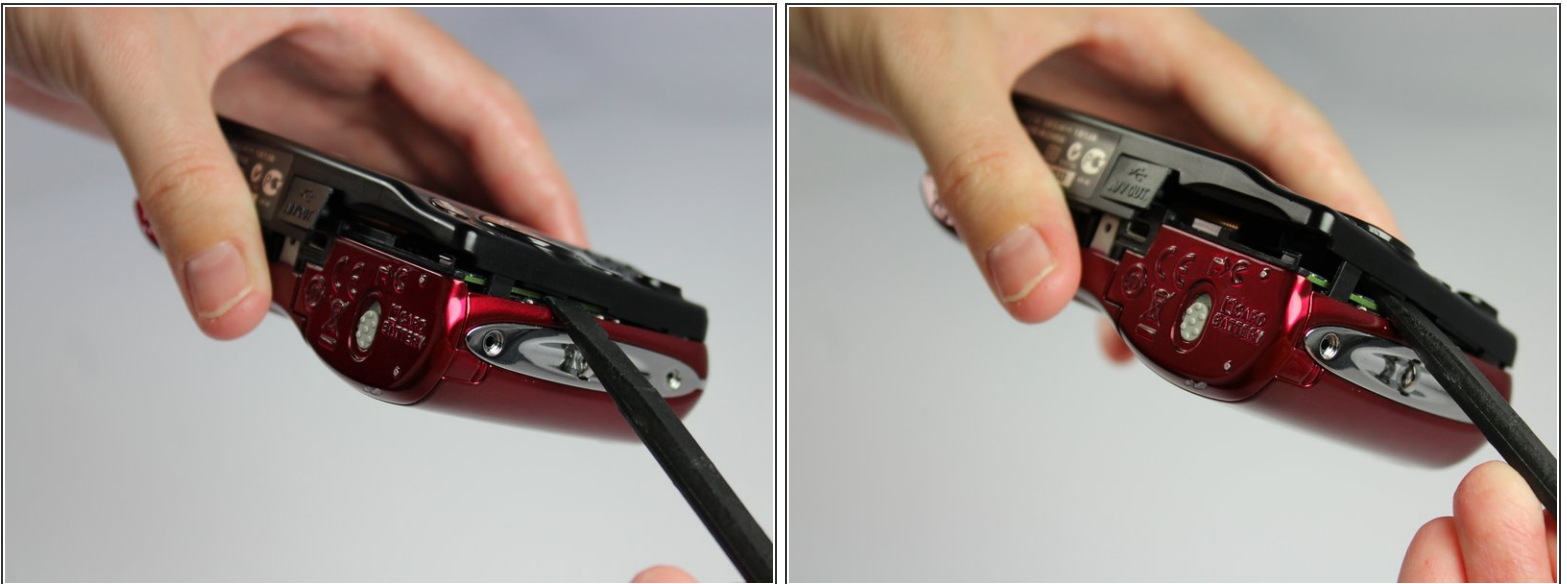
Step 4

- Flip over the rubber AV cover at the bottom of the camera. Unscrew the last two 2mm screws on the bottom of the camera.

Step 5

- Using your hands, open the camera slightly by using the indentation above the camera compartment.
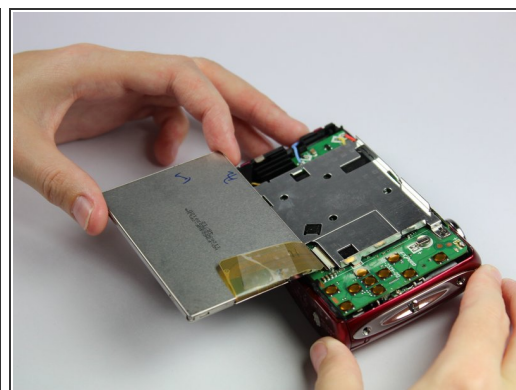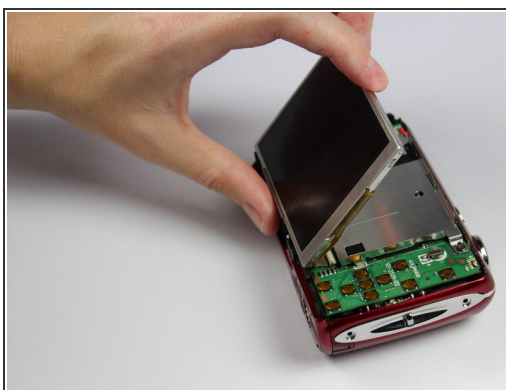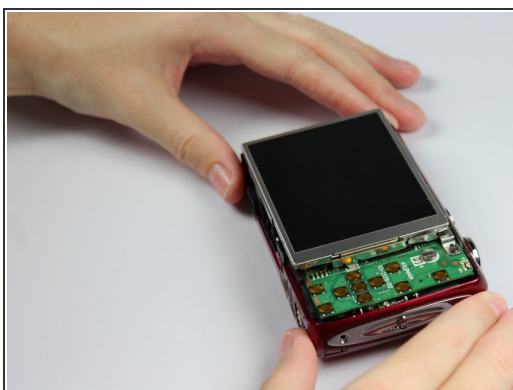
Step 6

- Wedge the flat end of the spudger in between the front and back cover. Carefully push the spudger downward, which will lift the back cover off the camera.

This document was generated on 2019-09-26 03:10:50 PM (MST).

Step 7

- Gently pull the cover off the camera.
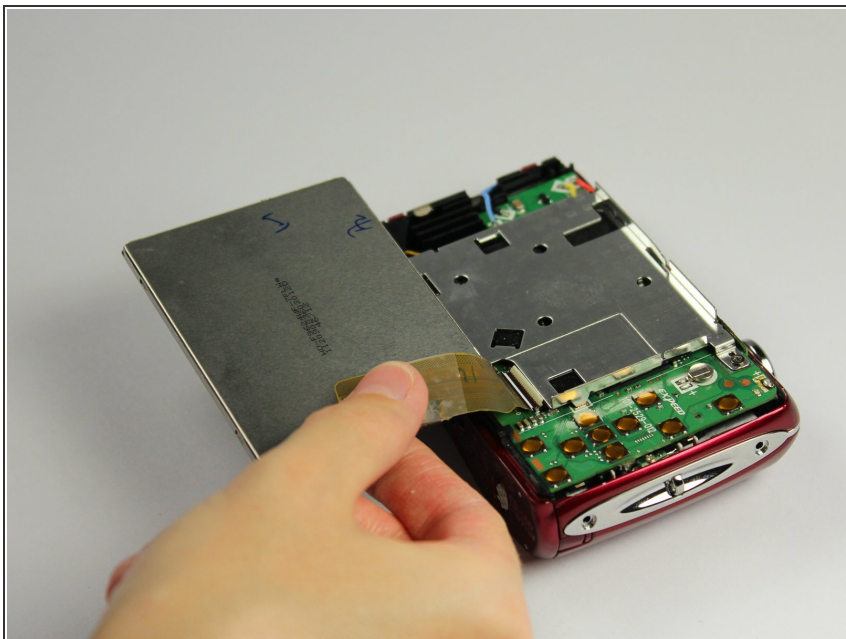
Step 8 — LCD Screen

- Carefully flip over the LCD screen onto its front. Pull the top of the LCD screen toward you keeping the bottom of it inside the camera.
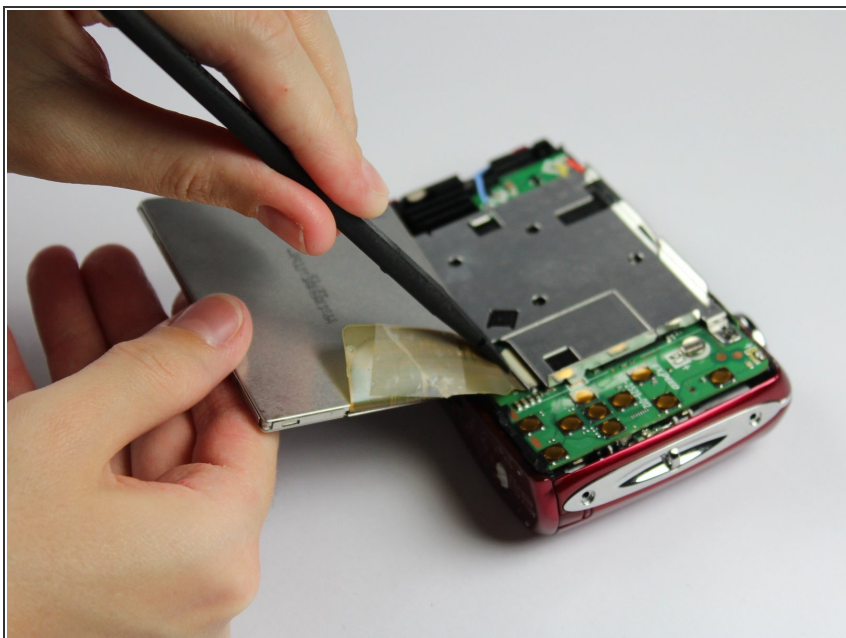
- ⚠ Do not pull on the LCD screen; there is a ribbon of circuitry that is connected to the motherboard.

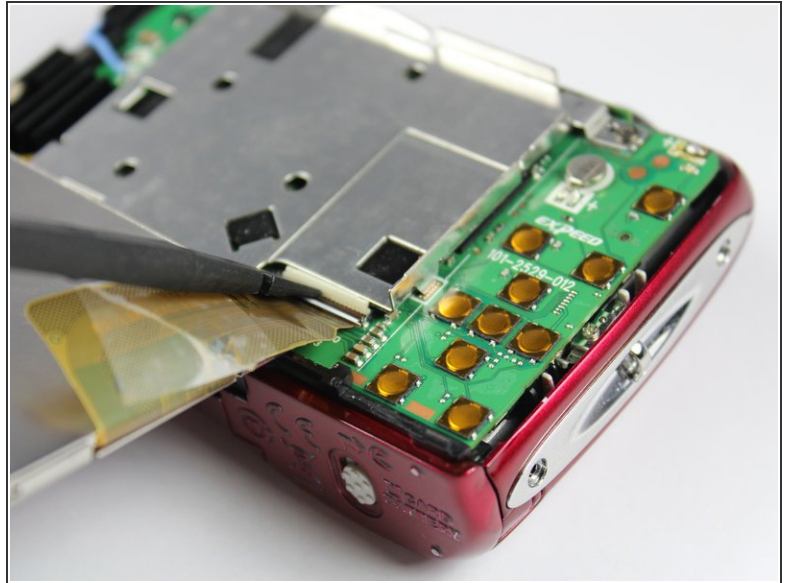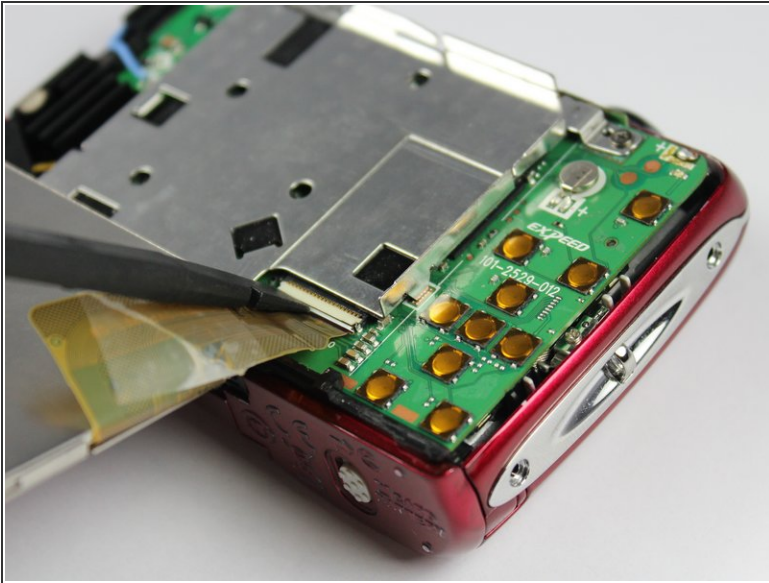This document was generated on 2019-09-26 03:10:50 PM (MST).

Step 9

● Gently hold the LCD screen down, so the ribbon lays flat against the back of the camera.

Step 10

● Gently wedge the spudger underneath the white latch and lift the latch open.

This document was generated on 2019-09-26 03:10:50 PM (MST).

© iFixit — CC BY-NC-SA   www.iFixit.com   Page 7 of 9

Step 11

- Use the flat side of the spudger to flip the white switch on the motherboard. You should hear a light click.

Step 12
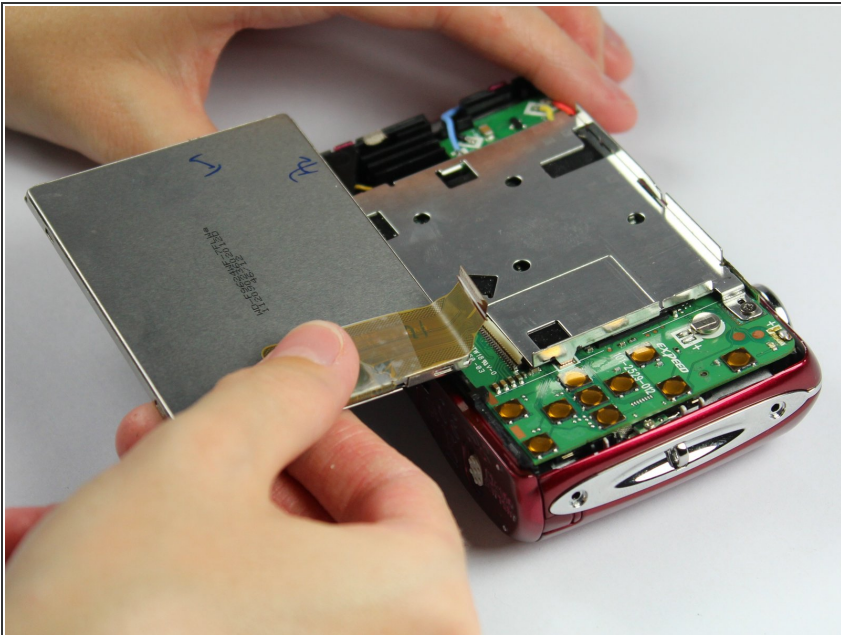
- Gently pull the ribbon out of the switch.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2019-09-26 03:10:50 PM (MST).

This document was generated on 2019-09-26 03:10:50 PM (MST).