Samsung BD-H5100 Power Cord Replacement
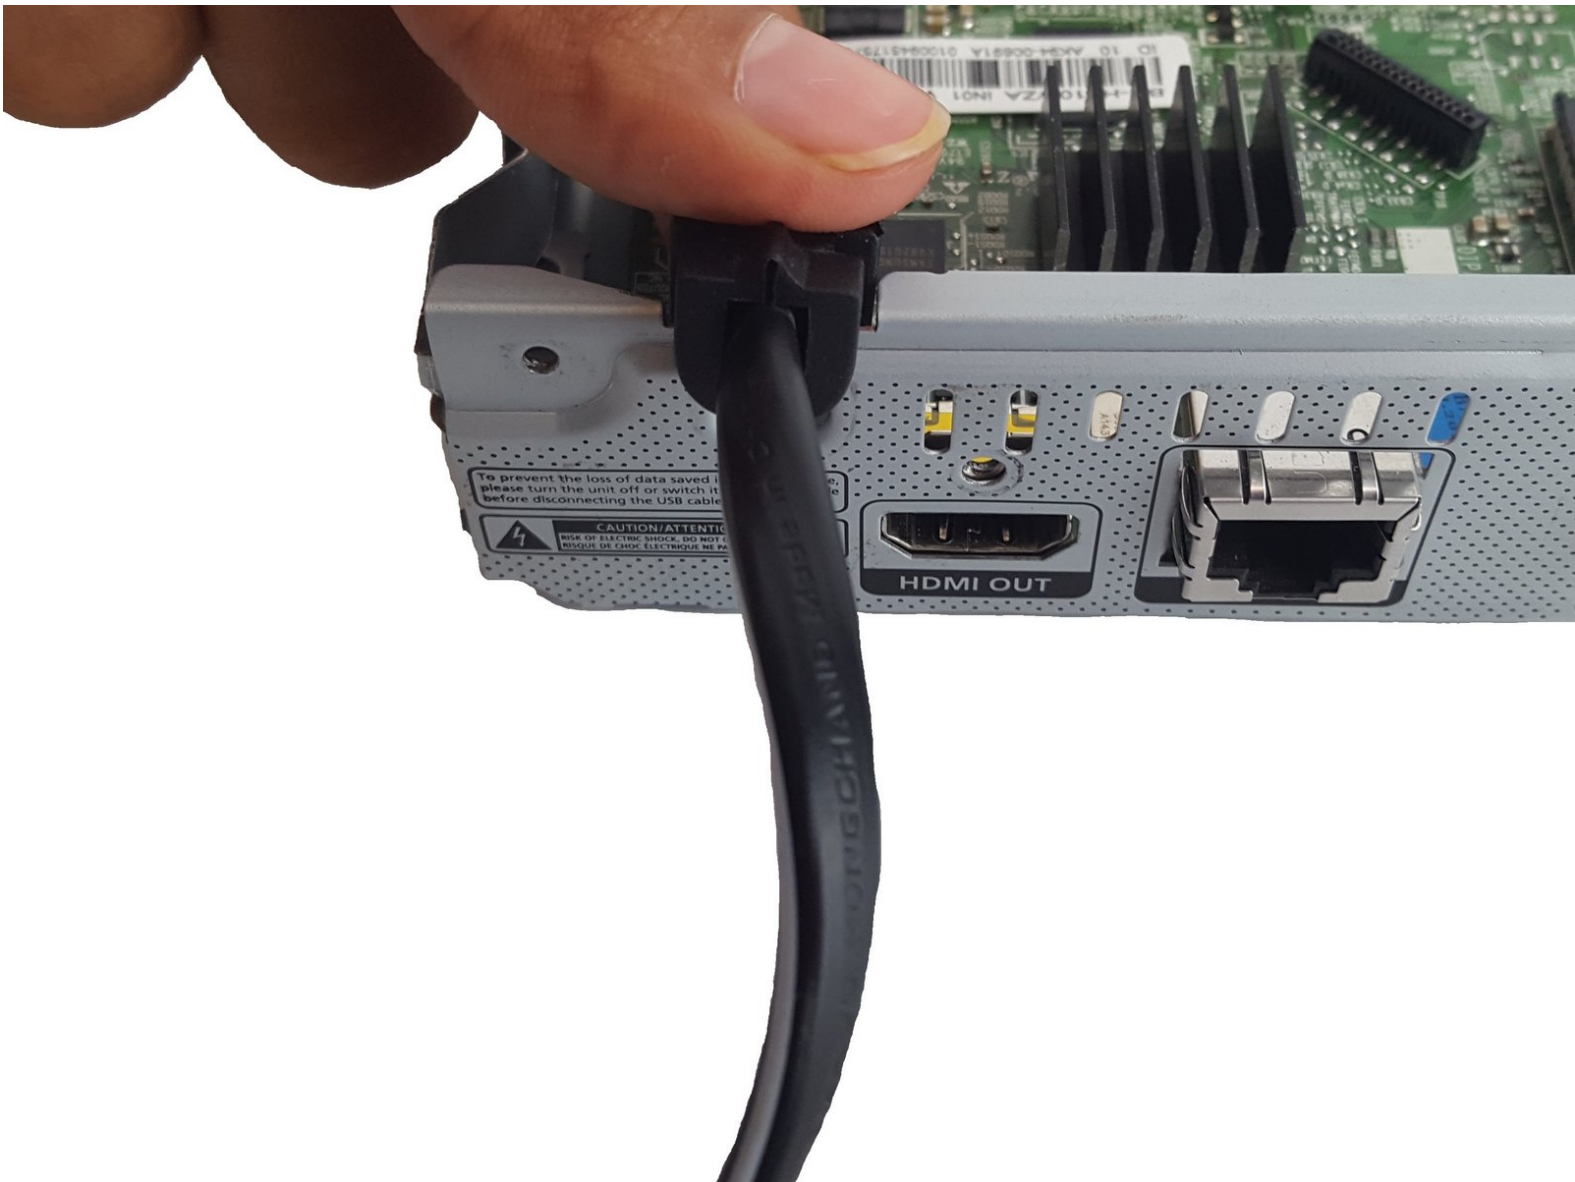
This guide will teach how to replace the power cord.

Written By: Mira Patel

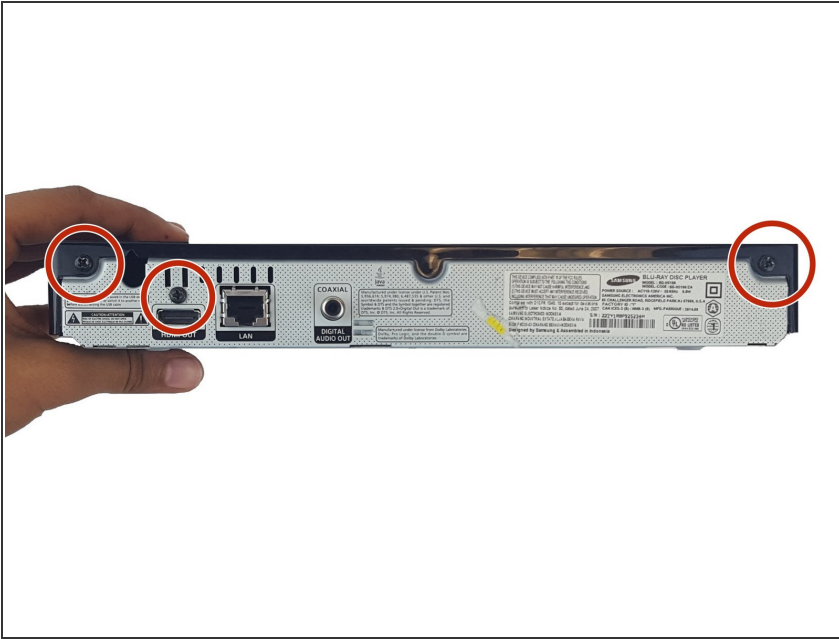This document was generated on 2019-10-12 01:02:43 PM (MST).

© iFixit — CC BY-NC-SA

www.iFixit.com

Page 1 of 6

INTRODUCTION

The Blu-Ray Player will be opened and the power cord removed.

🔧 TOOLS:

- Spudger (1)
- Phillips #00 Screwdriver (1)
- 64 Bit Driver Kit (1)

This document was generated on 2019-10-12 01:02:43 PM (MST).

Step 1 — Power Cord

- Use the Phillips Head #2 screwdriver to remove the three 10mm screws on the back panel.
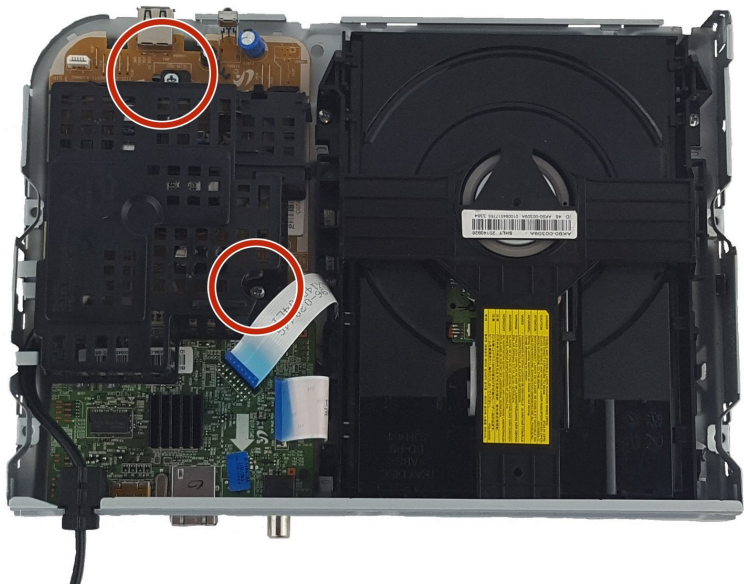
Step 2
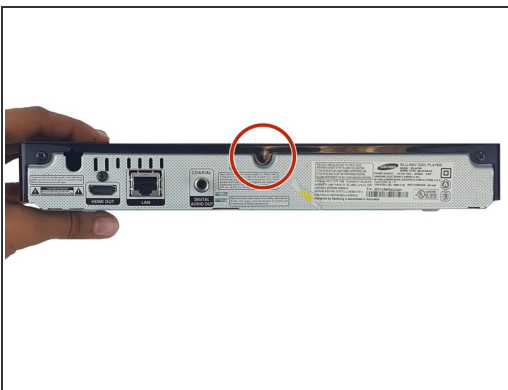
- Use the plastic spudger to pry open the top panel.
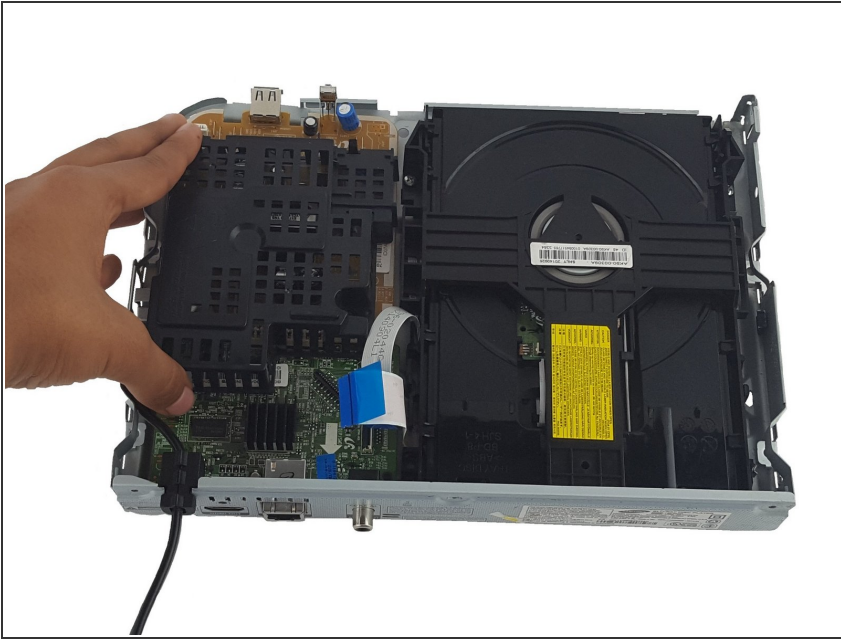- ⚠ Be careful not to break the ribbon connecting the motherboard on the bottom panel to the top panel.

This document was generated on 2019-10-12 01:02:43 PM (MST).

© iFixit — CC BY-NC-SA   www.iFixit.com   Page 3 of 6

Step 3

- Pull the ribbons gently from one corner by the blue tabs to remove it.

Step 4

- Use a Phillips Head #2 to remove the two 7.5mm screws on the black cover.

This document was generated on 2019-10-12 01:02:43 PM (MST).

© iFixit — CC BY-NC-SA   www.iFixit.com   Page 4 of 6

Step 5

● Remove the black cover.

Step 6
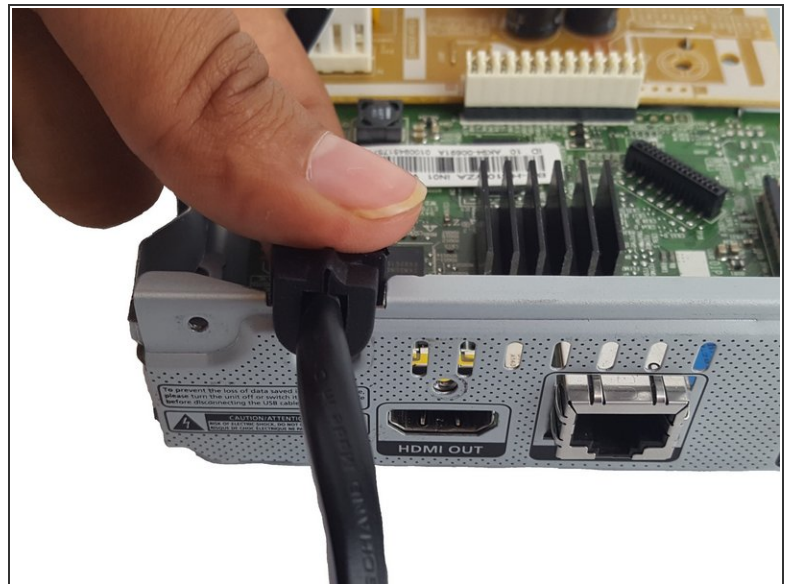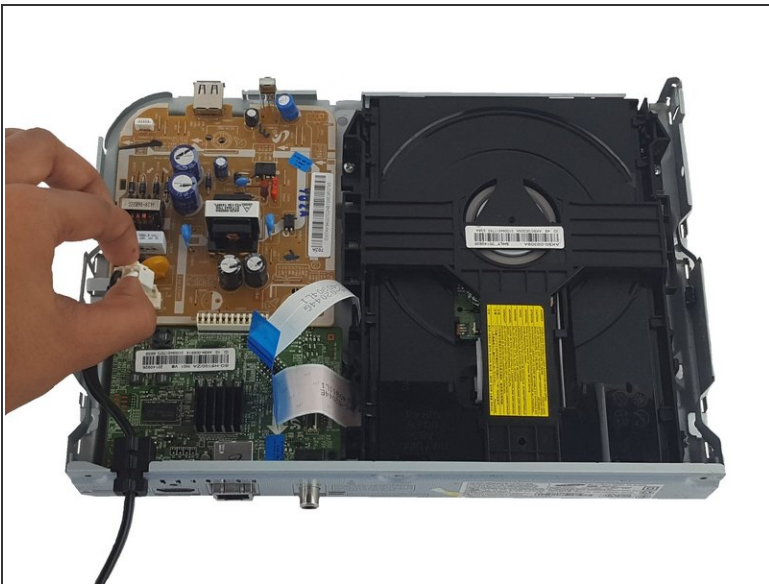
● Pinch the white clip and pull straight up on the power cord.

● Remove power cord.

This document was generated on 2019-10-12 01:02:43 PM (MST).

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2019-10-12 01:02:43 PM (MST).

www.iFixit.com