


Field Conversion: RPM 113 2472/35 “P7100 Programming Cable” into a RPM 113 2472/36 “P7100 Keyloader Cable”

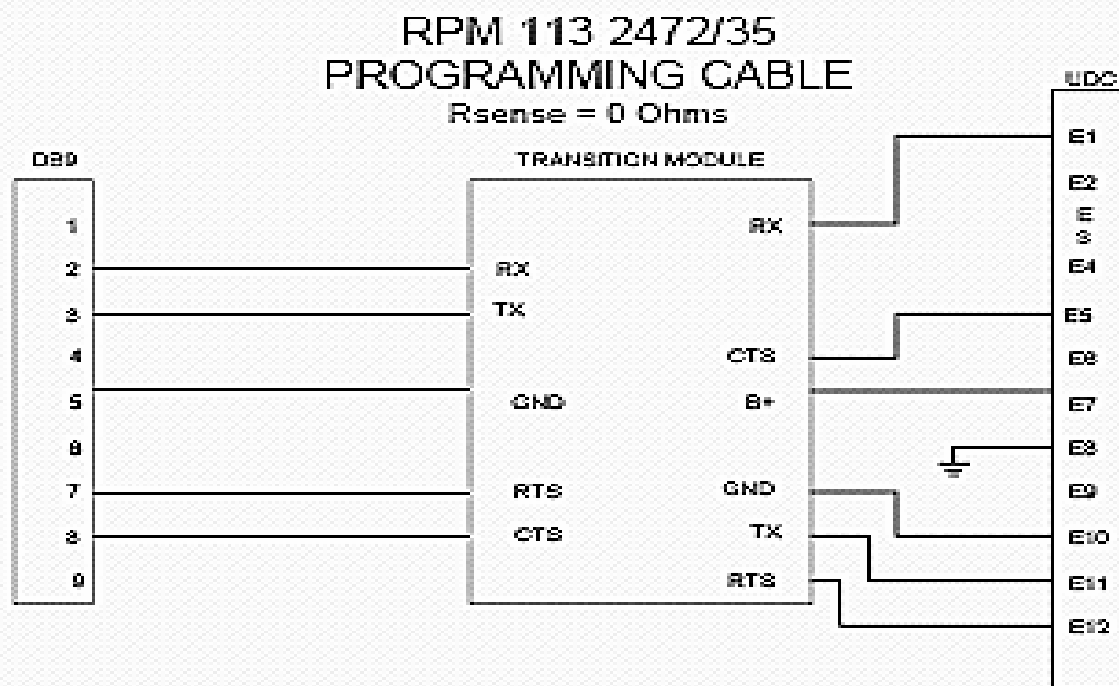

Programming cable has a Zero (Ø) Ohm short on Pin E8 (UDC Sense).

To convert to a PC Keyloader cable, add in a 2210 Ohm load between Pin E8 and ground. Use a 2200 Ohm and 10 Ohm resistors (1% Tolerance) in series.

