

# HOW TO INSTALL DEPOT 14 AND CHANGE SERIAL NUMBER TO ACTIVATE FEATURES


You must have MotoTRBO CPS installed!


MotoTRBO Depot 14


- 1) Depot 14 → [https://mega.nz/file/BsQwkYLZ#\\_juctpctshT243DAoDag-YEgCZGCCeZkDBjebnsDiGE](https://mega.nz/file/BsQwkYLZ#_juctpctshT243DAoDag-YEgCZGCCeZkDBjebnsDiGE)
  - a) unzip and then install MOTOTRBO\_DepotTool\_14.0.exe
  - b) you will get invalid license. Just exit.
    1. You may have to go to processes and kill mototrbo depot tool.exe
  - c) copy and replace mototrbo depot tool.exe in zip file to
    1. C:\Program Files (x86)\Motorola\MOTOTRBO DepotTool
    2. 32 bit - C:\Program Files\Motorola\MOTOTRBO DepotTool

Install Depot 9 and upgrade to Depot 14

- 2) Install MotoTRBO Depot 9. Keep the lmgr11.dll handy!

 lmgr11.dll

 MOTOTRBO\_DepotTool 9

  - a)  MOTOTRBO\_DepotTool 9
  - b) Close MotoTRBO depot
- 3) unzip MotoTRBO-Depot14.zip (or what your depot 14 is named)
- 4) cut (CTRL+X) and replace folder “MOTOTRBO DepotTool”
  - a) You will paste while in the C:\Program Files (x86)\Motorola\ folder
    1. 32-bit machine C:\Program Files\Motorola\
  - b) C:\Program Files (x86)\Motorola\MOTOTRBO DepotTool\MOTOTRBO DepotTool\ ←  
**you do not want two consecutive MOTOTRBO DepotTool folders!!!**
- 5) copy and replace lmgr11.dll from MOTOTRBO\_DepotTool9 zip file to
  - a) C:\Program Files (x86)\Motorola\MOTOTRBO DepotTool
  - b) 32-bit machine C:\Program Files\Motorola\MOTOTRBO DepotTool
- 6) Now you have MotoTRBO Depot 14 installed!

# Changing serial number and registering features


1. Hook radio to PC like regular programming with CPS. Do not open CPS.
2. Save tuner info.
3. Write down current serial number! You may have to open CPS to read this and then close CPS before proceeding to step 3.
4. Look at options here → <http://agh-technik.orgfree.com/texte/userdata.txt>
5. Ensure you have replaced userdata.sdf → follow instructions here → <https://www.austech.info/showthread.php/118172-Mototrbo-TTS?p=818428&viewfull=1#post818428>

ok, I will try to explain how.

- 1) you need motorola depottool 14 for changing SN (1111111111 or 2222222222 or 123ABC1234 ...)
- 2) you also need motorola cps 2.0
- 3) go to C:\ProgramData\Motorola\MOTOTRBO for cps 2.0 and delete the userdata.sdf
- 4) go to motorola cps 2.0 restore device licenses
- 5) go to C:\ProgramData\Motorola\MOTOTRBO for cps 2.0 and copy the new file userdata.sdf
- 6) you need motorola cps 16
- 7) go to C:\ProgramData\Motorola\MOTOTRBO for cps 16 and replace the userdata.sdf (new created one)
- 8) go to cps 16 to activate device function

thats it!


- a)
6. Change serial number to what you would like to activate features:

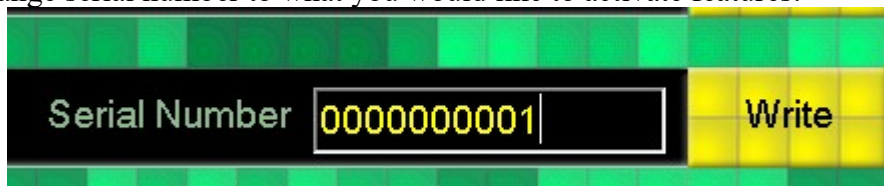

- a)
- b) Write serial number and you should see:



- c)
7. Open CPS
  - a) go to Features → Activate Device Features

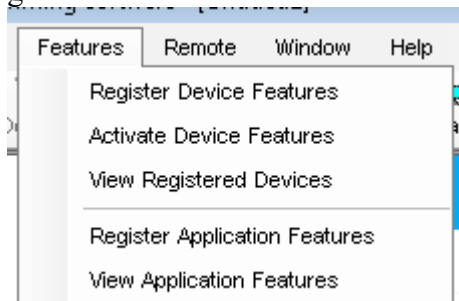

- b)
- c) Click Next



Device Features	
Feature	Status
Digital	Free
- IP Site Connect	Purchased
- Capacity Plus - Single Site	Purchased
- Enhanced Privacy	Purchased
- Transmit Interrupt	Purchased
- Digital Phone Patch	Purchased
- Capacity Plus - Multi-Site	Purchased
- Data Services via Bluetooth	Purchased
- Bluetooth Audio and Radio Programming	Purchased
- Digital Emergency	Free
- Radio Inhibit	Free
- Bluetooth Permanent Discoverable	Purchased
- Mute Mode	Purchased
- Extended Text Messages	Free
Remote Monitor	Free
Rx Audio Leveling	Purchased
Wi-Fi	Purchased
Enhanced Noise Suppressor	Purchased

9. 

---
10. Write original serial back to radio.
11. Write tuner info back to radio.
12. Complete!