


NOTES:

1. SET FACTORY-WIRED FOR FOUR WIRE SERVICE, LINE OR COMMON AUDIBLE RINGER.
  2. LINE SWITCH SEQUENCE:  
EM - EARLY MAKE  
EBEM - EARLY BREAK-EARLY MAKE  
PMB - PRELIMINARY MAKE-BREAK
  3. (S) AND (S-R) LEADS ON NIA ONLY.
- DP - DIAL PULSE  
ON - OFF NORMAL  
\* INSULATED AND STORED

Fig. 1—500AD Telephone Set, Connections

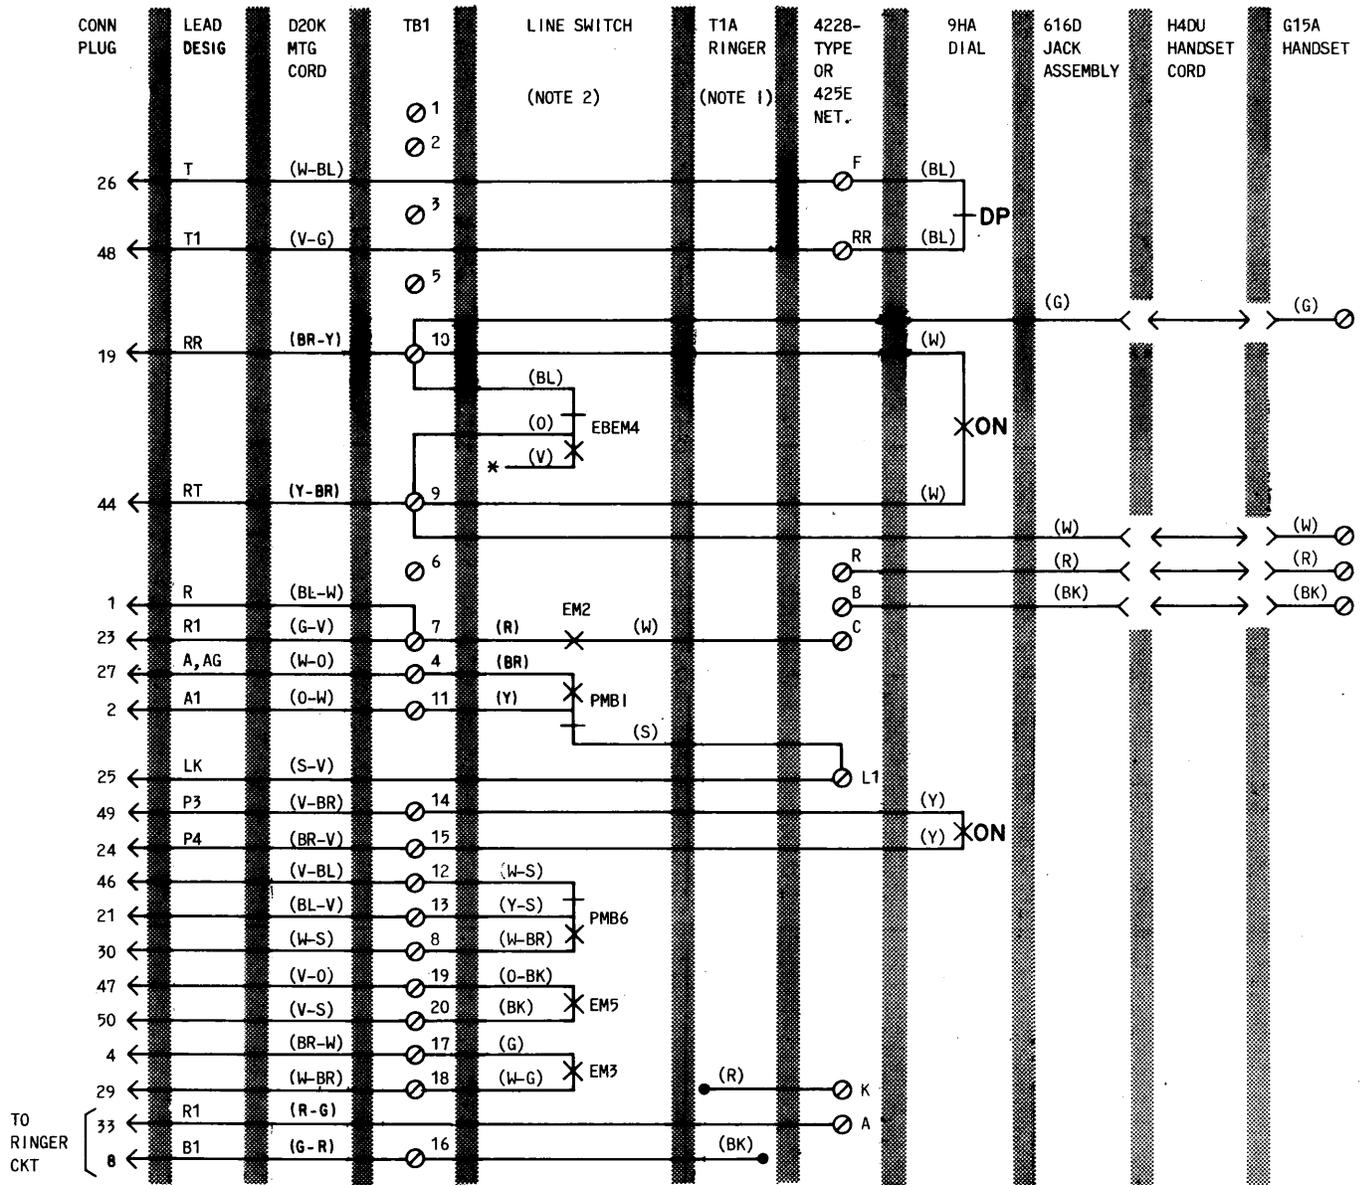

NOTES:

1. SET FACTORY-WIRED FOR FOUR WIRE SERVICE, LINE OR COMMON AUDIBLE RINGER.
2. LINE SWITCH SEQUENCE:
  - EM - EARLY MAKE
  - EBEM - EARLY BREAK-EARLY MAKE
  - PMB - PRELIMINARY MAKE-BREAK

- DP - DIAL PULSE
- ON - OFF NORMAL
- \* INSULATED AND STORED

Fig. 2—500ADM Telephone Set, Connections