

C RURAL WIRE
TREE ATTACHMENTS

1. GENERAL

1.001 This addendum is issued to provide additional methods and attachments for tree line construction.

2. SELECTING THE ROUTE

Paragraph 2.02 Revised.

2.02 Change CAUTION note to read:
Regular climbers shall not be used when climbing trees. Tree climbers may be used when authorized.

3. ATTACHMENTS

Paragraphs 3.06 and 3.07 added.

3.06 Figures 6 through 8 illustrate alternate methods of making tree attachments.

3.07 The S steel spring shown in Figs. 6 & 7 may be inserted between the drive hook and dead end supports shown in Figs. 4 & 5.

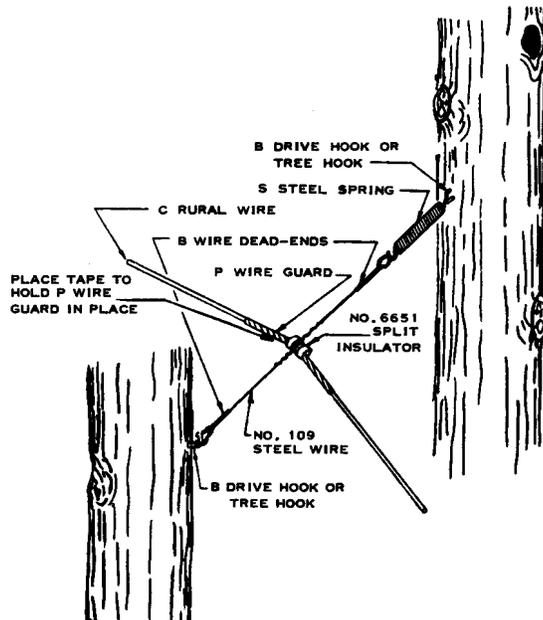


Fig. 7. Trolley Support - Used For Improved Clearance or Alignment

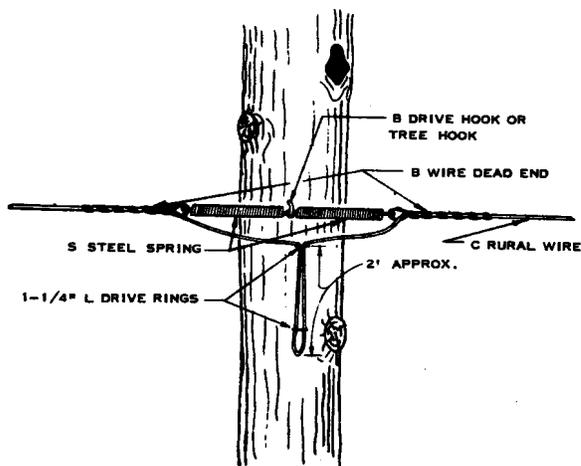


Fig. 6. Dead Ending C Rural wire from both directions

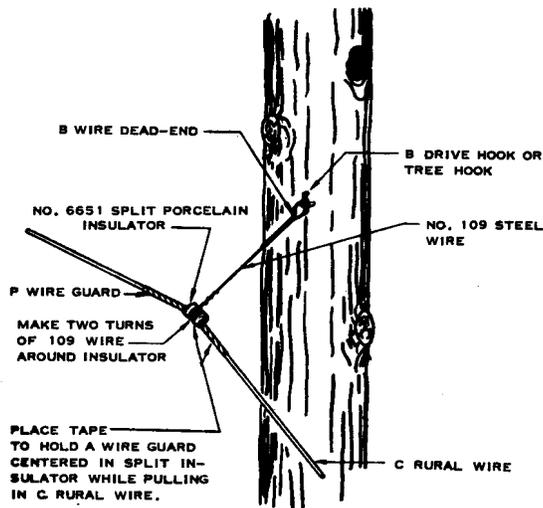


Fig. 8. Use of P-Wire Guard permits sagging of more than one span at a time