


BSRS350.003

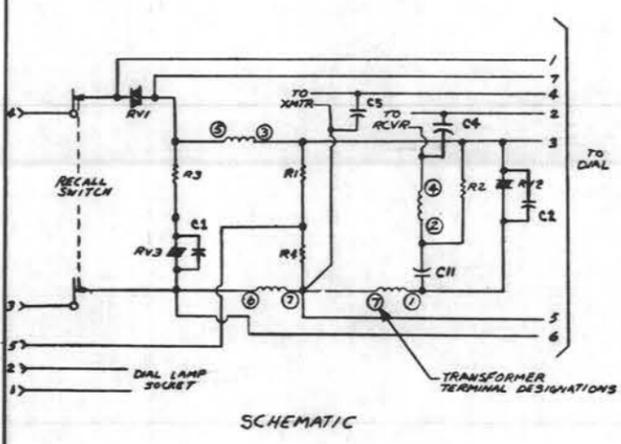

R.F. SUPPRESSION NOTES:

1. LOCATE (4) 0.022 uf (KS 19953-L3) CAPACITORS ON THE 861A TOUCH-TONE TRIMLINE NETWORK APPROXIMATELY AS SHOWN.
2. IF NECESSARY, TAPE CAPACITORS C1 AND C2 TO REDUCE MECHANICAL CONTACT WITH HANDSET HOUSING.
3. PLACE A, "MODIFIED FOR R.F. SUPPRESSION," LABEL NEAR THE CODE MARKING.
4. USE VINYL TUBING ON LEADS OF CAPACITORS C4 AND C5.
5. DRILL 0.035 HOLES NEAR VARISTOR LEADS AND SOLDER CAPACITOR LEADS TO PATH CONTAINING VARISTOR LEADS (4 PLACES).

ISS 2-5-27-60
Delete Material Not Referring To R.F. Supp.

218-991721

861A NETWORK MODIFICATION N.T.S.