
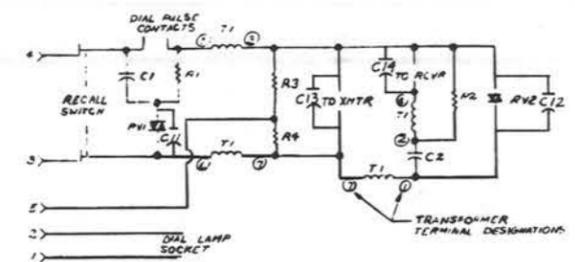


- R.F. SUPPRESSION NOTES:
1. LOCATE (4) 0.022 μ f (KS 19953-L3) CAPACITORS ON THE 854A NETWORK APPROXIMATELY AS SHOWN.
 2. PLACE A, "MODIFIED FOR R.F. SUPPRESSION," LABEL NEAR THE CODE MARKING.
 3. DRILL 0.035 HOLES NEAR VARISTOR LEADS AND SOLDER CAPACITOR LEADS TO PATH CONTAINING VARISTOR LEAD. (4 PLACES)
 4. USE VINYL TUBING ON LEADS OF CAPACITORS C13 AND C14.

BSRS350,003

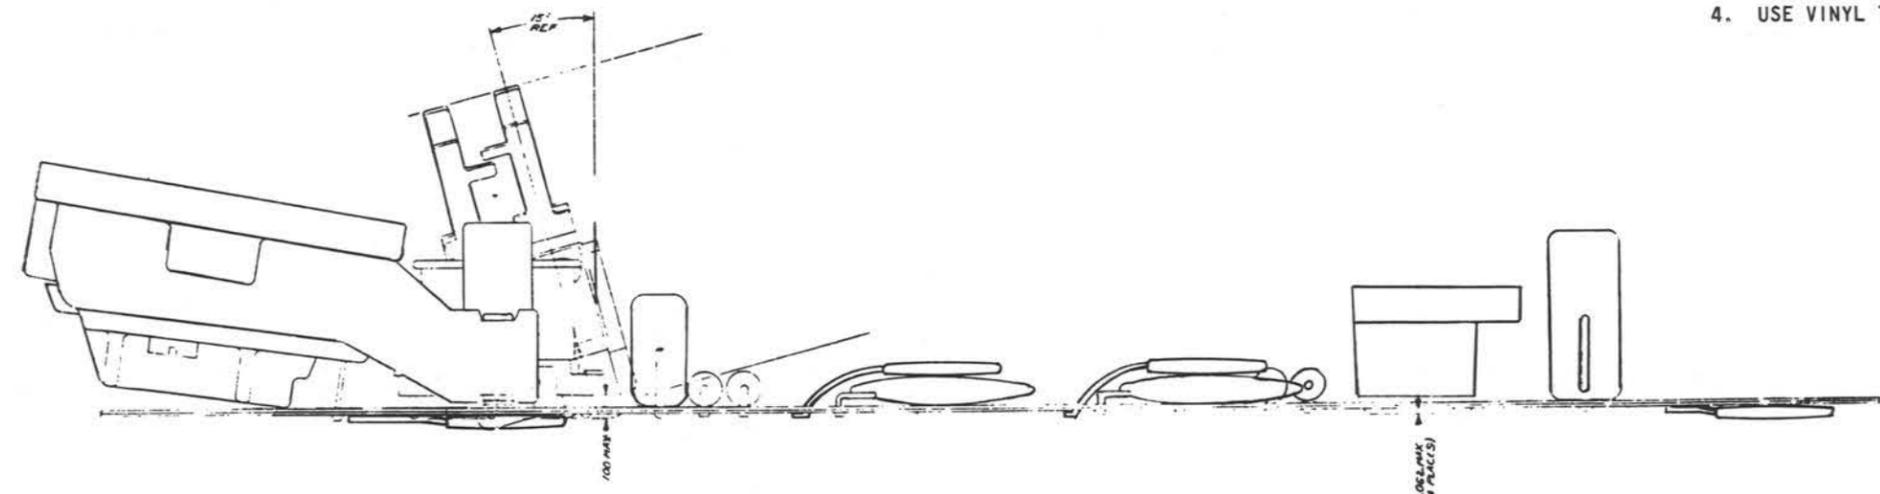

SCHEMATIC

DESIGNED BY JACKSON
 DRAWN BY KOT
 10-12-67
 135-2 5/68
 Delete Material Not Refering To R.F. Suppression
 APPROVED

B-991722

854A
 NETWORK
 MODIFICATION
 N.T.S.