

This bulletin cancels Engineering Bulletin 517, & copies of which should be disposed of in accordance with division routine for destroying such canceled matter.

New York Telephone Co.
Manhattan

~~Engineering Bulletin 588~~

June, 1929

B.S.P. - C 46.902

PUBLIC TELEPHONE STATIONS—Installation of Telephone Directories

SEE ADDENDUM

1. Articles Covered.

This bulletin covers the installation at public telephone stations of the following directory accessories:

DIRECTORY HANGER BACKBOARD.

RADIATOR SHELF BRACKET SET.

7-BOOK DIRECTORY FASTENER.

D DIRECTORY HANGER.

E DIRECTORY HANGER.

SPECIAL DIRECTORY SHELF.

30 IN. DIRECTORY SHELF.

DIRECTORY DESIGNATION STRIP.

32 IN. DIRECTORY TABLE.

62 IN. DIRECTORY TABLE.

C 46.902


~~588~~


Page 1

PUBLIC
TELEPHONE
STATIONS

2. Installing Directory Shelves.


Install Directory Shelves as shown in the following illustrations. The slope of the shelves is 15 degrees.

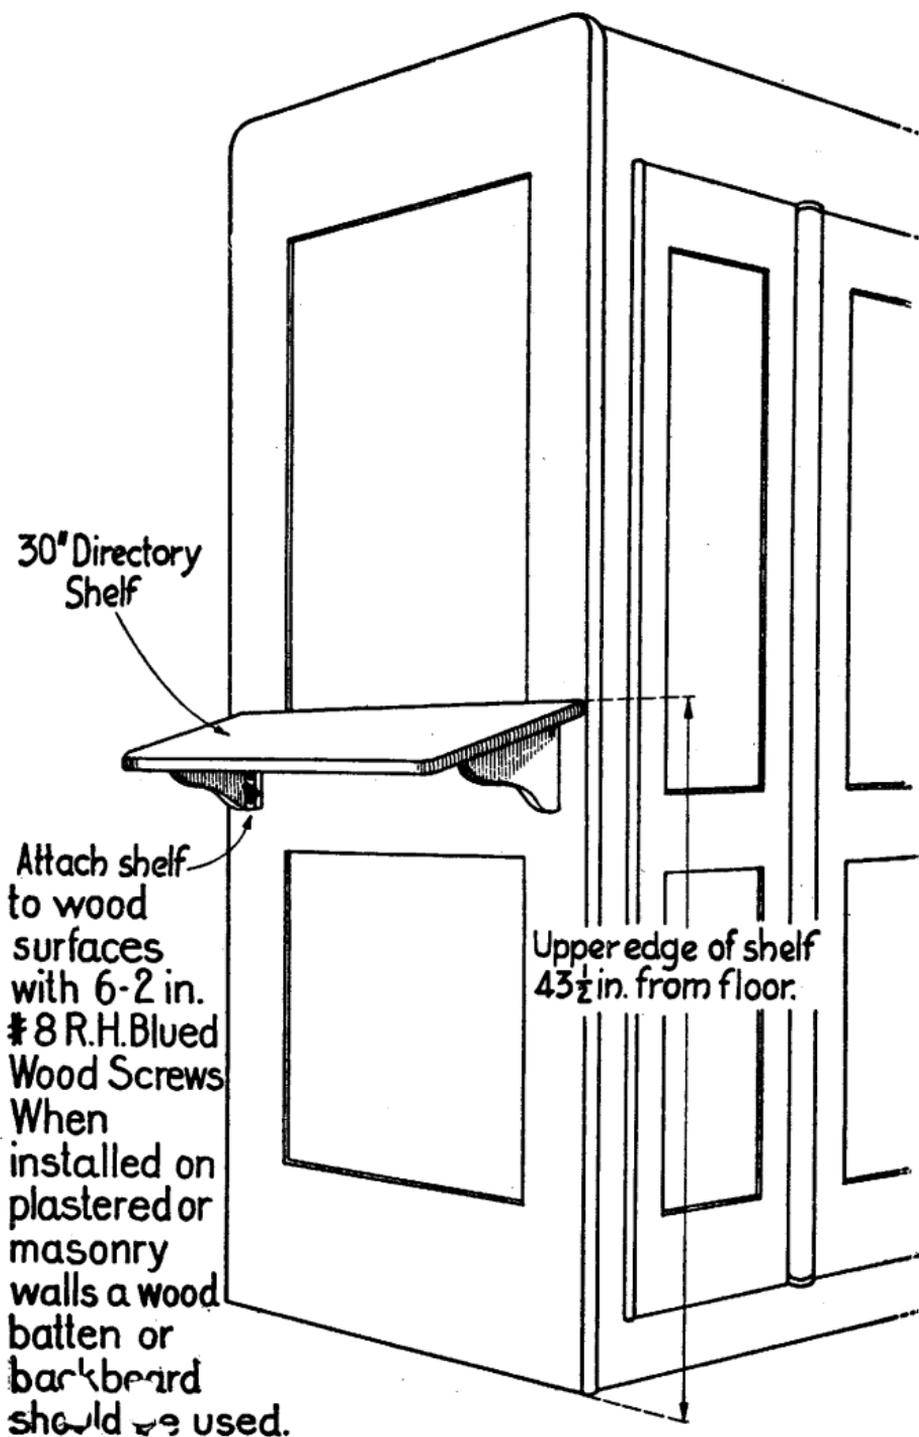

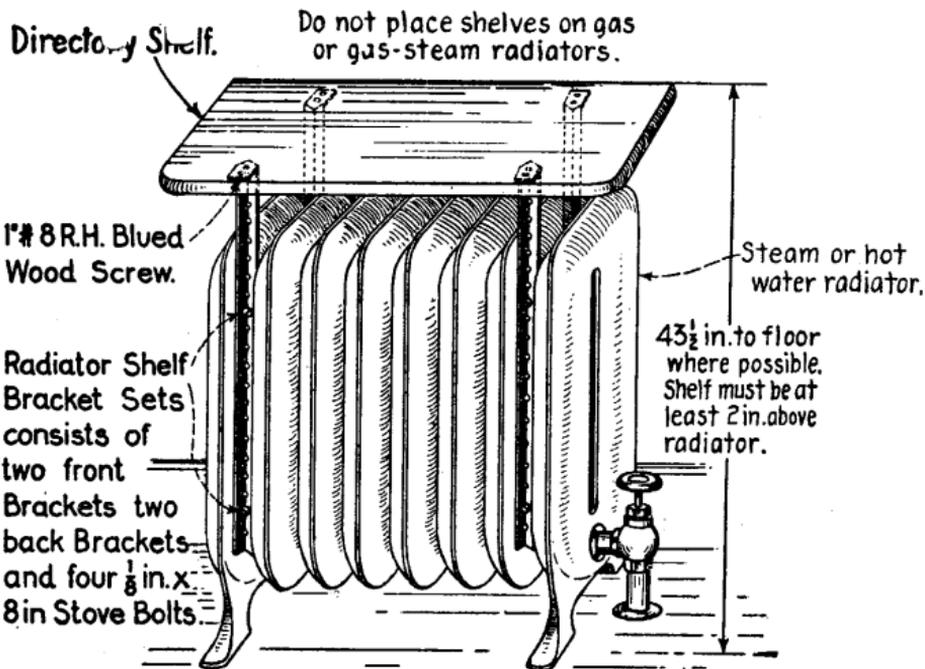


3. Installing Directory Fastener.

Install 7-book Directory Fastener on shelves and tables as shown below:

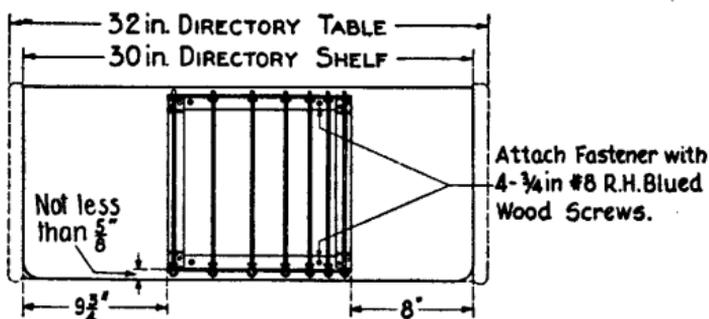

62 IN. DIRECTORY TABLE OR SPECIAL DIRECTORY SHELF

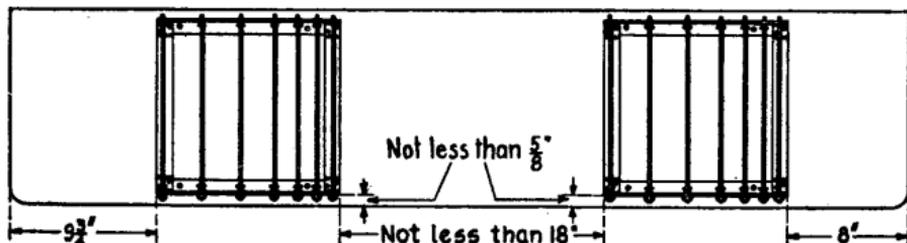


The 7-Book Directory Fastener has seven screw rods for attaching directories. Three screw rods are equipped with large looped wires for the thick directories, three are equipped with the small looped wires for the thinner directories and one is unequipped. The directory to be installed on the unequipped rod will be equipped with rings for attaching.

4. Installing Directory Designation Strip.

Install Directory Designation Strip by loosening the two front screws in fastener. Slide strip under fastener so that it engages the screws, then set up screws. If shelf is so narrow that the strip would project beyond the shelf relocate the fastener. If relocating the fastener is impracticable, wider shelf should be installed.


In no case should edge of strip extend beyond front of shelf.

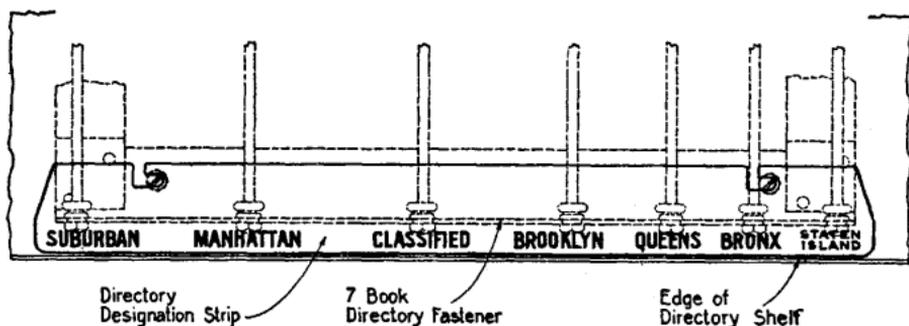


5. Placing Directories in Fastener.

To place a directory in fastener, remove screw rod and looped wire. Place looped wire in center of open book, with loops down. Insert screw rod through threaded hole in base, then through the two loops in wire and finally through plain hole in base. Turn up screw rod with socket wrench to prevent unauthorized removal of book. Do not use stiff covered directories in fastener.

Large Directories

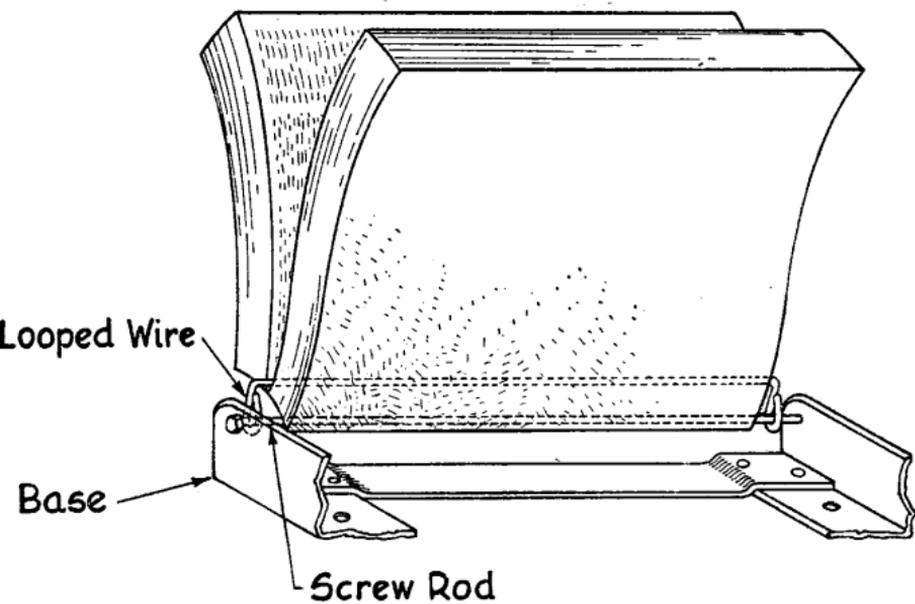

Staten Island Directory

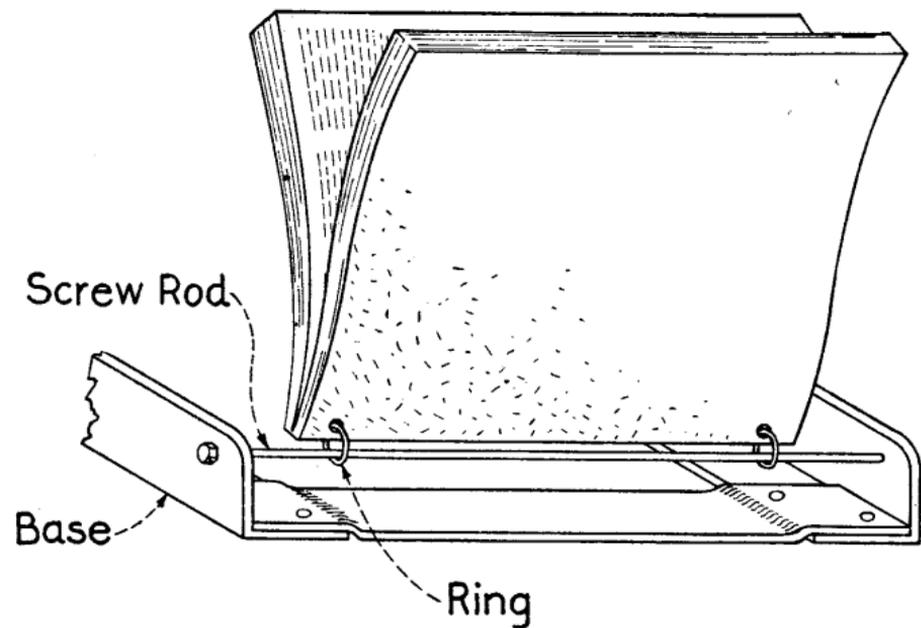


46.902

~~500~~
Page 5

PUBLIC
TELEPHONE
STATIONS

Locate directories in fastener in the order as shown below:

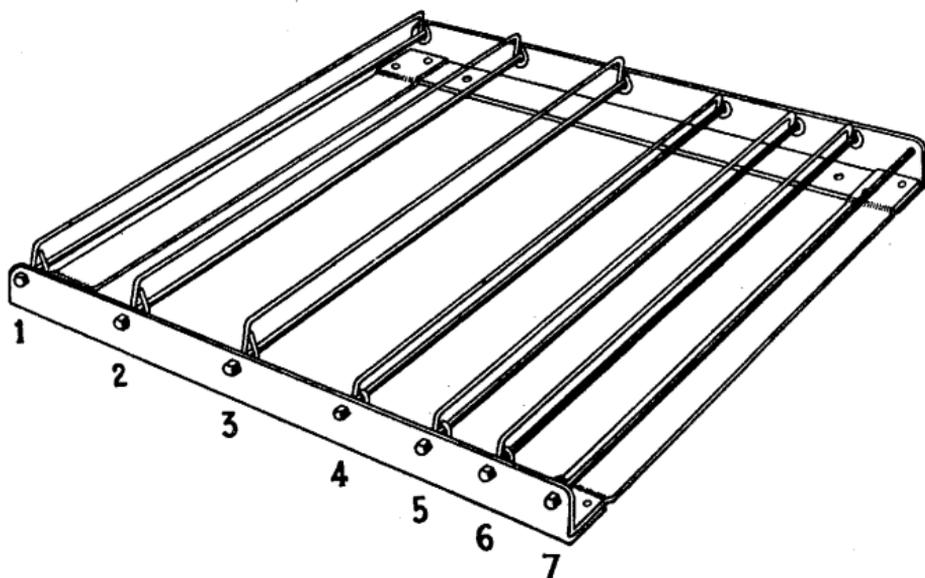


Rod 1	Rod 2	Rod 3	Rod 4	Rod 5	Rod 6	Rod 7
Suburban	Manhattan	Classified	Brooklyn	Queens	Bronx	Staten Island

6. Installing Directory Hangers.


Install Directory Hangers on building walls or partitions near booth.

NEVER INSTALL DIRECTORY HANGERS INSIDE OF OR ON THE OUTSIDE OF A BOOTH.


Attach with three 1 1/4 In. #8 R. H. Blued Wood Screws. When necessary to install on plaster walls, a Directory Hanger Backboard should be used.

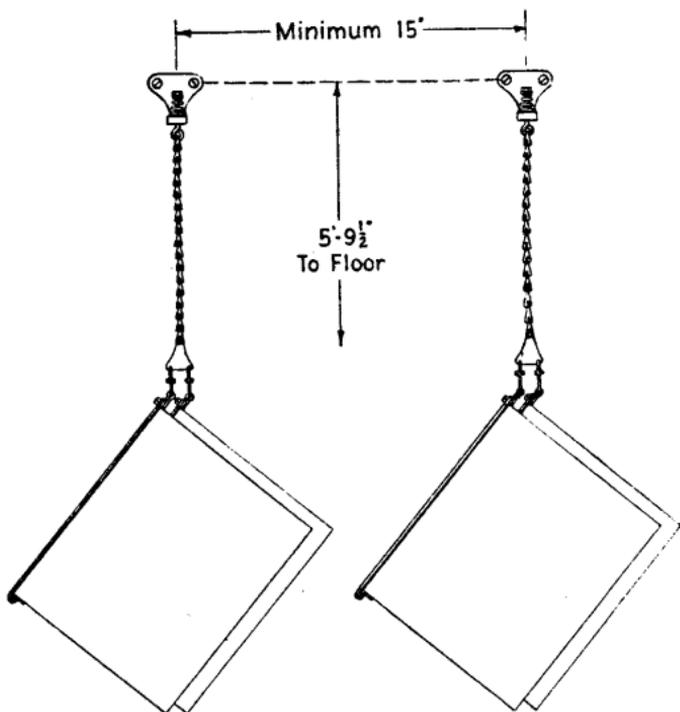

7. Placing Directories in Directory Hangers.

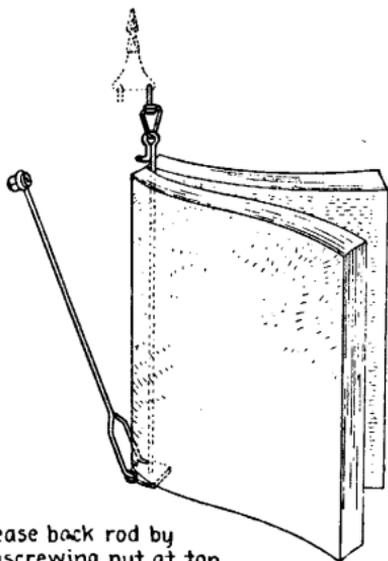

Release back rod by
unscrewing nut at top.
Place directory as shown.

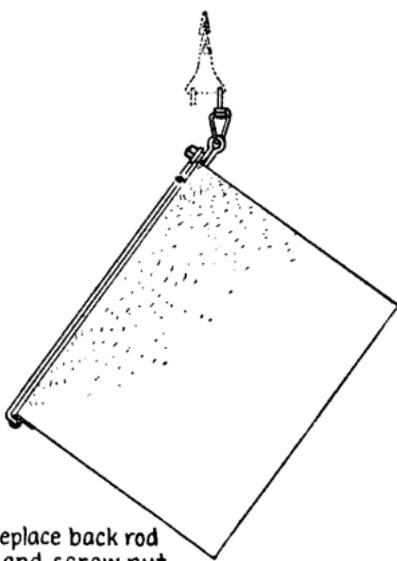

Replace back rod
and screw nut
up tight.

8. Installing Backboards.

Attach backboards with following attaching devices:

Surface	Fastener
Masonry Plastered	2½ In. # 8 R.H. Blued Wood Screws in 1½ In. # 8 Wood Screw Anchors.
Hollow Tile Plastered	¾ In. x 4 In. B.H. Toggles. If solid part of tile is struck, tilt drill towards hollow part or use fasteners for plastered masonry.
Wood Lath Plastered	2½ In. # 8 R.H. Blued Wood Screws
Wire Lath Plastered	¾ In. x 4 In. B.H. Toggles
