




Notes:

1. Move red-white and green-white Transfer Key Leads from 2R and 2T to 1R and 1T.
2. Terminate un-used Cord Conductors on spare Conn. Block Terminals where available or tape them.
3. Transfer red and green Cord Conductors from L1 and L2Y to 1 and 2 Terminals. Transfer red Ringer and yellow Condenser Lead from Term. L1 & L2Y on Ind.Coil to Term. 1 & 2 on Term.Strip.
4. Where there are three C Stations or two L and one C Stations, use High Imp. Ringers at all Stations.
5. With 4½V Bat. Supply use 12A Key Tel. Unit.

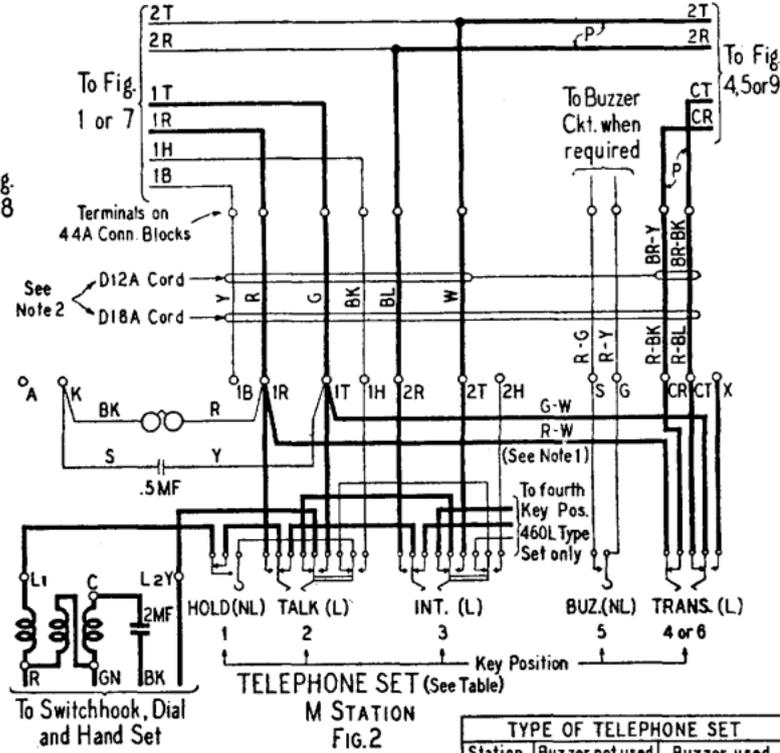



PLAN 102

Station	TYPE OF TELEPHONE SET	
	Buzzer not used	Buzzer used
M	460 G	460 L
C	410 A	410 B

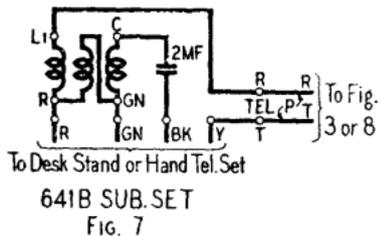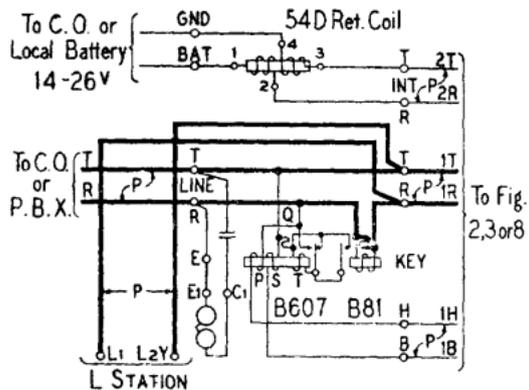

Notes:

6. Pair "B" and "H" Leads. Dead end and tape "B" Lead at Key.
7. Buzzer Key not provided on earlier type Key.

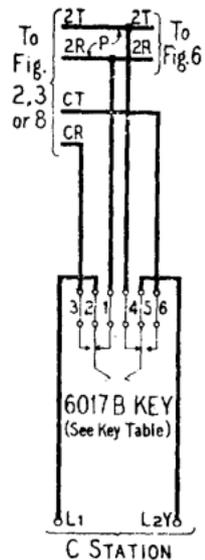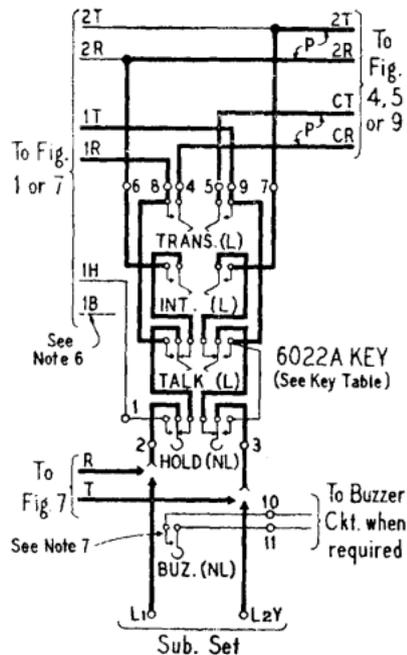

PLAN 102