

P-1 CARRIER TELEPHONE SYSTEM
INSTALLATION AND WIRING OF NETWORKS


NOTES CONCERNING THIS ADDENDUM

This addendum is issued to replace one subparagraph and to delete references to grounding methods not standard in this area.

"See Addendum" should be marked in the main section to indicate the following:

- Paragraph 2.03(g) - Delete "MGN Vertical Ground Wire"
- Paragraph 3.03(c) - Replaced
- Paragraph 4.02(c) - Delete "MGN Vertical Ground Wire"
- Paragraph 4.02(g) - Delete "MGN Vertical Ground Wire"

3.03(c) Where the low-pass network is located on a crossarm:

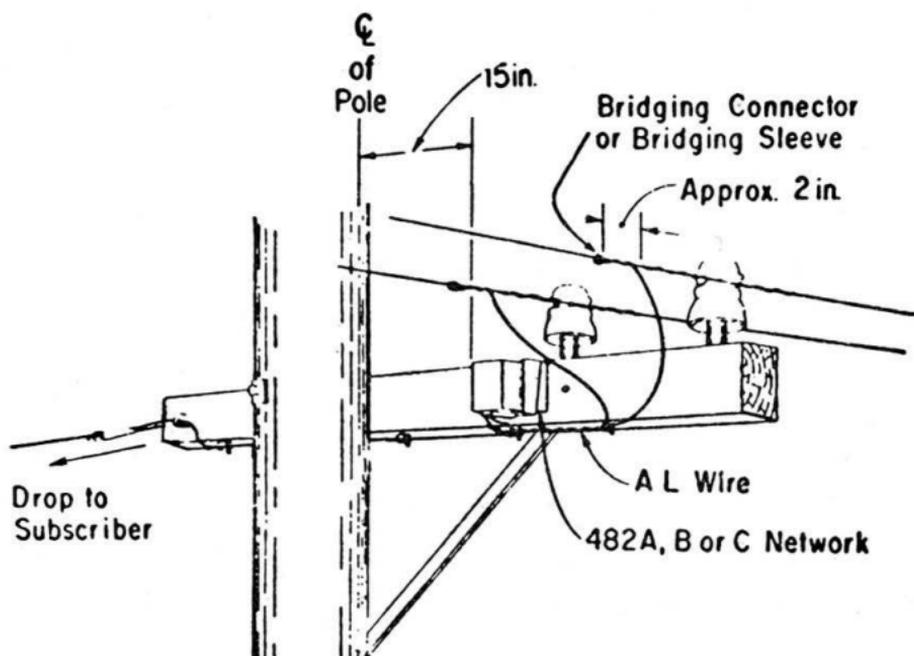

NOTES:

- 1 - Attach Network with two 1 in. No. 14 R.H. Galv. Wood Screws.
- 2 - See Par. 2.03 for wiring of network.