

**BELL SYSTEM PRACTICES**  
**Outside Plant Construction**  
**and Maintenance**

**SECTION G61.419.1**  
**Issue 1, December, 1952**  
**AT&T Co Standard**

## **N1 CARRIER CABINETS**

### **INSTALLATION OF MOISTURE SEAL**

<b>Contents</b>	<b>Page</b>
1. General .....	1
2. Installation of Curtain .....	1

#### **1. GENERAL**


1.01 This section covers the installation of KS-14619 Curtains in KS-14296 Cabinets which are used for housing N1 carrier equipment in outdoor installations.

1.02 The plastic coated fabric curtains are mounted just back of the cabinet door to protect the equipment from water and snow which may be blown into the cabinet around the door joints. A mounting hook and screw are supplied with the curtain for use in those cabinets not already provided with such a hook.

#### **2. INSTALLATION OF CURTAIN**

2.01 Place the curtain inside the cabinet, center it and hold it in position. Its width closely approximates the inside width of the cabinet.


2.02 Using the grommet in the curtain top as a guide, mark the location in the upper door stop as indicated in the following figure.

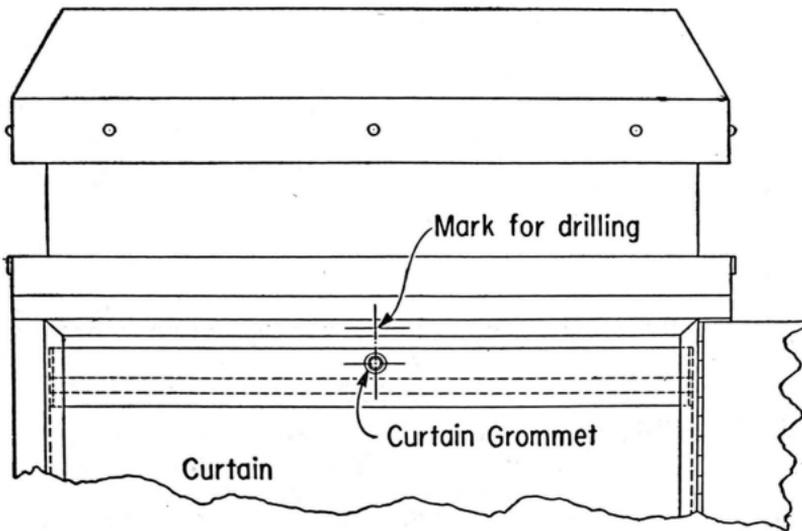

2.03 Drape the curtain over the equipment in the cabinet to protect the equipment from metal chips during subsequent operations.

2.04 Drill and countersink a hole in the door stop at the marked location, using a number 15 (.180 inch) twist drill and a metal countersink.

2.05 Mount the curtain hook as shown in the following figure making certain that the head of the screw is flush with the door stop and does not prevent the door from closing securely.

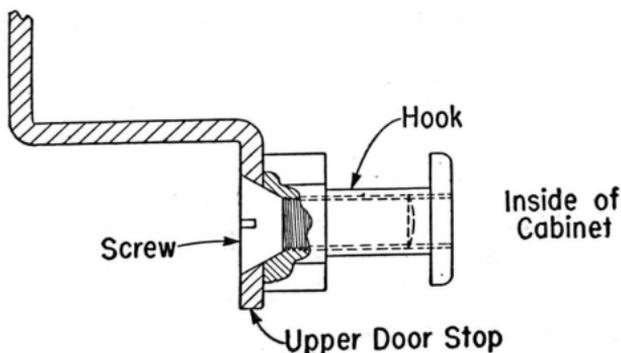

2.06 Hang the curtain on the hook. It should hang evenly, inside of and completely covering the door opening.