

BELL SYSTEM PRACTICES
Outside Plant Construction
and Maintenance

SECTION G61.420.1
Issue 1, September, 1954
AT&T Co Standard

OUTDOOR CARRIER CABINETS

INSTALLATION OF SNOW SHIELD

Contents	Page
1. General	1
2. Installation	2


1. GENERAL

1.01 This section covers the installation of the Snow Shield on KS-14296 Cabinets, outdoor housings for N and O carrier repeaters.

1.02 The shield, which consists of two sets of baffles forming a collar around the cabinet vent, prevents snow from accumulating in the vent.

2. INSTALLATION

2.01 Place the inner baffle first. It consists of four pieces, two end and two side deflectors which are positioned around the cabinet vent. Join the deflectors at the corners with the self tapping screws provided, as shown in the following illustration.

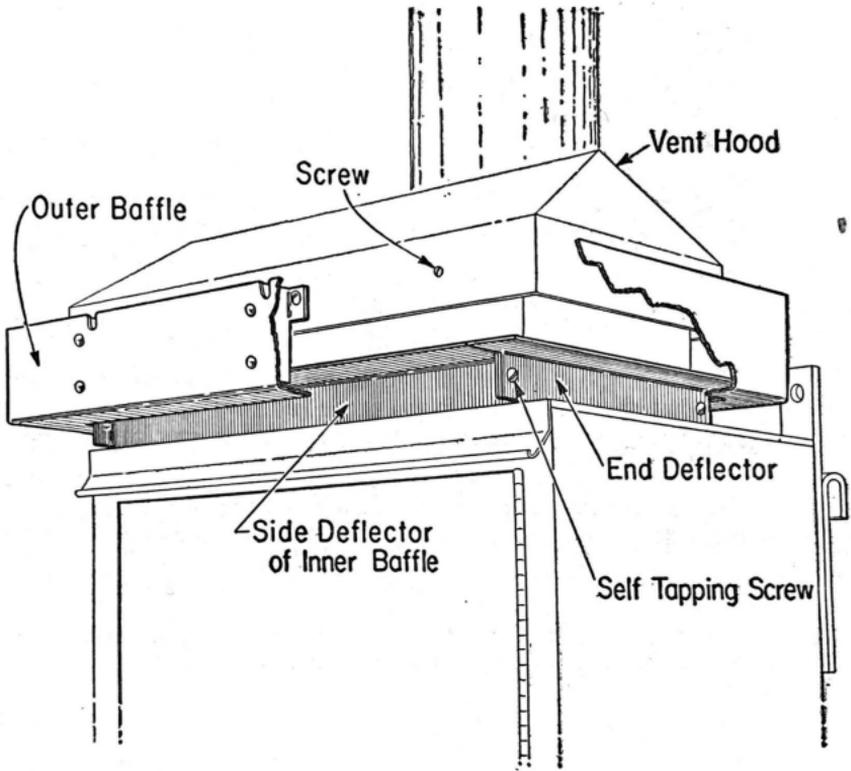

2.02 Remove those screws holding the vent hood in place which correspond to the mounting pads on the outer baffle (three front and two back screws).

2.03 Position the outer baffle around the hood with the cable stub indentation to the rear and secure the baffle to the vent hood with the self tapping screws provided.