

FIG 1
 SINGLE PLS OPERATION OF Q102 UNIT
 STRAPPING OF BREAK-TRANSFER SET TERMINALS
 AND CABLING BETWEEN BREAK-TRANSFER SET TERMINALS
 TO Q102 TABLE TERMINALS

TERMS ON Q102 TABLE

AT-6763 CABLE 26 PAIR


TERMS IN BRK-TFR CABINET

BELL SYSTEM PRACTICES
TELETYPEWRITER STATION
INSTALLATION AND MAINTENANCE
(REPRODUCED FROM DWG. 20963-119 SHEET 1)

SECTION P90.928
ISSUE A FEBRUARY 1943
LONG LINES DEPT.
PAGE 1 OF 2 PAGES

Dist. Class. (LDDC)
(600AC)

WRITER (119)

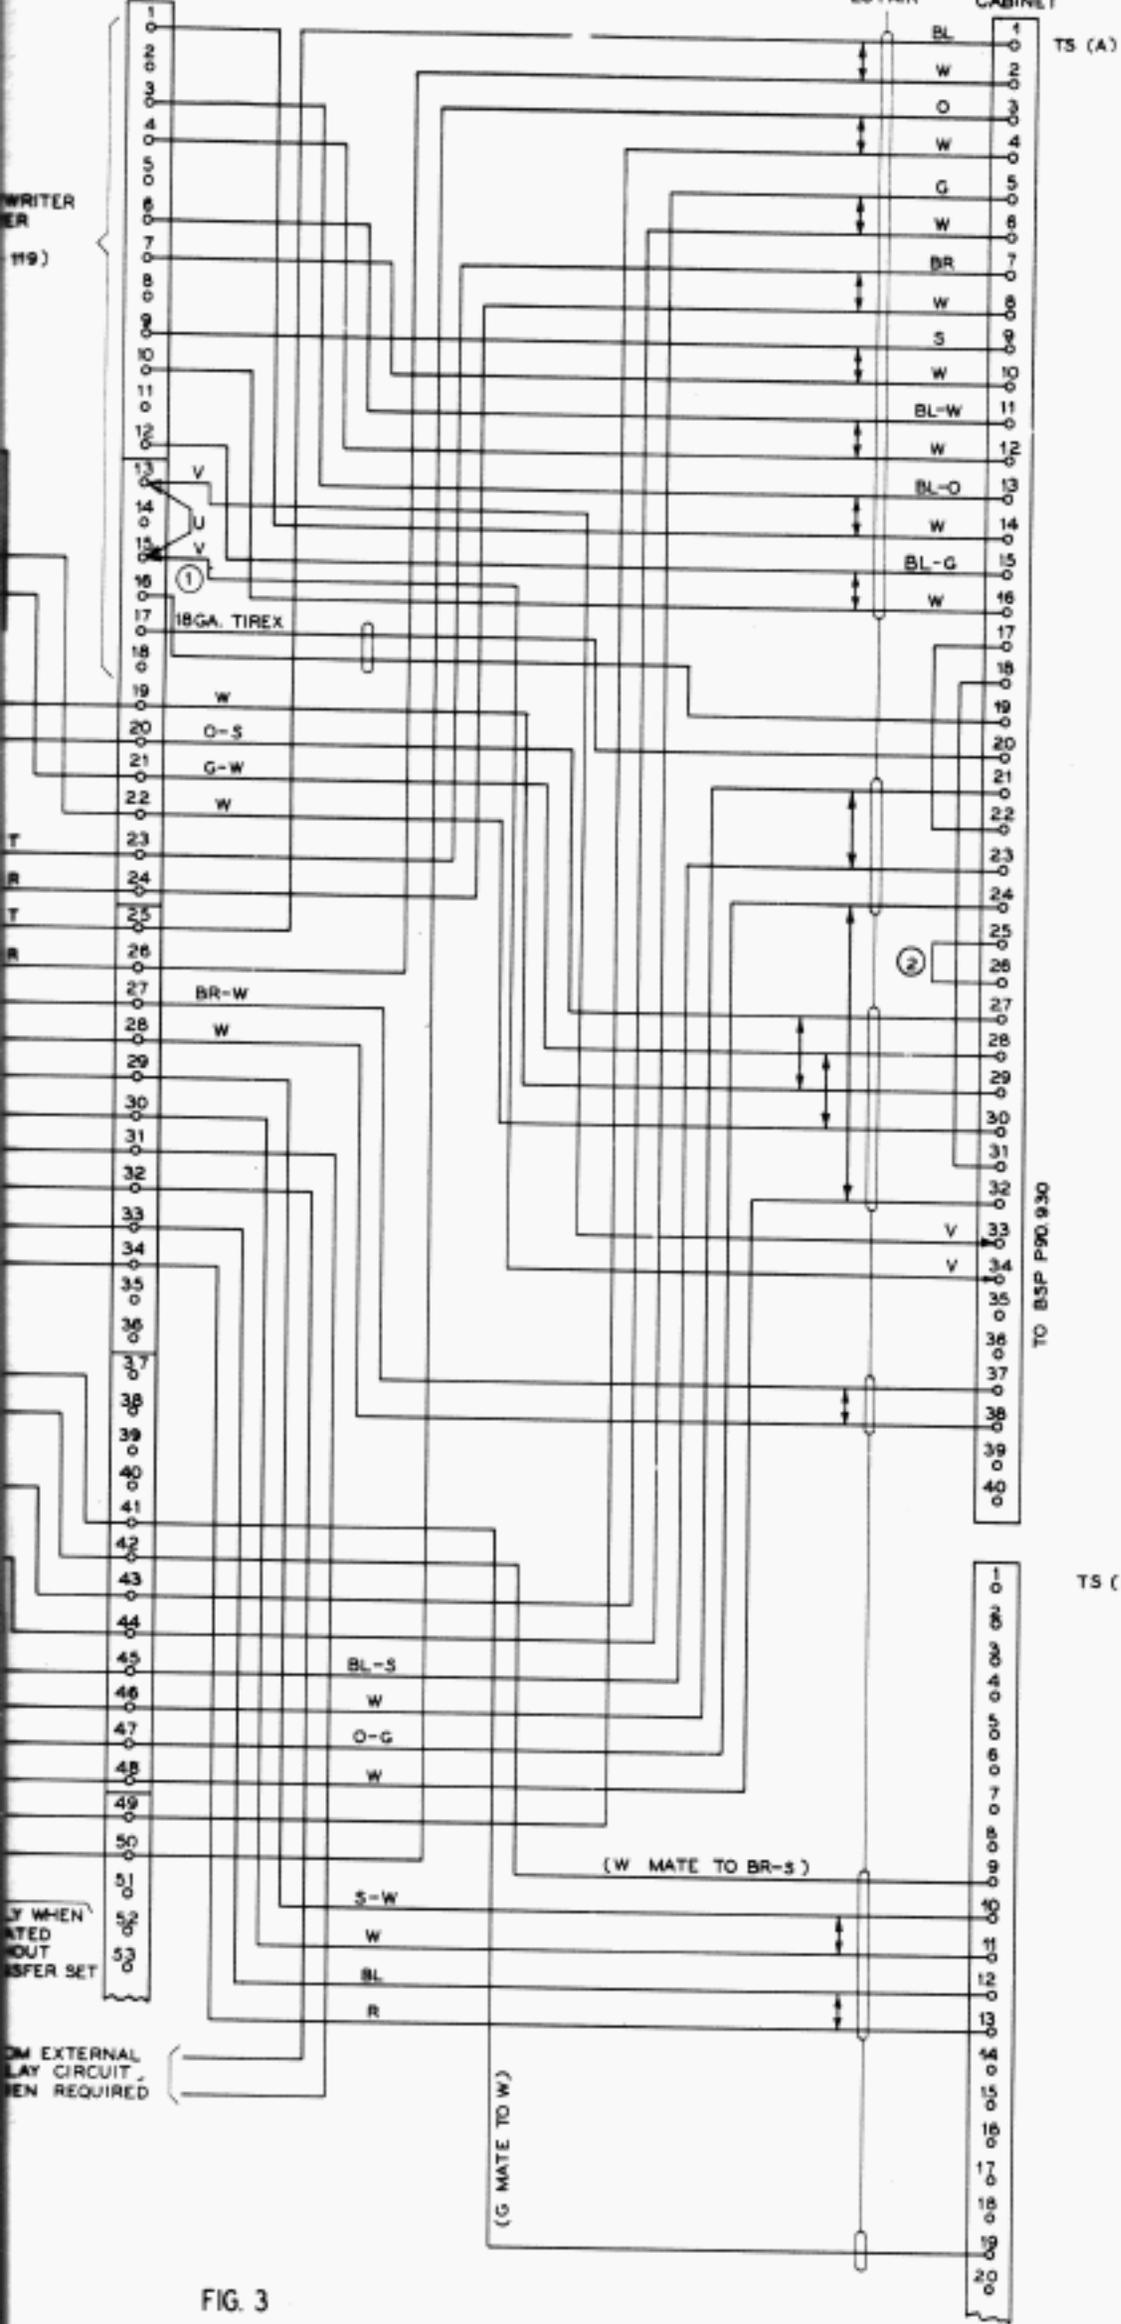



NOTES

- A-NO. 72 MAZDA LAMP IN 4G LAMP STANDARD
- B-15-A-3 INDICATOR (BREAK-TRANSFER LAMP) WHEN SPECIFIED
- C-ADDITIONAL 15 TYPE INDICATOR WHEN SPECIFIED
- D-BUZZER OR BELL WHEN SPECIFIED FOR ANOTHER RELAY CIRCUIT. WIRES NOT OTHERWISE SPECIFIED SHALL BE 22GA. BROWN INSIDE TELEPHONE WIRING.
- 1 - WHEN BIAS CIRCUIT IS EXTENDED USE U WIRING FOR 60 MIL OPERATION AND V WIRING FOR 20 MIL OPERATION.
- 2 - USE THIS STRAP ONLY WHEN THE B-T CIRCUIT IS TO OPERATE ON A SHORT BREAK OF 0.7 SECOND.

FIG. 3
SINGLE OR DUPLEX PLS OPERATION
OF SPARE Q102 UNIT, KEY CONTROL
MAPPING OF BREAK-TRANSFER SET TERMINALS
RELATING BETWEEN BREAK-TRANSFER SET TERMINALS
TO Q102 TABLE TERMINALS


TELETYPEWRITER SYSTEMS
Q102 ASSEMBLY WITH
BREAK-TRANSFER CIRCUIT
PLS OPERATION

TO
TELETYPEWRITER
EQUIPMENT
PER DWG. 20955-
(BSP P90. 927)

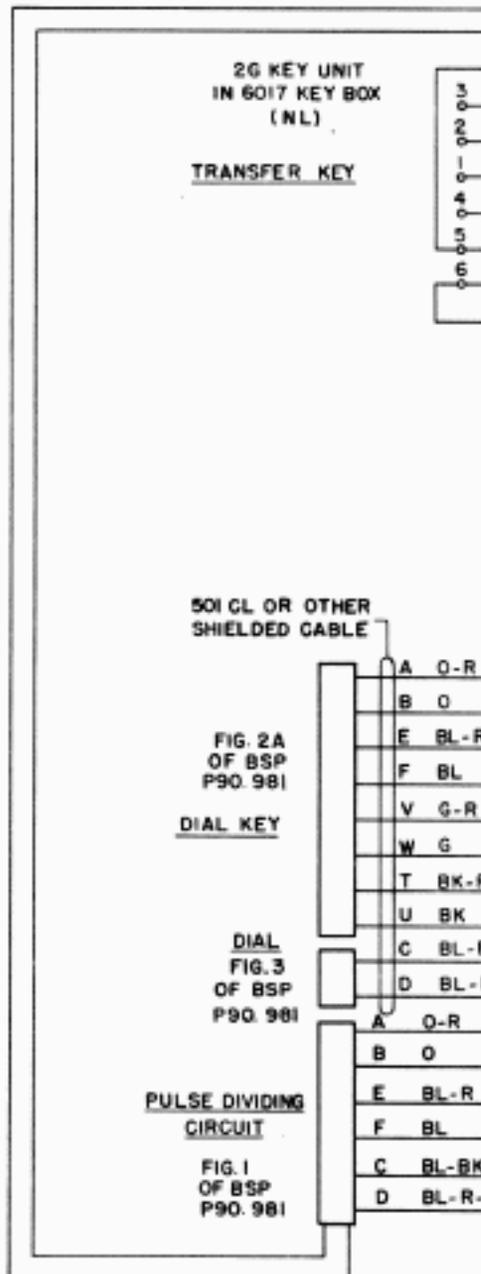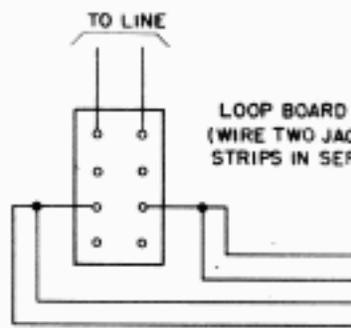

WIRES NOT OTHERWISE
SPECIFIED SHALL BE
22 GA. BROWN INSIDE
TELEPHONE WIRING.

Dist. Class. (LOGAC
(600AC

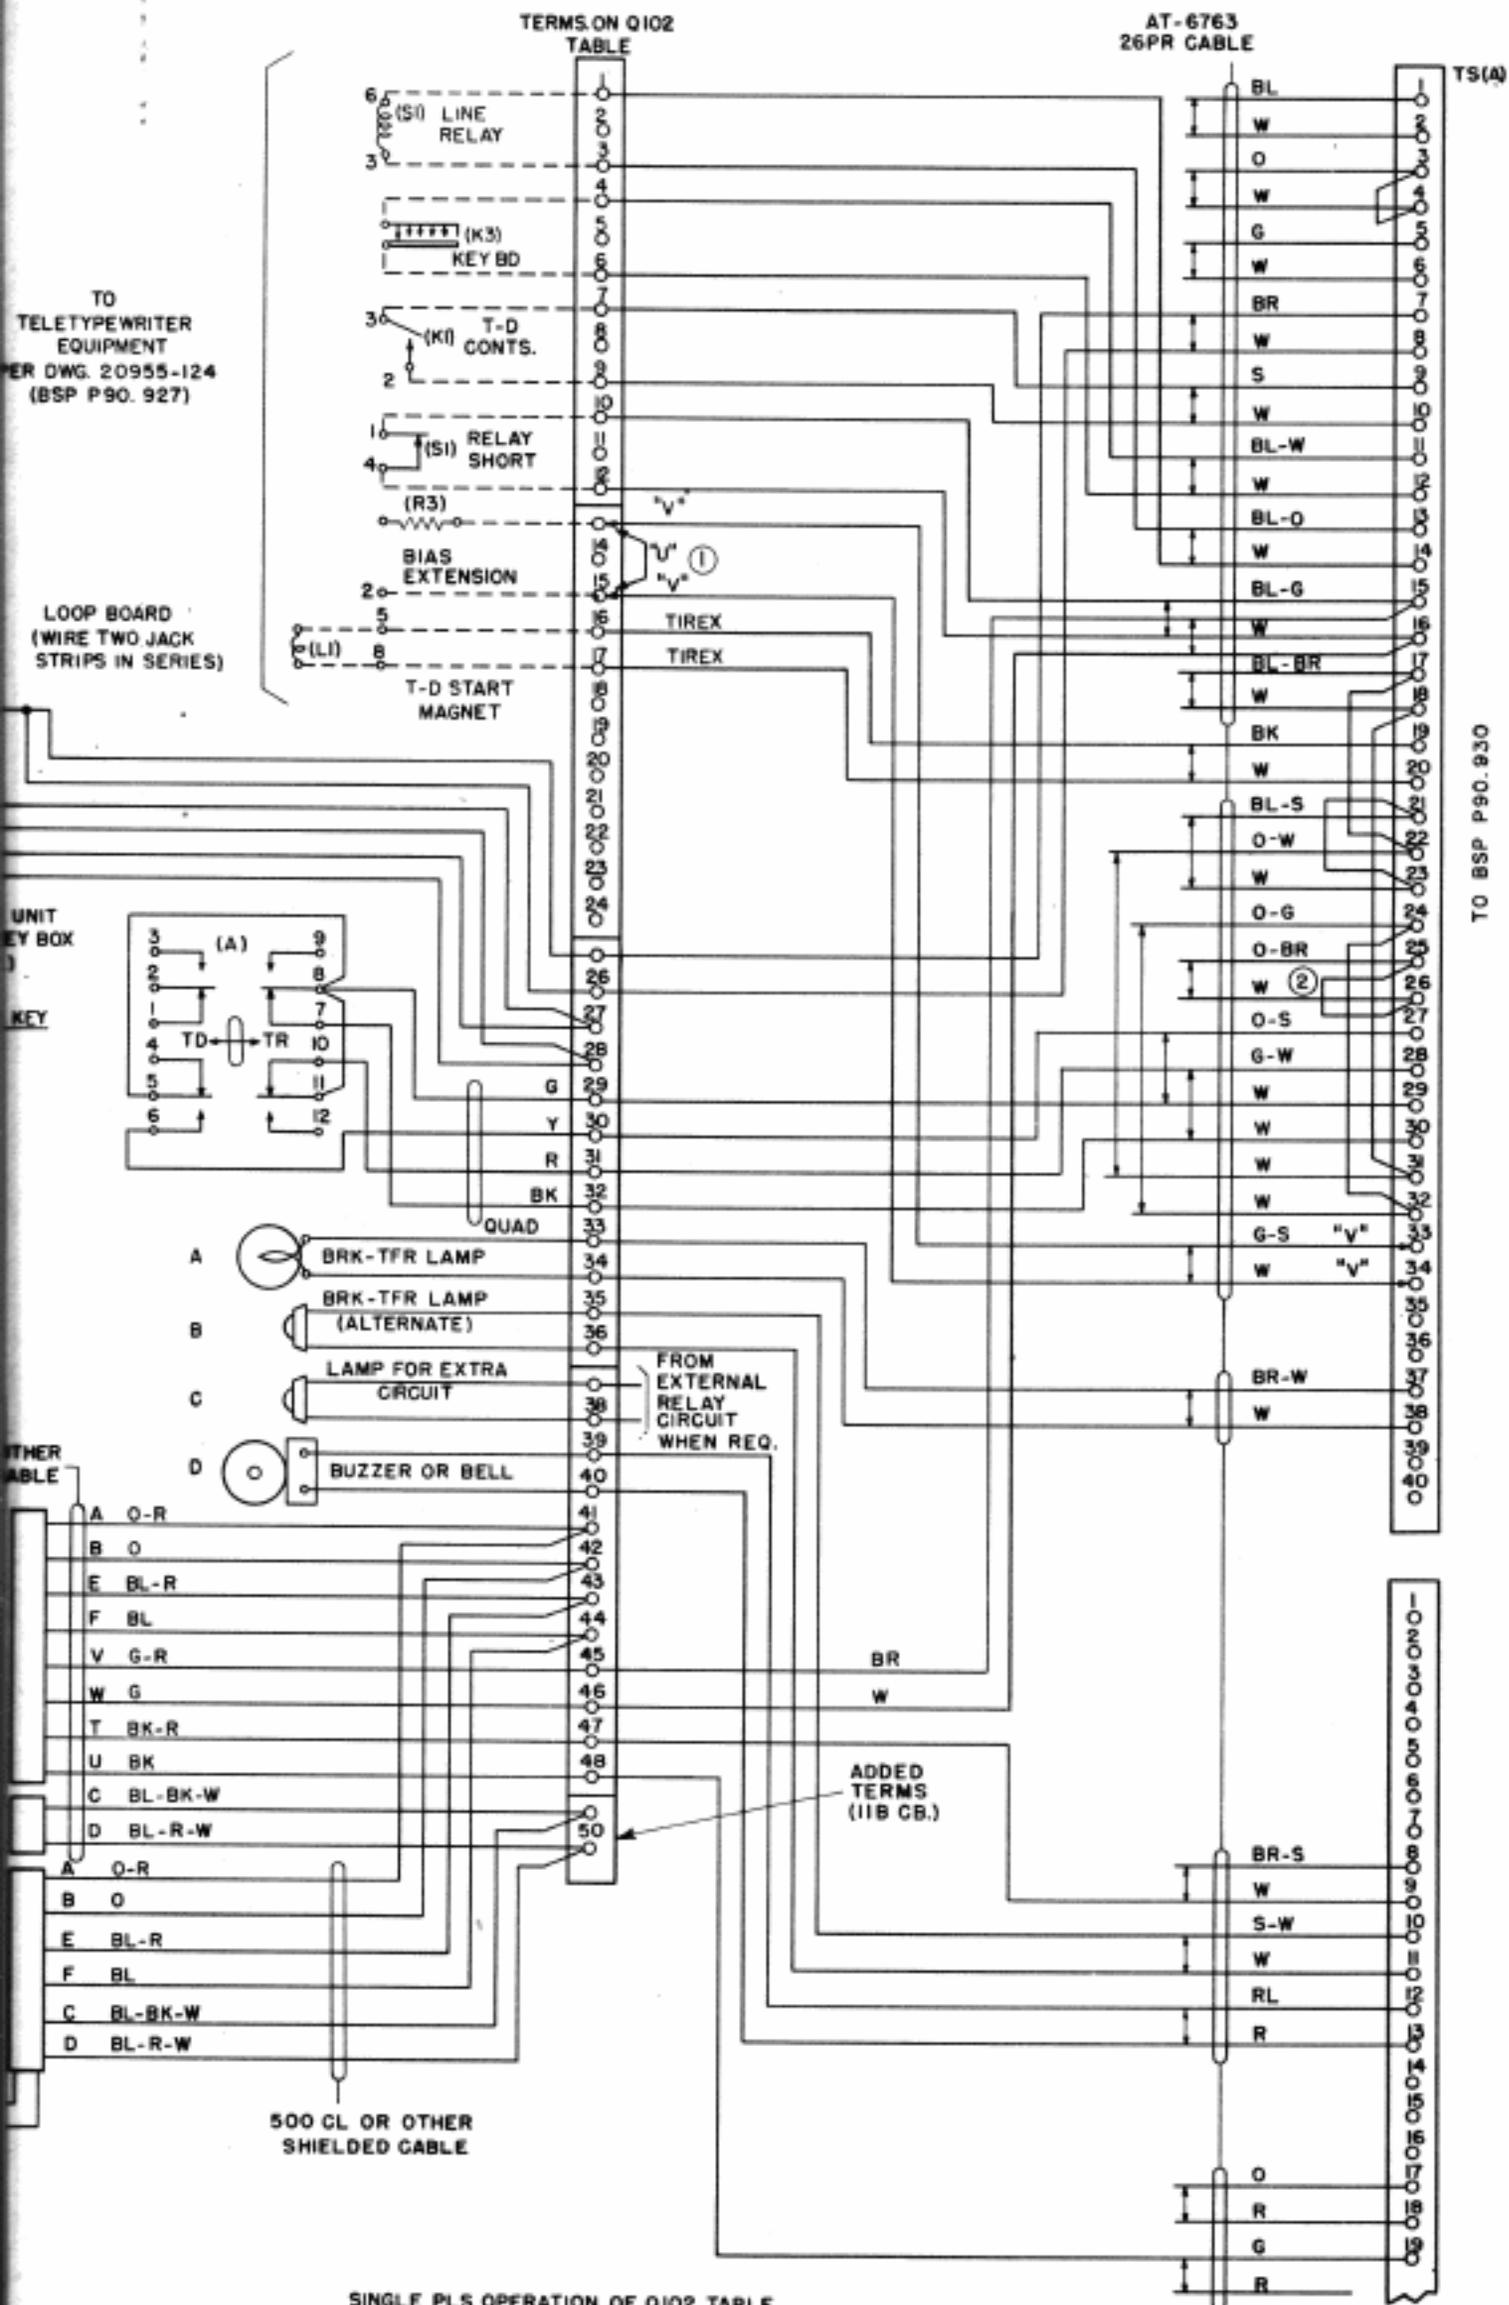

ADD STRAPS TO
TS (A) AS FOLLOWS:
TERM 3 TO TERM 4
" 17 " " 22
" 18 " " 31
" 21 " " 23
" 24 " " 32
" 25 " " 26 ②

TO BSP P90.930

SINGLE PLS OPERATION OF Q102 TABLE
60 TYPE SELECTOR AND BREAK TRANSFER CIRCUIT
STRAPPING OF BRK-TFR SET TERMINALS AND
CABLING BETWEEN BRK-TFR SET, Q102 TABLE
AND 60 TYPE SELECTOR

FIG. 1A