



# 1999 Ford Contour Sun Visor Replacement

This guide will teach you how to replace a broken sun visor in a 1999 Ford Contour.

Written By: Danielle Bailey



## INTRODUCTION

A broken sun visor is a danger to yourself and other motorists. It could become dislodged while your driving, increasing your risk for becoming involved in a traffic accident. Luckily, sun visors are easy to remove and replace, which is what this guide will aim to teach you how to do.

### TOOLS:

- Phillips #1 Screwdriver (1)

## Step 1 — Sun Visor




- Unscrew the visor from its housing.  
*(i) The screws used are 1 inch sheet metal screws with a Phillips head.*

## Step 2



- Disconnect any wires attached to the visor by squeezing the tab located on the power cable connector.  
*☒ Reconnect the wiring before proceeding to the final step.*

## Step 3

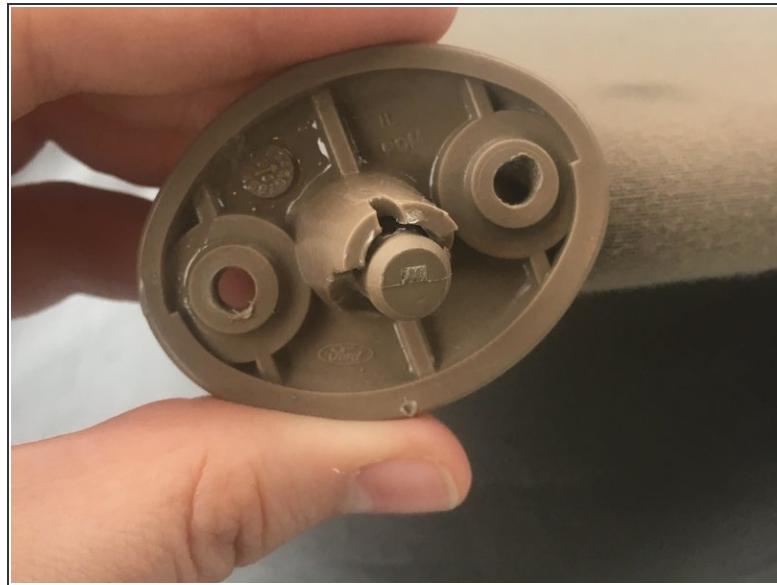

- Completely remove the visor and replace with a new one.

Once all steps are completed, the sun visor will work as before.

To reassemble your device, follow these instructions in reverse order.