



ATT CL2940 Speakerphone Replacement

Use this guide to replace the speakerphone.

Written By: Charles Messmore



INTRODUCTION

The speakerphone is used to talk hands-free on the phone. When this feature is not working, you may consider replacing it.

TOOLS:

- [64 Bit Driver Kit \(1\)](#)
- [Metal Spudger \(1\)](#)

Step 1 — Back Panel



- Remove five 9.5 mm Phillips #1 screws from the back panel of the phone.


Step 2



- Slide metal spudger into the crack around the Front Panel of the phone


⚠ Be careful not to break the clips holding the Back Panel to the Front Panel

Step 3

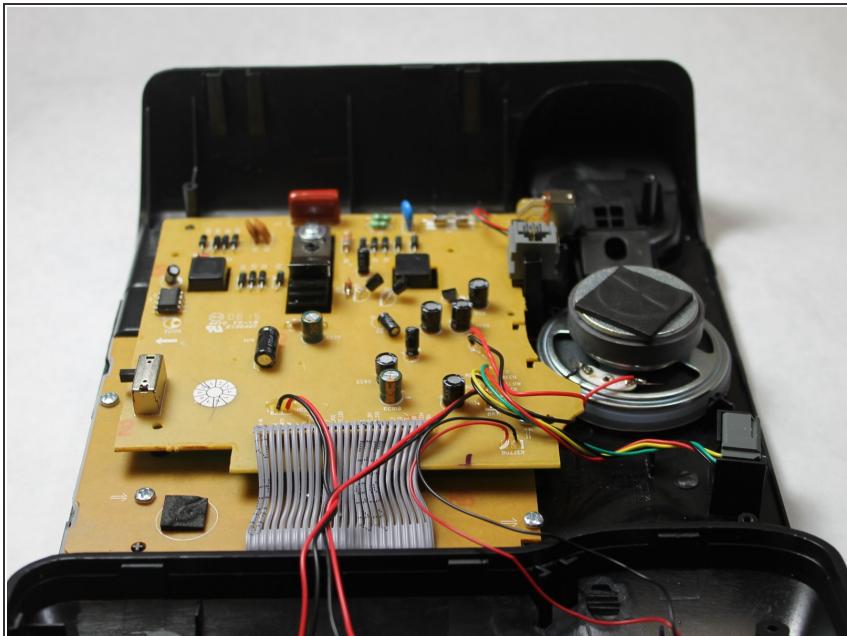


 When setting the back panel down, be careful to not rip any of the wires off of the internal components

Step 4 — Speakerphone

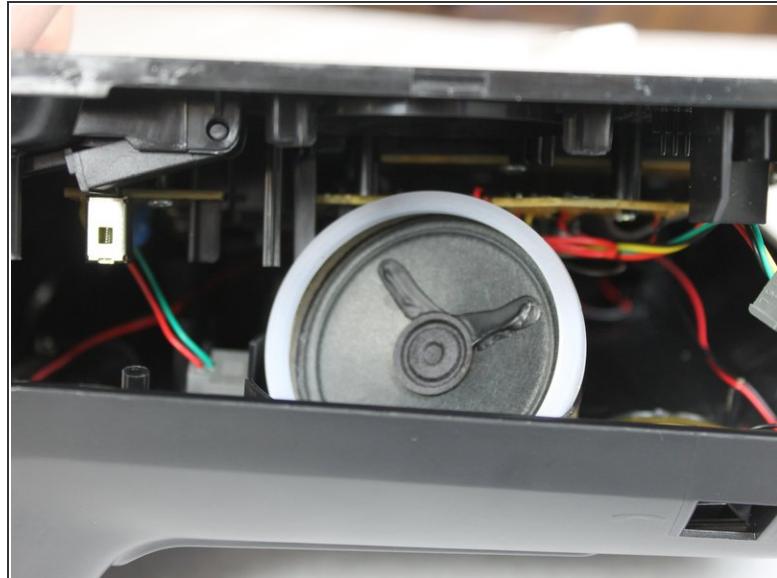


- Remove Front Panel as shown.

Step 5

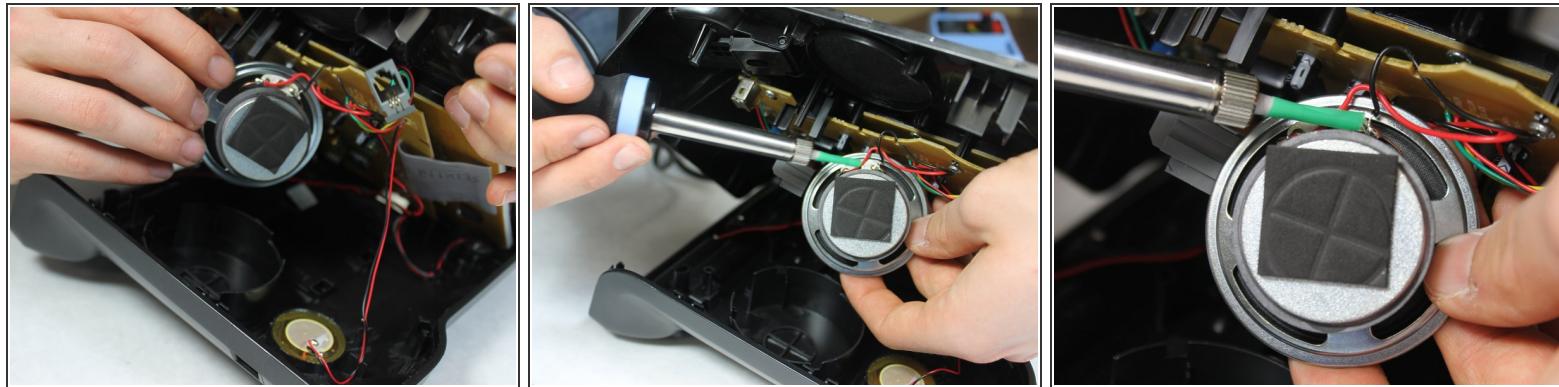


- Locate Speakerphone and remove solder with soldering iron.

Step 6

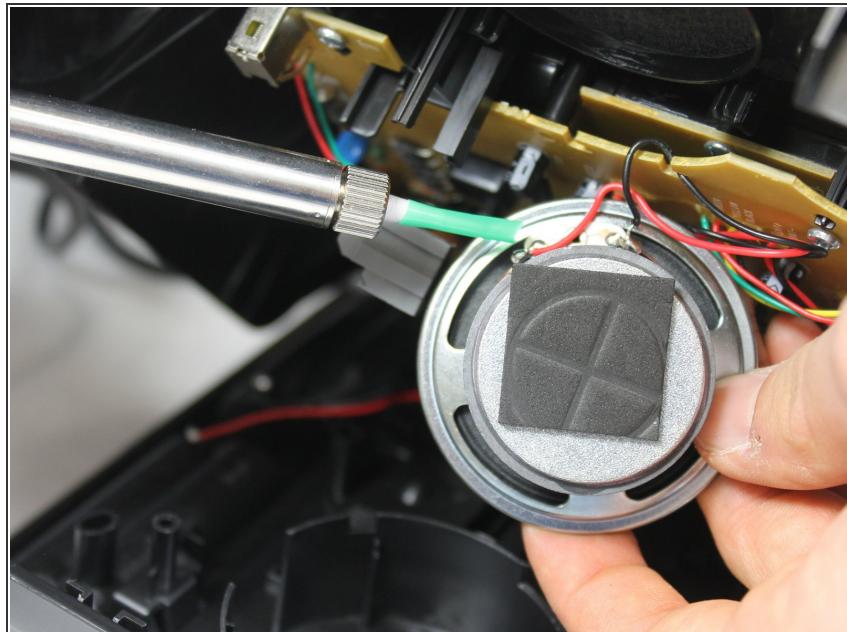

- Use the soldering iron to reconnect the wires to the new speaker.

Step 7

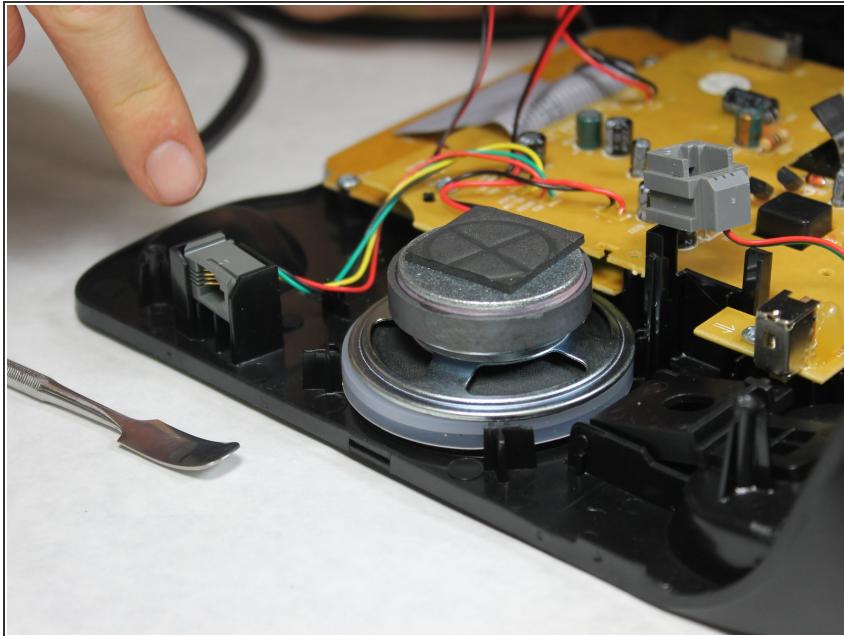

- Place new speaker back in place.
- *i* Make sure that all of the components are back in place.

Step 8



- Replace Back Panel as shown.

Step 9



- Secure the Back Panel with the same screws using the iFixit Protech Screwdriver kit J1 or PH1 bit.