



Amazon Fire Phone Headphone Jack Replacement

This guide shows you how to replace the headphone jack of the Amazon Fire Phone

Written By: Savannah Moen



INTRODUCTION

Use this guide to learn how to replace the headphone jack at the top of the back of the phone

TOOLS:

- [iFixit Opening Tools](#) (1)
- [Suction Handle](#) (1)
- [T3 Torx Screwdriver](#) (1)
- [iFixit Opening Picks set of 6](#) (1)

Step 1 — Front Panel Assembly



(i) If the display is damaged use clear packing tape to contain any glass shards.

(i) Make sure the entire surface of the display is covered with tape.


! Wear safety glasses to protect your eyes.

Step 2 — Preparation for Opening



- Power off your phone.
- Remove the sim card from the left side of the phone by pressing the small hole and allowing it to eject using the 0.8 screwdriver head.
- Remove the two 4mm screws on the bottom of the phone using the Torx T3 screwdriver.

Step 3 — Manual Opening

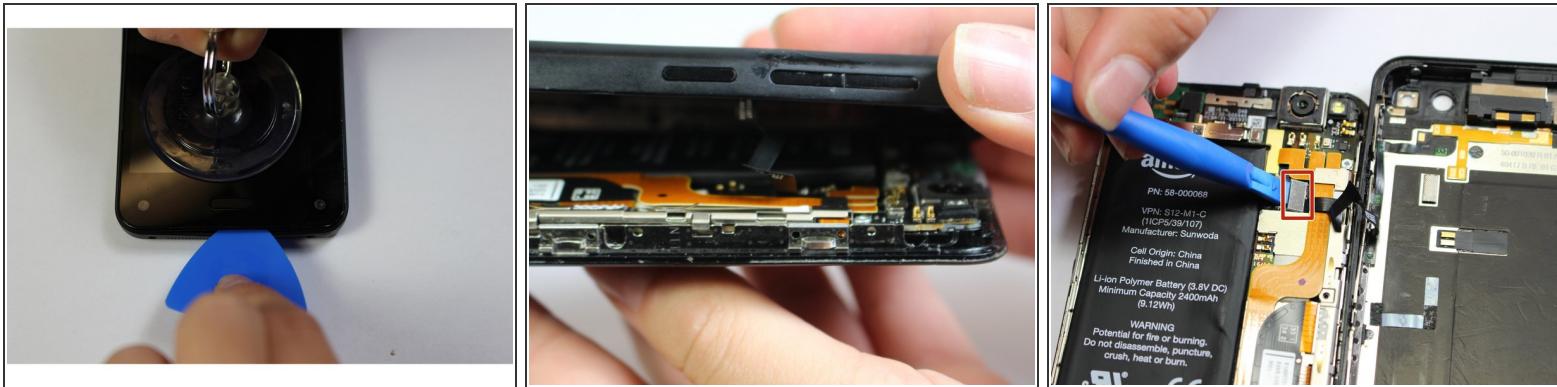


- Press the single suction cup just above the home button.
- While lifting up on the suction cup place the plastic opening tool at the rim of the screen, separating the screen from the back casing.

⚠ Carefully separate the two halves to avoid tearing the volume rocker ribbon cable.

- Using the opening tool, disconnect the volume rocker ribbon cable from the base of the phone, freeing the two halves.

Step 4

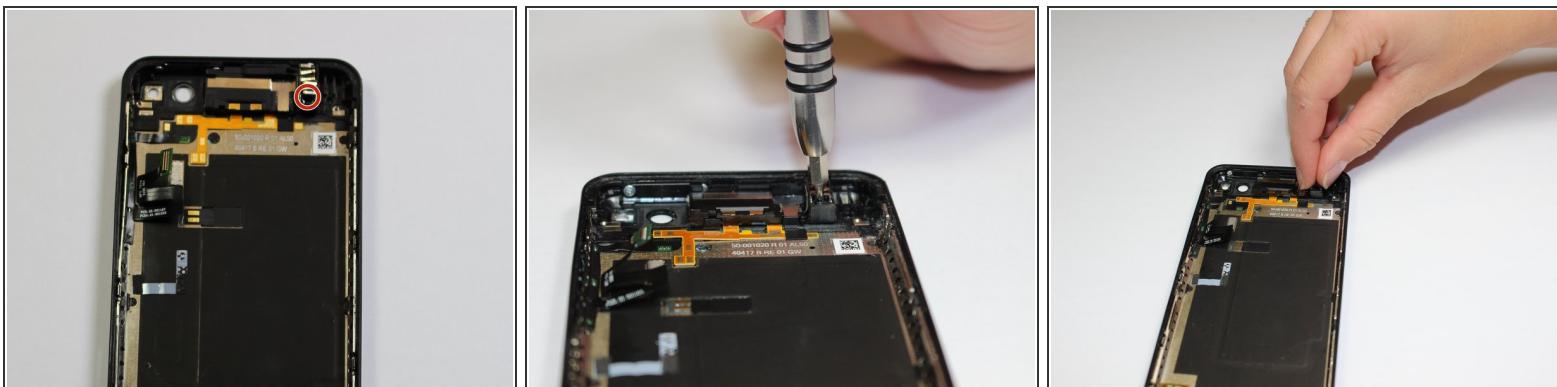

- Remove the 1mm screw concealed in the headphone jack.
- Afterwards the headphone jack will easily pop off.

To reassemble your device, follow these instructions in reverse order.

