




Arnova 7K G3 Rubber Feet Replacement

This guide will show how to remove and replace the rubber feet on the back of the Arnova 7K G3.

Written By: Tyler Sigafoose

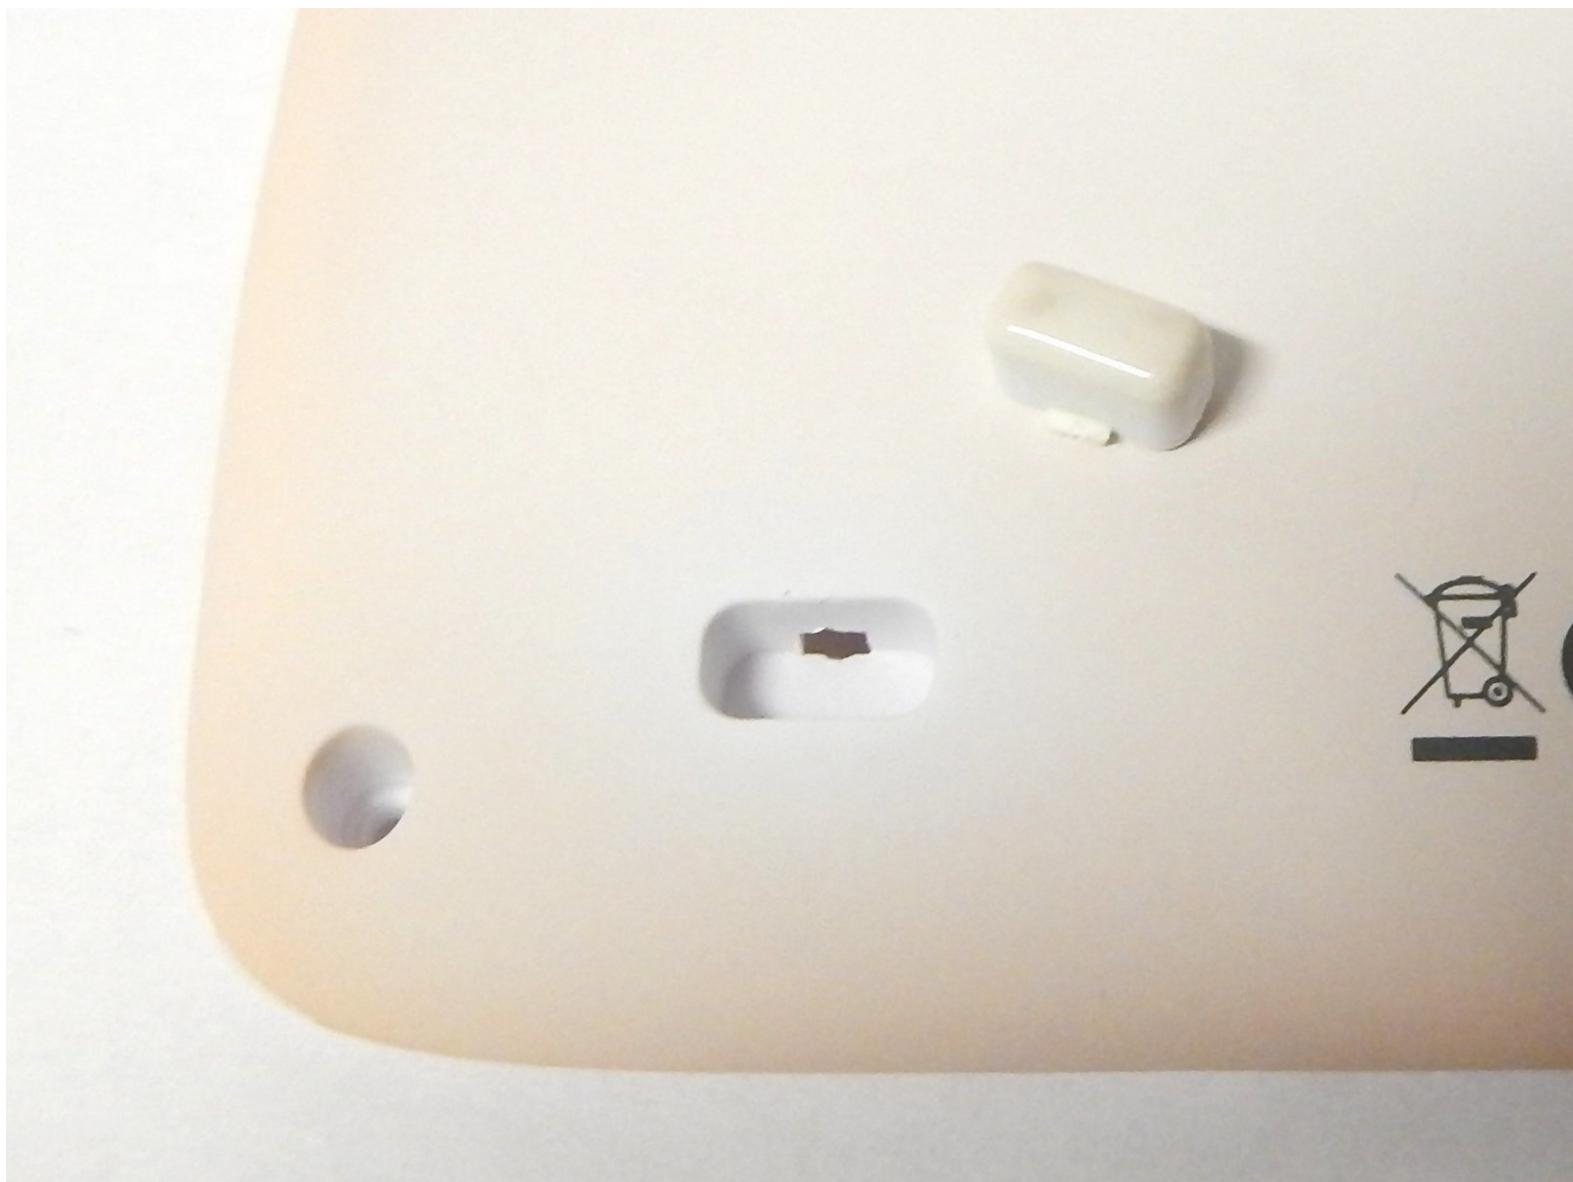

INTRODUCTION

The rubber feet/bumpers on any device usually get lost or damaged. This guide will show you how to replace those bumpers by first using the disassembly guide to remove the rear cover.

TOOLS:


- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)
- [Spudger](#) (1)

Step 1 — Rear Cover



- Remove four 5 mm Phillips #00 screws from each corner of the tablet.

Step 2

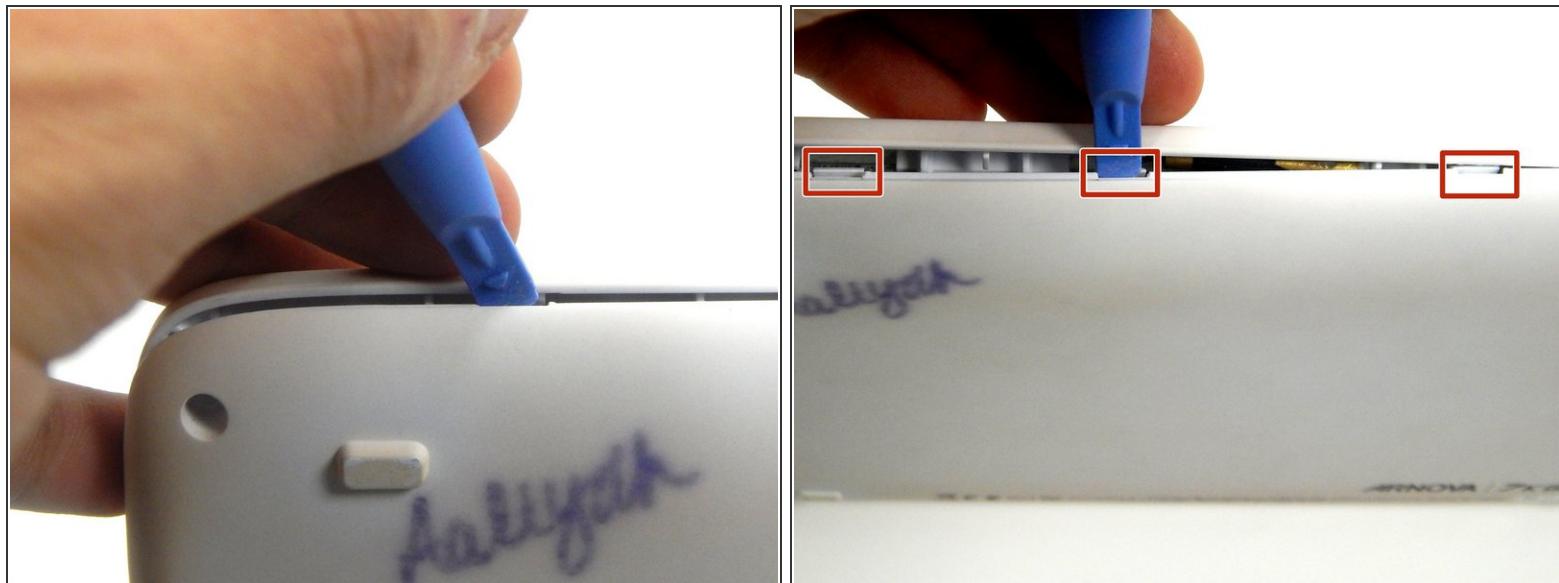


- Place the iFixit opening tool in the notches between the cases and pull the covers apart.

Step 3




- Repeat step two until 3/4 of the rear cover is unlatched.
- Proceed to remove the rear cover by gently pulling it apart by hand.

Step 4 — Rubber Feet

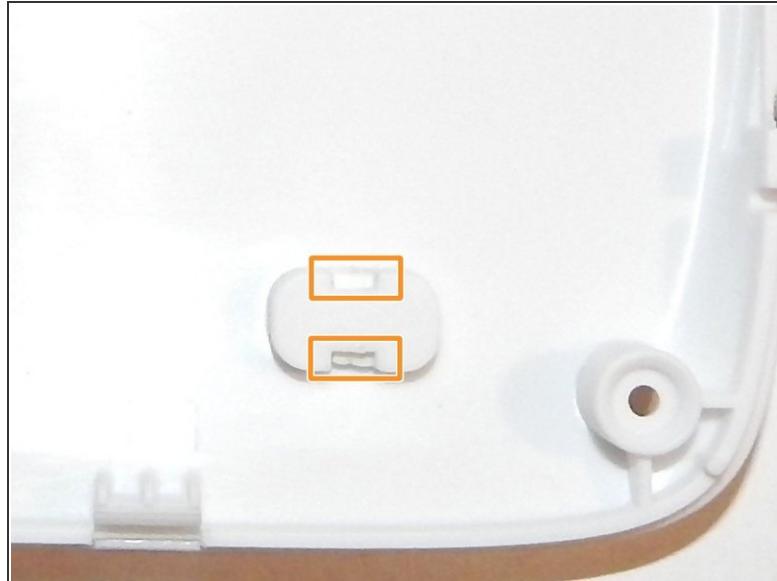

- Locate the two lower bumpers on the back cover. These two are the only rubber feet.
- Flip the cover over to reveal the inside.
- Locate the two rubber tabs, one for each foot, on the inside of the rear cover.

Step 5

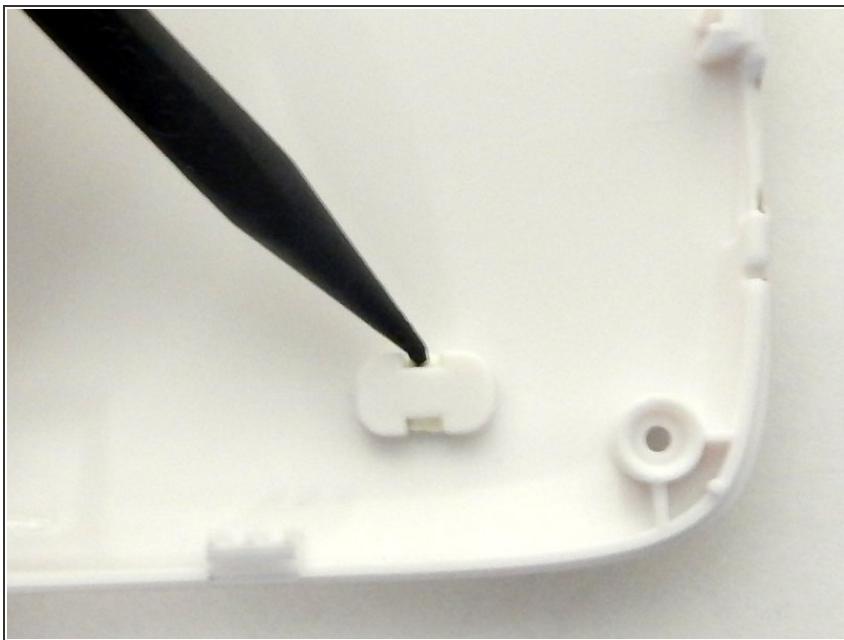

- Push the two tabs on each foot in using the pointed end of a spudger.
- (i)* It may take a little effort to push in the tabs. Try prying with the pointed end of the spudger and wiggling the tab free.

Step 6



- Flip the cover back over to reveal the outside of the cover and remove the rubber feet if they haven't fallen out already.

To reassemble your device, follow these instructions in reverse order with the new rubber feet.