




# Asus Chromebook C201 Trackpad Replacement

In this guide you will replace the trackpad in your Asus Chromebook C201.

Written By: Samuel Farone

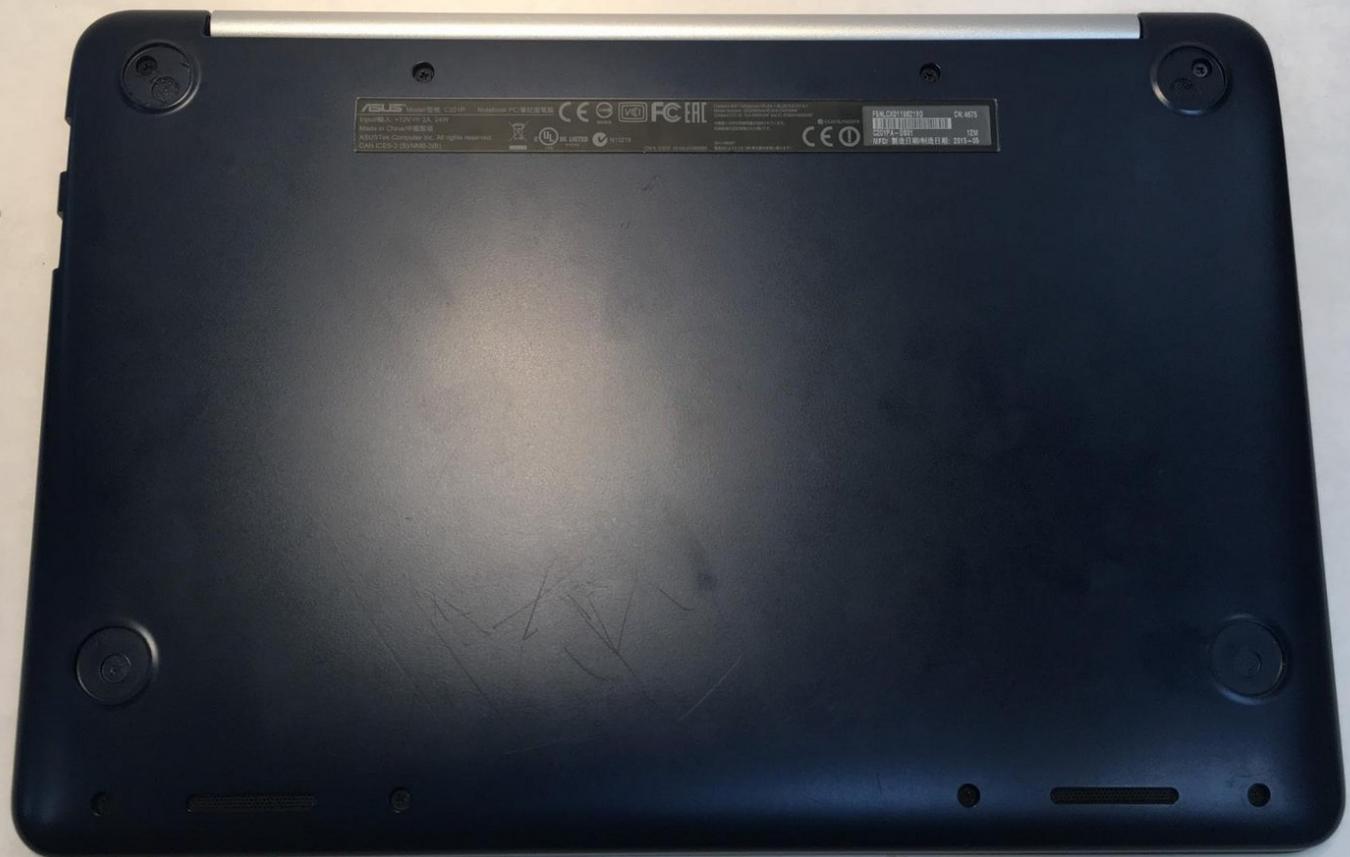

## INTRODUCTION

You will be removing the keyboard of the Asus Chromebook C201 from the rest of the laptop, then removing the trackpad from the keyboard, replacing it, and then putting the laptop back together.

### TOOLS:

- [Phillips #1 Screwdriver](#) (1)
- [Phillips #000 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)

### PARTS:


- [Asus Chromebook C201 Trackpad](#) (1)

## Step 1 — Trackpad




- First, flip over the chromebook.

## Step 2

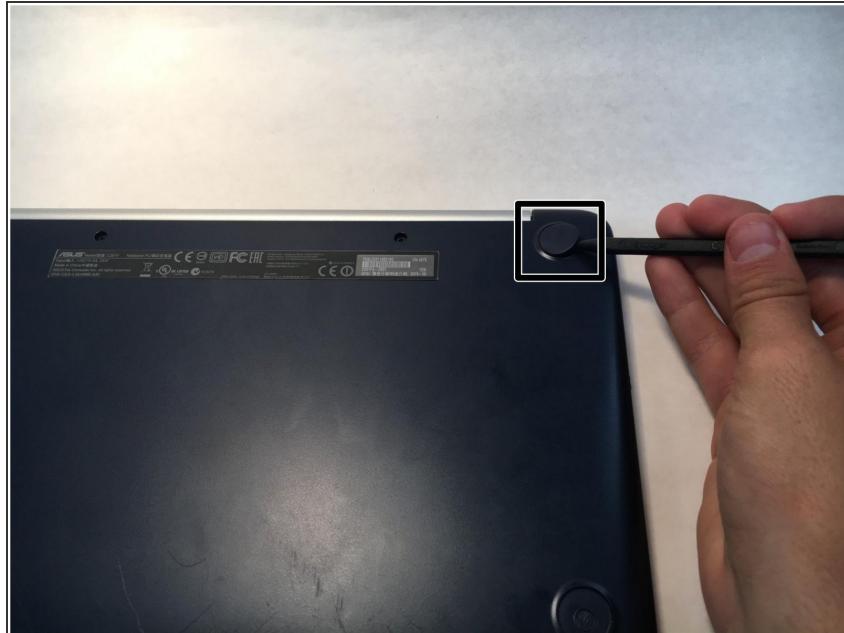

- Then, pull off the plastic sliders on either side of the bottom of the computer using the spludger.

## Step 3

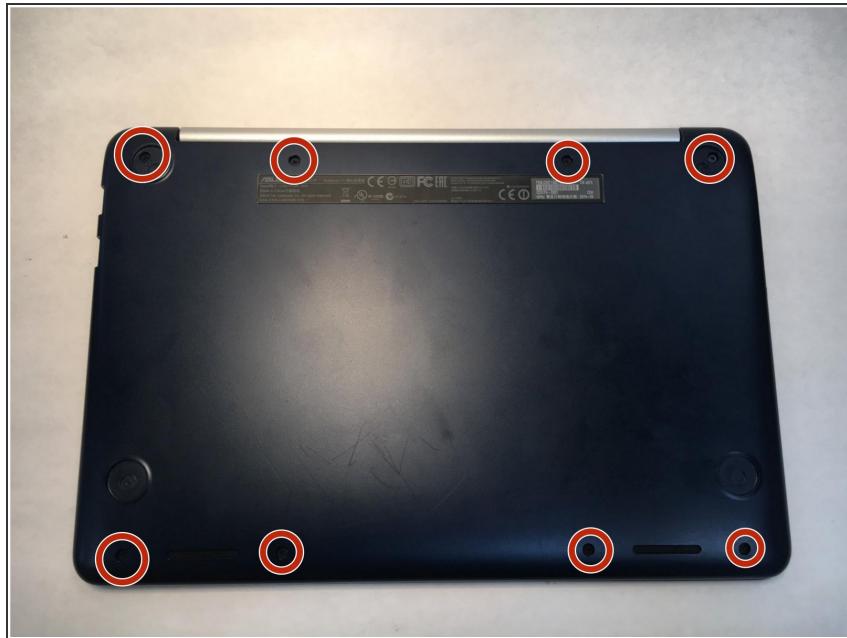


- Unscrew all of the screws in the back of the computer. Use a Phillips 1 screwdriver to remove the 8 1/2cm screws.

## Step 4




- Turn the computer onto its side. Then, use a plastic opening tool to open the gap between the keyboard and the rest of the computer by slipping it between the two panels making up the body of the computer.

## Step 5

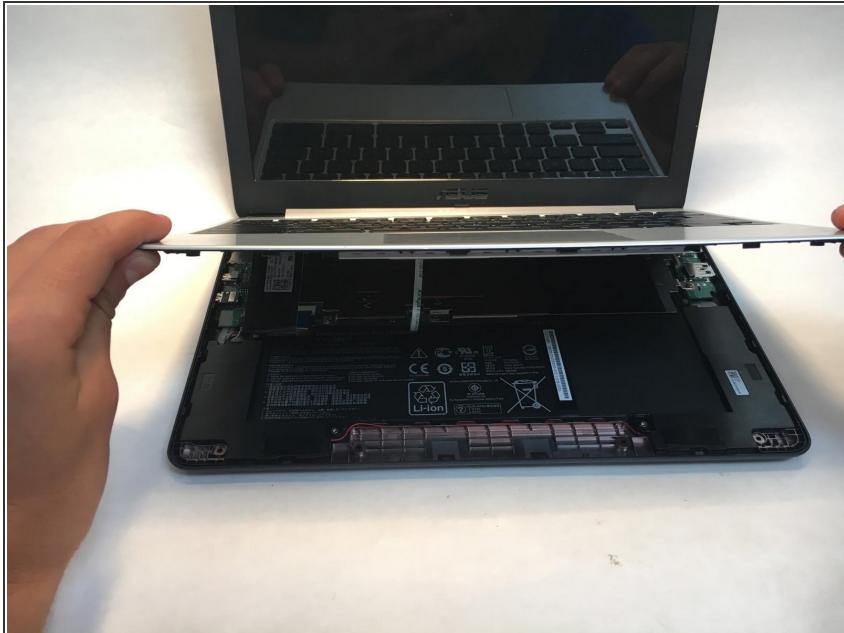


- Slide the plastic opening tool around the length of the keyboard to free it from the laptop. Once the keyboard is free of the computer, lift the keyboard up gently until you can see and reach the two wires attaching it to the computer.

## Step 6

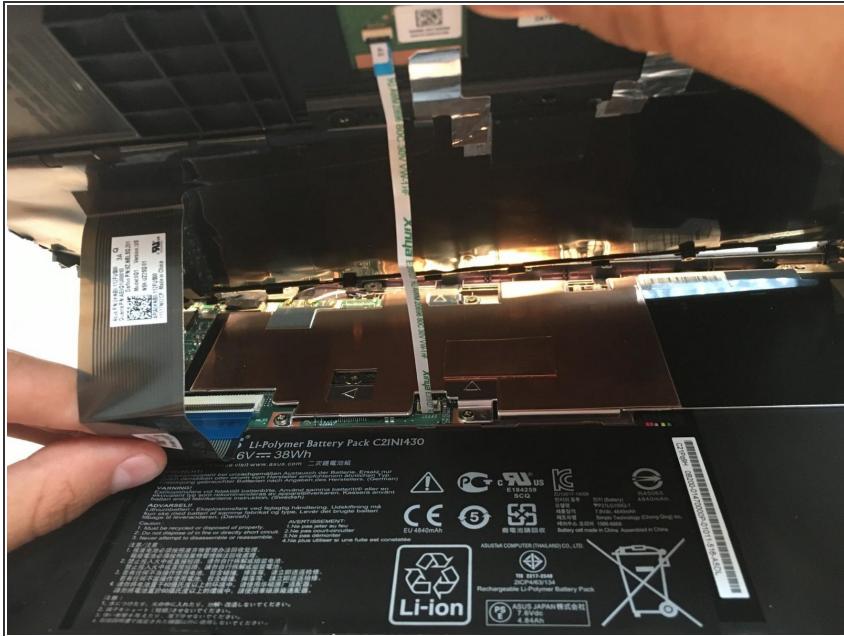


- Lift up the retaining flaps on the keyboard and trackpad ZIF connectors.
- Gently pull the trackpad and keyboard ribbon cables out of their sockets on the motherboard.

## Step 7

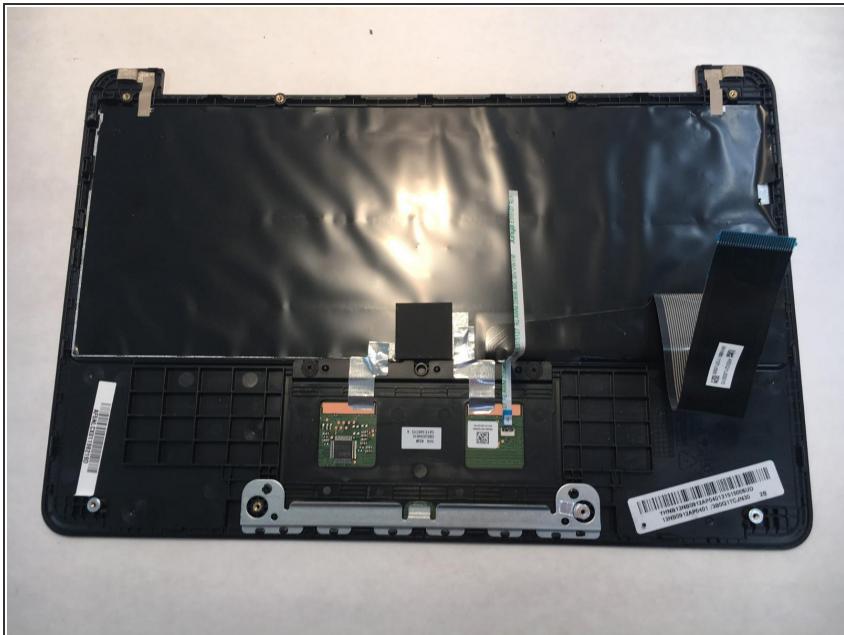


- Take the keyboard off of the computer and flip it over.

## Step 8

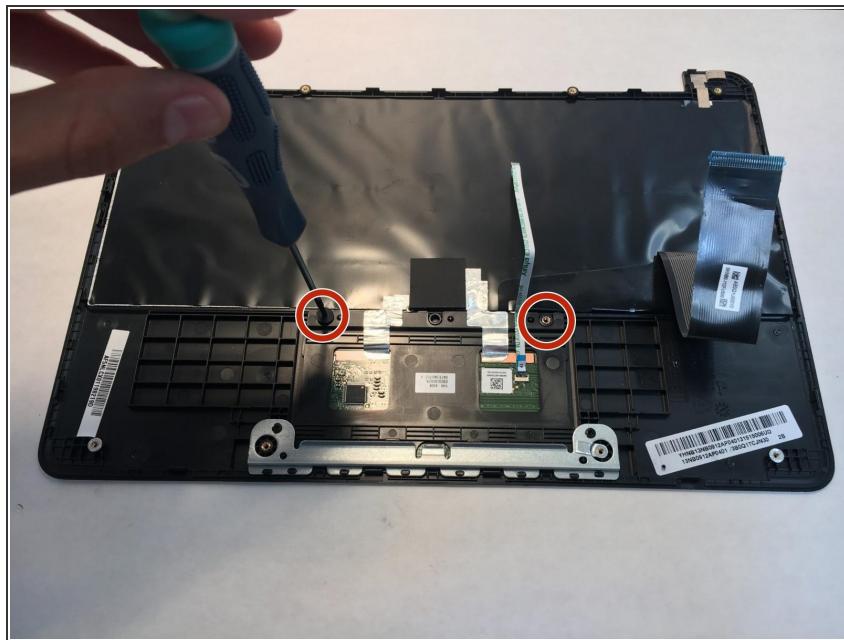


- Unscrew the 2/10 cm screws holding the trackpad onto the keyboard using a Phillips head #000 screwdriver.

## Step 9

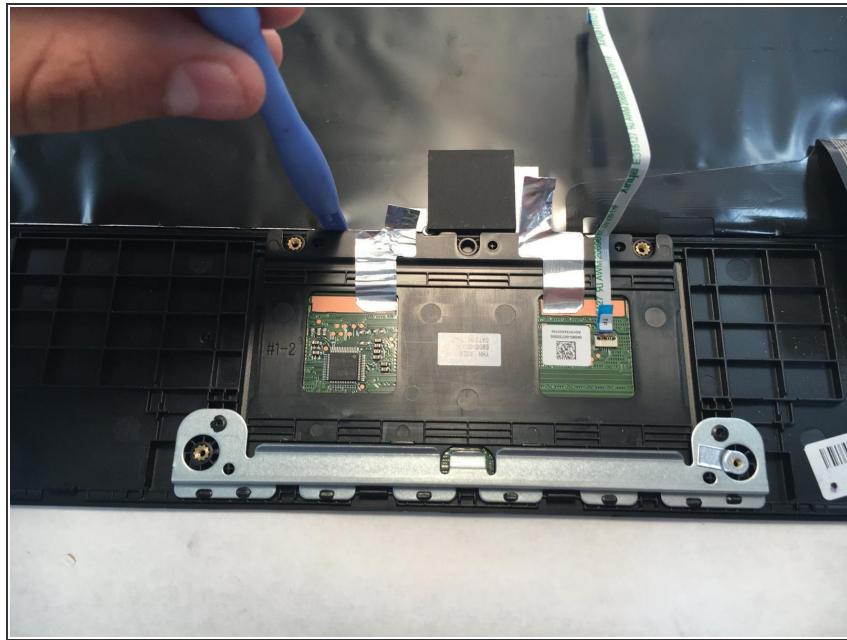


- Gently pry up the trackpad with a plastic opening tool. gently tilt the trackpad out of its slot and pull the trackpad out of the keyboard at an angle away from the slot.

## Step 10

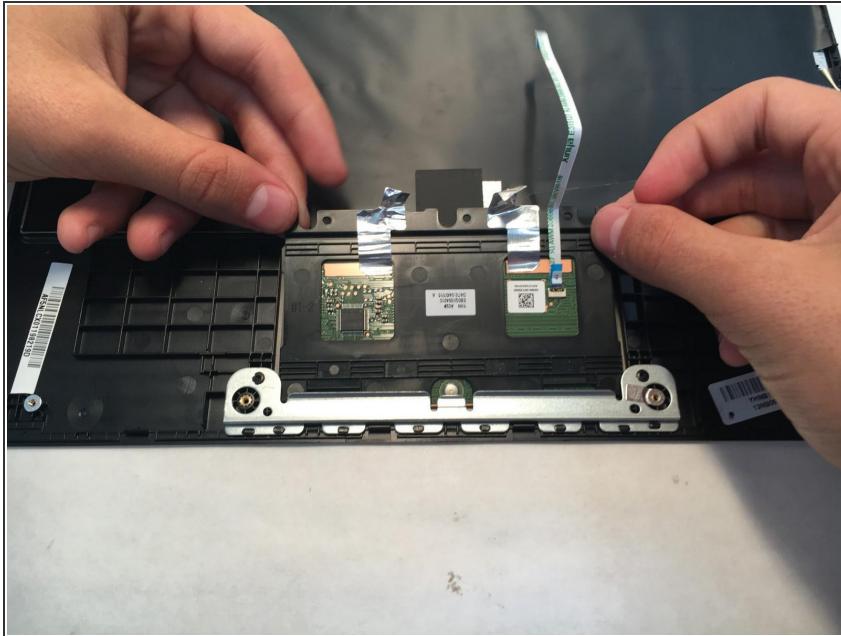


- Place new trackpad into slot at an angle. Gently push new trackpad into the slot and press down on it very gently to make sure that it is completely in the slot.

## Step 11

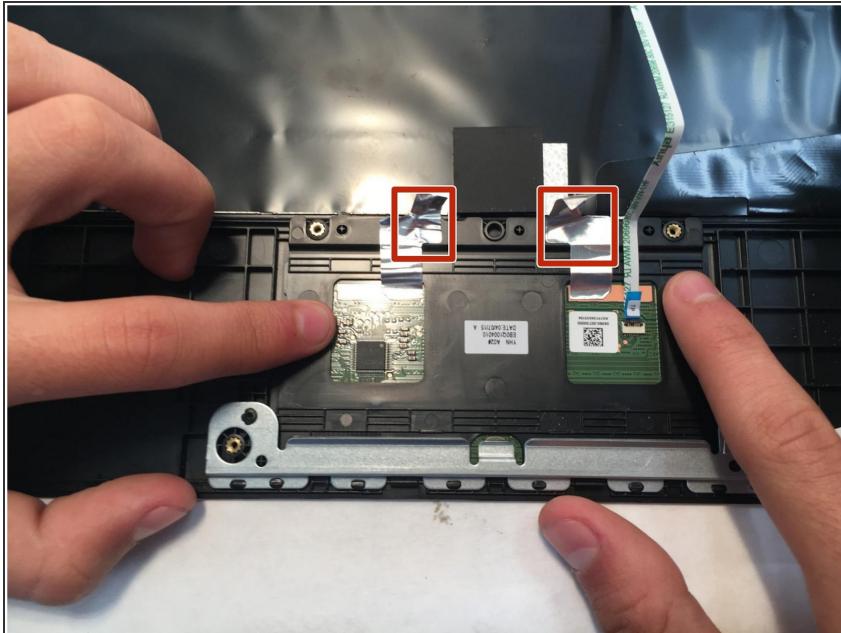


- Press the silver tabs onto board where they fall.

## Step 12

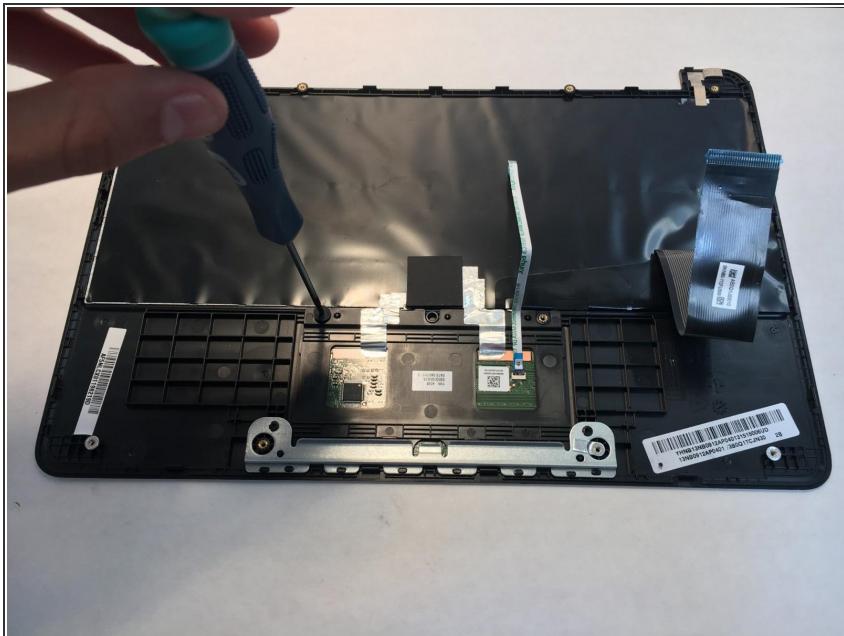

- Screw in 2/10 cm screws to hold the trackpad onto the keyboard using a Phillips head #000 screwdriver.

## Step 13

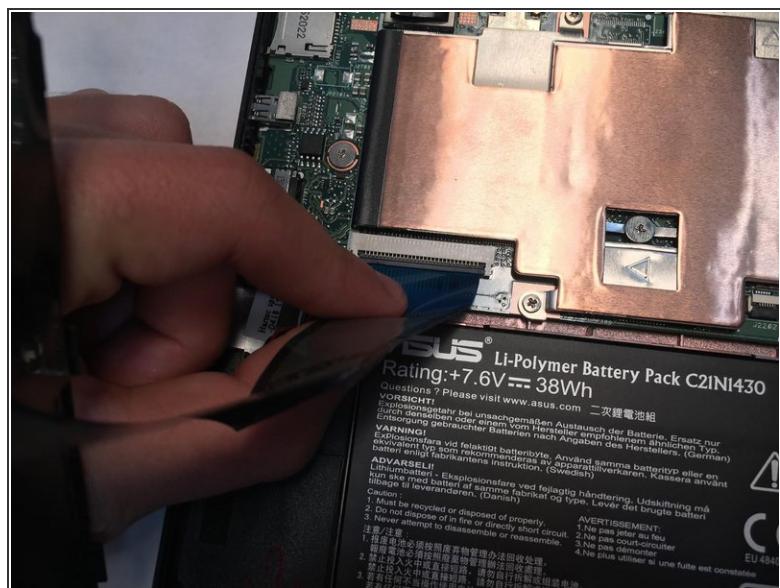

- Plug wires on keyboard back into their ports.
- **i** It may take a few tries to plug the wires back into the ports, because they use a tricky flap that snaps over the wire once you put it in place. Pull up the flap, place the wire fully onto the port, and snap the flap onto the wire.

## Step 14



- Snap keyboard back into place.

## Step 15



- Screw all 1/2 cm screws back into place using the Phillips head #1, and push the plastic sliders back into their slots.

Your replacement is now complete and your trackpad is as good as new... because it is new!