



Asus Padfone 2 A68 Sub Cables Replacement

Guide will provide details to replace A68 Sub Cables in the event mobile network connection is lost.

Written By: Erica



 **TOOLS:**


- [iFixit Opening Tools \(1\)](#)
- [Tweezers \(1\)](#)
- [T5 Torx Screwdriver \(1\)](#)
- [Magnetic Project Mat \(1\)](#)

Step 1 — Power Down Device



⚠ Hold down the power button.

Step 2 — Remove Back Plate

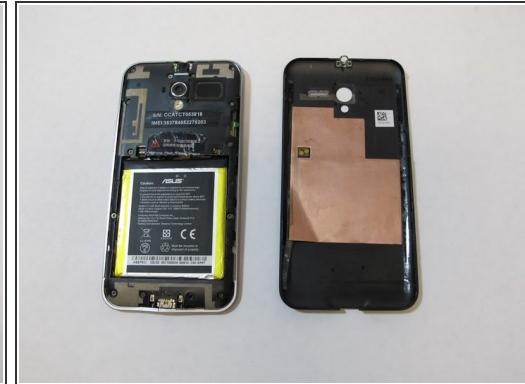

- Use plastic opening tools to pry off the cover of the phone.

Step 3 — Battery Removal



- Remove the warning sticker that covers the battery plug and connecting cord.
- Look for the widest gap on either side of the battery. Using the plastic opening tool carefully lift battery out.

⚠ The battery is held down with adhesive. Be careful not to damage battery or connecting cord.


- Disconnect battery connecting cord using tweezers.

Step 4 — Remove Internal Back Plate





- Use T5 Torx screwdriver to remove 14 screws from internal back plate.
- Use of magnetic pad will help with keeping track of screws.
- Once screws are out, remove the plate.

Step 5 — Removal of A68 Sub Cables

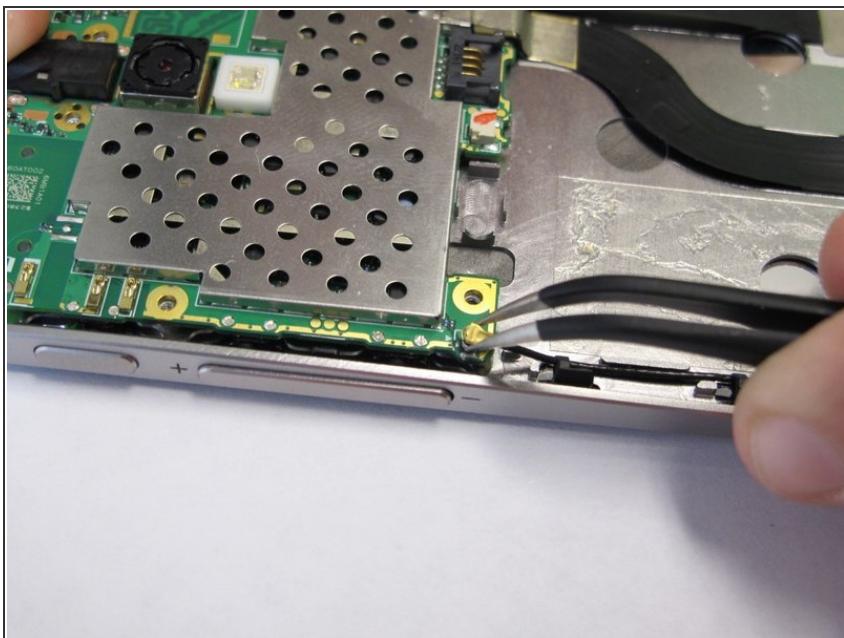

- Use tweezers to unplug the sub cables from the circuit board and housing.

Step 6 — Replacing the A68 Sub Cables

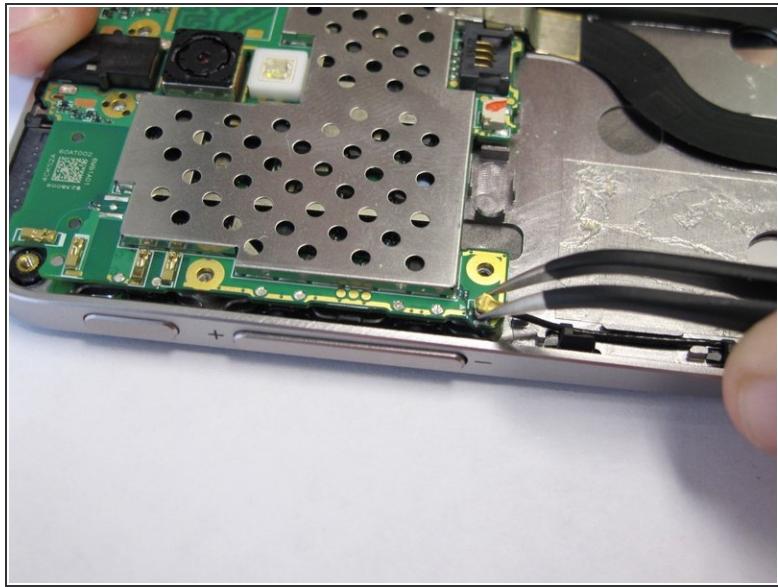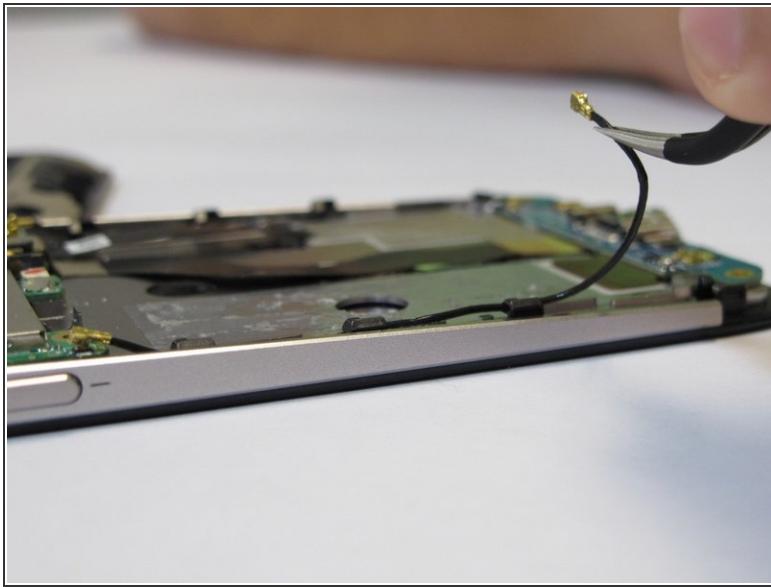

- Plug in new sub cables to the circuit board and housing.

To reassemble your device, follow these instructions in reverse order.